
INSTALLATION GUIDE:


1.3” Inch Slim Surface Linear

LED Linear Lighting


VSL22ICCTADWM/VSL42ICCTADWM/VSL8ADCCTWM

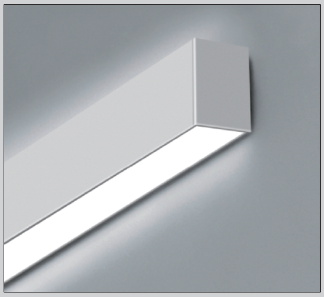


TOOLS YOU MAY NEED

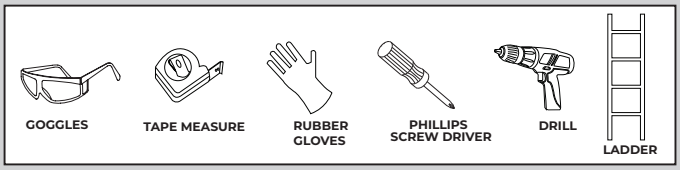

FOR YOUR SAFETY, READ AND UNDERSTAND FOLLOW INSTRUCTIONS!
KEEP THE INSTRUCTIONS IN SAFE PLACE FOR FUTURE REFERENCE!

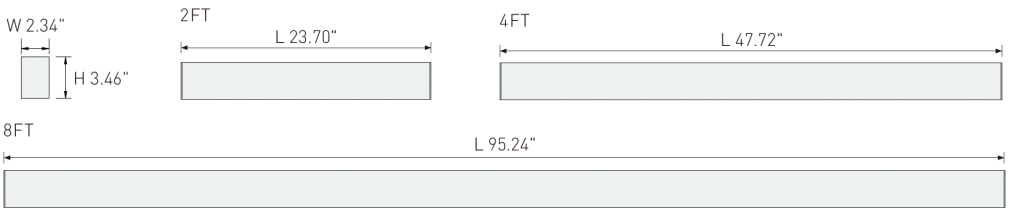

CIRCUIT BOX

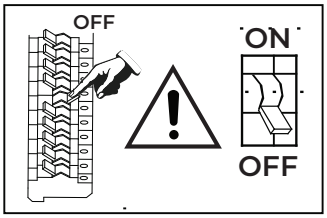

LED INFO & WARNINGS

Please read and understand the entire manual before attempting to assemble, operate, or install the product.	**Make sure that you have all necessary parts by checking the parts list. If any part is missing or damaged please contact VONN LIGHTING CUSTOMER SERVICE at 888-604-8666 for a replacement.**
All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn or broken.	**Inspect the LED fixture prior to installation to make sure that it has not been damaged during shipping.**
Please handle the LED light with care when unpacking. Do not apply pressure to the LED’s, do not open any factory sealed compartments, and do not touch the LEDs with your hands.	**VONN highly recommends to use a qualified, licensed electrician to install the fixture.**
VONN recommends to install the fixture on its own independent circuit. Dd not install the fixture on the same circuit with the other appliances, or HVAC systems.	**Do not remove or replace VONN manufactured parts that is provided with the fixture.**
Place the wall switch in the “OFF” position of the room you are installing the fixture.	**Shut “OFF” the electricity at main fuse box.**

ENABLED EnabLED Licensing Program for LED Luminaires and Retrofit Bulbs Member VONN LLC

Intertek


www.vonn.com

© VONN Lighting, 2026


Instructions

Independent Installation


SURFACE

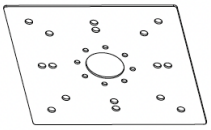Accessory								
Code	A	B	C	D (Optional accessory)	E	G	I	J
Picture								
Name	Butterfly Drywall Anchor	Wire Nut	Screw	Square Plate Compatible for 4" octogon, 4" round, 4" square and 2x4" rectangle junction boxes	Male Quick Connector (5 Holes)	Anchor	Screw	Screw


pre-installation Disassemble luminaire as shown below

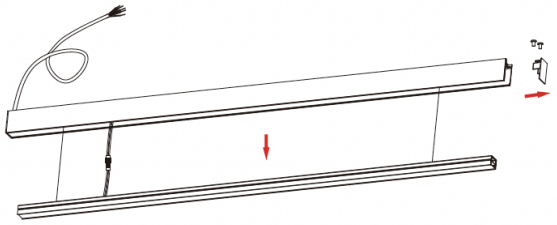

Step 1 Prepare mounting point in the ceiling

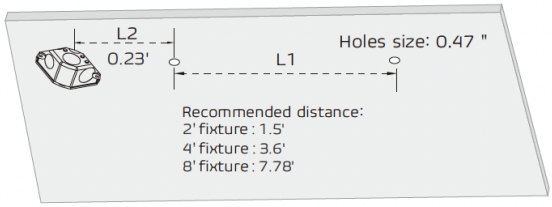

Step 2 Mount plate and wiring

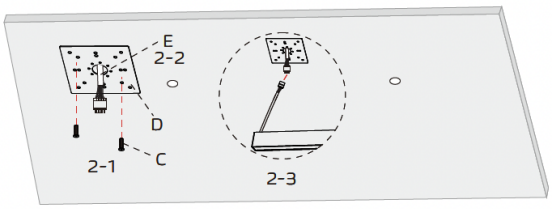


2-1: Cover the junction box with square plate "D" and fix it with screw "C", then plastering.
2-2: Plug in AC wires, dimming wires and ground wire into the male quick connector (5holes) "E" according to label instructions.
2-3: Plug in the male and female connector together, hide all wires into the junction box.

Step 3 Screw the housing in the ceiling




3-1: Fix the housing in the ceiling with butterfly drywall anchor "A"
(Remark : Fix the housing with screws "I" if wooden frame ceiling.
Fix the housing with Anchor "G "and Screws "I" if cement drywall).
3-2: Press the LED modular into housing.
3-3: Using glass cement on the end cap, then insert it into the housing.

Step 4 Complete

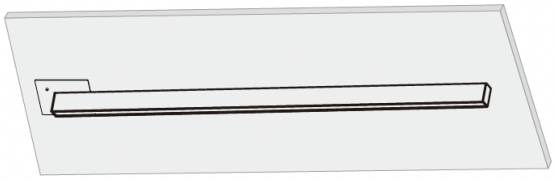

Wiring

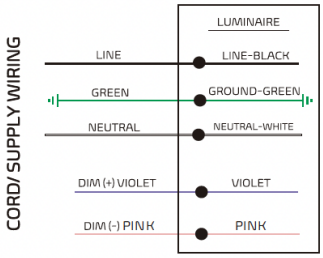


© VONN Lighting, 2026

Instructions

Multiple Luminaires Connection

VONN

SURFACE

Accessory									
Name	Butterfly Drywall Anchor	Wire Nut	Screw	Square plate Compatible for 4" octogon, 4" round, 4" square and 2x4" rectangle junction boxes	Male quick connector (5 holes)	Silicone Seal	Anchor	Screw	Screw
Picture									
	A	B	C	D (Optional accessory)	E	F	G	I	J

⚠ Noted: Silica gel stopper "F" is used to seal seams that may appear at both ends of luminaires when multiple connections.

Joiner Options		
"—" Joiner	"L" Joiner	"V" Joiner
		
"T" Joiner	"+" Joiner	"Y" Joiner
		

⚠ It needs 2 inputs if using joiner "T", "+" and "Y".


Pre-installation

Disassemble luminaires as shown below

Start of run (SoR): Remove the end cap without power code, and take the LED module out.

Middle of run (MoR): Remove both end caps, and take the LED module out.


End of run (EoR): Remove the end cap with power code, and take the LED module out.

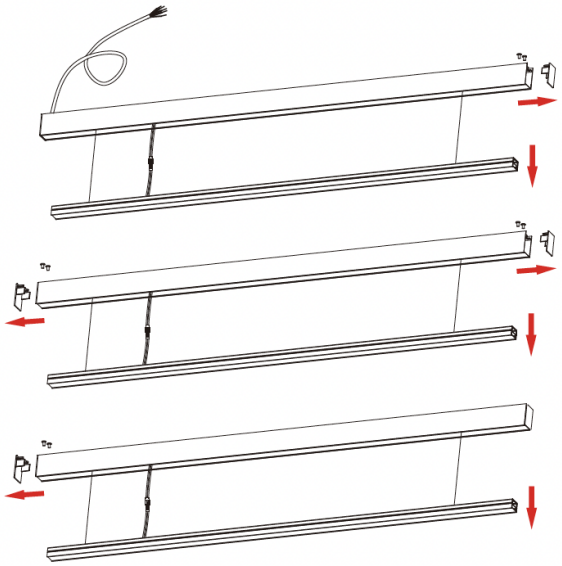

A. Line Connection

Step 1

Prepare mounting point in the ceiling

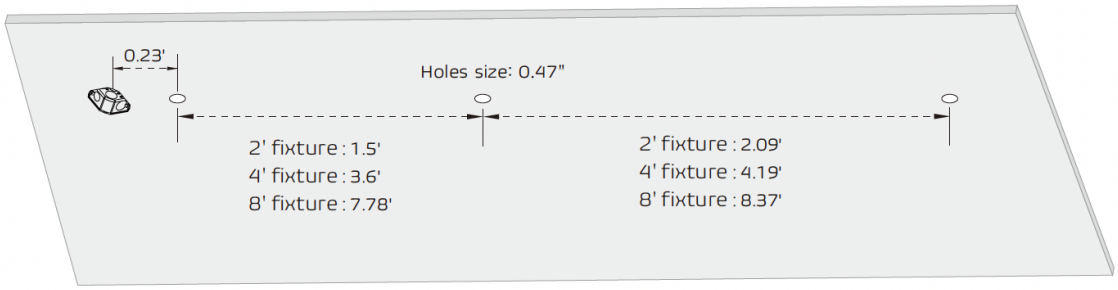

© VONN Lighting, 2026


Instructions

Multiple Luminaires Connection

VONN


SURFACE

Step 2 Mount plate and wiring

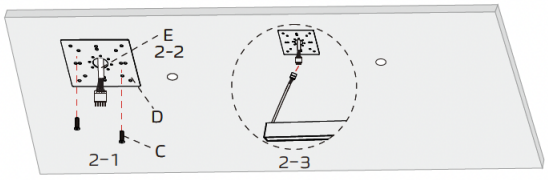


2-1: Cover the junction box with square plate "D" and fix it with screw "C", then plastering.
2-2: Plug in AC wires, dimming wires and ground wire into the male quick connector (5holes) "E" according to label instructions.
2-3: Plug in the male and female connector together, hide all wires into the junction box.

Step 3 Install the housing and joiner – SoR

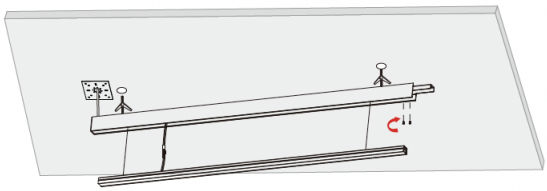


3-1: Fix the housing in the ceiling with butterfly drywall anchor "A" (Remark : Fix the housing with screws "I" if wooden frame ceiling. Fix the housing with Anchor "G "and Screws "I" if cement drywall).
3-2: Insert the joiner "—" into the SoR housing and fix it by screws.

Step 4 Repeat install and join steps - MoR to EoR

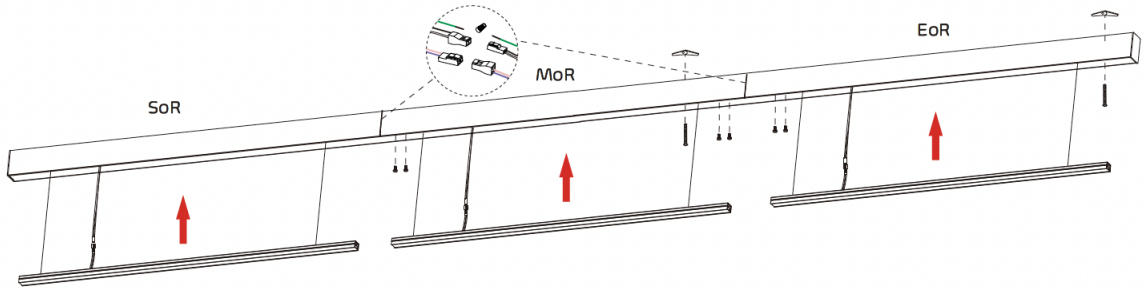


4-1: Fix the housing in the ceiling with butterfly drywall anchor "A" in turn.
4-2: Insert the joiner "—" into the housing and fix it by screws in turn.
4-3: Connect the quick connectors properly.
4-4: Insert all the led modules into the housing from SoR to EoR in turn.

Step 5 Complete

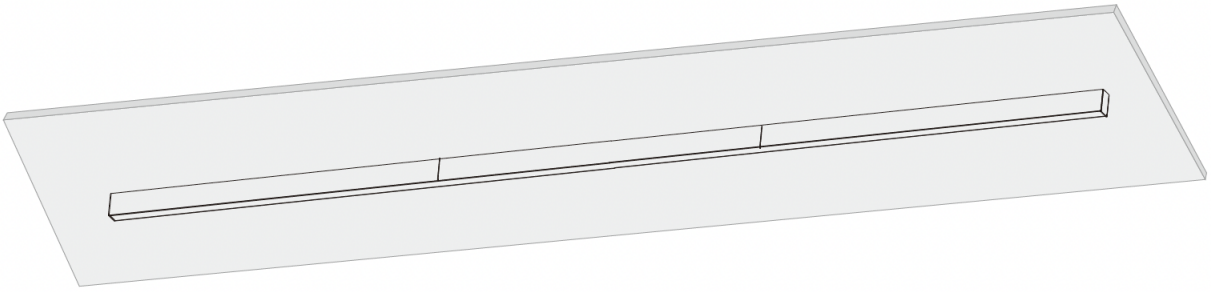

42' Diffuser Lens Roll

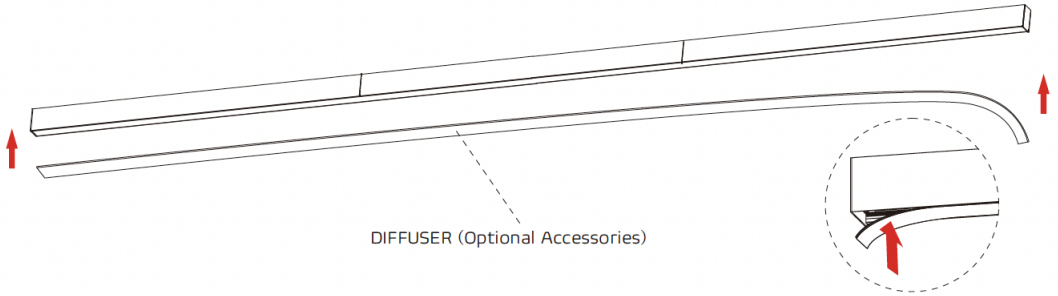

Instructions

Multiple Luminaires Connection

VONN


SURFACE

B. L Shape Connection


⚠ For "T", "+", "Y" shape or other geometric shapes, all subject to the "L" shape installation

⚠ It needs 2 inputs if using joiner "T", "+" and "Y".


pre-installation Disassemble luminaire as shown below

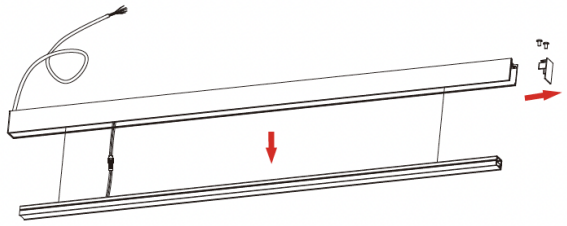

Step 1 Make hole in the ceiling

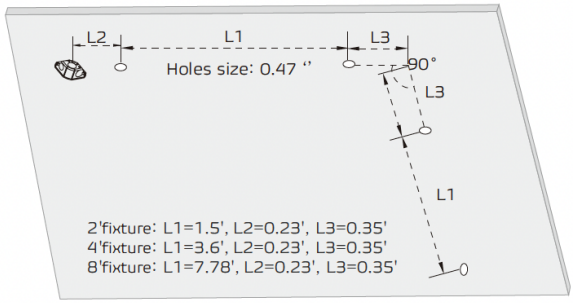


Step 2 Mount plate and wiring

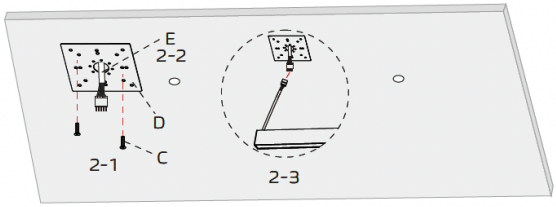


2-1: Cover the junction box with square plate "D" and fix it with screw "C", then plastering.
2-2: Plug in AC wires, dimming wires and ground wire into the male quick connector (5holes) "E" according to label instructions.
2-3: Plug in the male and female connector together, hide all wires into the junction box.

Step 3 Install the housing and joiner – SoR

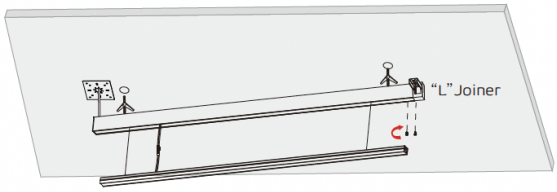


3-1: Fix the housing in the ceiling with butterfly drywall anchor "A"
(Remark : Fix the housing with screws "I" if wooden frame ceiling.
Fix the housing with Anchor "G "and Screws "I" if cement drywall).
3-2: Insert the joiner "L" into the SoR housing and fix it by screws.

Step 4 Repeat install and join steps - MoR to EoR

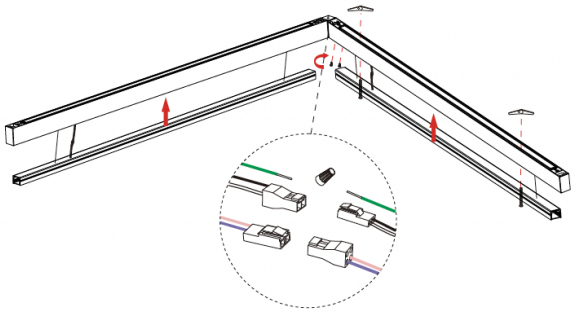

4-1: Fix the housing in the ceiling with butterfly drywall anchor "A" in turn.
4-2: Insert the joiner "L" into the housing and fix it by screws in turn.
4-3: Connect the quick connectors properly.
4-4: Insert all the LED modules into the housing from SoR to EoR in turn.

Step 5 Complete

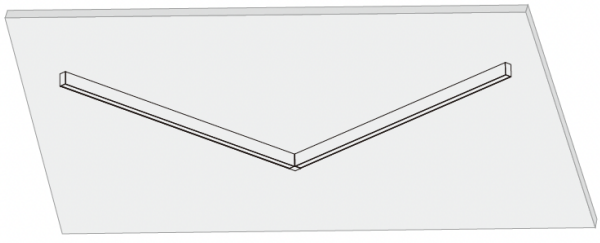

© VONN Lighting, 2026

Instructions

Multiple Luminaires Connection


VONN SURFACE

B. L Shape Connection


⚠ For "T", "+", "Y" shape or other geometric shapes, all subject to the "L" shape installation

⚠ It needs 2 inputs if using joiner "T", "+" and "Y".


pre-installation Disassemble luminaire as shown below

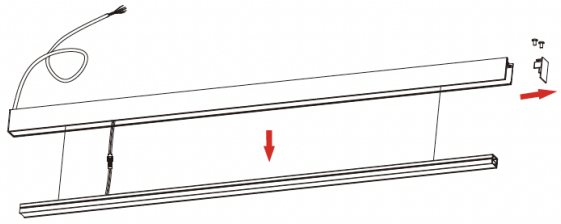

Step 1 Make hole in the ceiling

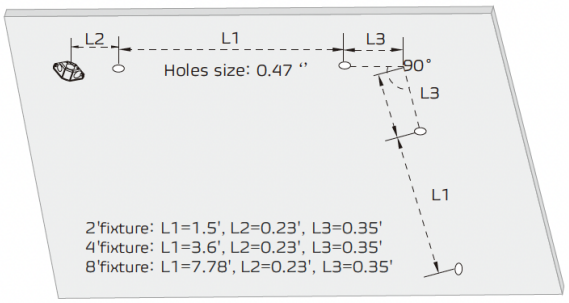


Step 2 Mount plate and wiring

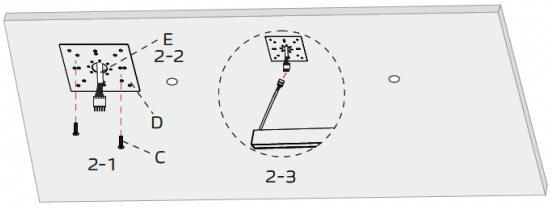


2-1: Cover the junction box with square plate "D" and fix it with screw "C", then plastering.
2-2: Plug in AC wires, dimming wires and ground wire into the male quick connector (Sholes) "E" according to label instructions.
2-3: Plug in the male and female connector together, hide all wires into the junction box.

Step 3 Install the housing and joiner – SoR

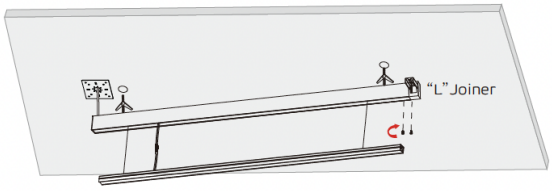


3-1: Fix the housing in the ceiling with butterfly drywall anchor "A"
(Remark : Fix the housing with screws "I" if wooden frame ceiling.
Fix the housing with Anchor "G "and Screws "I" if cement drywall).
3-2: Insert the joiner "L" into the SoR housing and fix it by screws.

Step 4 Repeat install and join steps - MoR to EoR

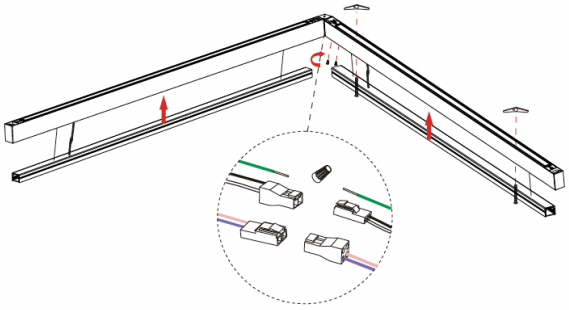

4-1: Fix the housing in the ceiling with butterfly drywall anchor "A" in turn.
4-2: Insert the joiner "L" into the housing and fix it by screws in turn.
4-3: Connect the quick connectors properly.
4-4: Insert all the LED modules into the housing from SoR to EoR in turn.

Step 5 Complete

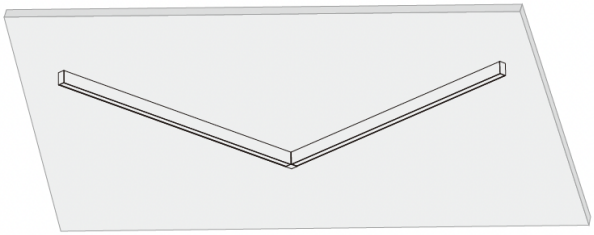

© VONN Lighting, 2026