

## INSTALLATION GUIDE:

# Slim Linear

Recessed LED Linear Lighting

VSR44CCT / VSR46CCT / VSR86CCT



### TOOLS YOU MAY NEED



GOGGLES



TAPE MEASURE




RUBBER GLOVES



PHILLIPS SCREW DRIVER





DRILL




LADDER




FOR YOUR SAFETY, READ AND UNDERSTAND FOLLOW INSTRUCTIONS!  
KEEP THE INSTRUCTIONS IN SAFE PLACE FOR FUTURE REFERENCE!

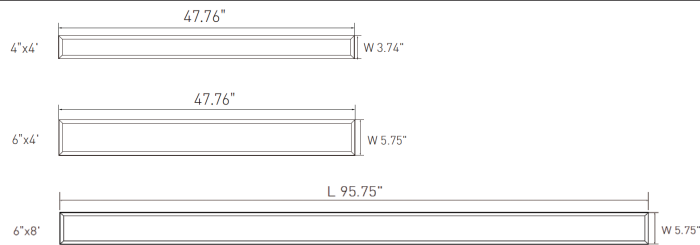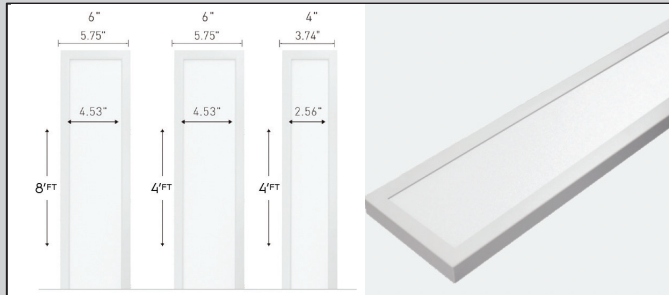

### CIRCUIT BOX

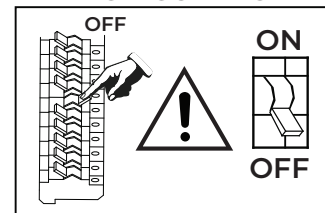

### LED INFO & WARNINGS

Please read and understand the entire manual before attempting to assemble, operate, or install the product.	Make sure that you have all necessary parts by checking the parts list. If any part is missing or damaged please contact VONN LIGHTING CUSTOMER SERVICE at 888-604-8666 for a replacement.
All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn or broken.	Inspect the LED fixture prior to installation to make sure that it has not been damaged during shipping.
Please handle the LED light with care when unpacking. Do not apply pressure to the LED's, do not open any factory sealed compartments, and do not touch the LEDs with your hands.	VONN highly recommends to use a qualified, licensed electrician to install the fixture. 
VONN recommends to install the fixture on its own independent circuit. Do not install the fixture on the same circuit with the other appliances, or HVAC systems.	Do not remove or replace VONN manufactured parts that is provided with the fixture.
Place the wall switch in the "OFF" position of the room you are installing the fixture.	Shut "OFF" the electricity at main fuse box.

# Instructions



4" & 6" RECESSED LED

ARCHITECTURAL LED LINEAR LUMINAIRE  
INSTALLATION INSTRUCTIONS



RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.

## Safety & Warnings!

1. Read all instructions.
2. Install in accordance with national and local electrical code regulations.
3. This product is intended to be installed and serviced by a qualified, licensed electrician.
4. Do not install in wet locations. For dry and damp use only.
5. Turn off electrical power before installing or servicing fixture in any way.
6. To reduce the risk of fire and overheating, make sure all connections are tight.
7. Follow label information and instructions concerning Wet or Damp Locations, installation near combustible materials, insulation, building materials, and proper lamping. Do not install in areas subject to combustible vapors or gases.




**SHOCK HAZARD! May result in serious injury or death.**

Turn power OFF at circuit breaker prior to installation or servicing.



**DO NOT PINCH OR PUT EXCESSIVE TENSION ON WIRES**

While joining sections or reattaching end caps.

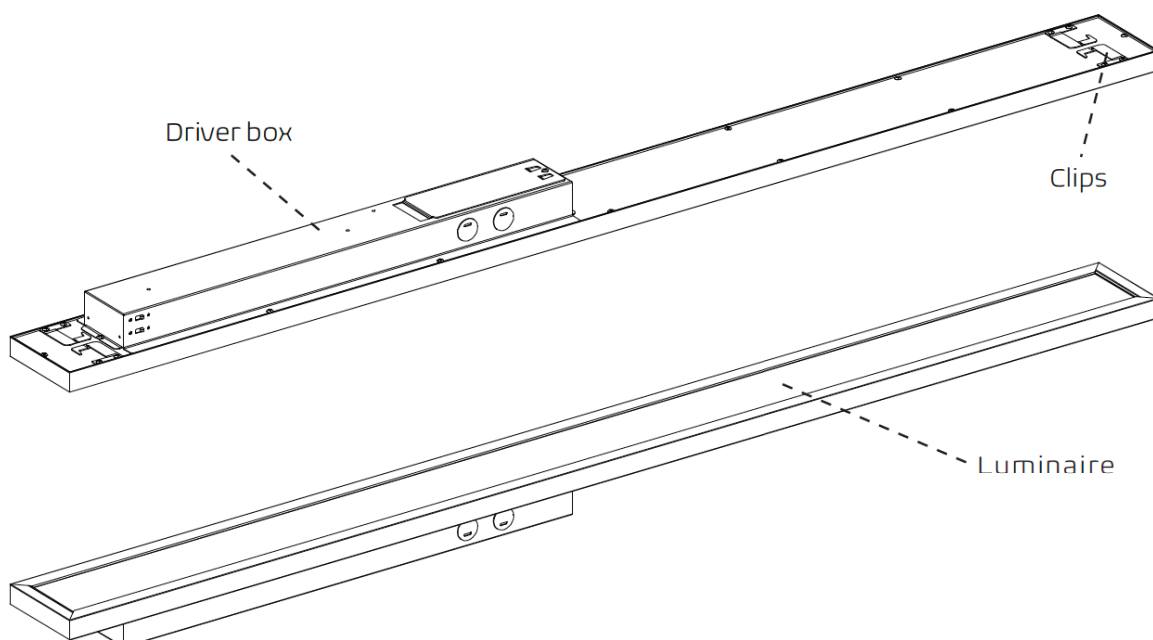

# Instructions

VONN


4" & 6" RECESSED LED

ARCHITECTURAL LED LINEAR LUMINAIRE  
INSTALLATION INSTRUCTIONS




RISK OF FIRE AND ELECTRICAL SHOCK. FIXTURE MUST BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY IN ACCORDANCE WITH NATIONAL, LOCAL BUILDING AND ELECTRICAL CODES. DISCONNECT POWER AT ELECTRICAL PANEL BEFORE SERVICING.


- 1 Unscrew and slide out the driver box.

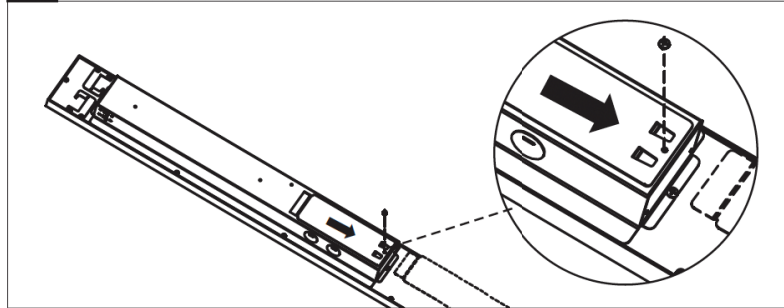

- 2 Adjust the fixture angle and bend the clips.

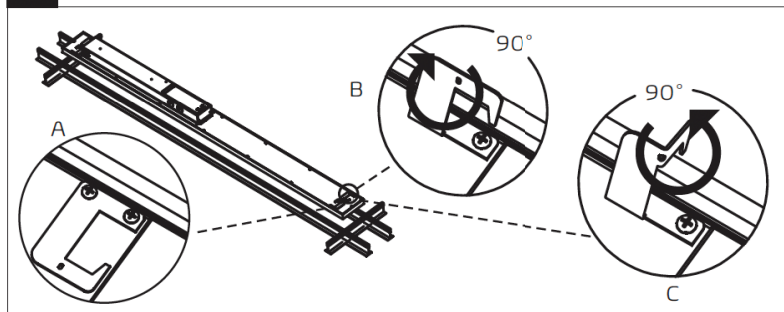

- 3 Proper wire connections.

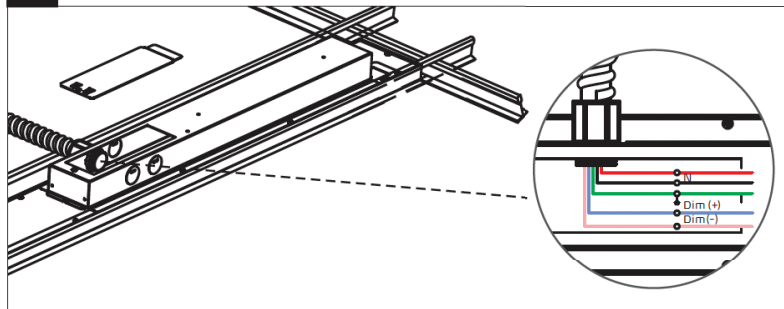

- 4 Slide in the driver box and lock it.

