

INSTALL WITH CONFIDENCE


1. Remove Existing Nut Washer and old Cap.
2. Place new Threaded Cap Base (B) onto Existing Bolt (A) flat side down.
3. Place new Anti Spin Washer (C) inside new Threaded Cap Base (B).
4. Screw Existing Nut (D) on Existing Bolt (A) Hand tighten only – DO NOT OVER TIGHTEN.
5. Screw new Secure Cap™ (E) on new Threaded Cap Base (B).

1. Retirer les ecrous rondelles et cache boulons existants.
2. Placer la nouvelle base filetée du cache-boulon (B) sur le boulon existant (A).
3. Placer la nouvelle rondelle anti-rotation (C) dans la base filetée de cache-boulon (B).
4. Visser l'écrou existant (D) sur le boulon existant.(A) Serrer à la main uniquement – NE PAS TROP SERRER.
5. Visser le nouveau cache-boulon (E) sur la base filetée (B).

1. Remueva la tuerca, arandela y capa vieja. No quite el tornillo existente (B).
2. Ponga la nueva base roscada en el tornillo existente (A).
3. Ponga la nueva arandela (C) adentro de la base roscada (B).
4. Enrosca la tuerca existente (D) encima del tornillo existente (A) Apriete a mano solamente – NO APRIETE EN EXCESO.

**Can't be knocked off
like other caps.**

**Ne se défile pas comme les
autres cache-boulons.**

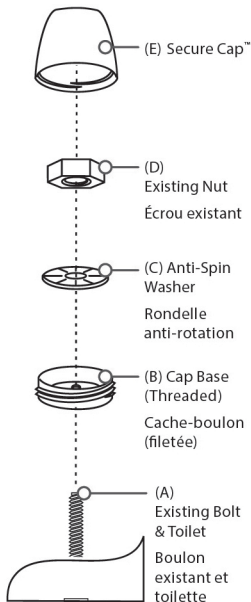

Fluidmaster.

30800 Rancho Viejo Rd.,
San Juan Capistrano, CA 92675
www.fluidmaster.com
800.631.2011
M-F 5:30 am - 5:00 pm (PST)