


# Piccolo Heater Guard Installation

**INSTALL BRACKETS AND HEATER GUARD BEFORE ADDING ROCKS TO HEATER!**


## Step 1.

Insert the “s-bend end of bracket into 1<sup>st</sup> or 2<sup>nd</sup> hole from the top of the heater shroud as shown at right. (See diagram on next page for desired location of each bracket)

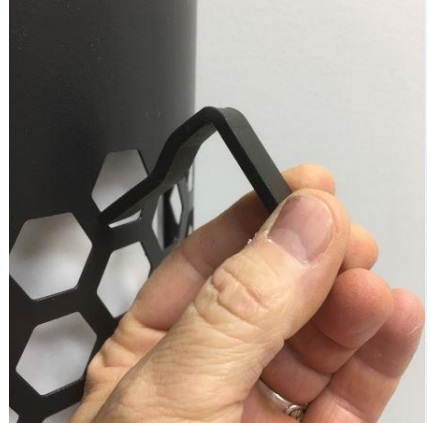

## Step 2.

“Weave” through the 1<sup>st</sup> hole and into the 2<sup>nd</sup> hole (just below the first hole) as shown to the right.

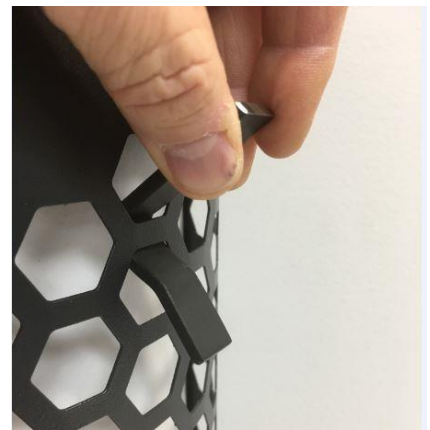

## Step 3.


When properly installed the flat part of the bracket with the screw mount hole should sit level as shown at right.



## Step 4

Lay the wooden guard on top of the 3 mounting brackets and align so there is an even amount of distance between the heater and the wood guard. Secure with screws as shown at right from below.



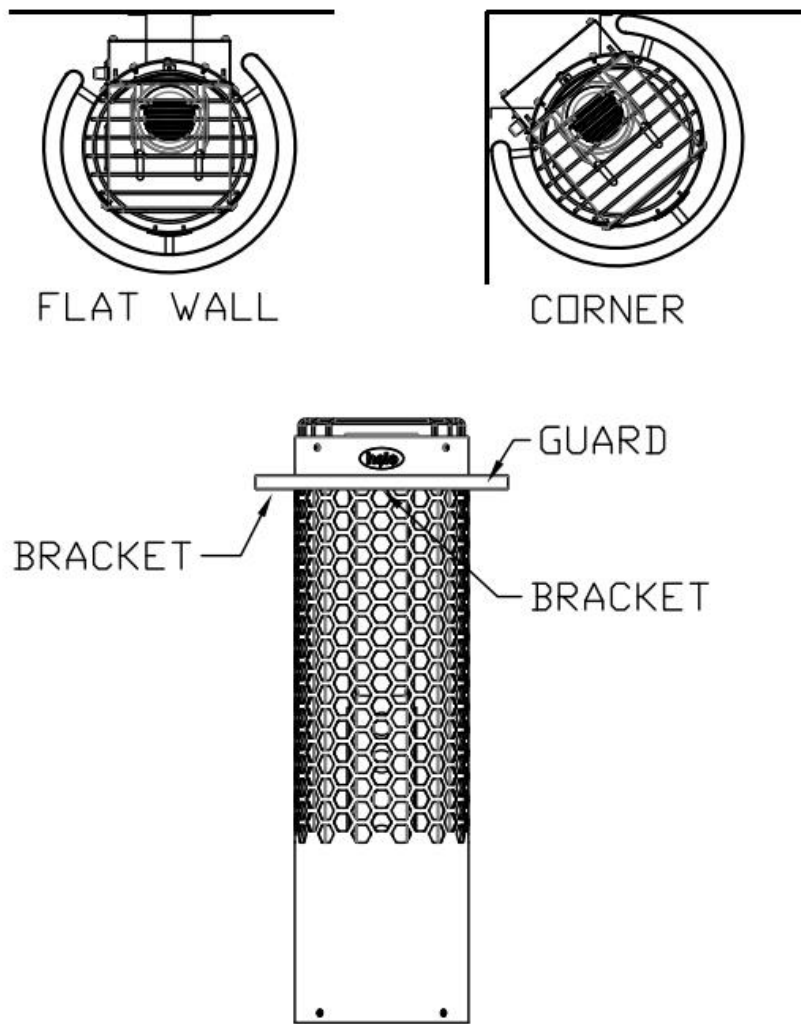

Note: Recommended height for heater guard brackets is 1-2 holes from top of heater.

Wood guardrail will dry and crack over time. It is normal and not considered a warranty issue.

Replacement Part	Replacement Part Number
Wood Heater Guard	7200-008
Piccolo Heater Guard Bracket (3ea)	8201-046
Mounting Screw (3ea)	M3.5 x 15mm SS (n/a pn)

For installation assistance  
 Email: [techsupport@tyloheloinc.com](mailto:techsupport@tyloheloinc.com)  
 Call (888) 780-4427 or (320) 286-6382 and ask to speak with service.

