

Model # 64-1000 & 64-1002

Easy Assembly Instructions

POCKEY™
2 IN 1 GAMETABLE



DO NOT RETURN TO STORE

For all returns and warranty coverage, please call:

**GLD Products
1-800-225-7593**

Please provide model number, serial number and/or part number when you call. Numbers can be found on outside of packaging.

Fat Cat™
PRO GAME TABLES

Congratulations on your purchase of the Fat Cat™ Pockey™ 2 in 1 Gametable!

This manual is to instruct you during the assembly of your new table. Four people required for some steps.

Careful handling of all parts during assembly will ensure many years of enjoyment!

WARNING: Changing of game should be done under adult supervision.

Rotating table may pose a finger pinching hazard for young children. Please exercise caution.

Never open fan compartment while fan is running. To do so may cause serious injury.

Careful handling of all parts during assembly will ensure many years of enjoyment!

PRO TIP

Arrange all of your tools before you begin assembly.

Tools

Assembly of the Pockey™ 2 in 1 Gametable requires the following common tools:

- Phillips screwdriver
- Wrench (included)
- Level

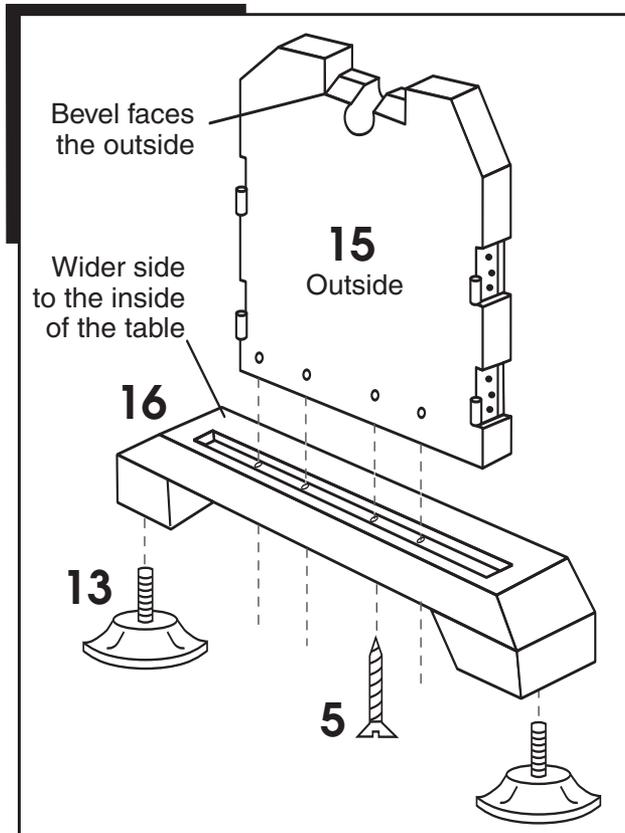
Assembling Your Pockey™ 2 in 1 Gametable

STEP 1. Assembling bases.

Carefully remove two (#15) pedestals, two (#16) pedestal supports, four (#13) levelers and eight (#5) 1½" flat head screws from packaging. Insert levelers into pre-drilled holes in bottom of bases and secure part way.


STEP 2. Assembling pedestals.

Insert pedestals into bases as shown, and secure each with four (#5) 1½" flat head screws.




Step 3. Attaching L-supports and hinges.

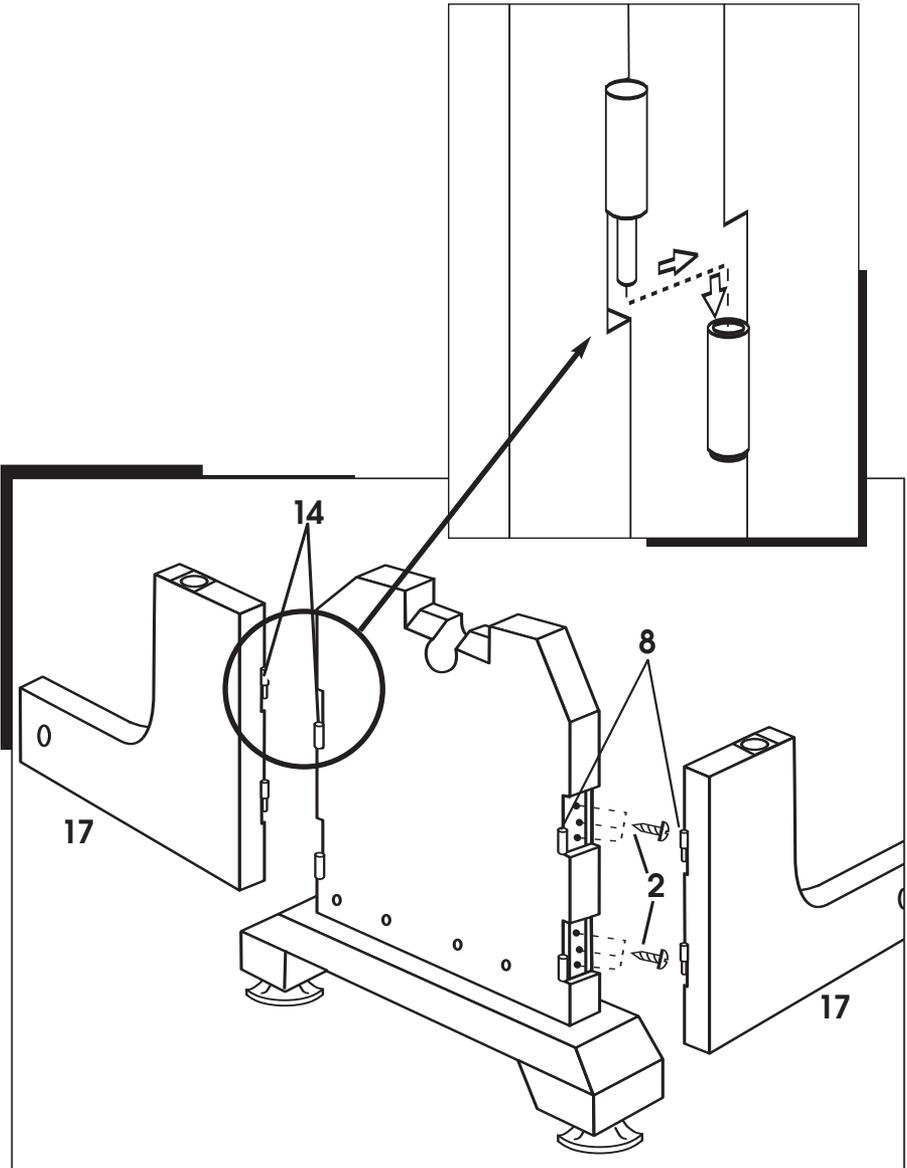Place the female (#8 & #14) hinges in the precut slots on the edge of each pedestal using (#2) 1/2" round head screws. Attach male (#8 & #14) hinges in the precut slots on the edge of each (#17) L-support and secure using (#2) screws. Attach L-support to pedestal using the hinges.




STEP 4. Assembling ball storage trays.

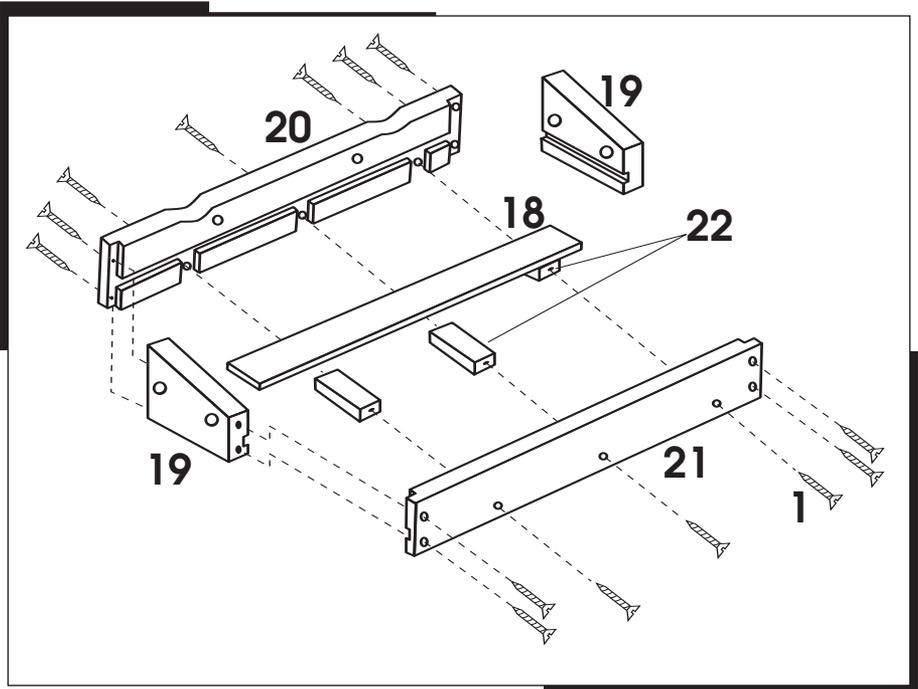
Each tray consists of a (#18) bottom panel, an (#20) outside rail, a (#21) inside rail, two (#19) end pieces and (#22) 3 bottom supports. With (#1) 1" flat head screws, secure (#20) outside and (#21) inside rails to one of the (#19) end panels. Slide the (#18) bottom panel into precut slot and snap on other (#19) end panel. Secure with (#1) 1" flat head screws. Flip storage tray upside-down. Place 3 (#22) bottom supports into cutouts, and secure with (#1) 1" flat head screws. Repeat for the other tray.



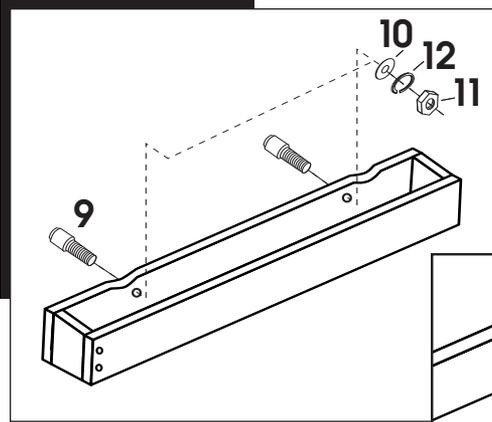STEP 5. Installing L-support locks.




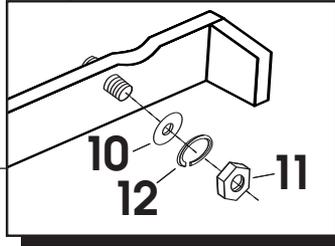Insert (#9) lock bolts into predrilled holes into the outside rail of ball storage trays. Place (#10) washer, (#12) spring washer and (#11) hex nut over threaded end and tighten.




STEP 6. Assembling the cabinet.

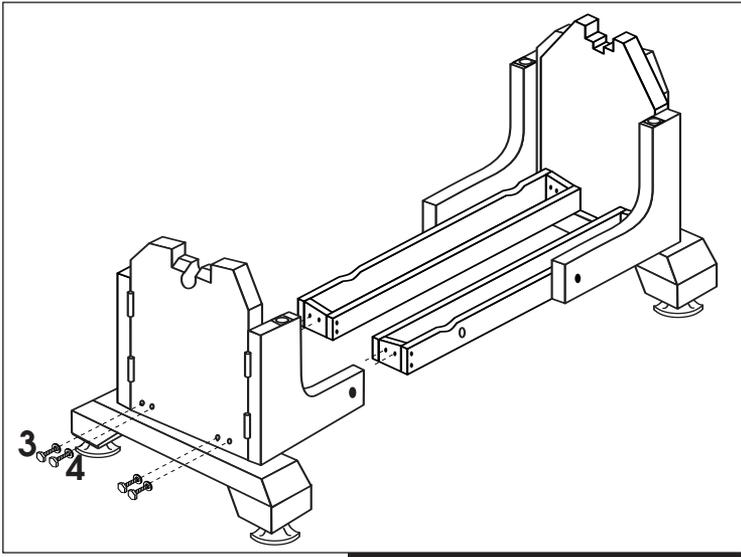
With the help of another person, loosely attach the ball storage trays (making sure the outside rails face out) to both pedestals with (#4) $\frac{5}{16}$ " washers and (#3) $\frac{5}{16}$ x $1\frac{1}{2}$ " hex bolts. Lock L-supports to ball storage trays by pressing hard on the L-support. With L-supports in lock position, finish tightening screws. Adjust screws to make sure L-supports lock and unlock easily.




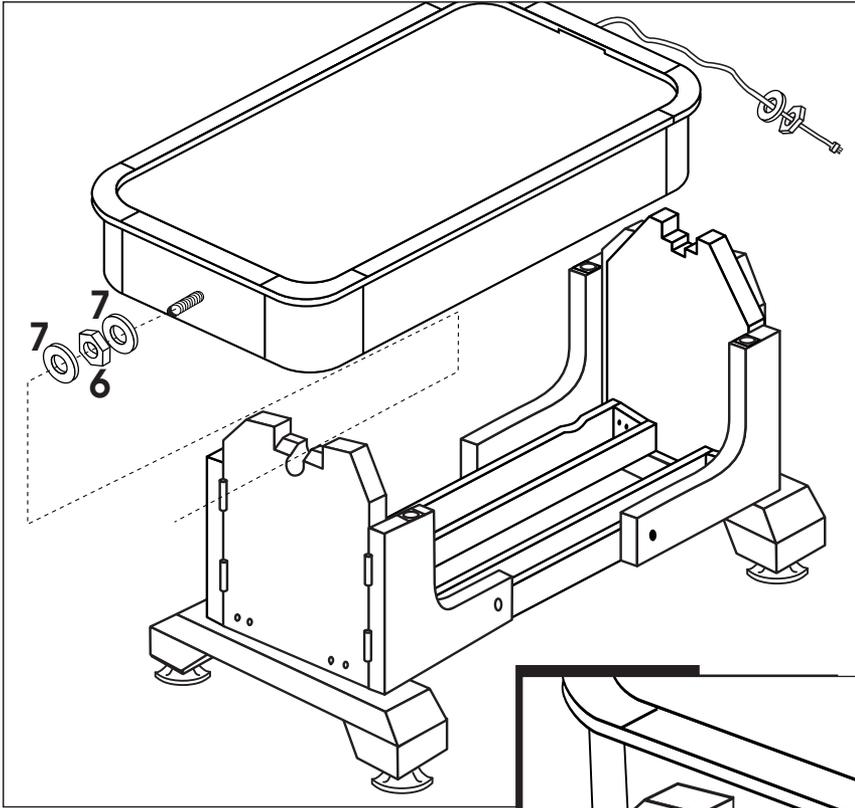Step 7. Attaching rotating table top.



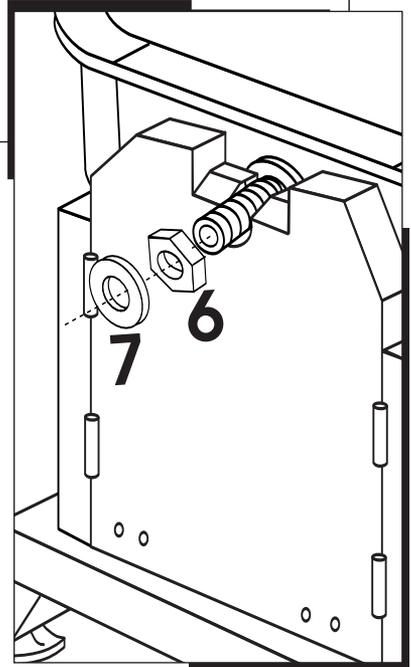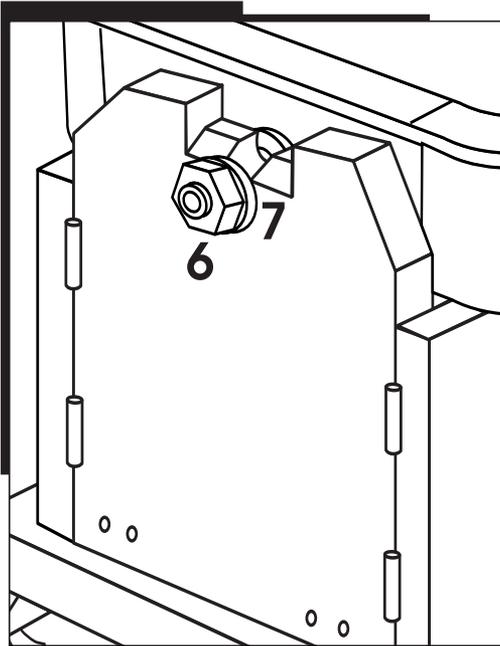Place a (#6) 20mm hex nut and two (#7) washers over each threaded shank on the non-powercord end of the (#23) table top and tighten. The hex nut and washers have been pre-assembled on the end with the power cord. With the help of three other people, lift the table top and rest it in the center groove on the top of each pedestal.






STEP 8. Securing table top.

Thread (#7) washer and (#6) hex nuts over the ends of the threaded shanks.


STEP 9. Securing table top.

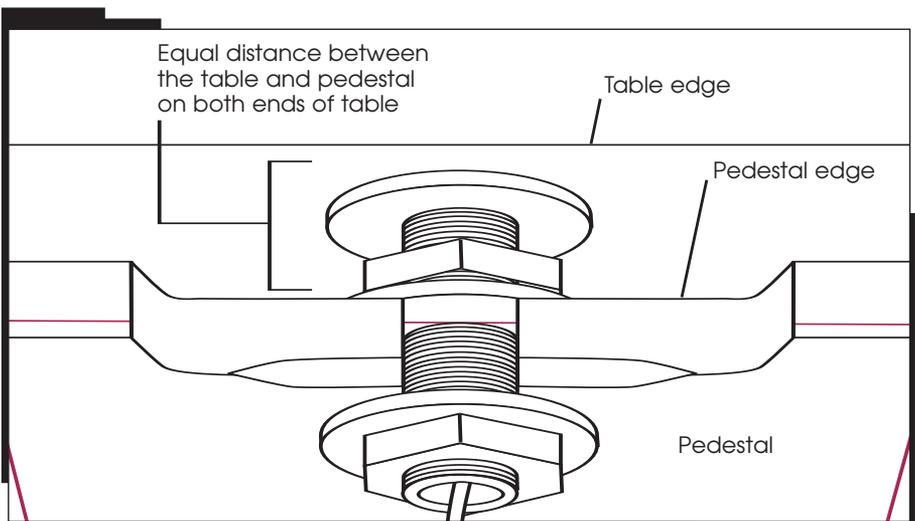Using the (#28) wrench, tighten (#6) hex nuts TOWARD pedestals. Make sure the distance between table top and hex nut are equal on both ends of table. Adjust as necessary. Rotate table a few times and continue to tighten until the threaded shank stops rotating.



STEP 10. Attaching puck catchers.

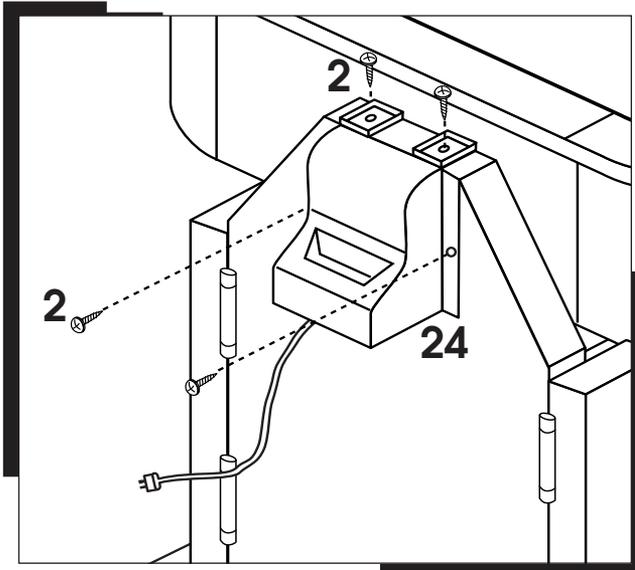
Align (#24) puck catcher with predrilled holes on each end of playing table and secure to pedestal with (#2) 1/2" round head screws. Run the power cord through the puck catcher.













STEP 11. Adjusting levelers.

With the help of another person, turn each leveler until table rests level to the floor. Check with a level placed cross-wise and length-wise on table top. Re-adjust levelers as necessary. Remove and discard sticky backer from (#26) goalie felt sticker and apply to (#25) goalie.

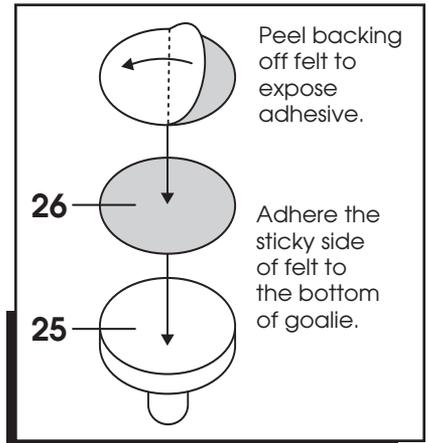You are now ready to play!














Pockey™ 2 in 1 Gametable Parts List
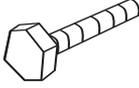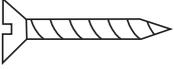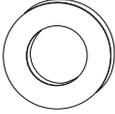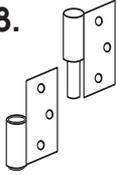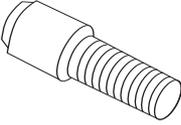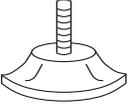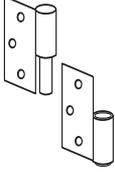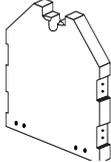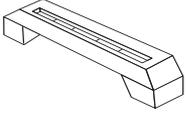
<p>#1.</p>  <p>1" Flat Head Screw 28 pieces</p>	<p>#2.</p>  <p>1/2" Round Head Screw - 40 pieces</p>	<p>#3.</p>  <p>5/16" x 1 1/2" Hex Bolts 8 pieces</p>	<p>#4.</p>  <p>5/16" Washer 8 pieces</p>
<p>#5.</p>  <p>1 1/2" Flat Head Screw - 8 pieces</p>	<p>#6.</p>  <p>20mm Hex Nut 4 pieces</p>	<p>#7.</p>  <p>20mm" Washer 6 pieces</p>	<p>#8.</p>  <p>Right Hinge 4 pieces</p>
<p>#9.</p>  <p>Lock Bolt 4 pieces</p>	<p>#10.</p>  <p>3/8" Washer 4 pieces</p>	<p>#11.</p>  <p>5/16" Hex Nut 4 pieces</p>	<p>#12.</p>  <p>Spring Washer 4 pieces</p>
<p>#13.</p>  <p>Leveler 4 pieces</p>	<p>#14.</p>  <p>Hinge 4 pieces</p>	<p>#15.</p>  <p>Pedestal 2 pieces</p>	<p>#16.</p>  <p>Pedestal Support 2 pieces</p>

Pockey™ 2 in 1 Gametable Parts List

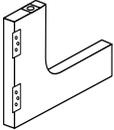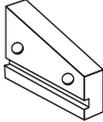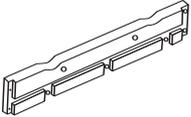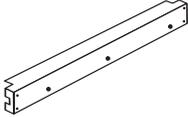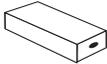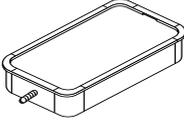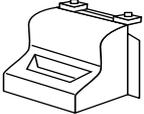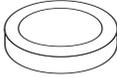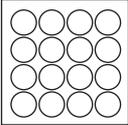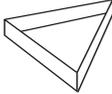(continued)

<p>#17.</p>  <p>L- Support 4 pieces</p>	<p>#18.</p>  <p>Ball Storage Tray - Bottom - 2 pieces</p>	<p>#19.</p>  <p>Ball Storage Tray - End Piece - 4 pieces</p>	<p>#20.</p>  <p>Outside Rail 2 pieces</p>
<p>#21.</p>  <p>Inside Rail 2 pieces</p>	<p>#22.</p>  <p>Bottom Supports 6 pieces</p>	<p>#23.</p>  <p>Table Top 1 piece</p>	<p>#24.</p>  <p>Puck Catcher 2 pieces</p>
<p>#25.</p>  <p>Goalie 2 pieces</p>	<p>#26.</p>  <p>Goalie Felt Sticker 2 pieces</p>	<p>#27.</p>  <p>Round Puck 1 piece</p>	<p>#28.</p>  <p>Wrench 2 pieces</p>
<p>#29.</p>  <p>Billiard Balls 1 set</p>	<p>#30.</p>  <p>Brush 1 piece</p>	<p>#31.</p>  <p>Triangle 1 piece</p>	<p>#32.</p>  <p>Chalk 2 pieces</p>
<p>#33.</p>  <p>2 Cue Sticks 4 pieces</p>			

WARRANTY INFORMATION

90-Day Warranty on Pockey™ Table

Manufacturer warrants to the original retail purchaser, this product to be free from defects in material and workmanship for a period of ninety (90) days from the date of purchase.

Should this product become defective due to material or workmanship within the warranty period, contact our Customer Service Department. This warranty is not transferable and does not cover normal wear and tear, or damage caused by improper handling, installation or use of this product. This warranty is also void if product is in any way abused, damaged, or modified from its original state, or if used for other than indoor residential use. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

DO NOT RETURN TO STORE

For all returns and warranty coverage, please visit our website at www.gldmfg.com or call 1-800-225-7593.

Please provide model number, serial number and/or part number when you call. Numbers can be found on outside of packaging.



GLD Products

S84 W19093 Enterprise Drive
Muskego, WI 53150 USA
800 225 7593 • FAX 800 841 6944
Web Site: www.gldmfg.com
Email: gld@gldmfg.com