

OPERATING INSTRUCTIONS

The LG-438 is activated by a strategically located pressure pad. With a normal shooting grip, your middle finger will naturally hit the pressure pad whether shooting right or left-handed.

Master ON/OFF switch is also provided near the center of the left side panel to turn the laser off. The laser should be left in the ON position under most circumstances. Turning the master switch OFF will NOT increase battery life.

PLEASE READ ENTIRE OWNER'S MANUAL PRIOR TO INSTALLING AND USING YOUR NEW LASERGRIPS.

Crimson Trace
800-442-2406 or 503-783-5333
Fax: 503-783-5334
Customer Service E-Mail: customer@crimsontrace.com
www.crimsontrace.com

L A S E R G R I P S[®]

27-4122 REV 001 12/10

www.crimsontrace.com

9780 SW Freeman Dr.
Wilsonville, OR 97070 USA
Tel: (800) 442-2406
Fax: (503) 783-5334



Crimson  **Trace**


Crimson  **Trace**

**LG-438 for
SIG SAUER SIG PRO SP2009, SP2022, SP2340**

INSTALLATION HANDBOOK

L A S E R G R I P S[®]

THANK YOU FOR SELECTING THE FINEST LASER SIGHTING SYSTEM: **CRIMSON TRACE LASERGRIPS AND LASERGUARD**. WHEN IT COMES TO SPEED, ACCURACY AND SECURITY, CRIMSON TRACE IS THE TOP CHOICE OF LAW ENFORCEMENT, MILITARIES AND LEGALLY ARMED CITIZENS AROUND THE WORLD.

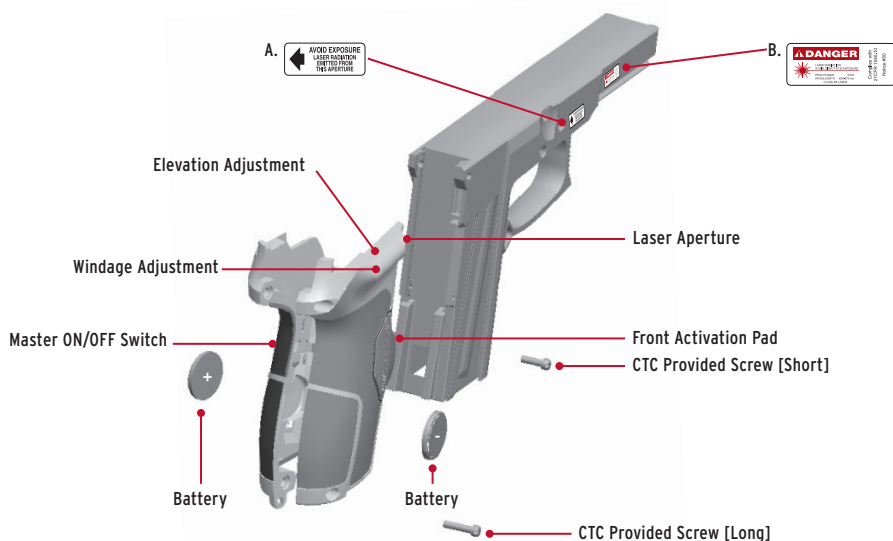

BATTERIES

Two (2) CR2025 or DL2025 Lithium Cells.

PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 633 nm, Class 3R laser

DOT SIZE: Approximately 0.5 inches diameter at 50 feet

BATTERIES: Two 2025 lithium batteries;
over four hours of illumination

ACTIVATION: Front-located integrated momentary
pressure pad and master ON/OFF switch

WARRANTY: Three-year full warranty

This product complies with 21 CFR 1040.10



INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove magazine and double check that chamber is empty. (See "Four Basic Rules Of Firearm Safety" in Owner's Handbook.)

NOTE: Installation and removal of Lasergrips® requires that slide be in forward position, or removed. For safety, we recommend complete removal of slide (field strip) prior to installation or removal of Lasergrips. Consult owner's manual for specific instructions.

2. Remove factory grip. With empty magazine well, press firmly on square tab located inside magazine well, while sliding grip downward. (Consult manufacturer's instructions if unsure.)
3. Place two (2) batteries in Lasergrips with the positive (+) side visible.
4. Slide on right-hand side (laser side) of Lasergrips first. Make sure forward edge of Lasergrips slides under lip on gun frame. As you slide the grip into place, it should snap firmly into place.
5. Wrap rubber activation strap around front strap of frame, then slide front of left-hand grip under lip on front of frame. Snap into place, and press grip halves together firmly. If desired, install lanyard ring on bottom screw before closing grip halves.
6. Install supplied hardware. Shorter screw fits the upper backstrap (beavertail) location. Longer screw fits the bottom location.

Important: Short and long screws must be installed in the correct locations, or grip may be damaged.

7. Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
8. Using a small pointed tool or ballpoint pen tip, switch the master ON/OFF switch to the ON (up) position.
9. To activate Lasergrips, press pressure activation pad located in center of rubber front strap directly beneath trigger guard to activate the laser.
10. In a safe direction, confirm that the laser and iron sights are in alignment. Lasergrips are sighted-in at the factory, but can be fine-tuned for windage and elevation using the enclosed Allen wrenches.

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM. Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.

