


TURNING CENTER

LT15-MY

PARTS BOOK (2nd Edition)

Pub.No.LE15-102-R2 Sep.1994

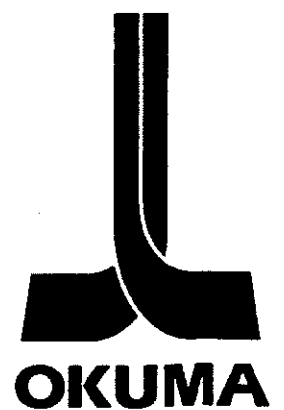

PARTS BOOK

This parts book has been prepared to assist you in ordering replacements and servicing parts for the OKUMA LT-15MY CNC Cylindrical Grinder.


Due to constant improvements in design, you may find slight variations from the machine delivered to you. This merely indicates that equipment improvements have been made to better meet your requirements.

ORDERING REPAIR PARTS

In order to obtain smooth and rapid service when ordering repair parts, please give careful attention to the following five instructions.


These FIVE requirements are essential:

1. GIVE COMPLETE SIZE, TYPE OF MACHINE AND CNC SYSTEM.
2. GIVE COMPLETE SERIAL NUMBER OF MACHINE.
This serial number will be found stamped on the manufacturer's name plate attached to the machine.
3. GIVE PARTS BOOK PUBLICATION NO., SHEET NO., INDEX NO., PARTS NO., AND PART NAME (DESCRIPTION).
4. FOR ELECTRICALS, SPECIFY POWER VOLTAGE, FREQUENCY, RATING, BRAND NAME AND OTHER INFORMATION FOUND ON THE PART.
5. STATE QUANTITY WANTED.

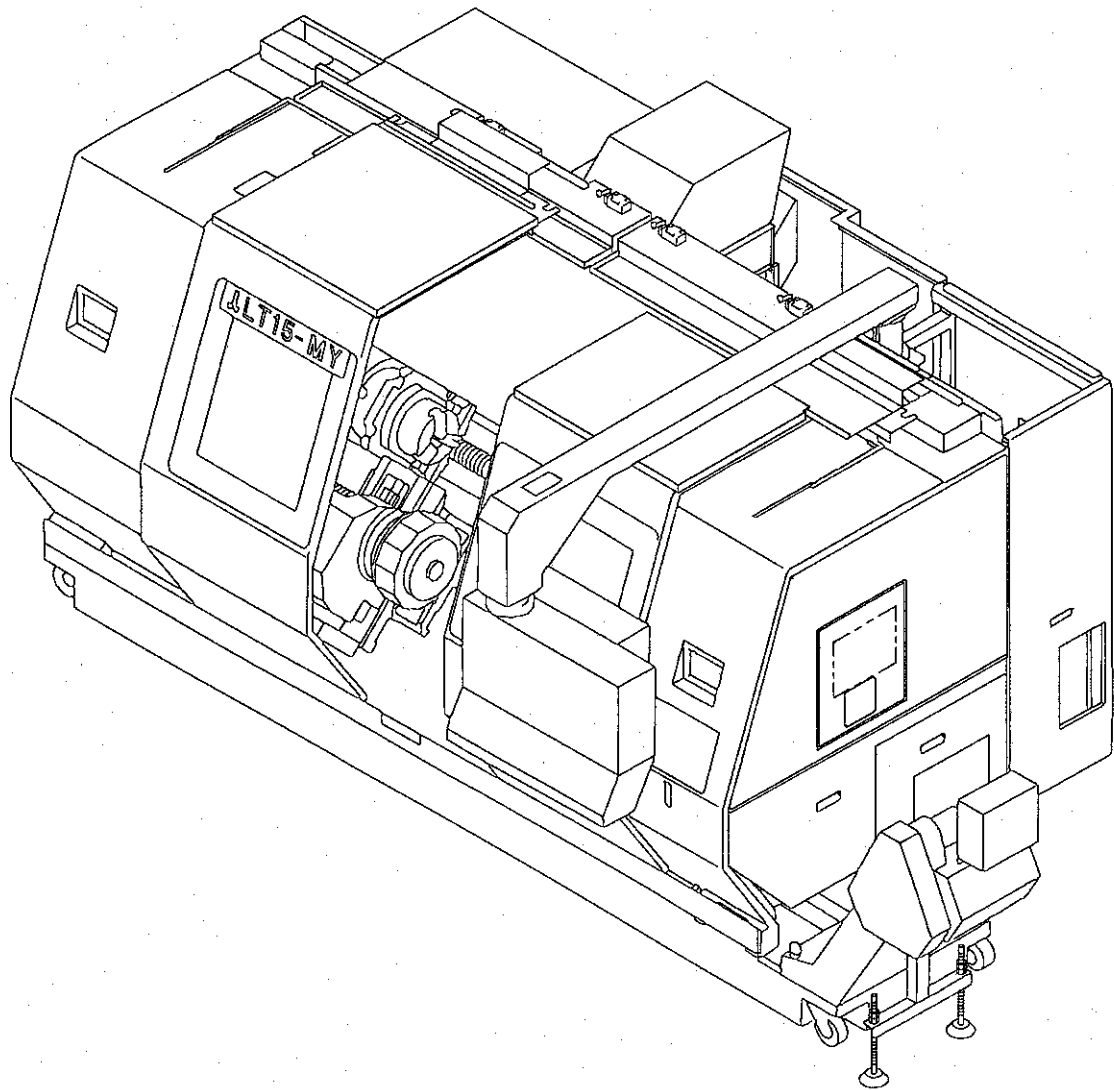

OKUMA LT-15MY Turning Center

HOW TO USE THIS PARTS BOOK

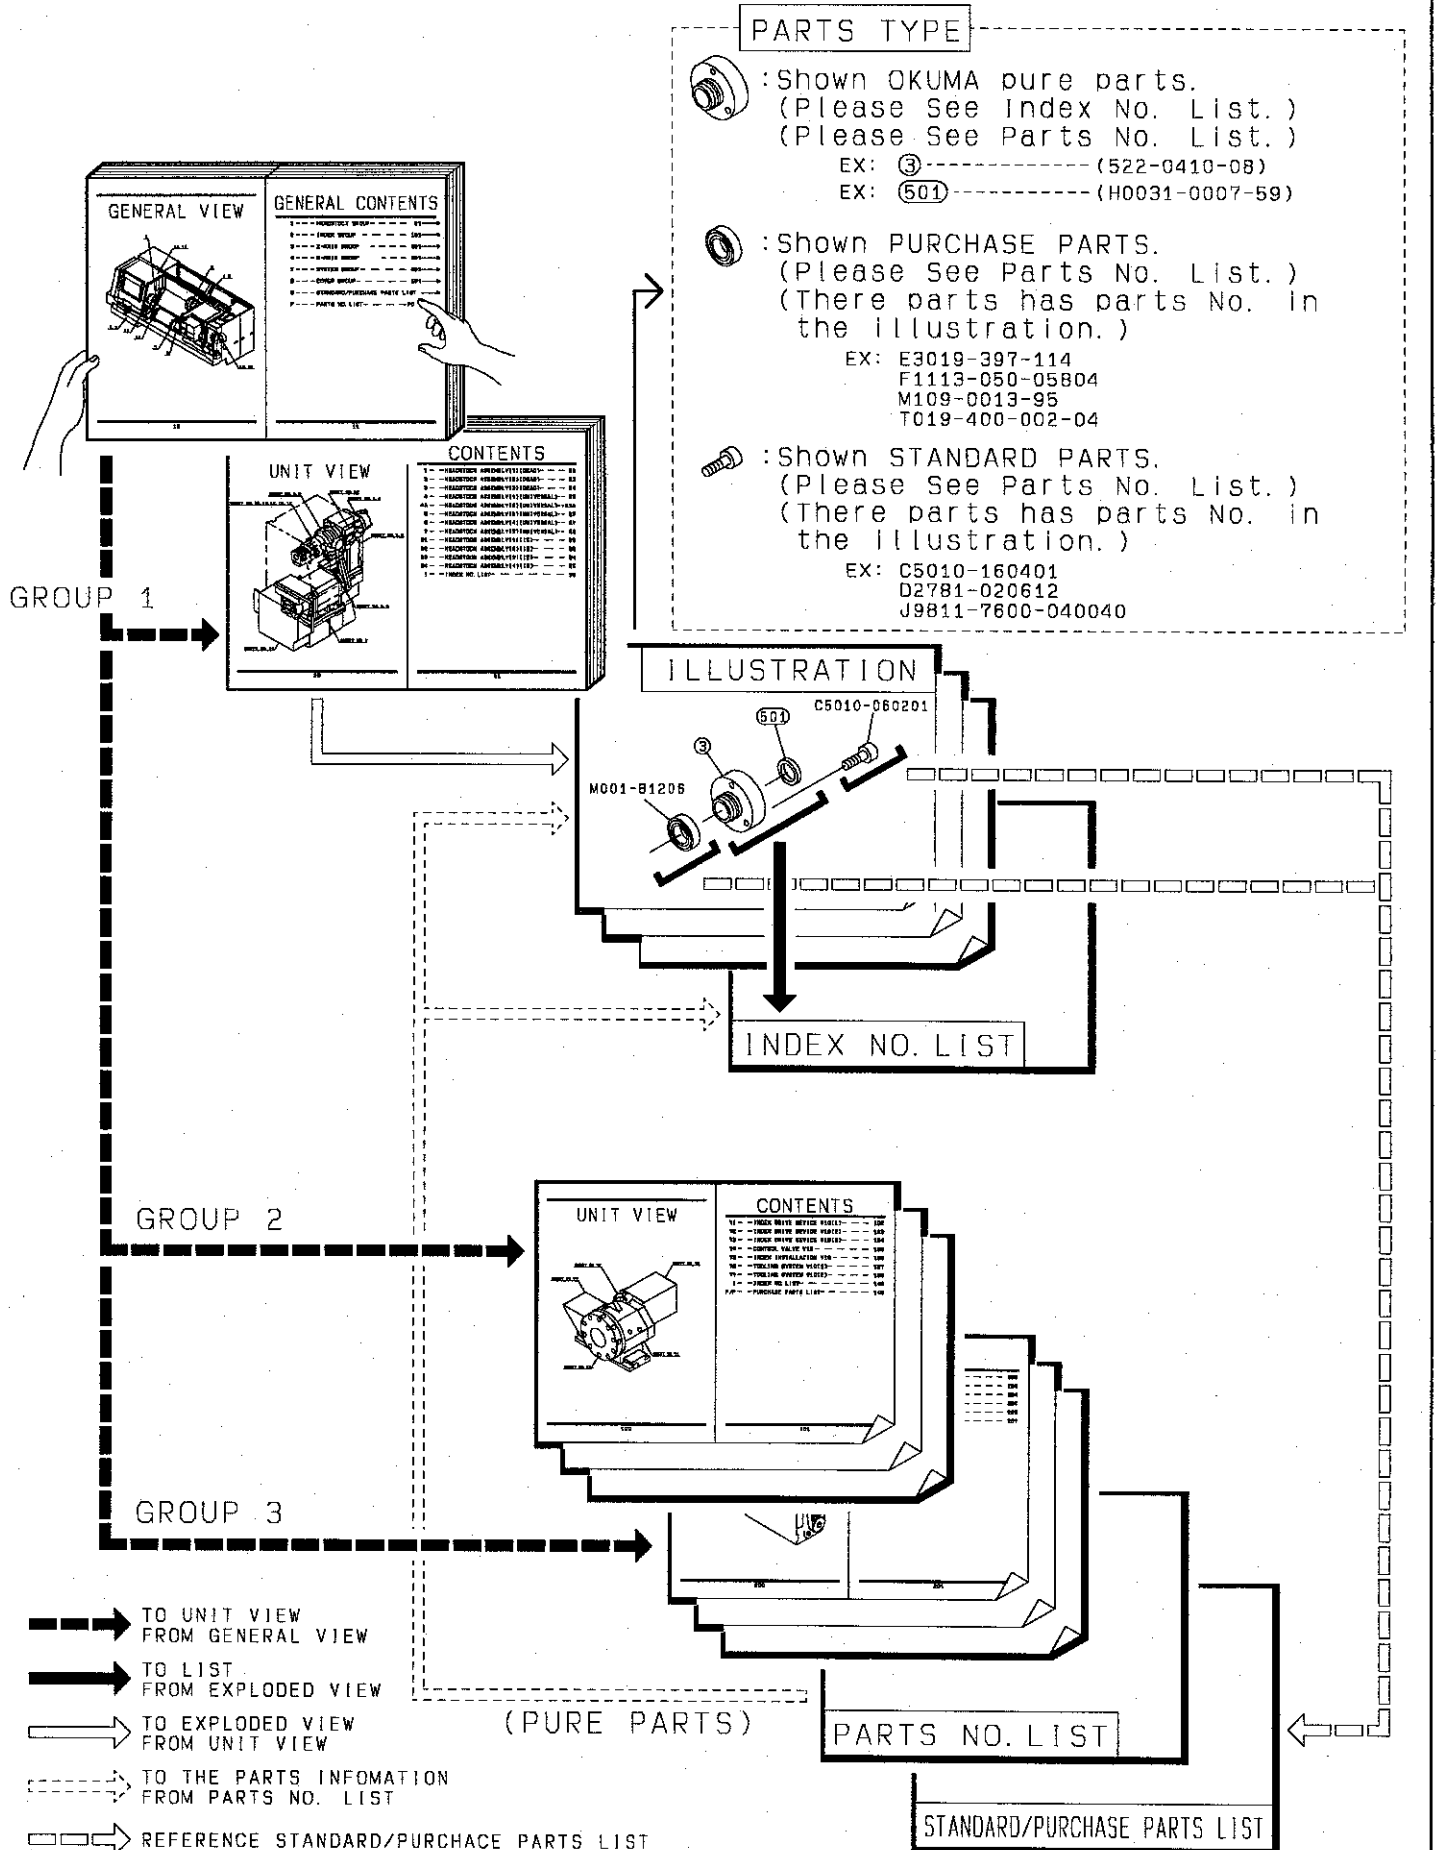

パーツブックの使い方

部品タイプ



：オークマ製作部品を示す。(製作品リスト参照。)
(部品番号順リスト参照。)

例：③----- (522-0410-08)

例：(501)----- (H0031-0007-59)



：仕入れ部品を示す。(部品番号順リスト参照。)
(イラストに直接、品番が記載されています。)

例：E3019-397-114

例：F1113-050-05804

例：M109-0013-95

例：T019-400-002-04




：標準部品を示す。(部品番号順リスト参照)
(イラストに直接、品番が記載されています。)

例：C5010-060401





例：D2781-020612

例：J9811-7600-040040

イラスト

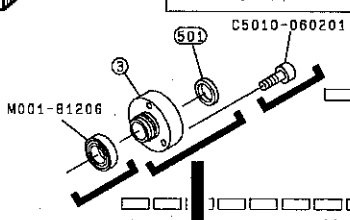

製作品リスト

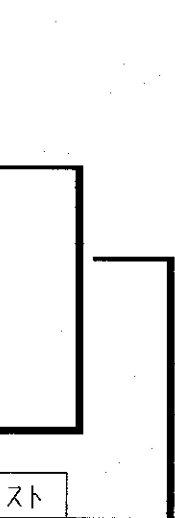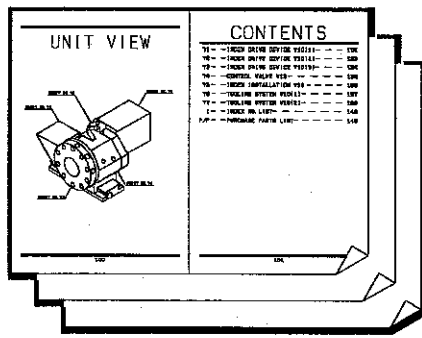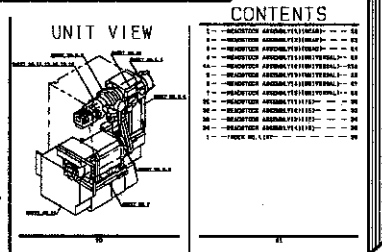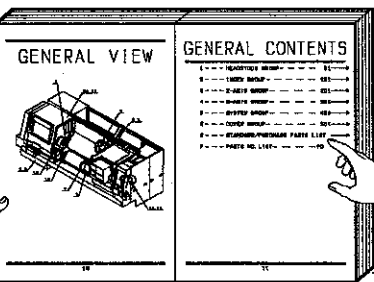

グループ 1

グループ 2

グループ 3

→ 総組立図からユニット組立図へ

→ 分解図からリストへ

→ ユニット組立図から分解図へ

→ 部品番号順リストから部品へ

→ 標準品/仕入品リスト参照


(製作品)

部品番号順リスト

標準品/仕入品リスト

LT15/LT15-MY FACE-TO-FACE TWIN SPINDLE LATHE

GENERAL VIEW

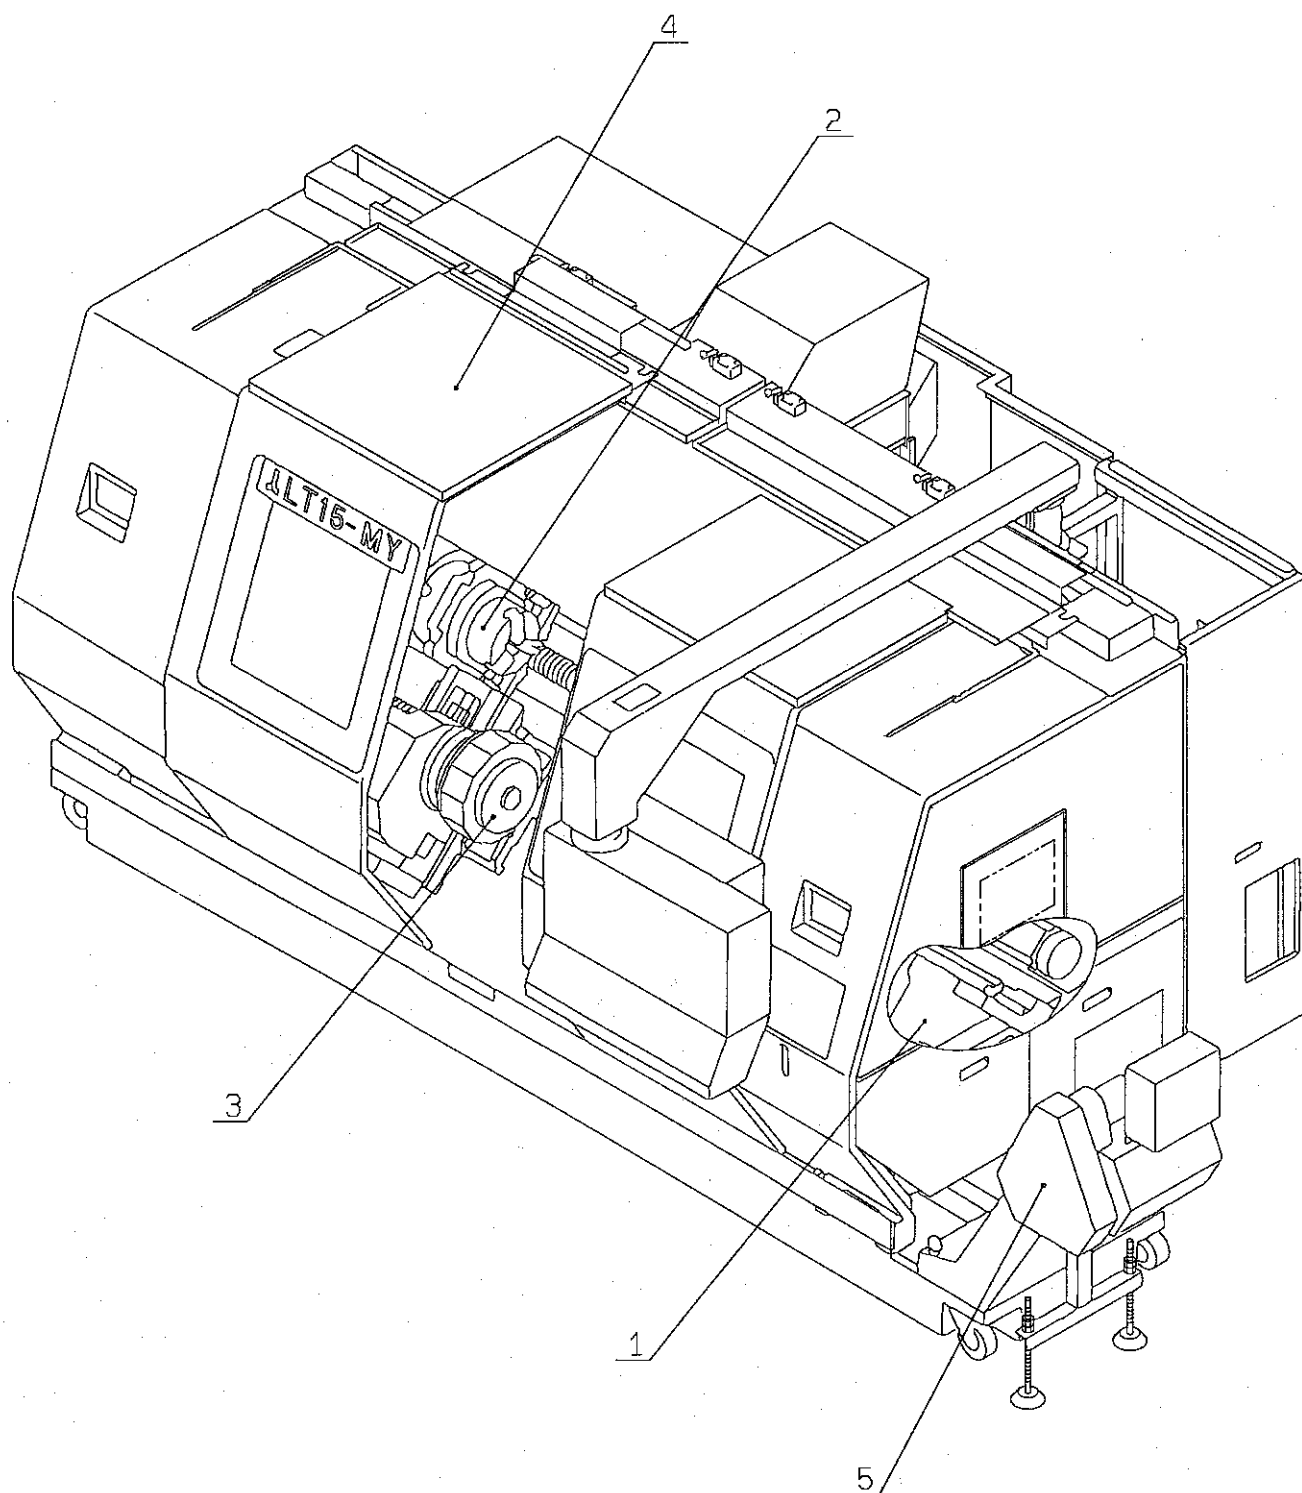


P A R T S B O O K

LT15/LT15-MY

FASE-TO-FASE TWIN SPINDLE LATHE ~ G E N E R A L C O N T E N T S ~


NO.	GROUP NAME	PAGE
1	BED & Z-AXIS GROUP	21
2	HEADSTOCK GROUP	101
3	TURRET & X-AXIS GROUP	201
4	COVER GROUP	301
5	COOLANT SYSTEM GROUP	401
P	PART NO. LIST	P001
S	STANDARD/PURCHASE PARTS LIST	S001

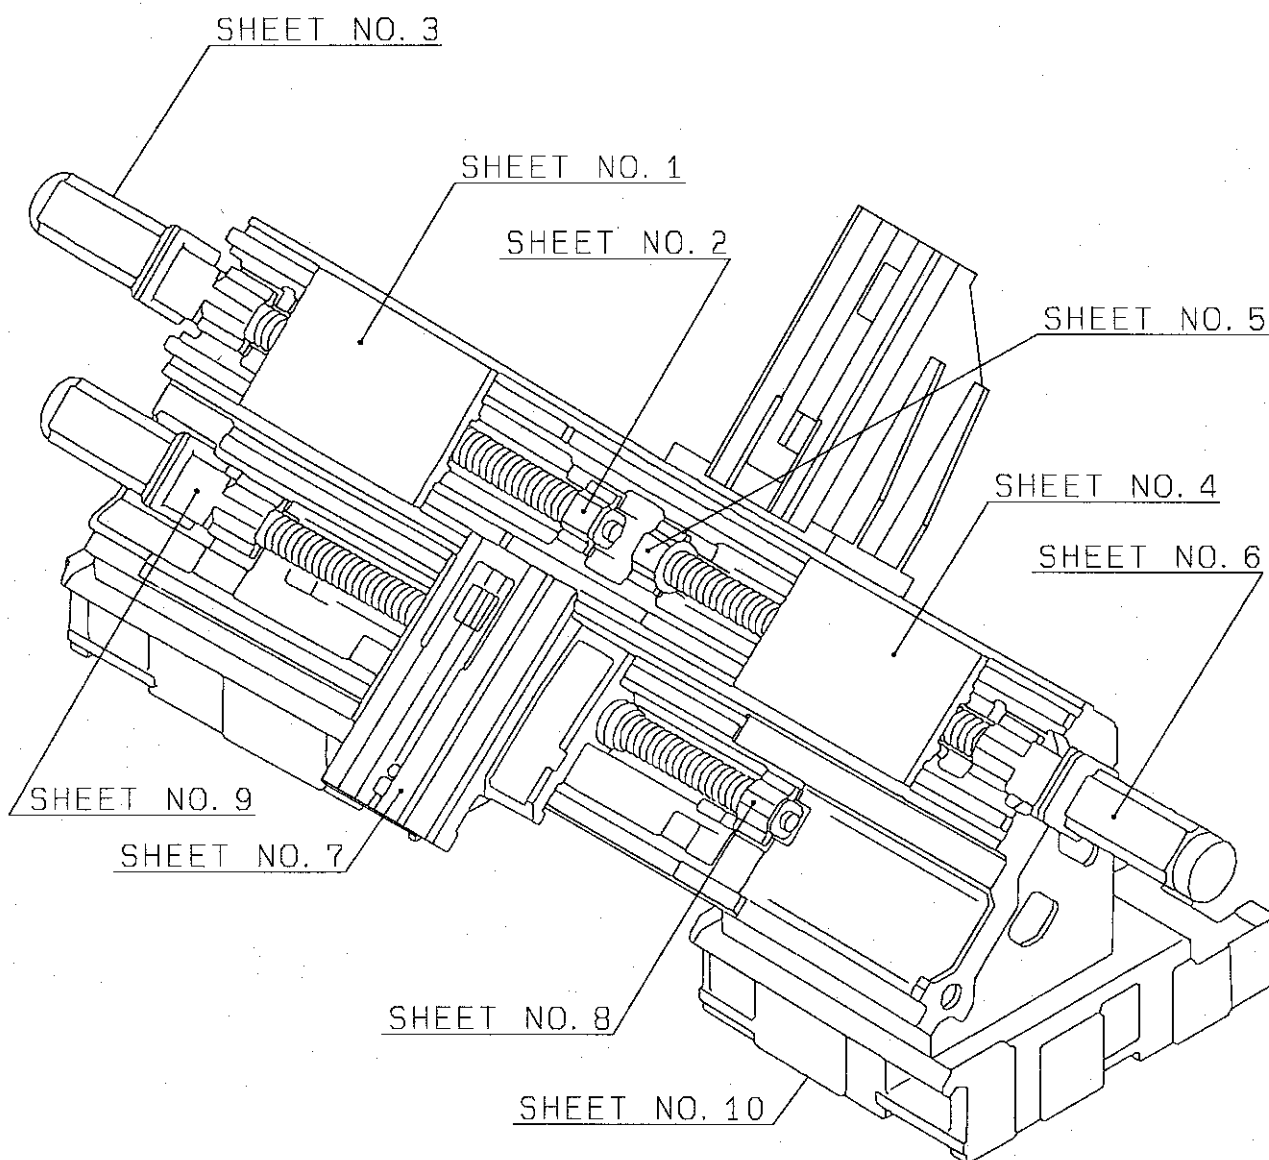


(1) BED & Z-AXIS GROUP

~ C O N T E N T S ~


SHEET NO.	ASSEMBLY NAME	PAGE
1	ZA-SADDLE INSTALLATION	22
2	ZA-AXIS BALL-SCREW (1)	23
3	ZA-AXIS BALL-SCREW (2)	24
4	ZC-SADDLE INSTALLATION	25
5	ZC-AXIS BALL-SCREW (1)	26
6	ZC-AXIS BALL-SCREW (2)	27
7	LOWER SADDLE INSTALLATION	28
8	ZB-AXIS BALL-SCREW (1)	29
9	ZB-AXIS BALL-SCREW (2)	30
10	BED	31
I	INDEX NO. LIST	32

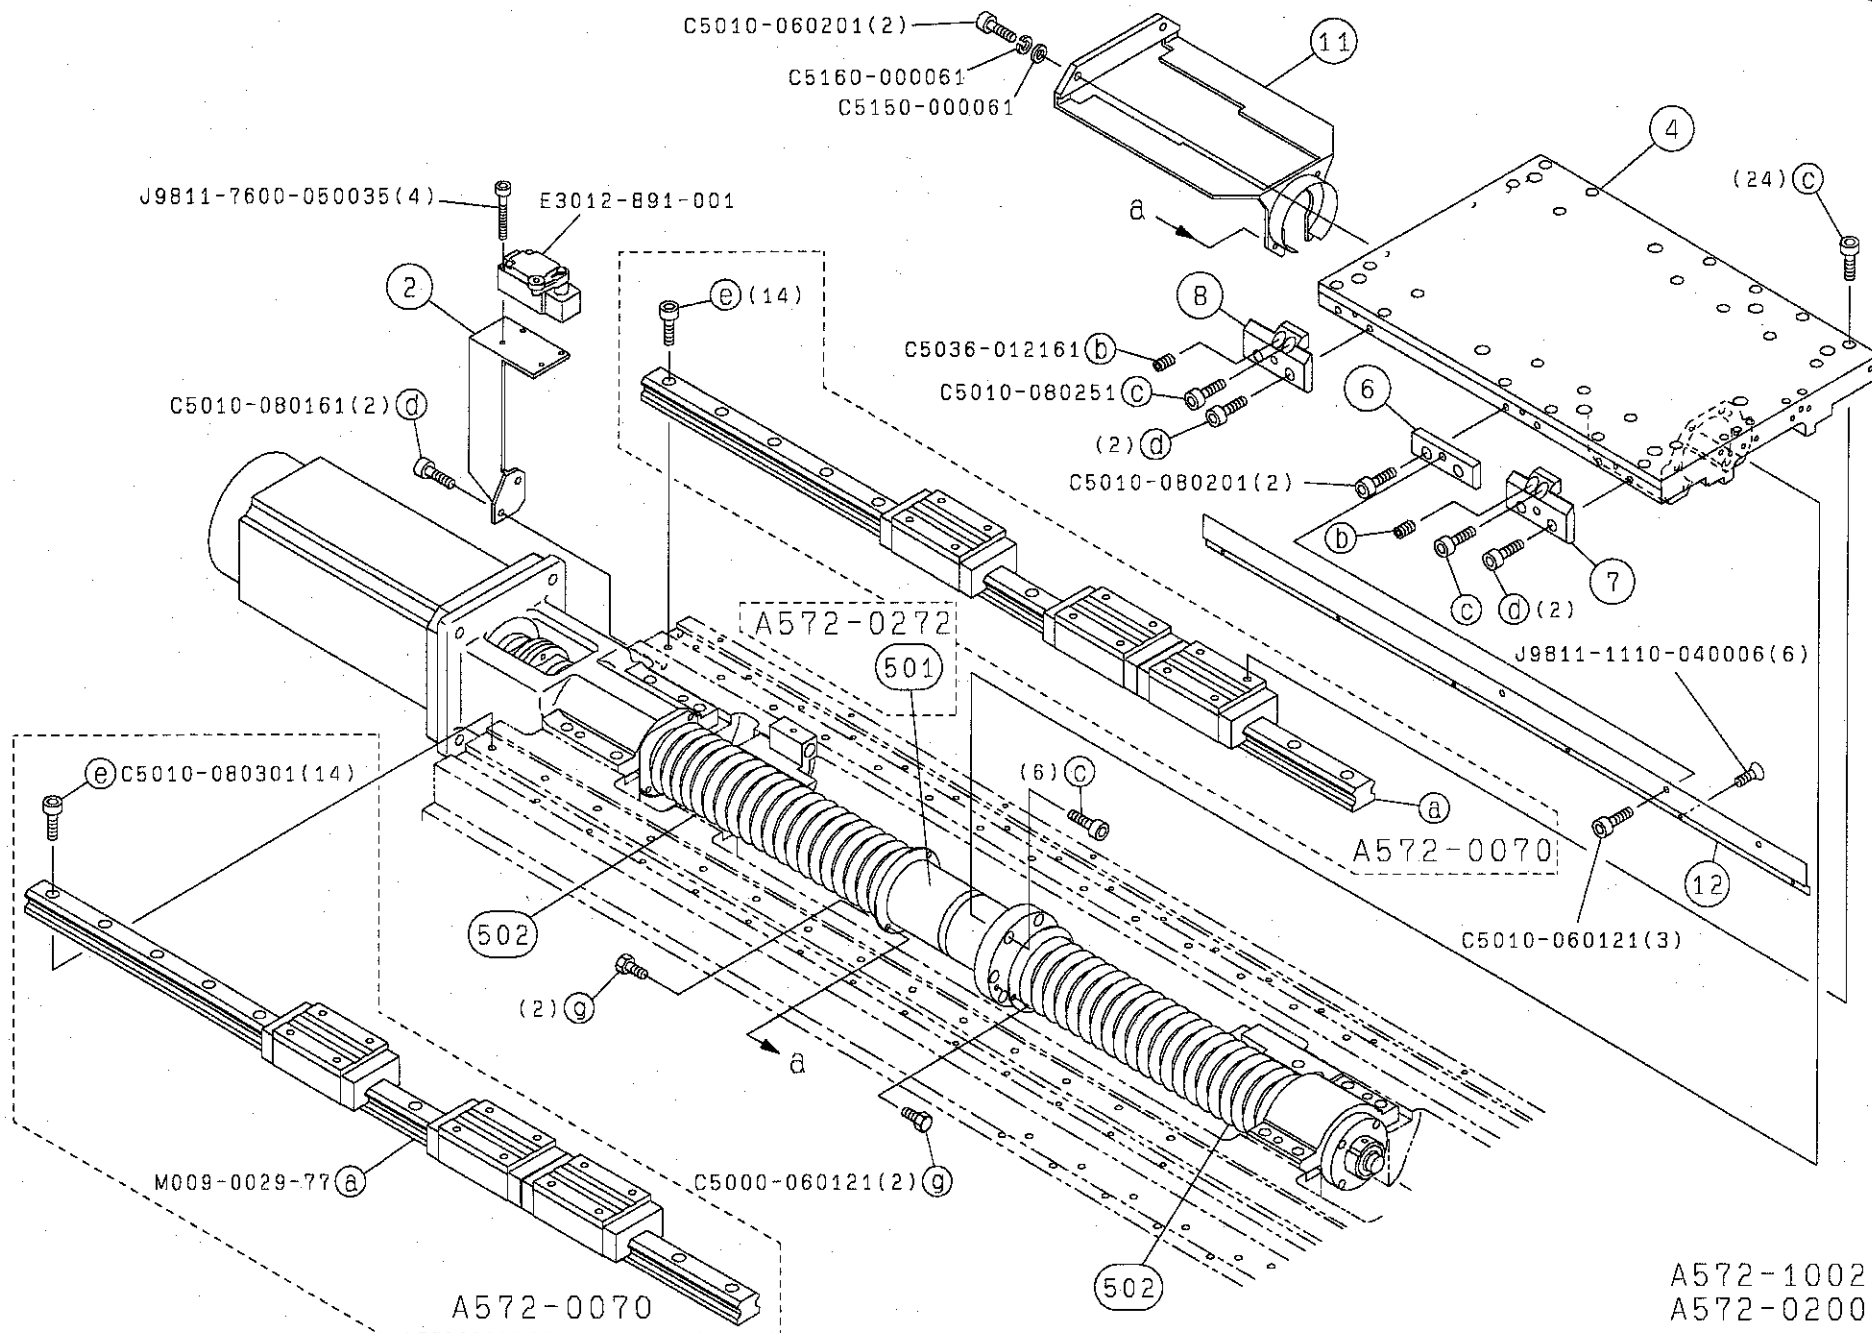

23

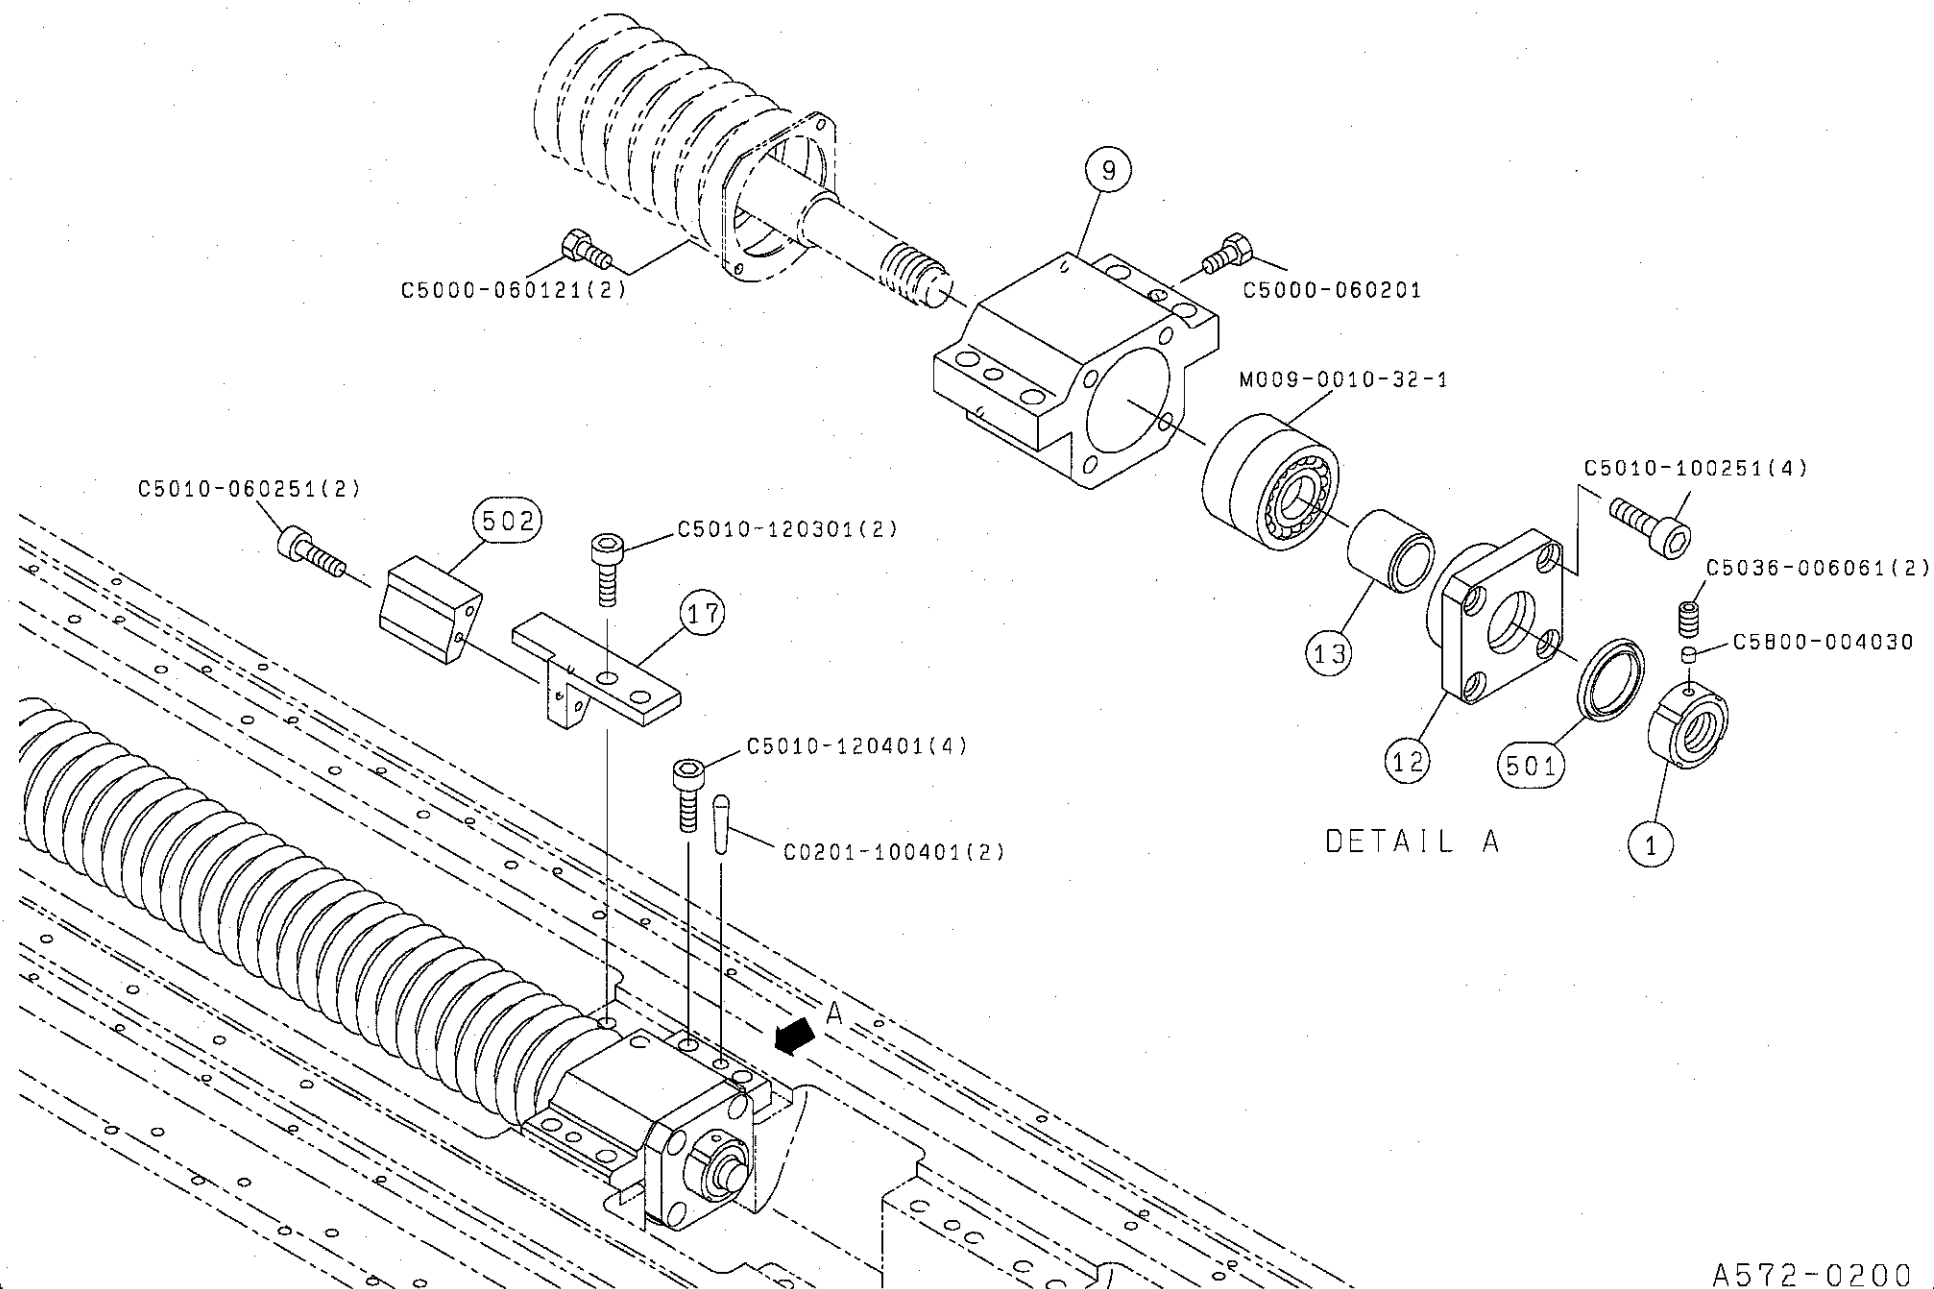


A572-0200

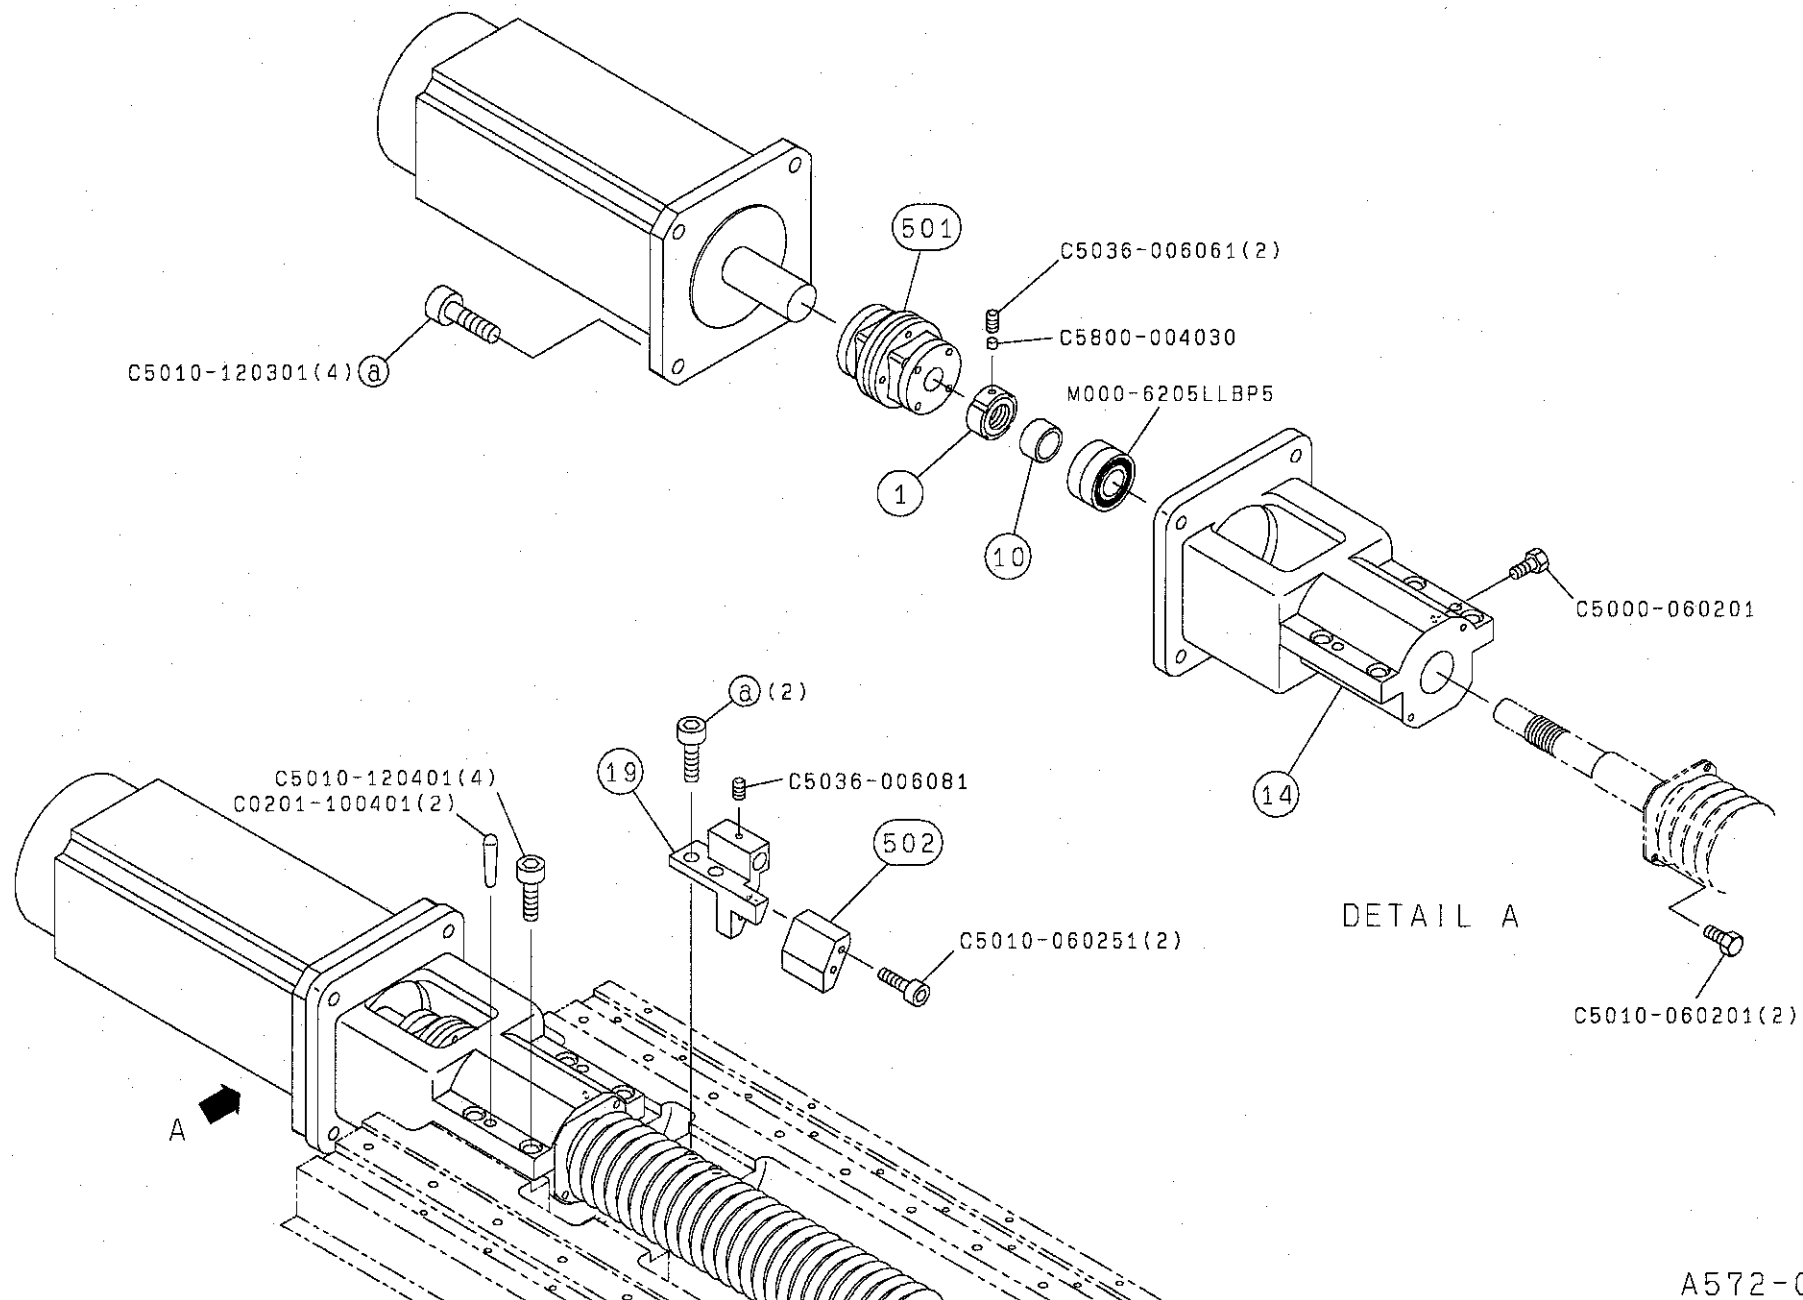


A572-0200

25

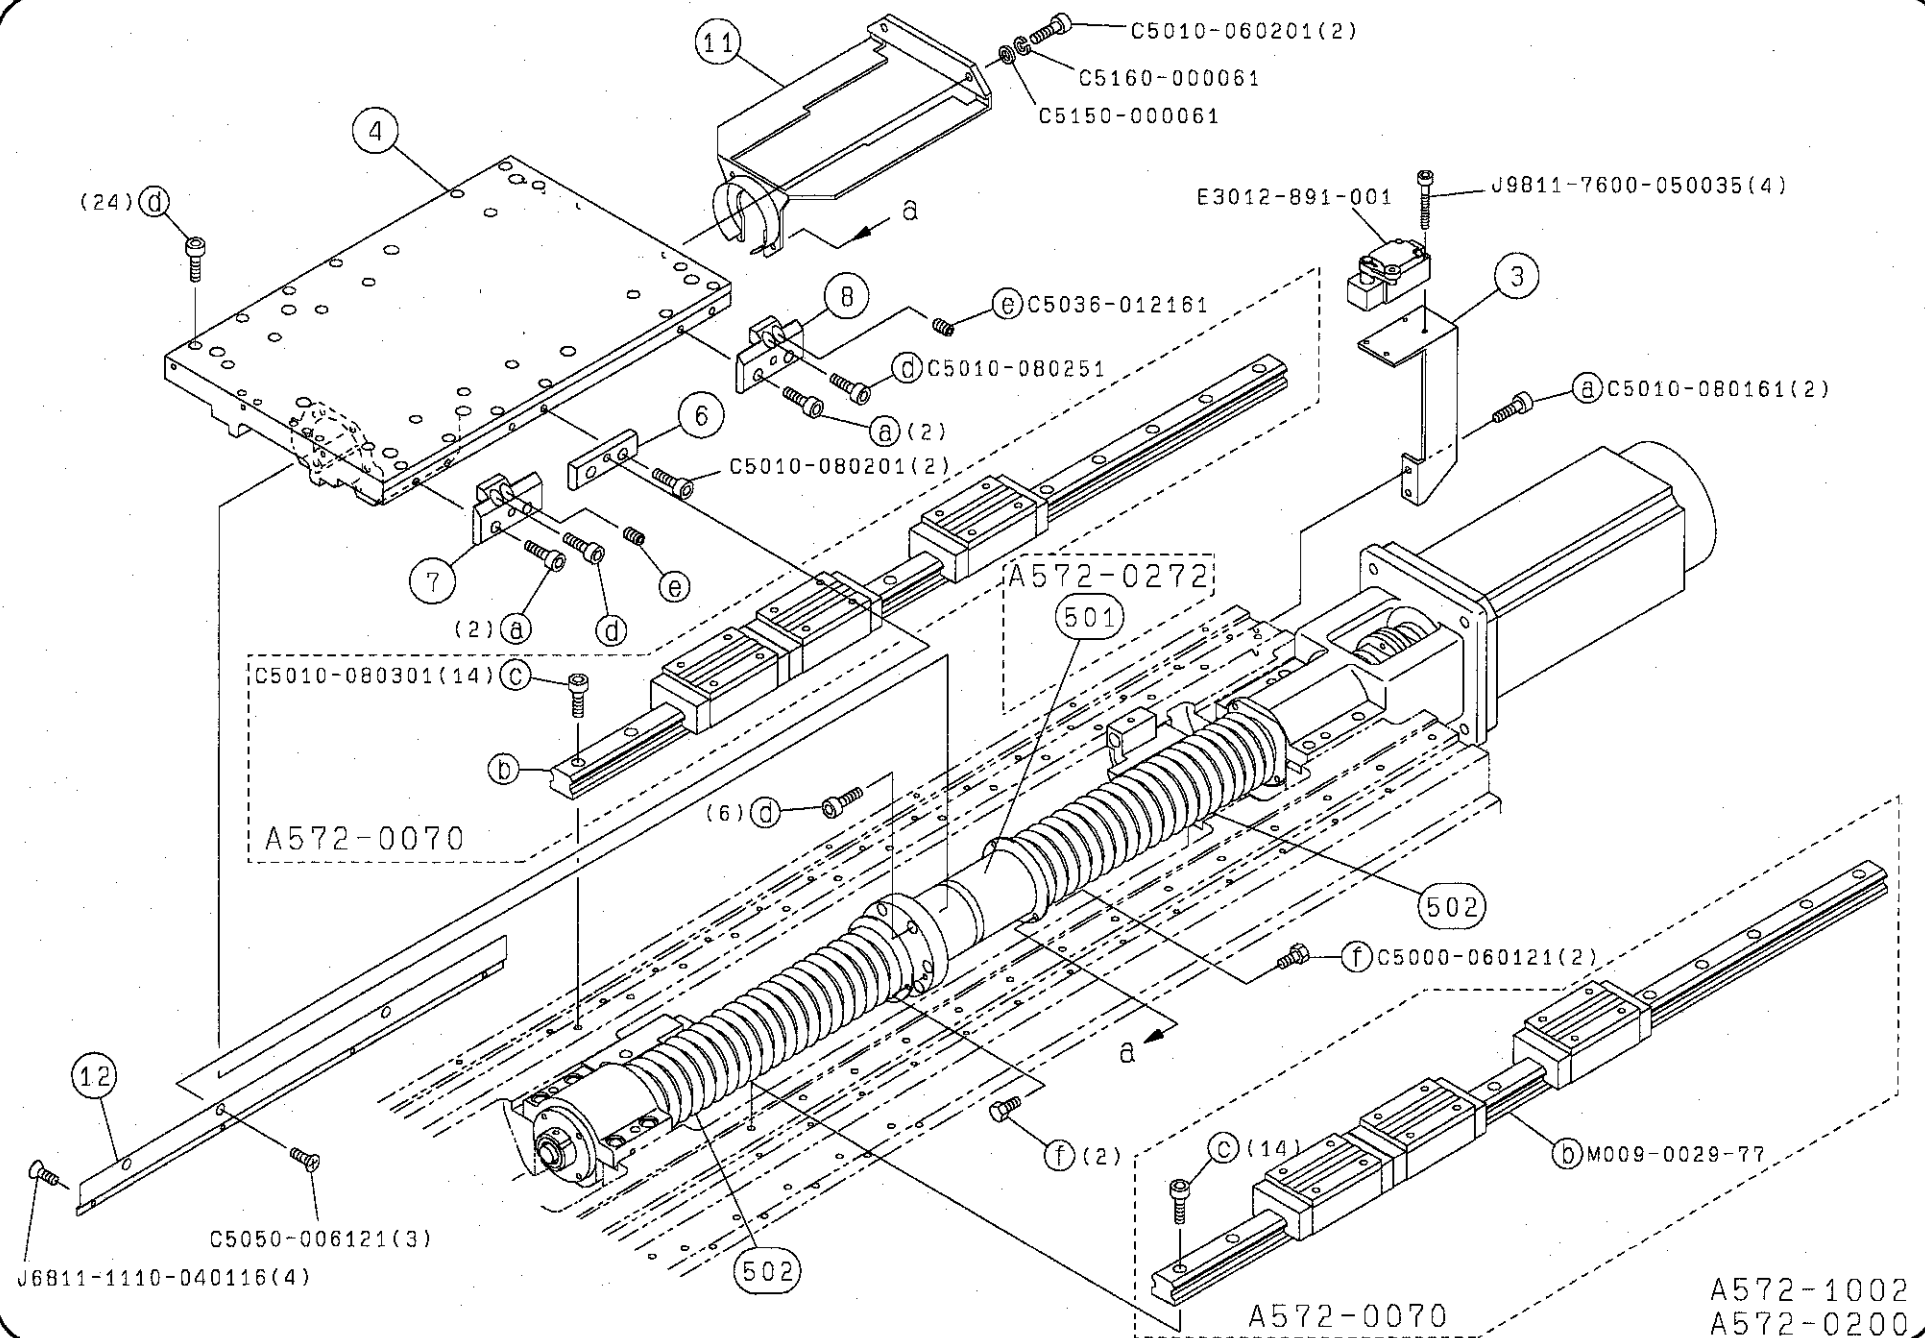


26

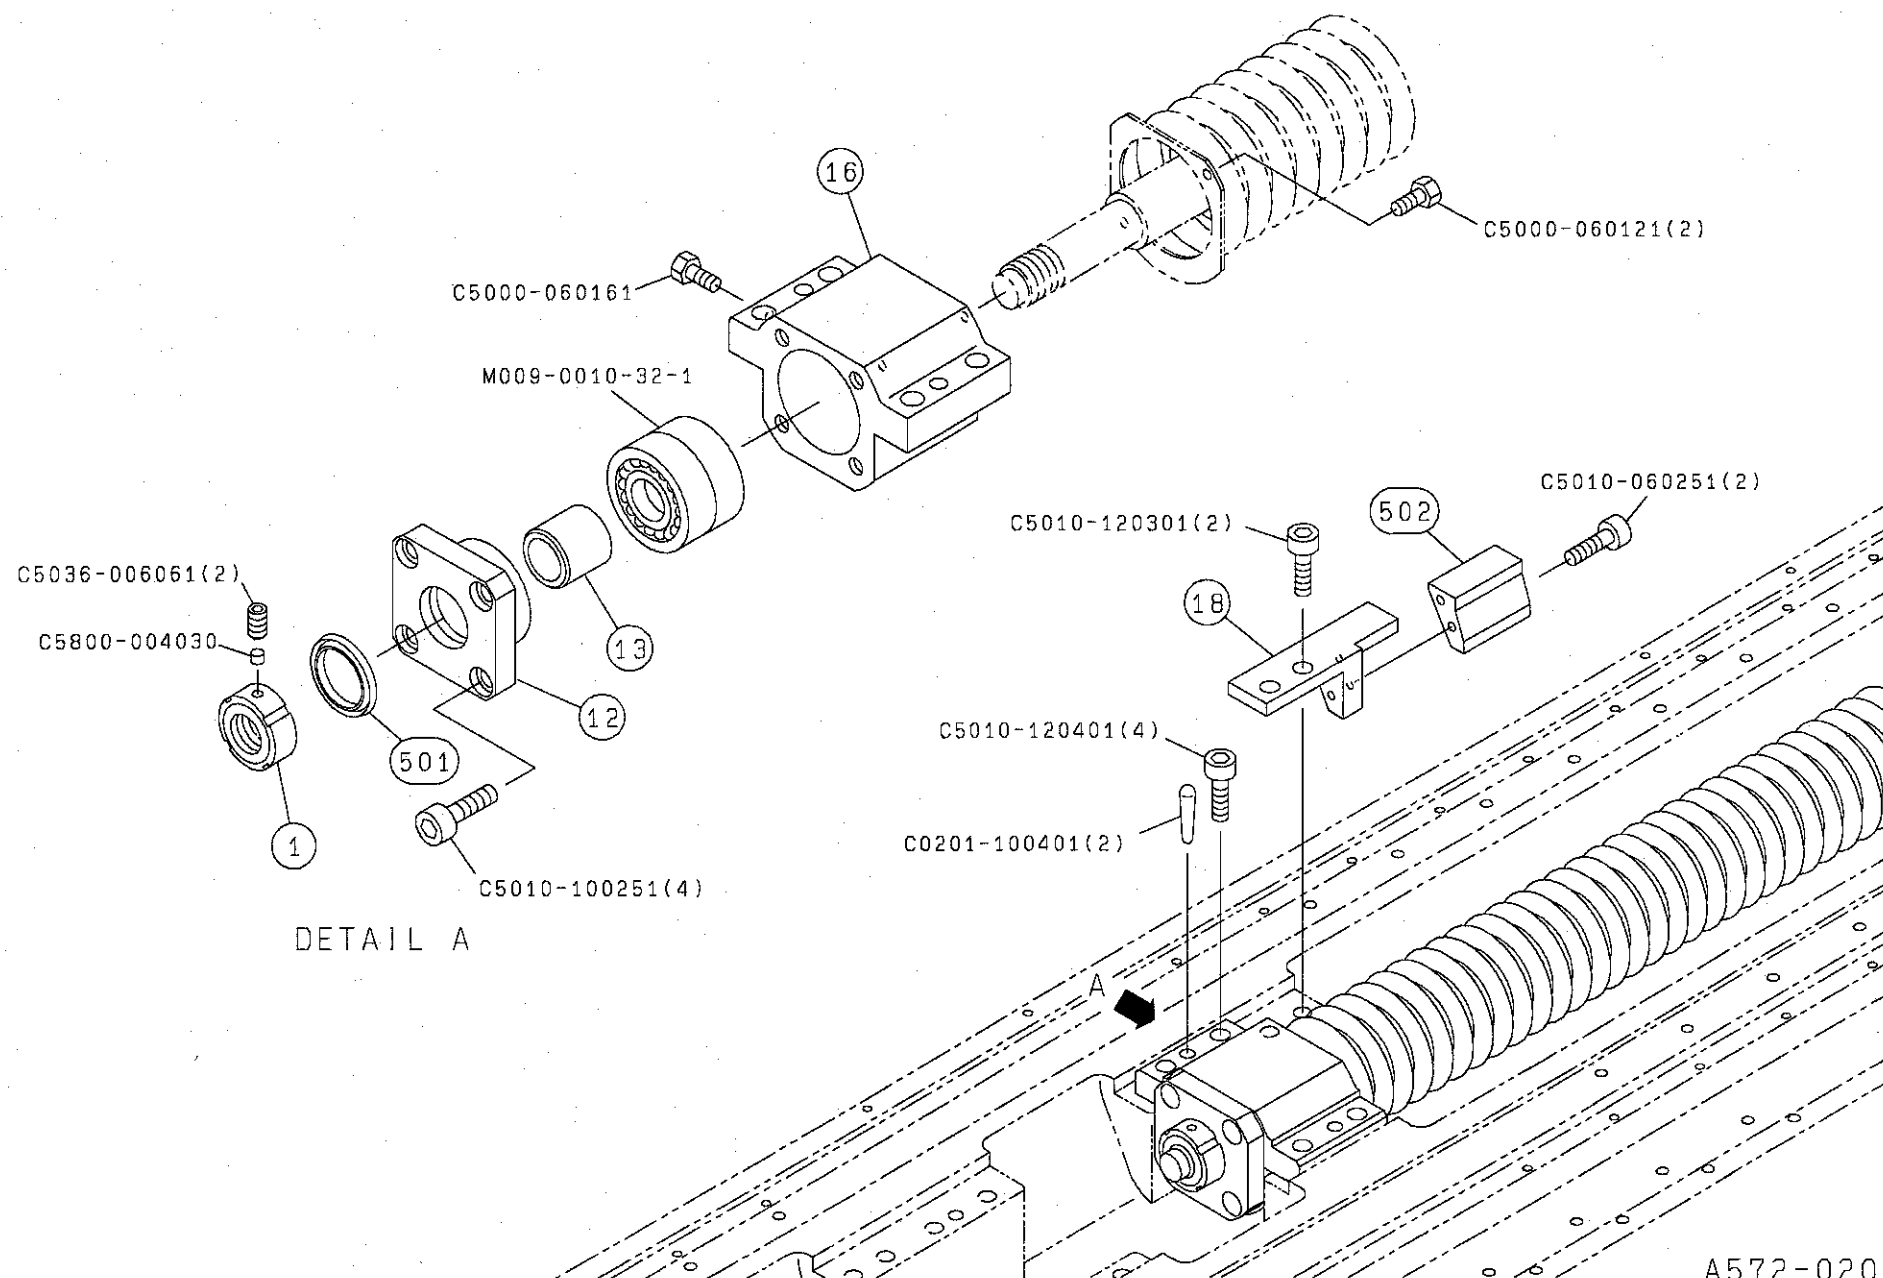


DETAIL A

A572-0200

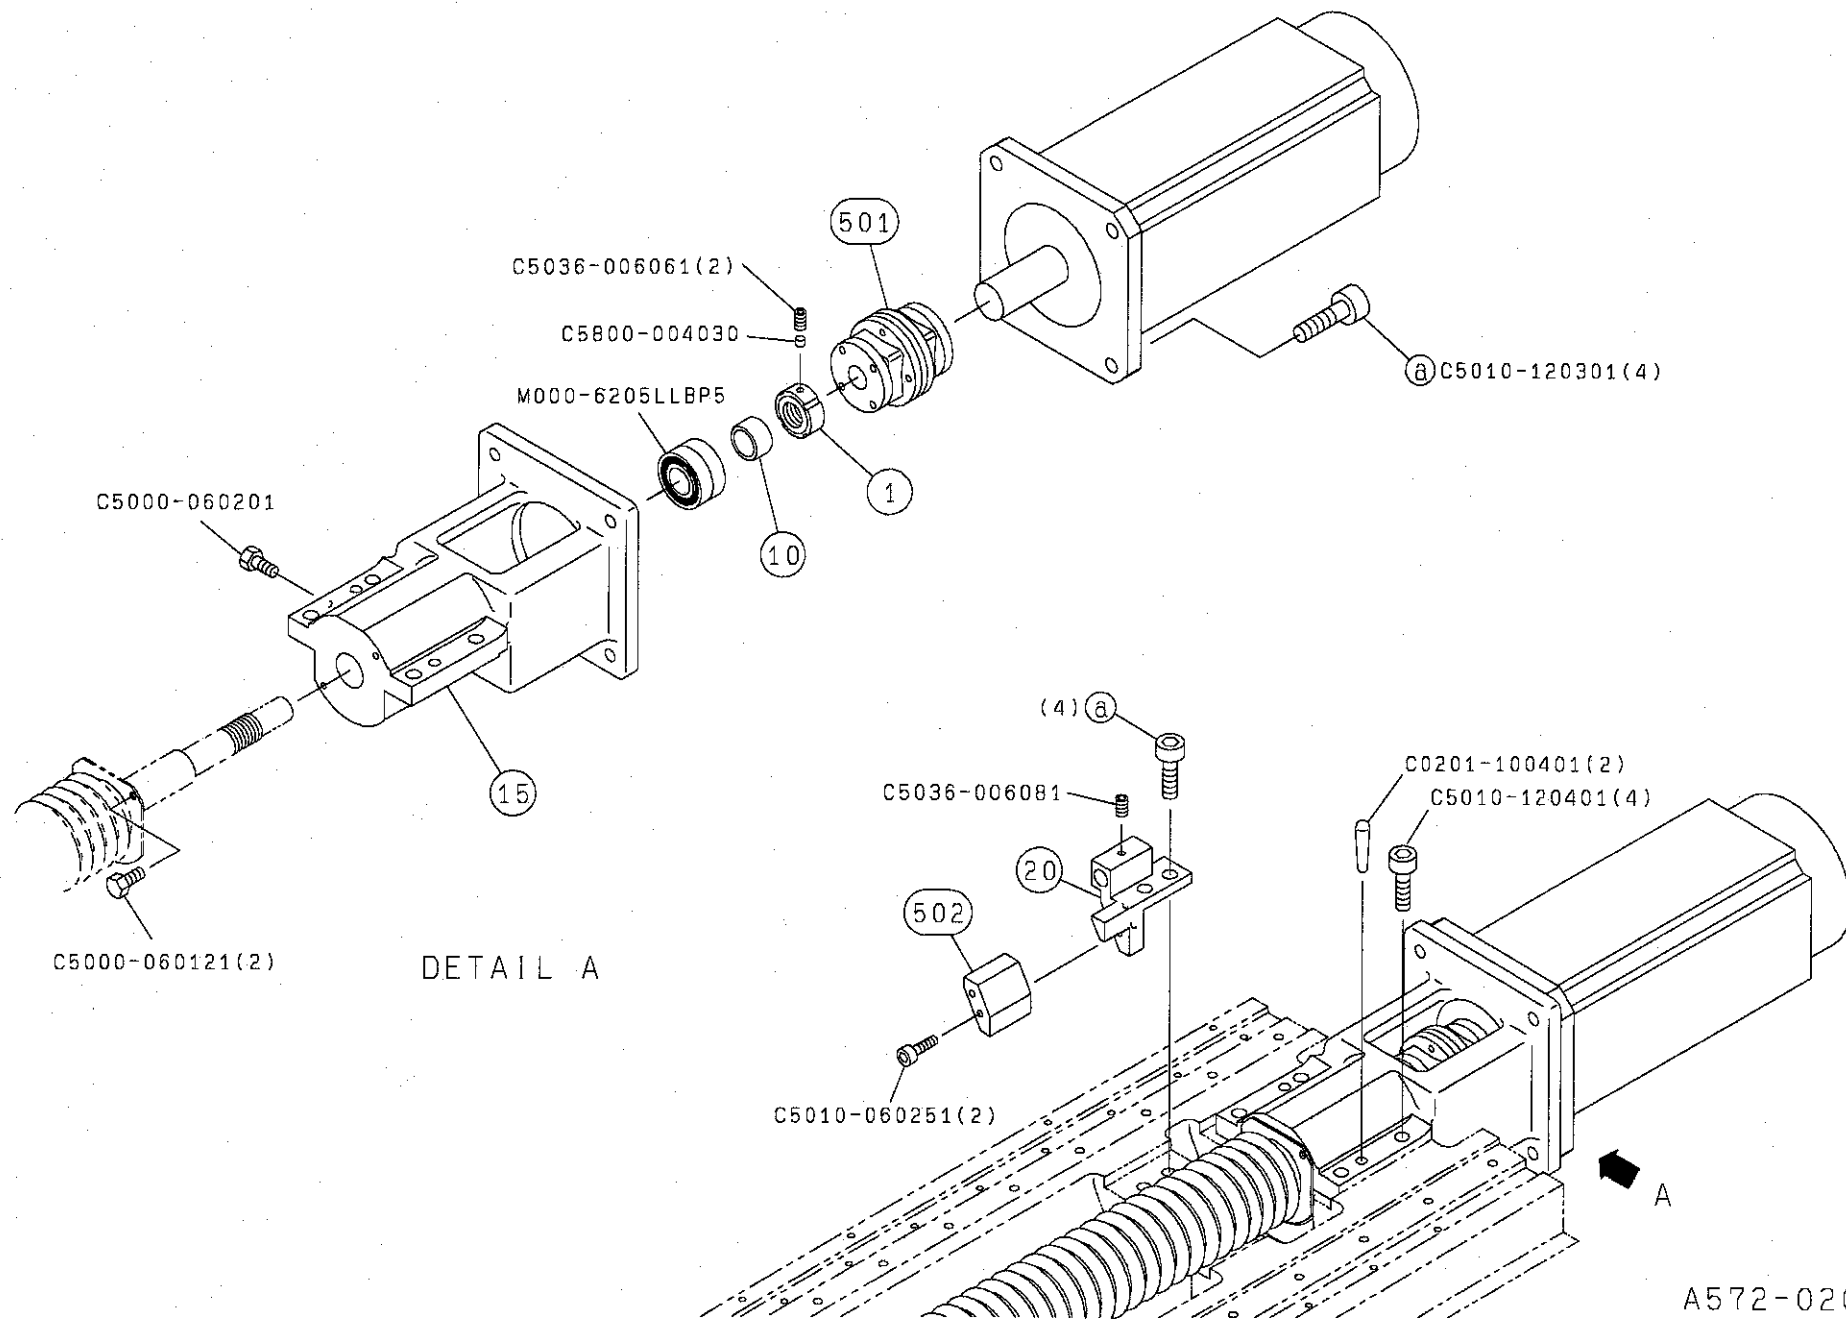


A572-0200

28

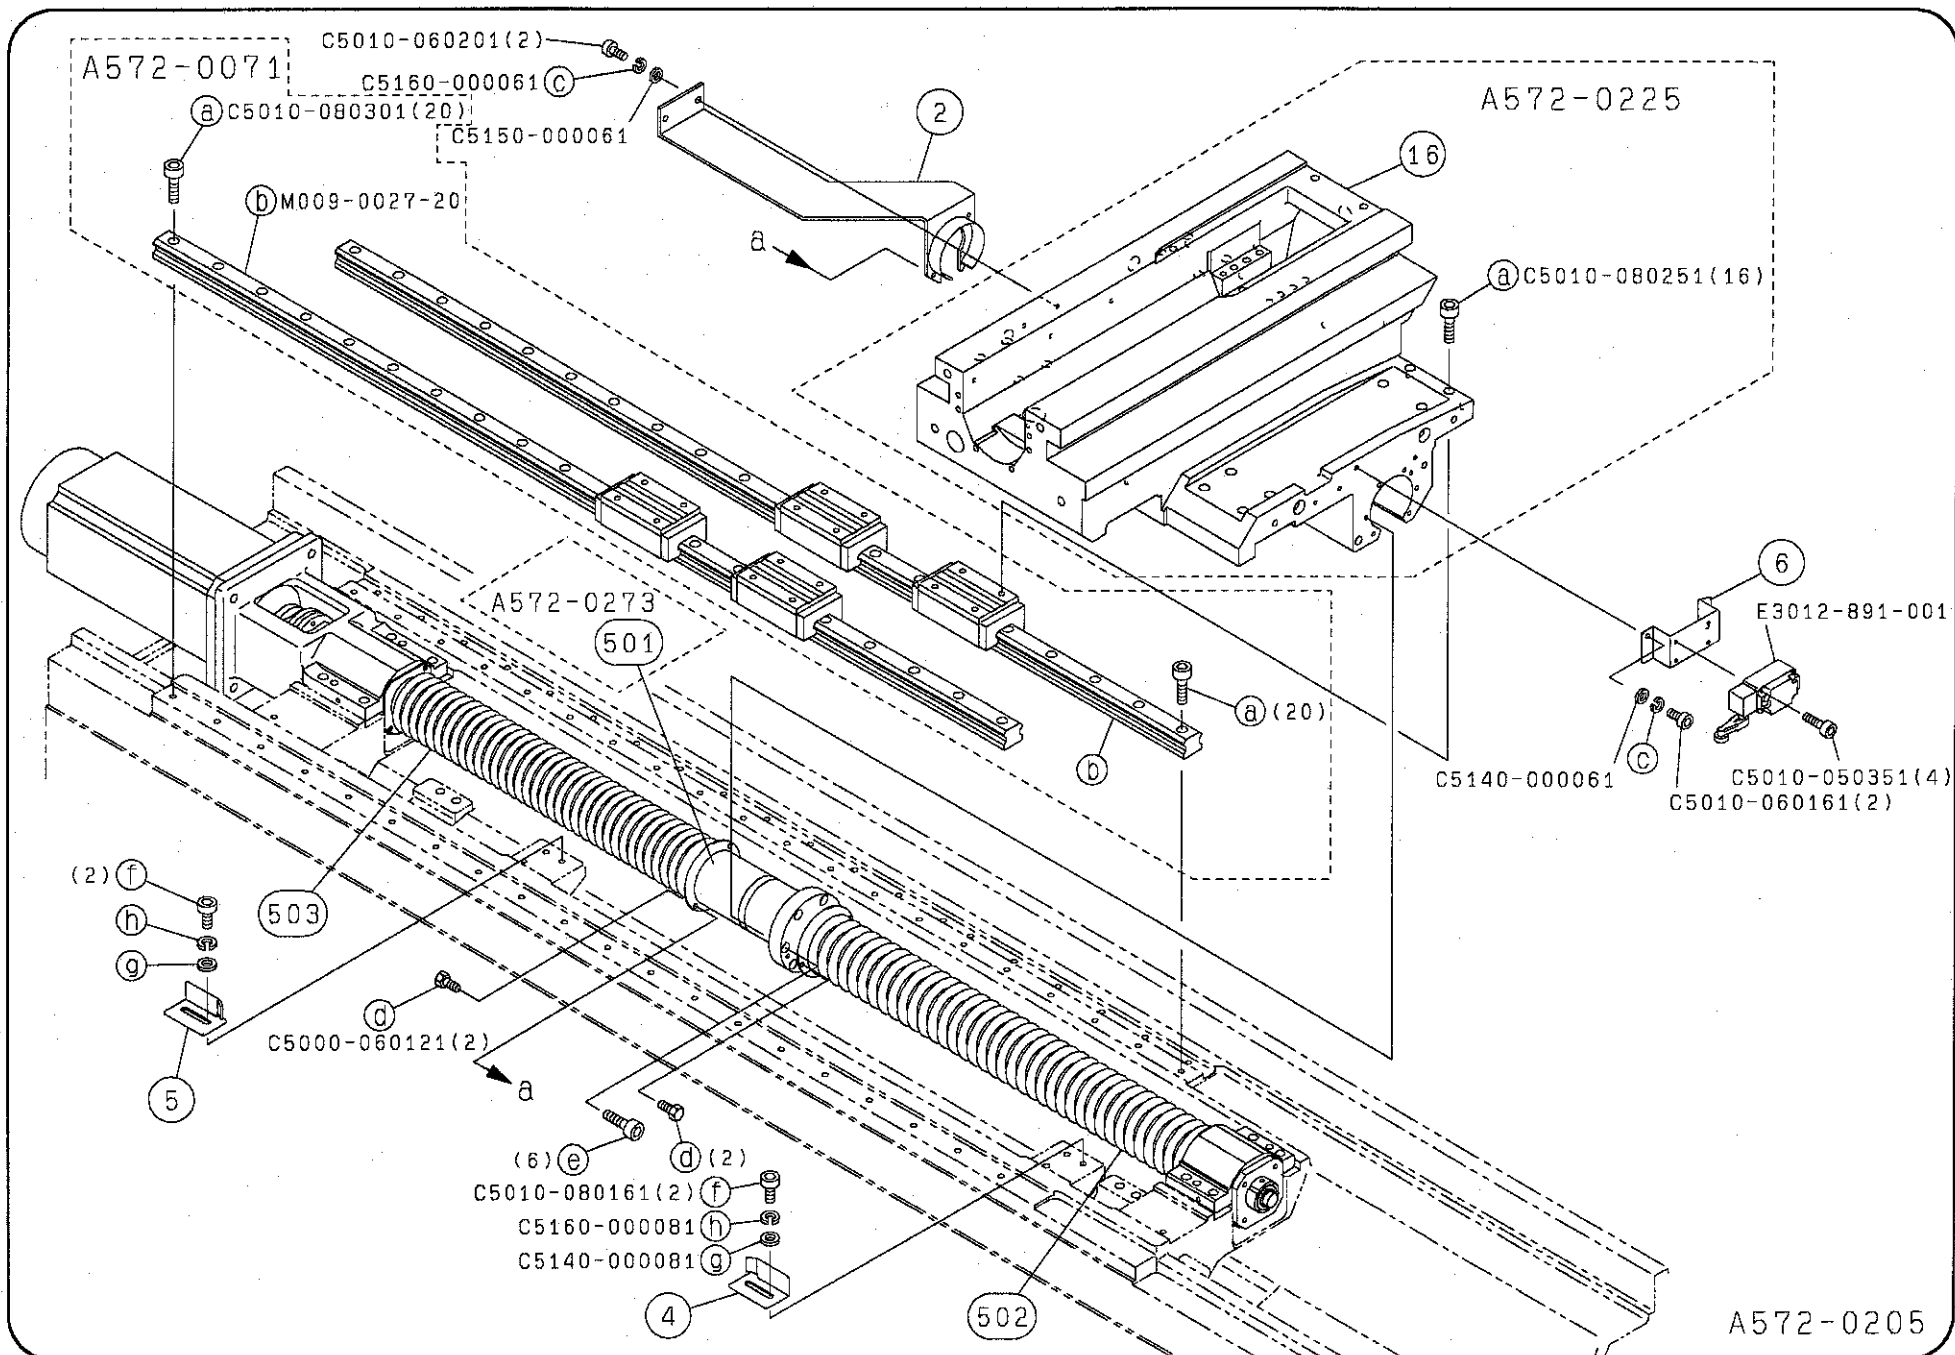



29

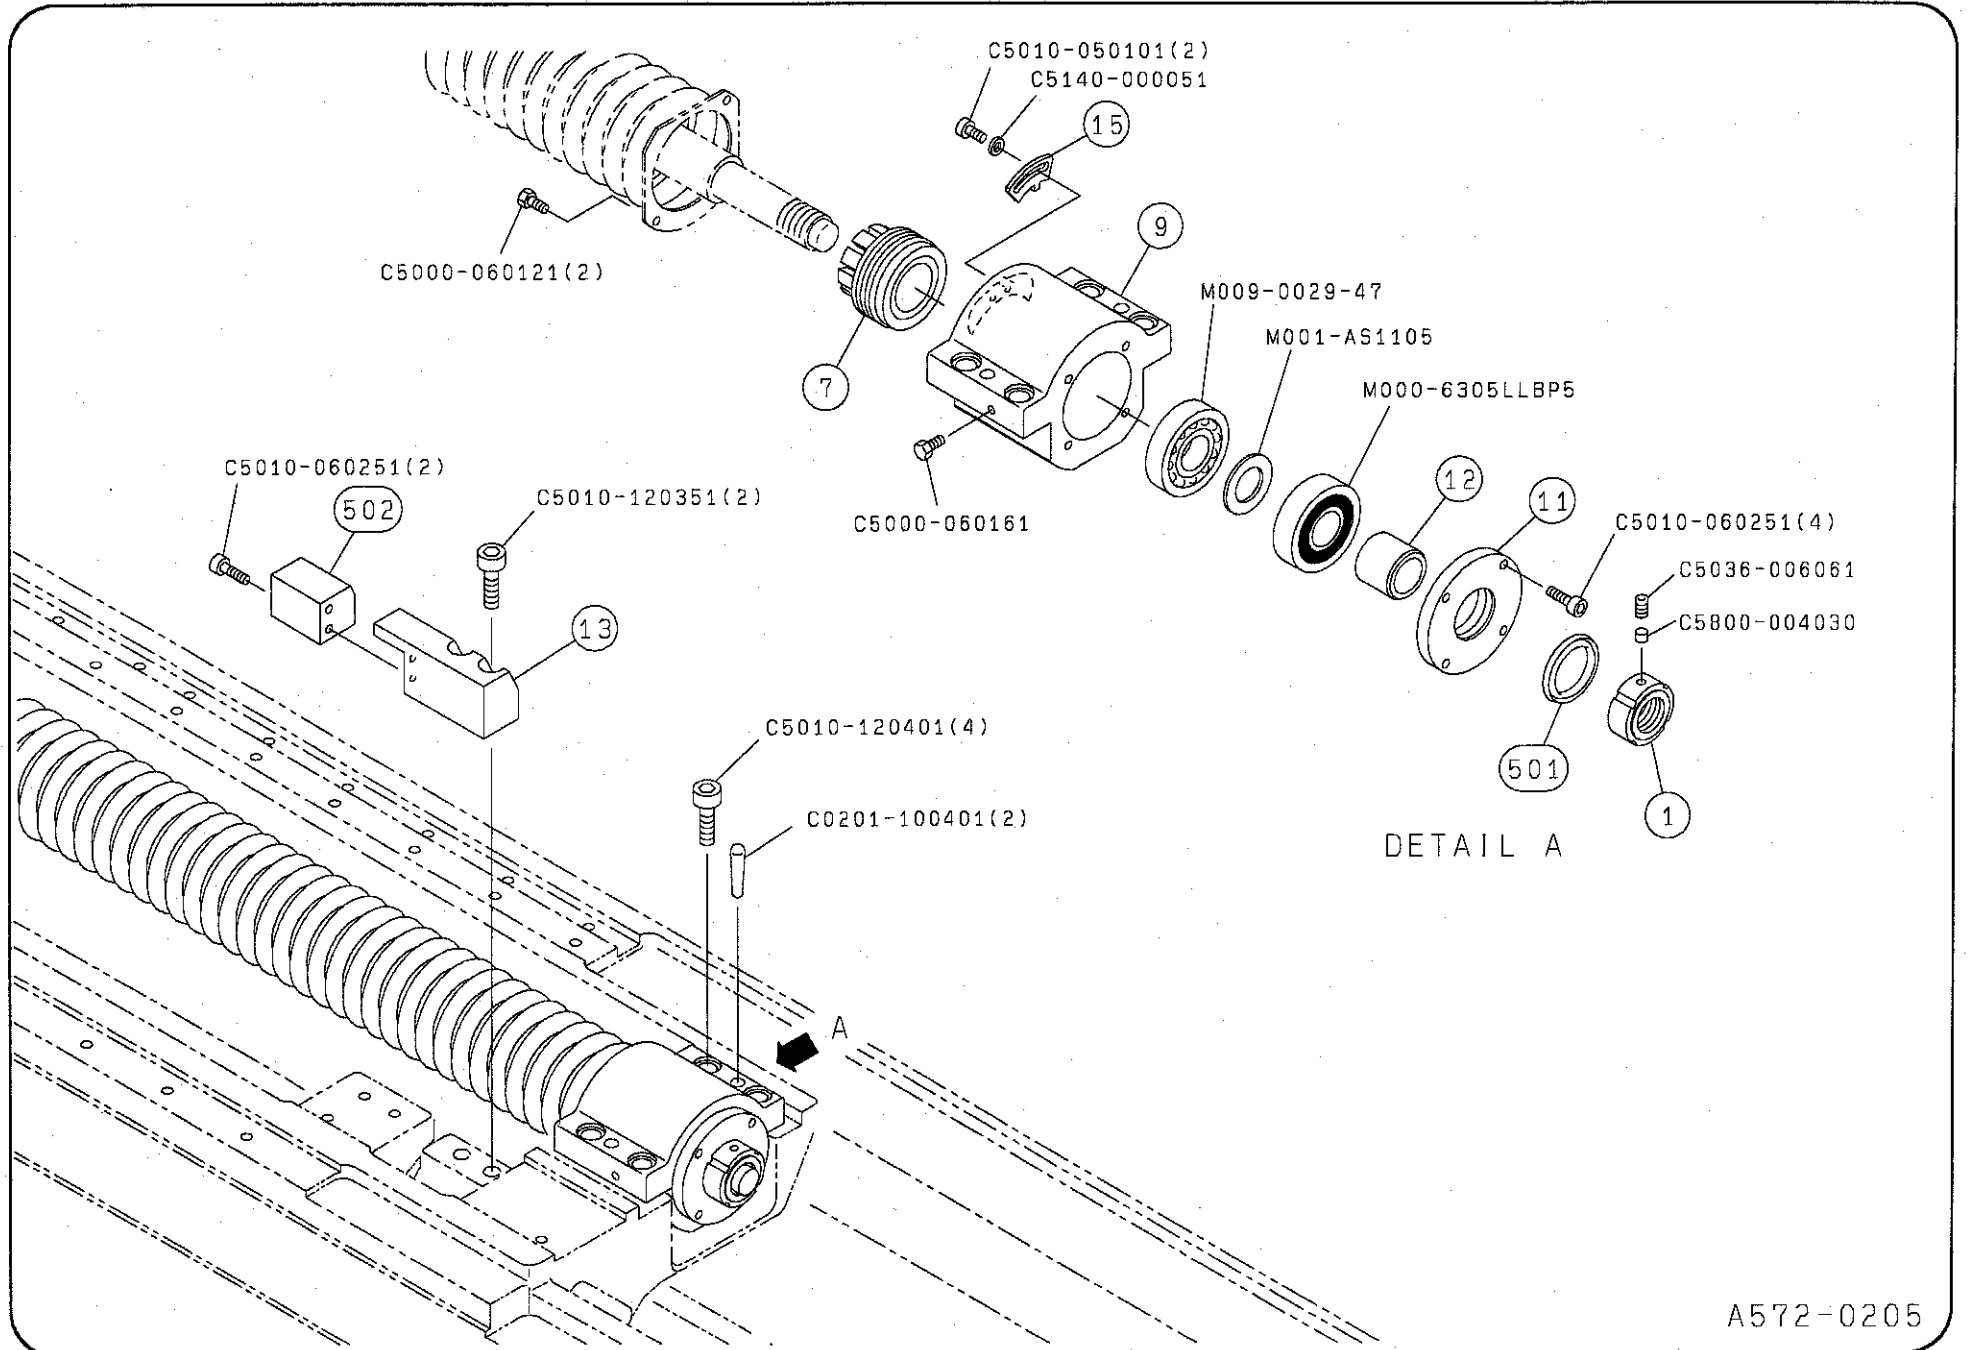

A572-0205


30

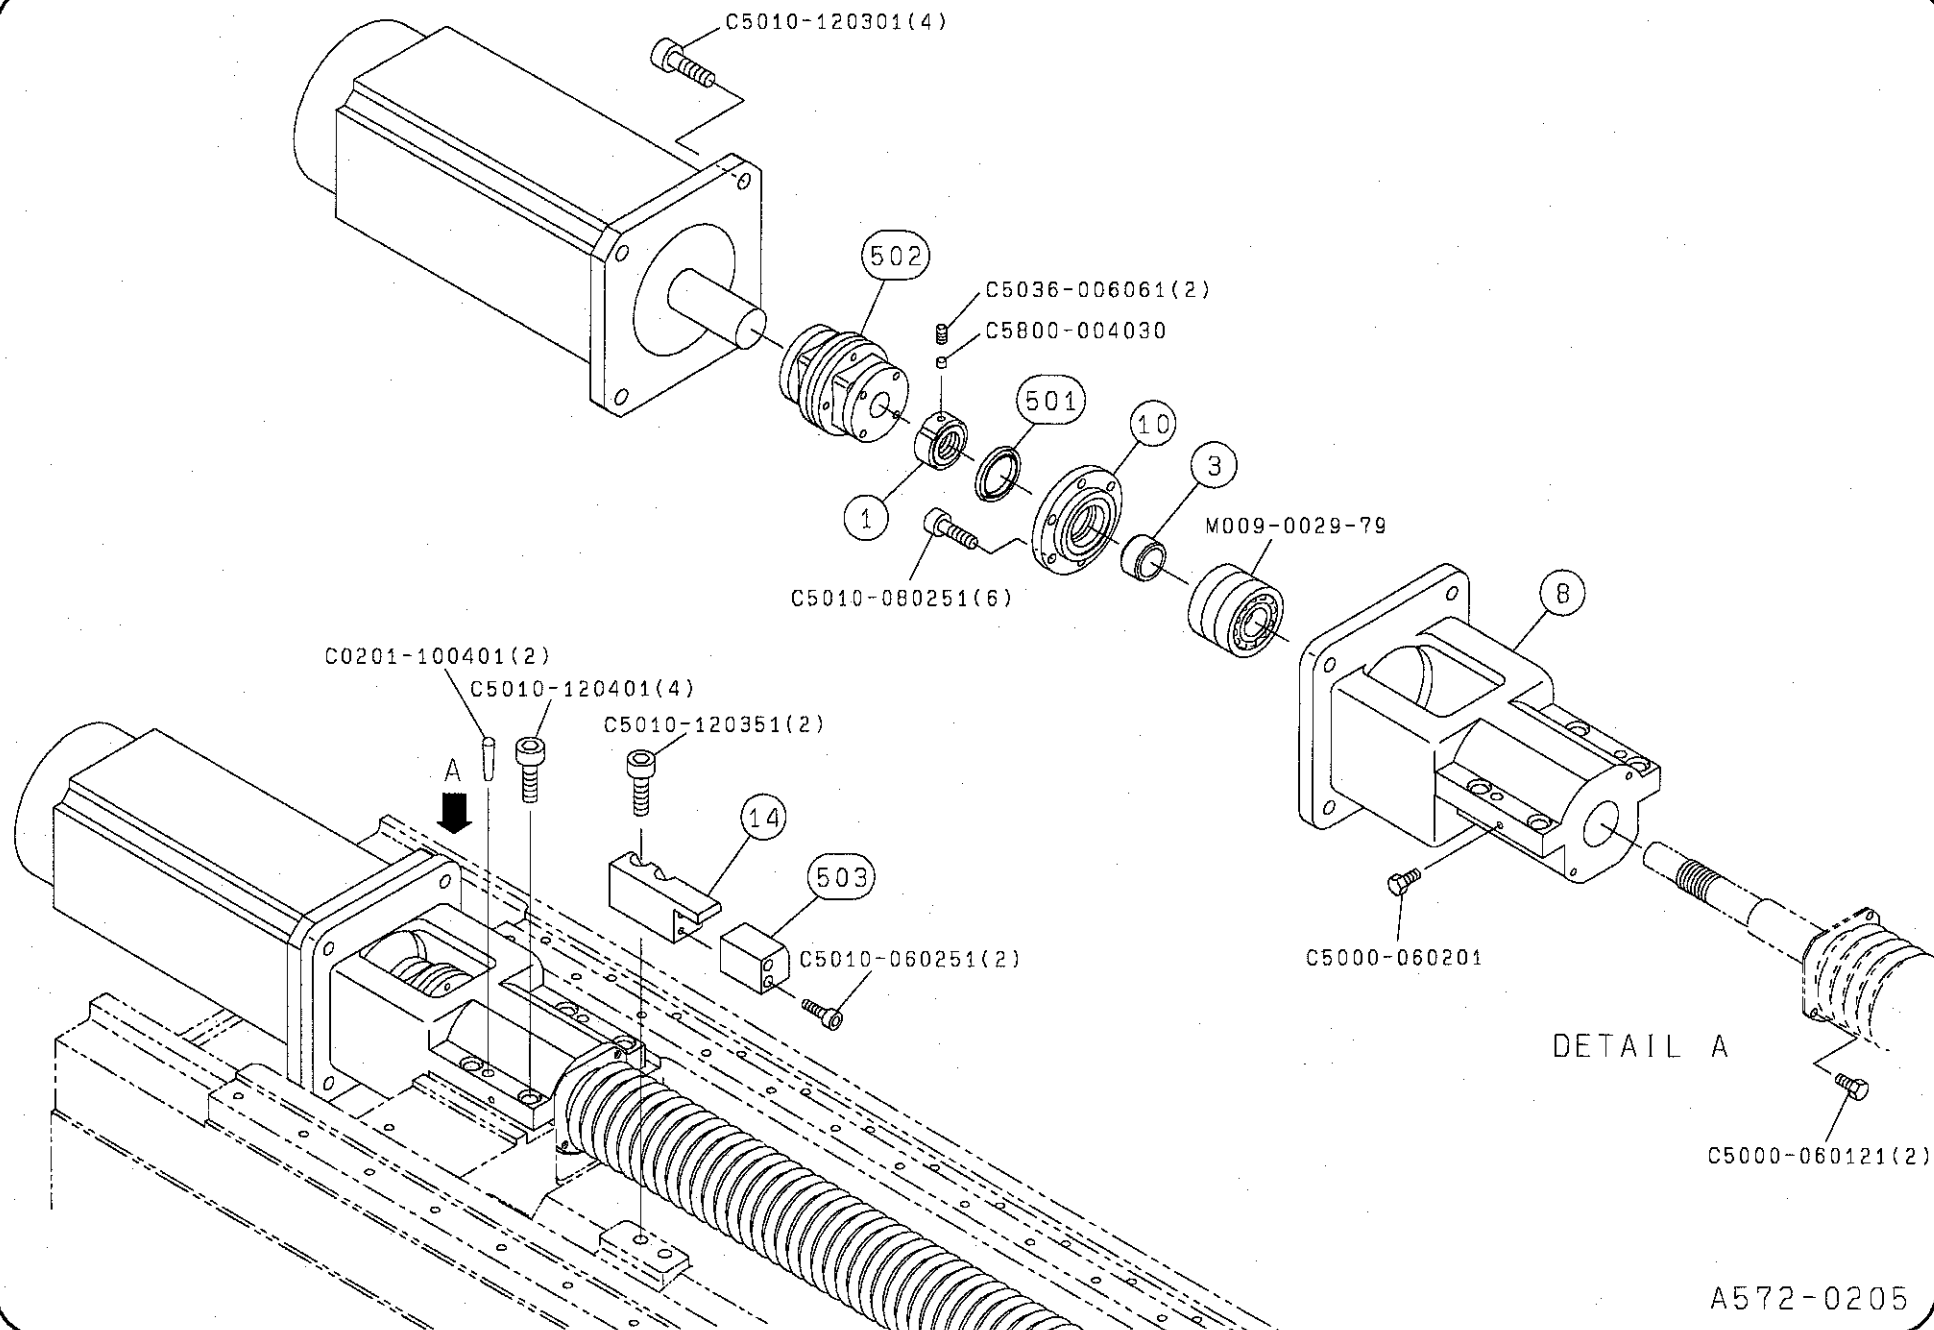

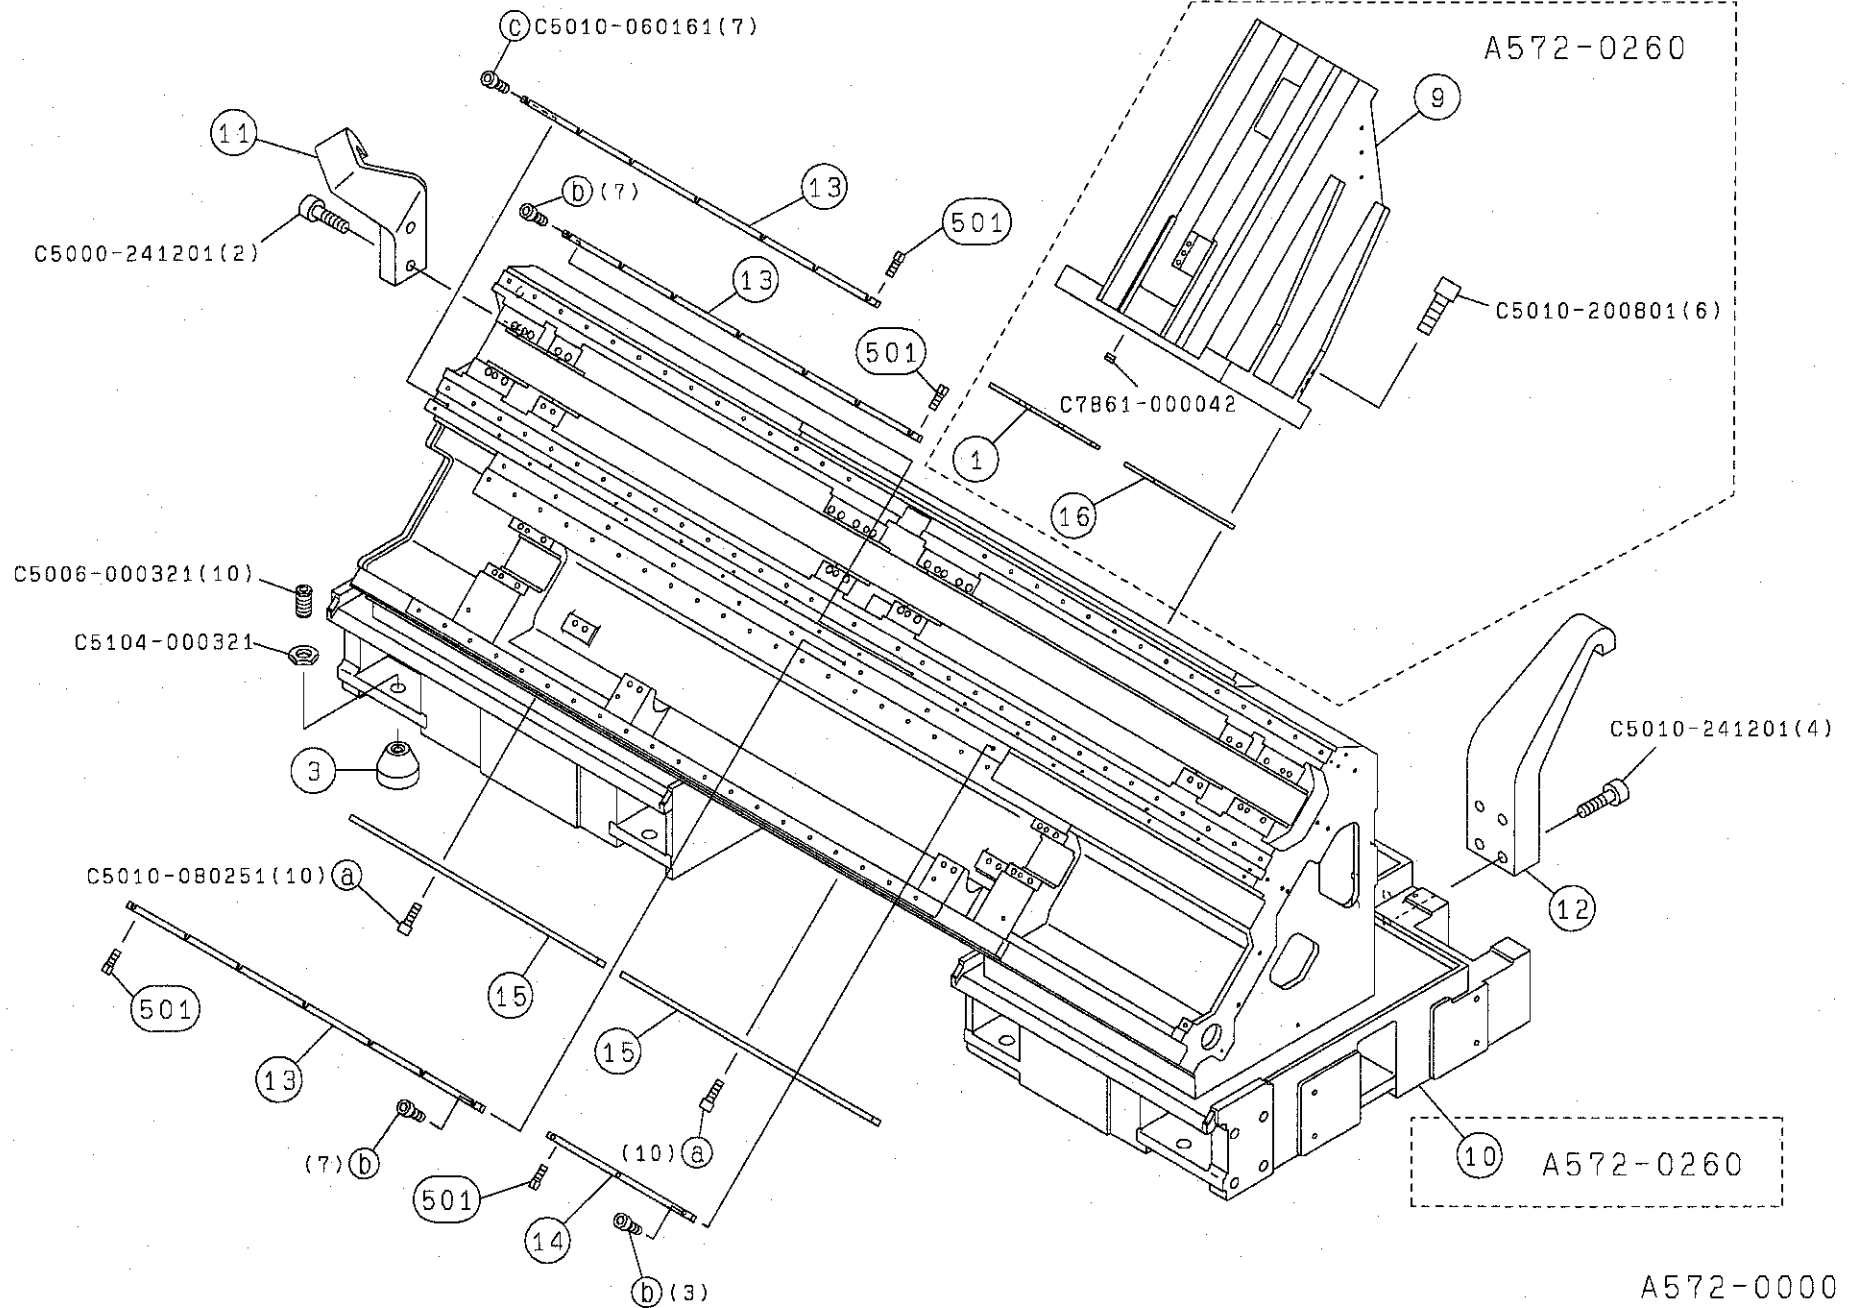


SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
1 -002	572-0111-05-01	SUPPORT	A572-0200	1	4 -012	572-1014-05-01	SUPPORT	A572-1002	1
1 -004	572-0150-01-07	SADDLE	A572-0200	1	4 -501	H1014-0009-40-1	BALL SCREW	A572-0272	1
1 -006	572-0150-03-01	PLATE	A572-0200	1	4 -502	H1024-0003-48-1	BELLOWS	A572-0200	2
1 -007	572-0150-07-01	PLATE	A572-0200	1					
1 -008	572-0150-08-01	PLATE	A572-0200	1	5 -001	555-0230-11-02	NUT	A572-0200	1
1 -011	572-0250-14-01	SUPPORT	A572-0200	1	5 -012	572-0250-26-01	CAP	A572-0200	1
1 -012	572-1014-19-02	SUPPORT	A572-1002	1	5 -013	572-0250-28-01	COLLAR	A572-0200	1
1 -501	H1014-0009-40-1	BALL SCREW NTN	A572-0272	1	5 -016	572-0250-35-02	BRACKET	A572-0200	1
1 -502	H1024-0003-48-1	BELLOWS	A572-0200	2	5 -018	572-0250-38	STOPPER	A572-0200	1
					5 -501	H0031-0015-54	Z-RING	A572-0200	1
					5 -502	H1020-1137-43-1	STOPPER	A572-0200	1
2 -001	555-0230-11-02	NUT	A572-0200	1					
2 -009	572-0250-02-04	BRACKET	A572-0200	1	6 -001	555-0230-11-02	NUT	A572-0200	1
2 -012	572-0250-26-01	CAP	A572-0200	1	6 -010	572-0250-06-02	COLLAR	A572-0200	1
2 -013	572-0250-28-01	COLLAR	A572-0200	1	6 -015	572-0250-34-03	BRACKET	A572-0200	1
2 -017	572-0250-37	STOPPER	A572-0200	1	6 -020	572-0250-40-01	STOPPER	A572-0200	1
2 -501	H0031-0015-54	Z-RING NOK	A572-0200	1	6 -501	H1012-0003-91	COUPLING	A572-0200	1
2 -502	H1020-1137-42-1	STOPPER	A572-0200	1	6 -502	H1020-1137-41-1	STOPPER	A572-0200	1
3 -001	555-0230-11-02	NUT	A572-0200	1	7 -002	572-0210-22-03	SUPPORT	A572-0205	1
3 -010	572-0250-06-02	COLLAR	A572-0200	1	7 -004	572-0250-16	DOG	A572-0205	1
3 -014	572-0250-33-03	BRACKET	A572-0200	1	7 -005	572-0250-17	DOG	A572-0205	1
3 -019	572-0250-39-01	STOPPER	A572-0200	1	7 -006	572-0250-18	SUPPORT	A572-0205	1
3 -501	H1012-0003-91	COUPLING	A572-0200	1	7 -016	572-0230-01-10	SADDLE	A572-0225	1
3 -502	H1020-1137-40-1	STOPPER	A572-0200	1	7 -501	H1014-0009-43-1	BALL SCREW NTN	A572-0273	1
					7 -502	H1024-0003-50-1	BELLOWS	A572-0205	1
4 -003	572-0112-04-01	SUPPORT	A572-0200	1	7 -503	H1024-0003-51	BELLOWS	A572-0205	1
4 -004	572-0150-02-07	SADDLE	A572-0200	1					
4 -006	572-0150-03-01	PLATE	A572-0200	1	8 -001	555-0230-11-02	NUT	A572-0205	1
4 -007	572-0150-07-01	PLATE	A572-0200	1	8 -007	572-0250-24-01	NUT	A572-0205	1
4 -008	572-0150-08-01	PLATE	A572-0200	1	8 -009	572-0250-30-03	BRACKET	A572-0205	1
4 -011	572-0250-14-01	SUPPORT	A257-0200	1					

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
8 -011	572-0250-32-01	CAP	A572-0205	1					
8 -012	572-0250-36	COLLAR	A572-0205	1					
8 -013	572-0250-41	STOPPER	A572-0205	1					
8 -015	572-0250-43	STOPPER	A572-0205	1					
8 -501	H0031-0015-54	Z-RING NOK	A572-0205	1					
8 -502	H1020-1137-38	STOPPER	A572-0205	1					
9 -001	555-0230-11-02	NUT	A572-0205	1					
9 -003	572-0250-06-02	COLLAR	A572-0205	1					
9 -008	572-0250-29-04	BRACKET	A572-0205	1					
9 -010	572-0250-31-02	CAP	A572-0205	1					
9 -014	572-0250-42	STOPPER	A572-0205	1					
9 -501	H0031-0015-54	Z-RING NOK	A572-0205	1					
9 -502	H1012-0003-91	COUPLING	A572-0205	1					
9 -503	H1020-1137-39	STOPPER	A572-0205	1					
10 -001	572-0262-08	LINER	A572-0260	1					
10 -003	127-0000-59-01	MOUNT	A572-0000	10					
10 -009	572-0262-20	SADDLE	A572-0260	1					
10 -010	572-0000-01-14	BED	A572-0260	1					
10 -011	572-0010-06-02	HOOK	A572-0000	1					
10 -012	572-0010-08-02	HOOK	A572-0000	1					
10 -013	572-0010-09-03	BLOCK	A572-0000	3					
10 -014	572-0010-10-02	BLOCK	A572-0000	1					
10 -015	572-0250-10	RAIL	A572-0000	2					
10 -016	572-0220-10	LINER	A572-0260	1					
10 -501	H1001-1001-04-1	BOLT	A572-0000	48					

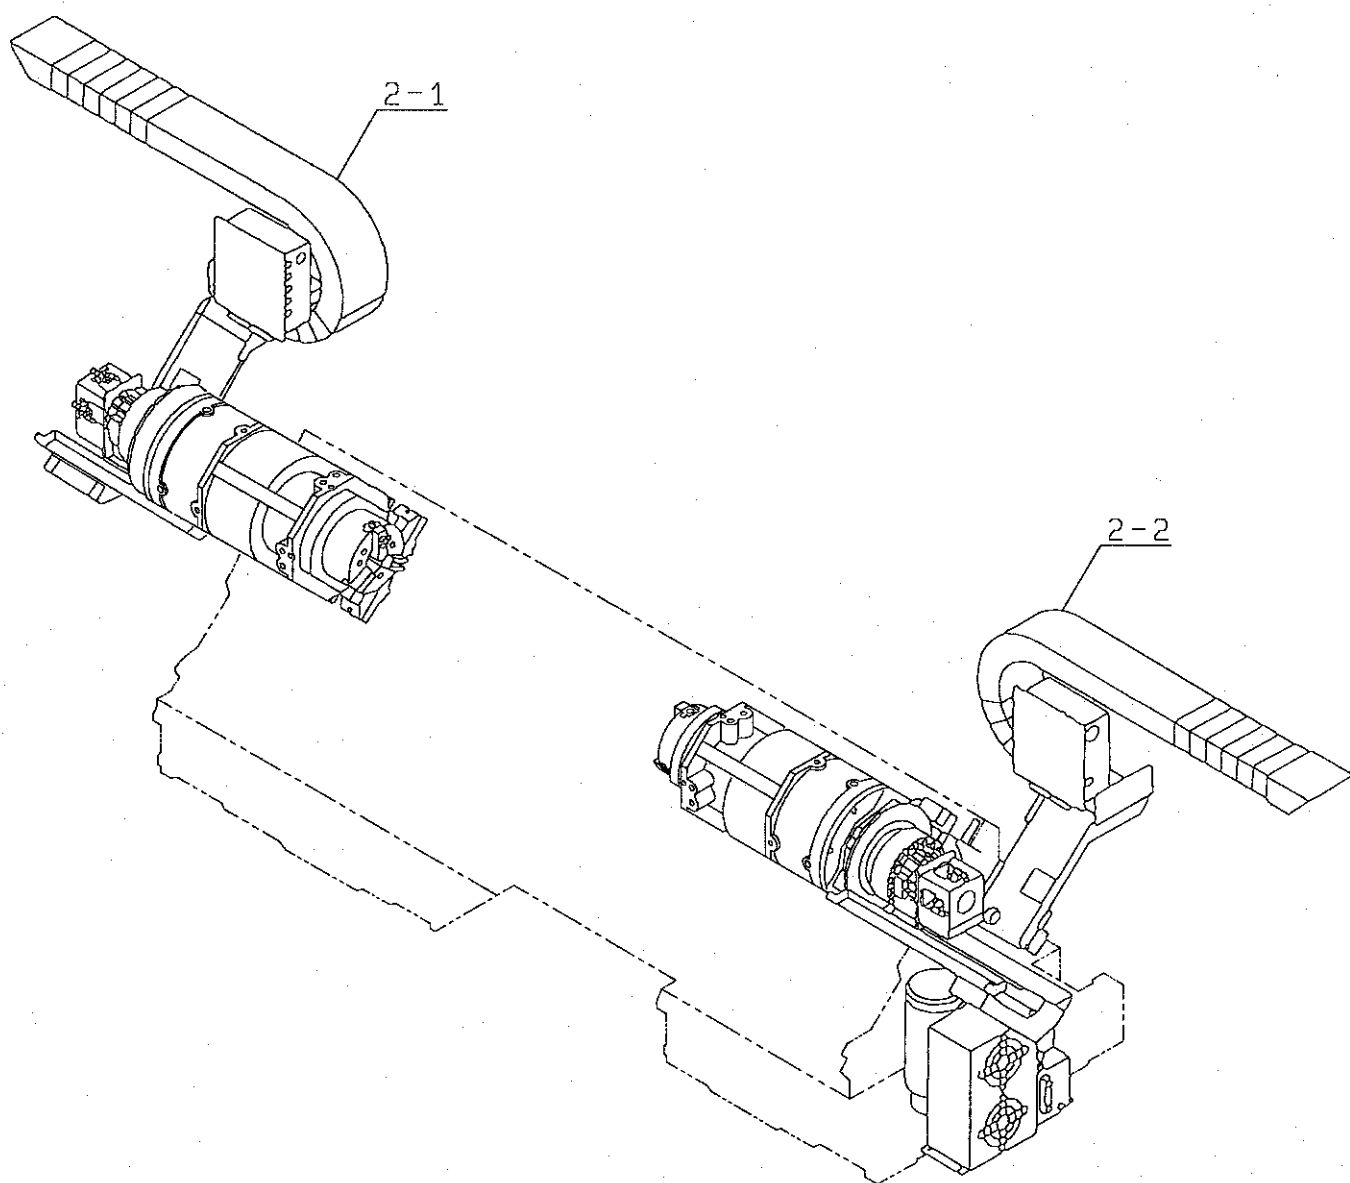

(2) HEADSTOCK GROUP
~ C O N T E N T S ~


GROUP NAME		PAGE
2-1	HEADSTOCK (L. H.) GROUP	103
2-2	HEADSTOCK (R. H.) GROUP	151

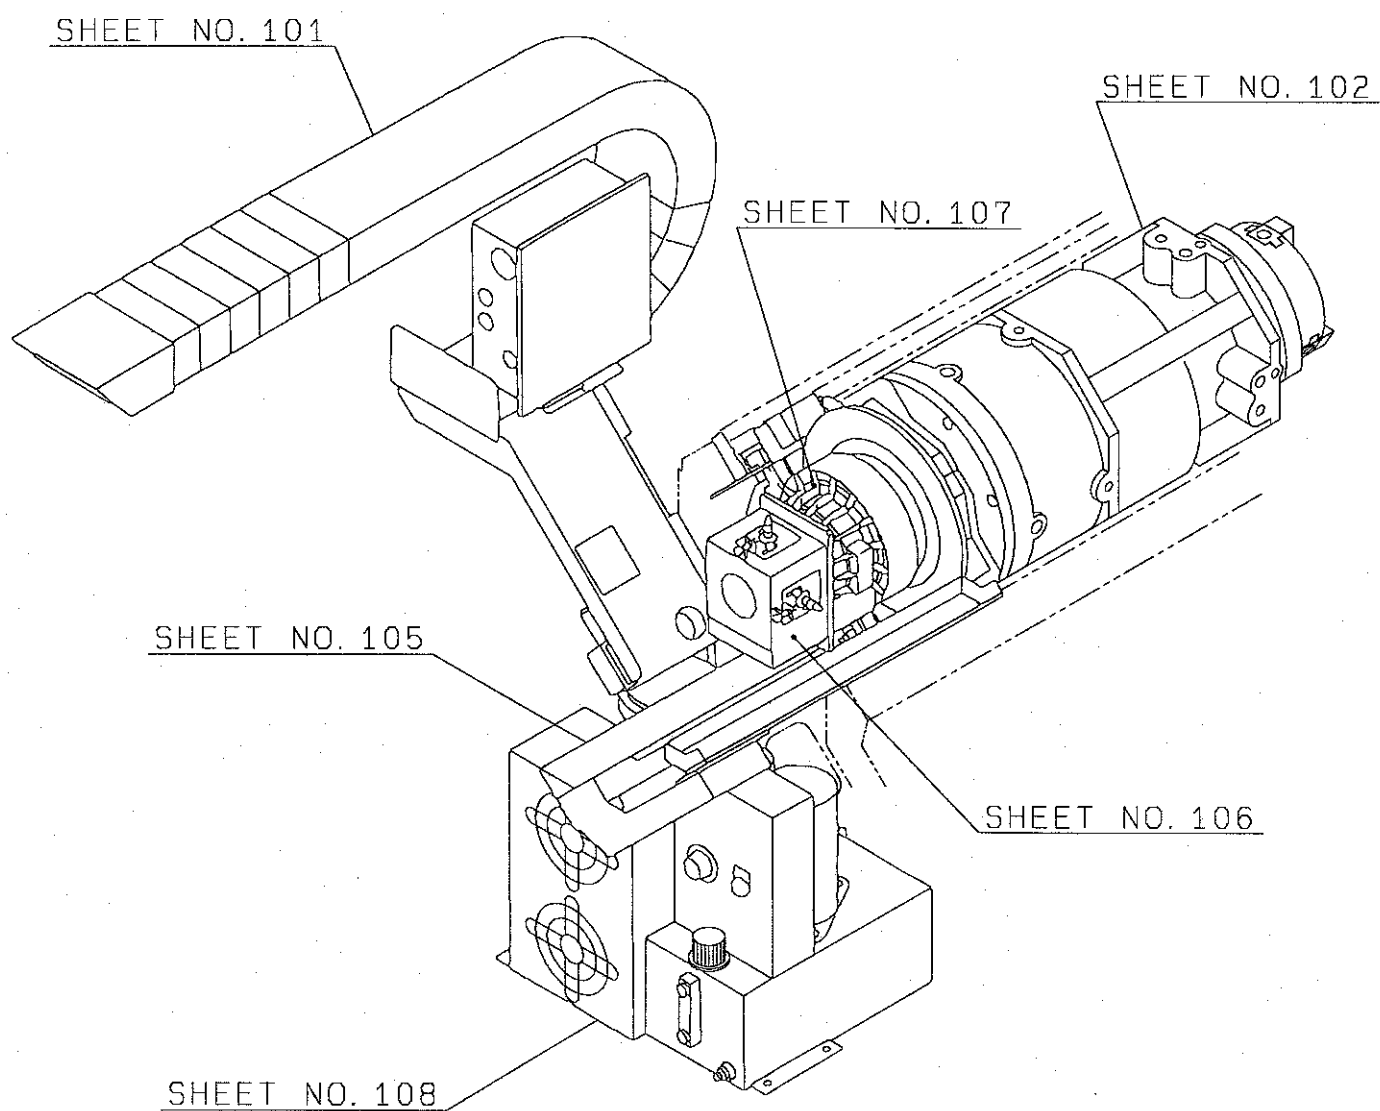


(2-1) HEADSTOCK (L. H.) GROUP

~ C O N T E N T S ~


SHEET NO.	ASSEMBLY NAME	PAGE
101	L. H. CABLEVEYOR	104
102	L. H. HEADSTOCK INSTALLATION AND C-AXIS BRAKE ...	105
103	L. H. MAIN SPINDLE (1)	106
104	L. H. MAIN SPINDLE (2)	107
105	L. H. DRAINPIPE	108
106	L. H. HOLLOW CHUCK AND CYLINDER (1)	109
107	L. H. HOLLOW CHUCK AND CYLINDER (2)	110
108	L. H. HEADSTOCK COOLING SYSTEM	111
109	L. H. HYDRAULIC PIPING	112
110	L. H. CHUCK PEDALS	113
111	L. H. AIR BLOW (FOR CHUCK)	114
I	INDEX NO. LIST	115

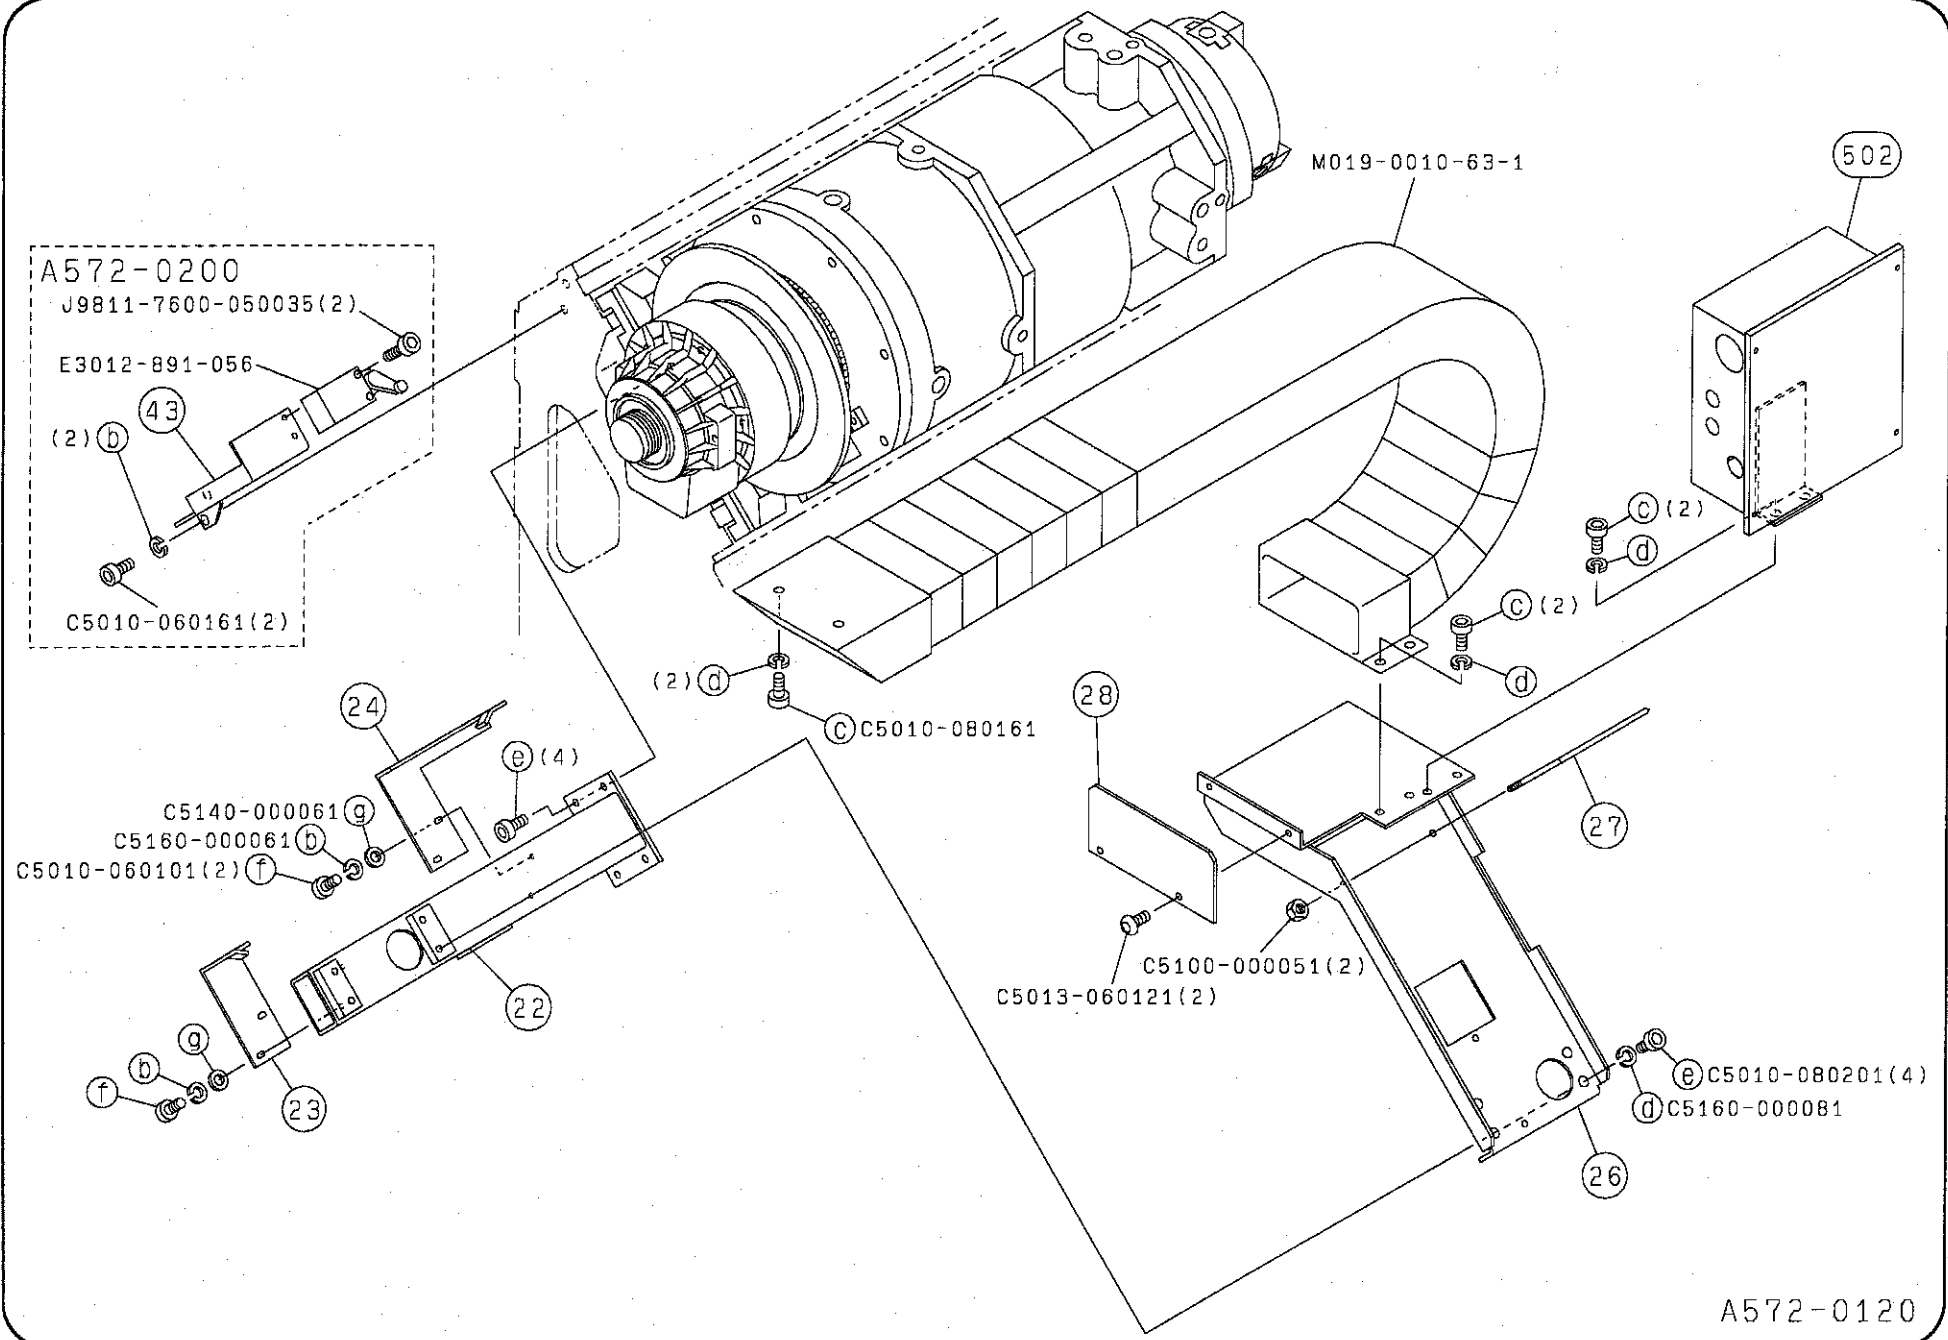



A572-0120

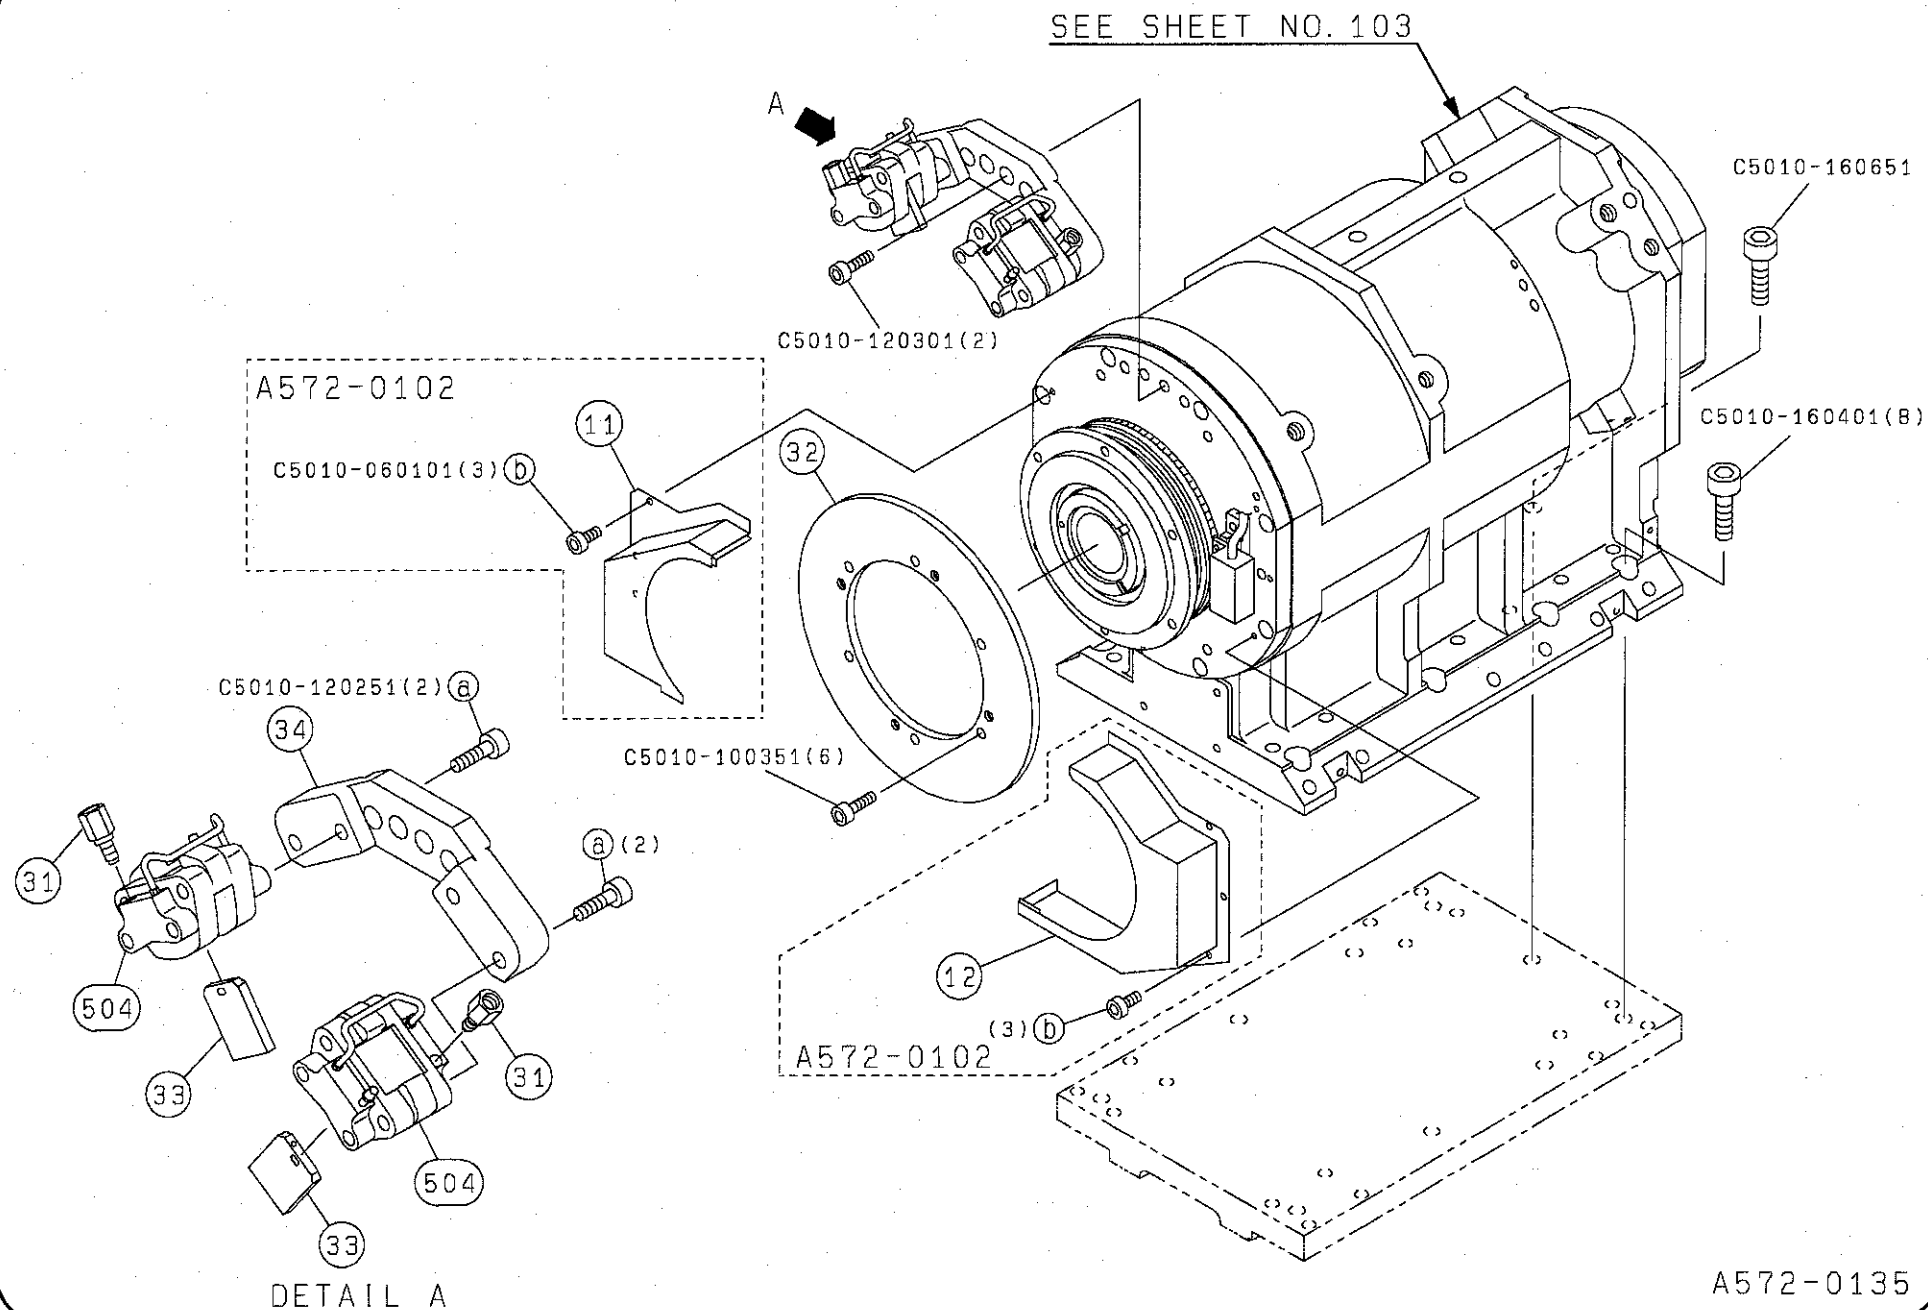


106

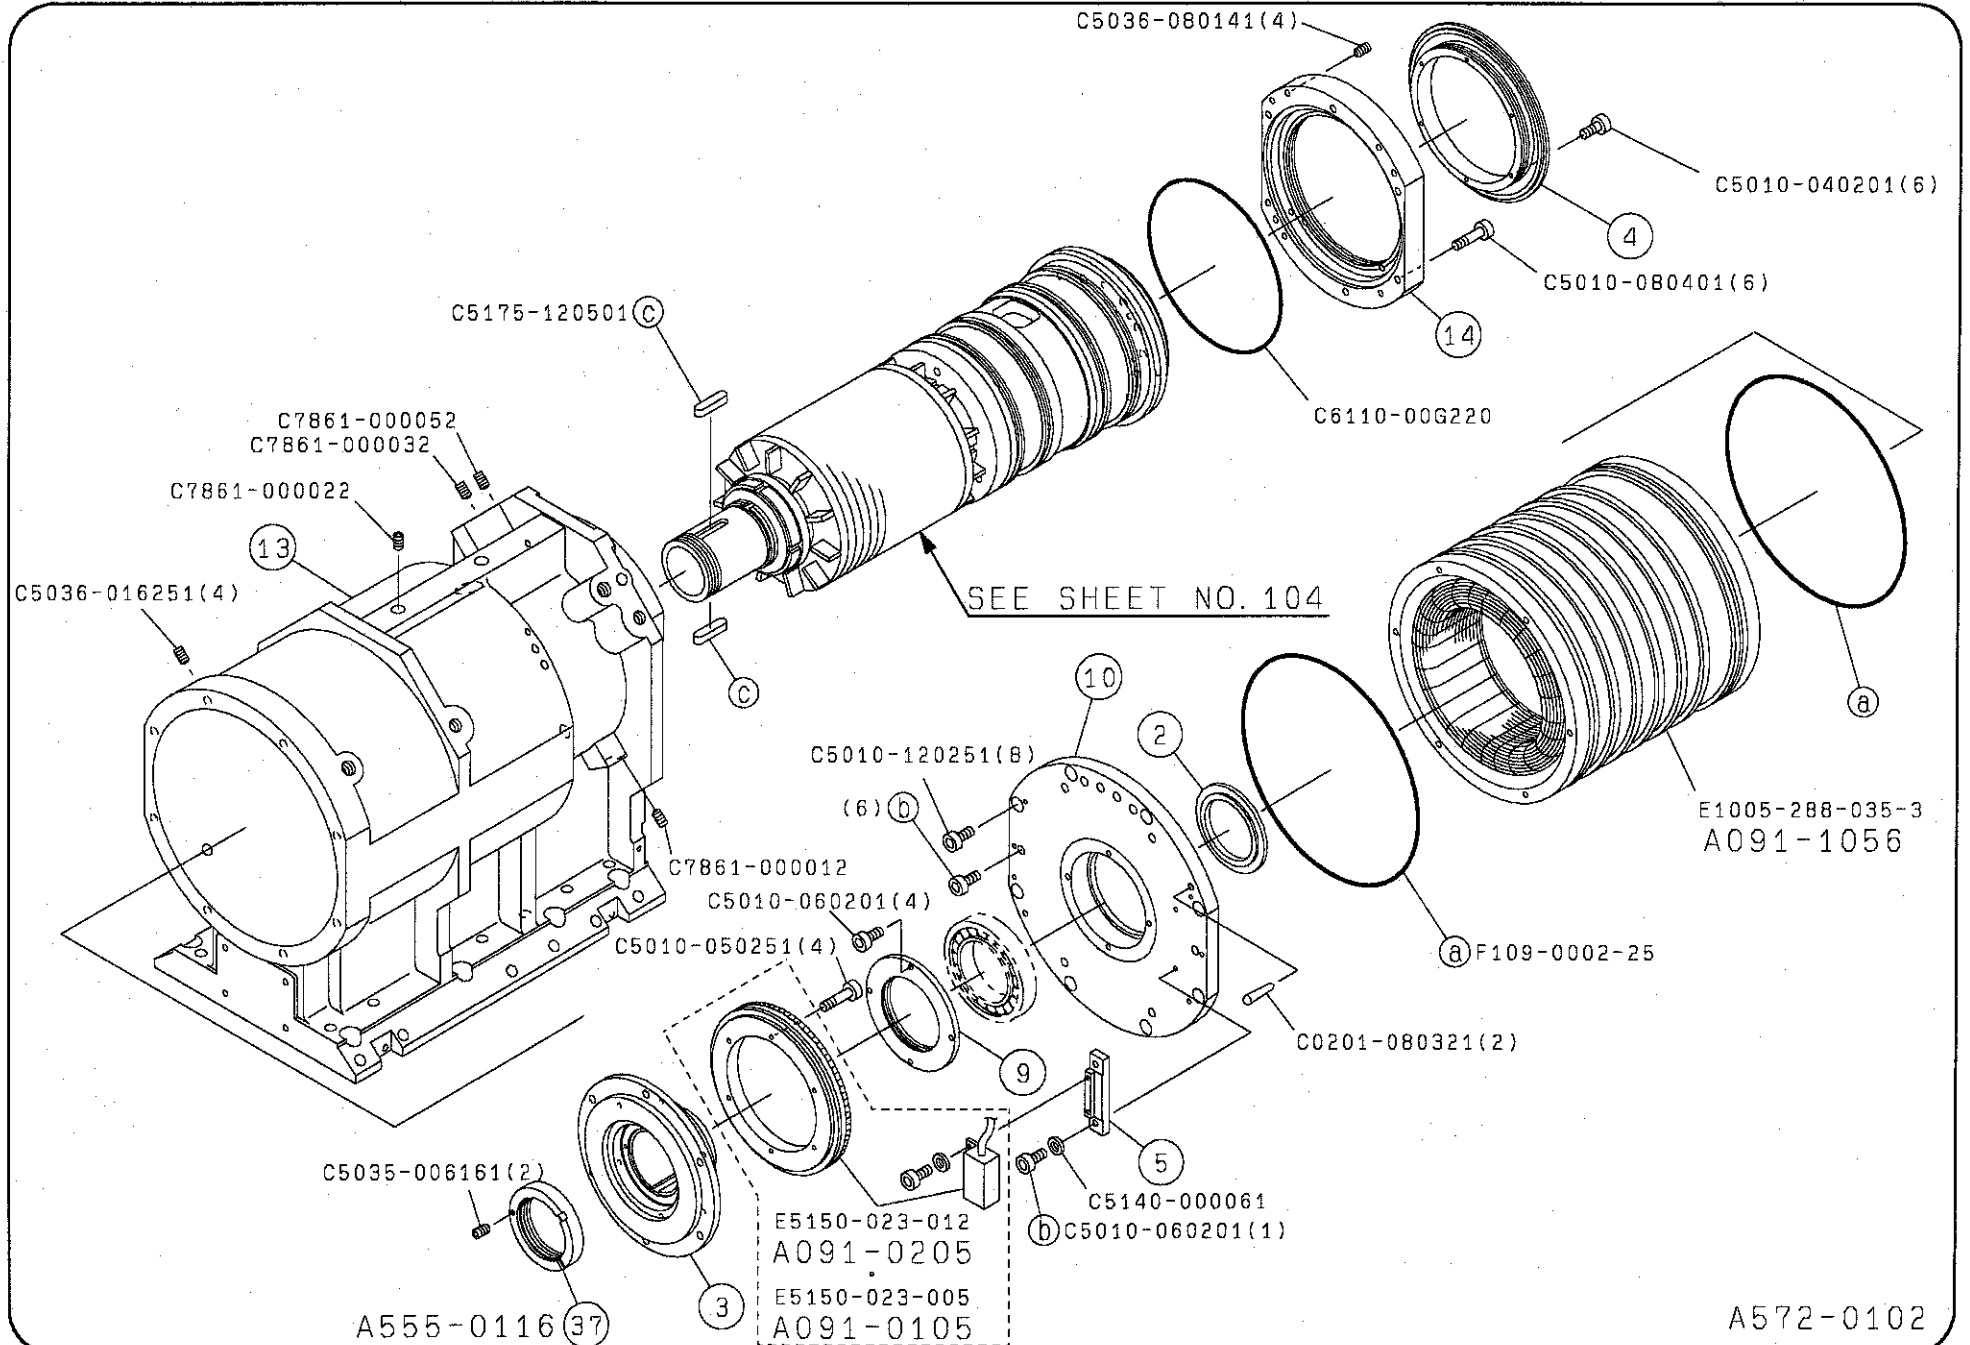

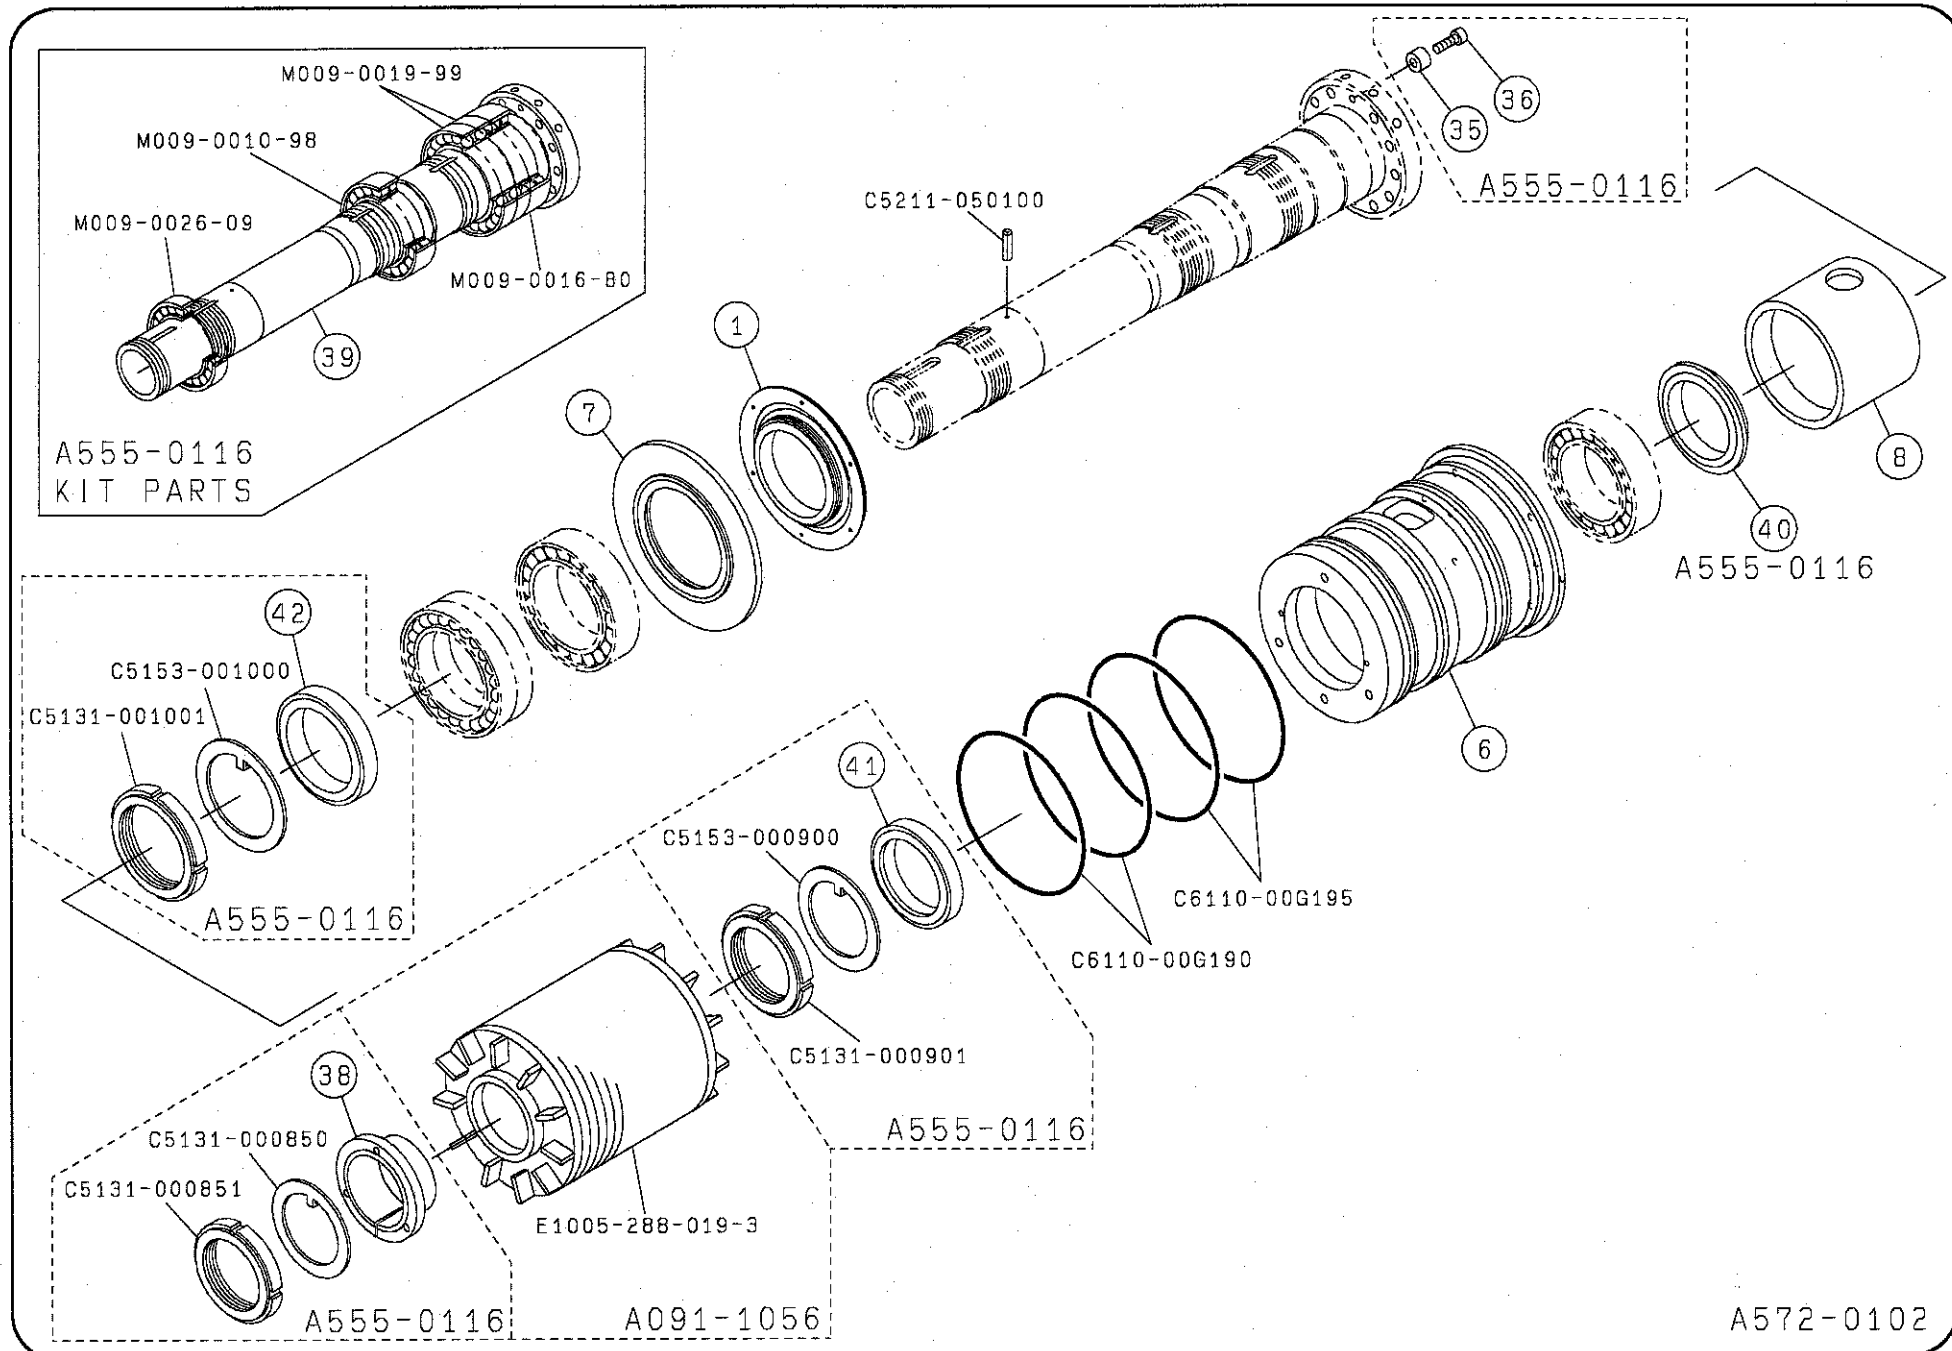

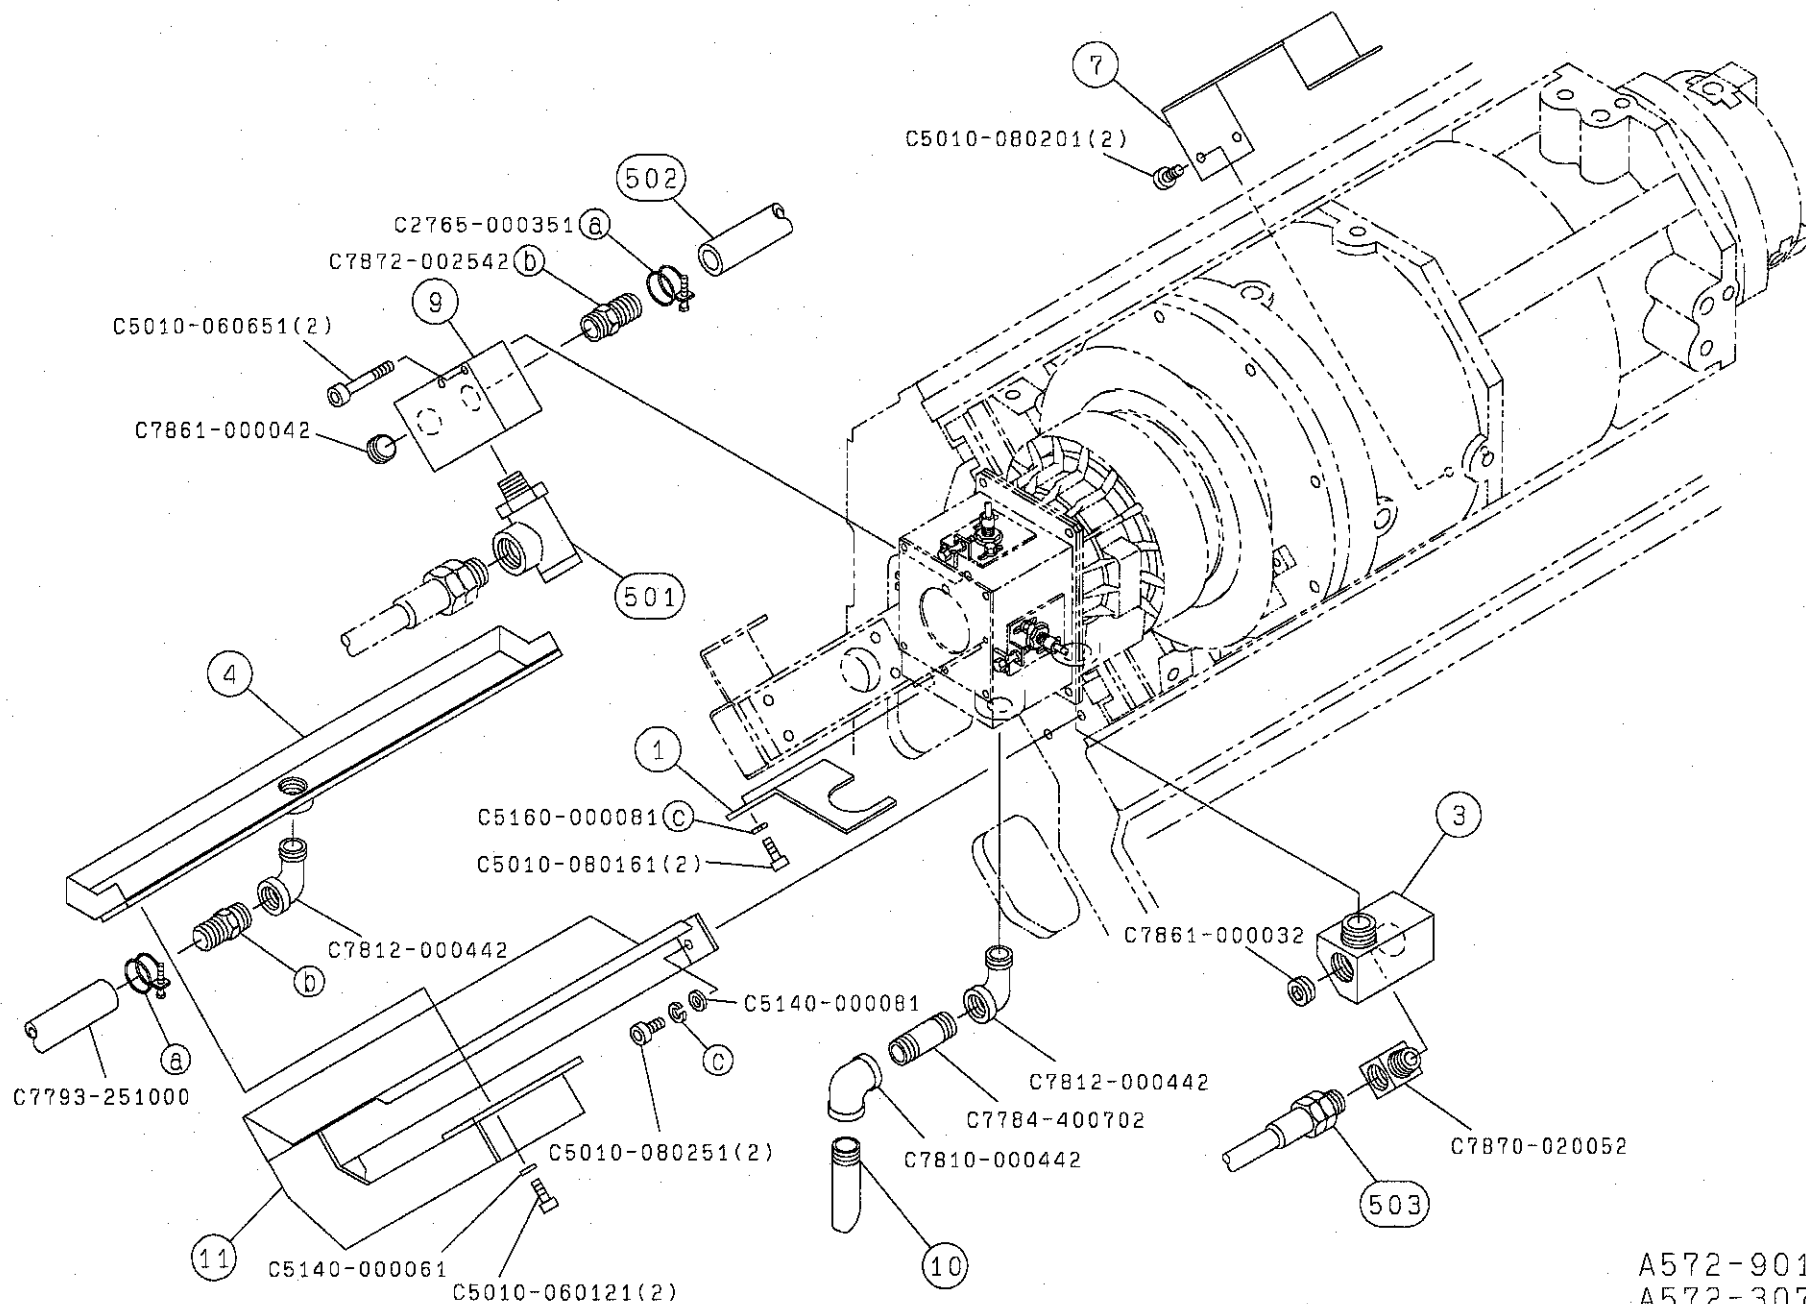


A572-9019
A572-3070

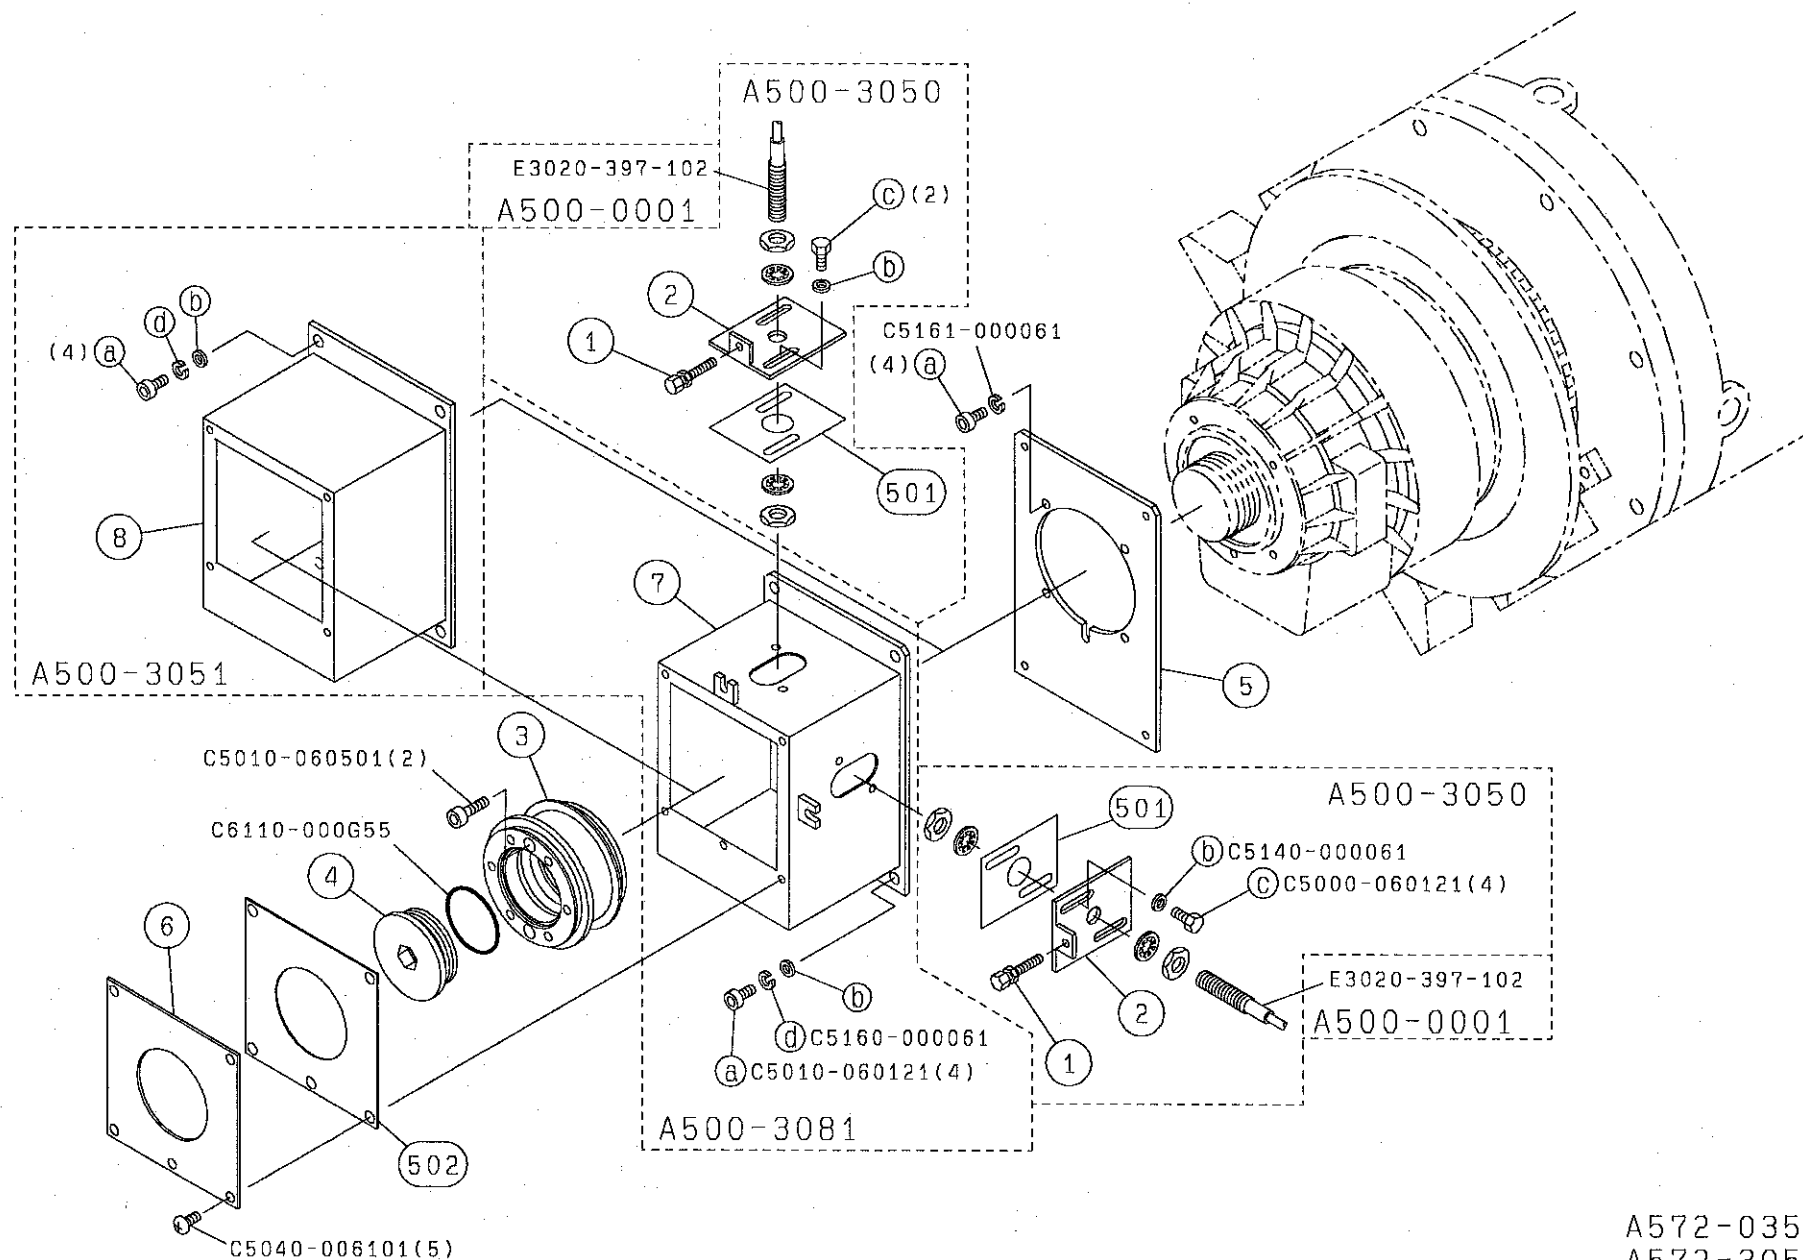



A572-0350
A572-3051
A572-3081



110

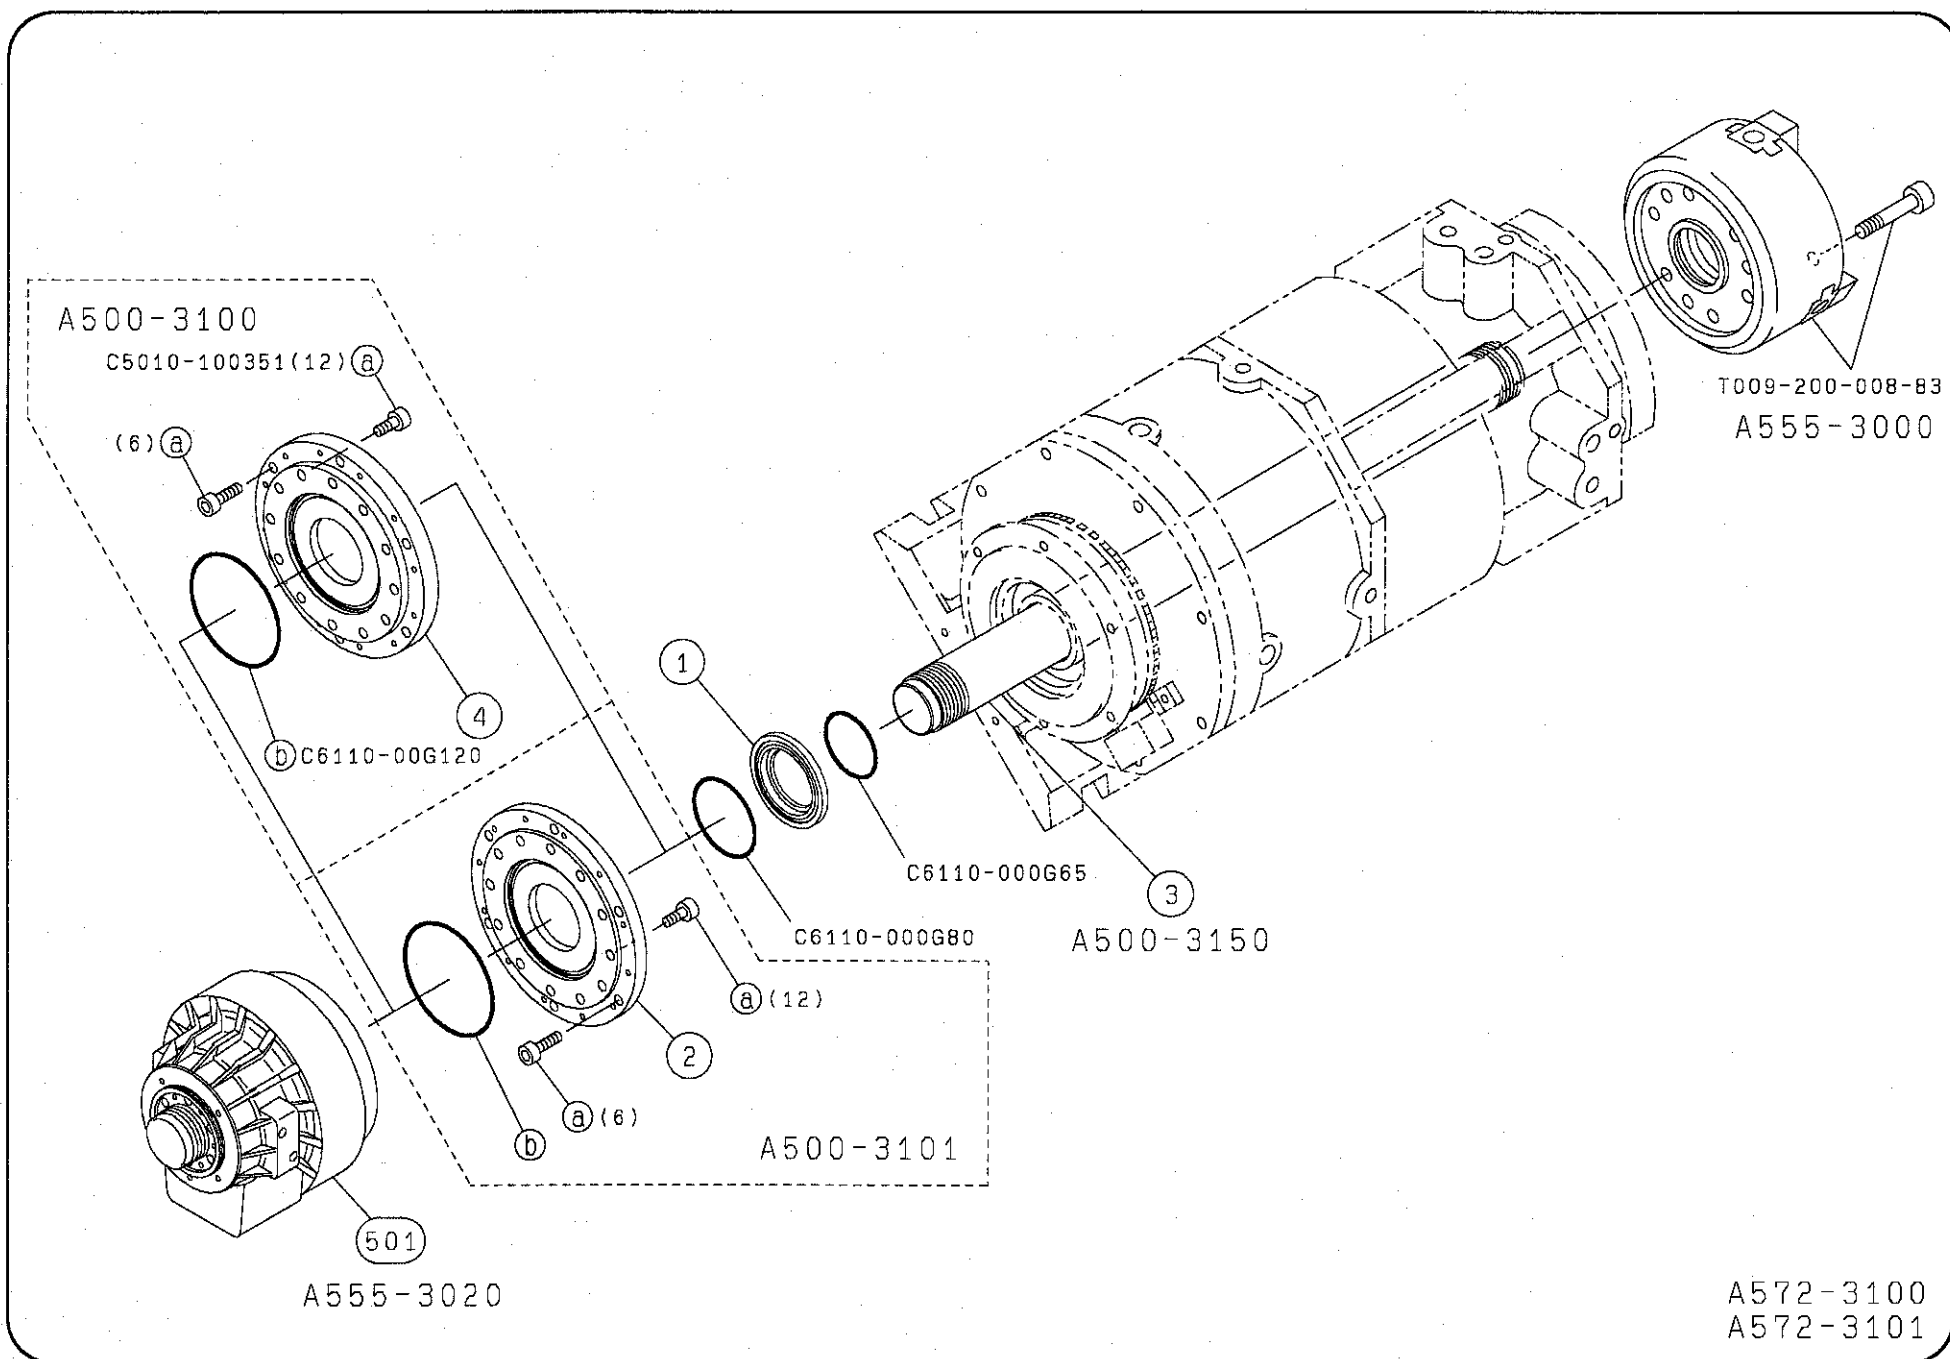


111

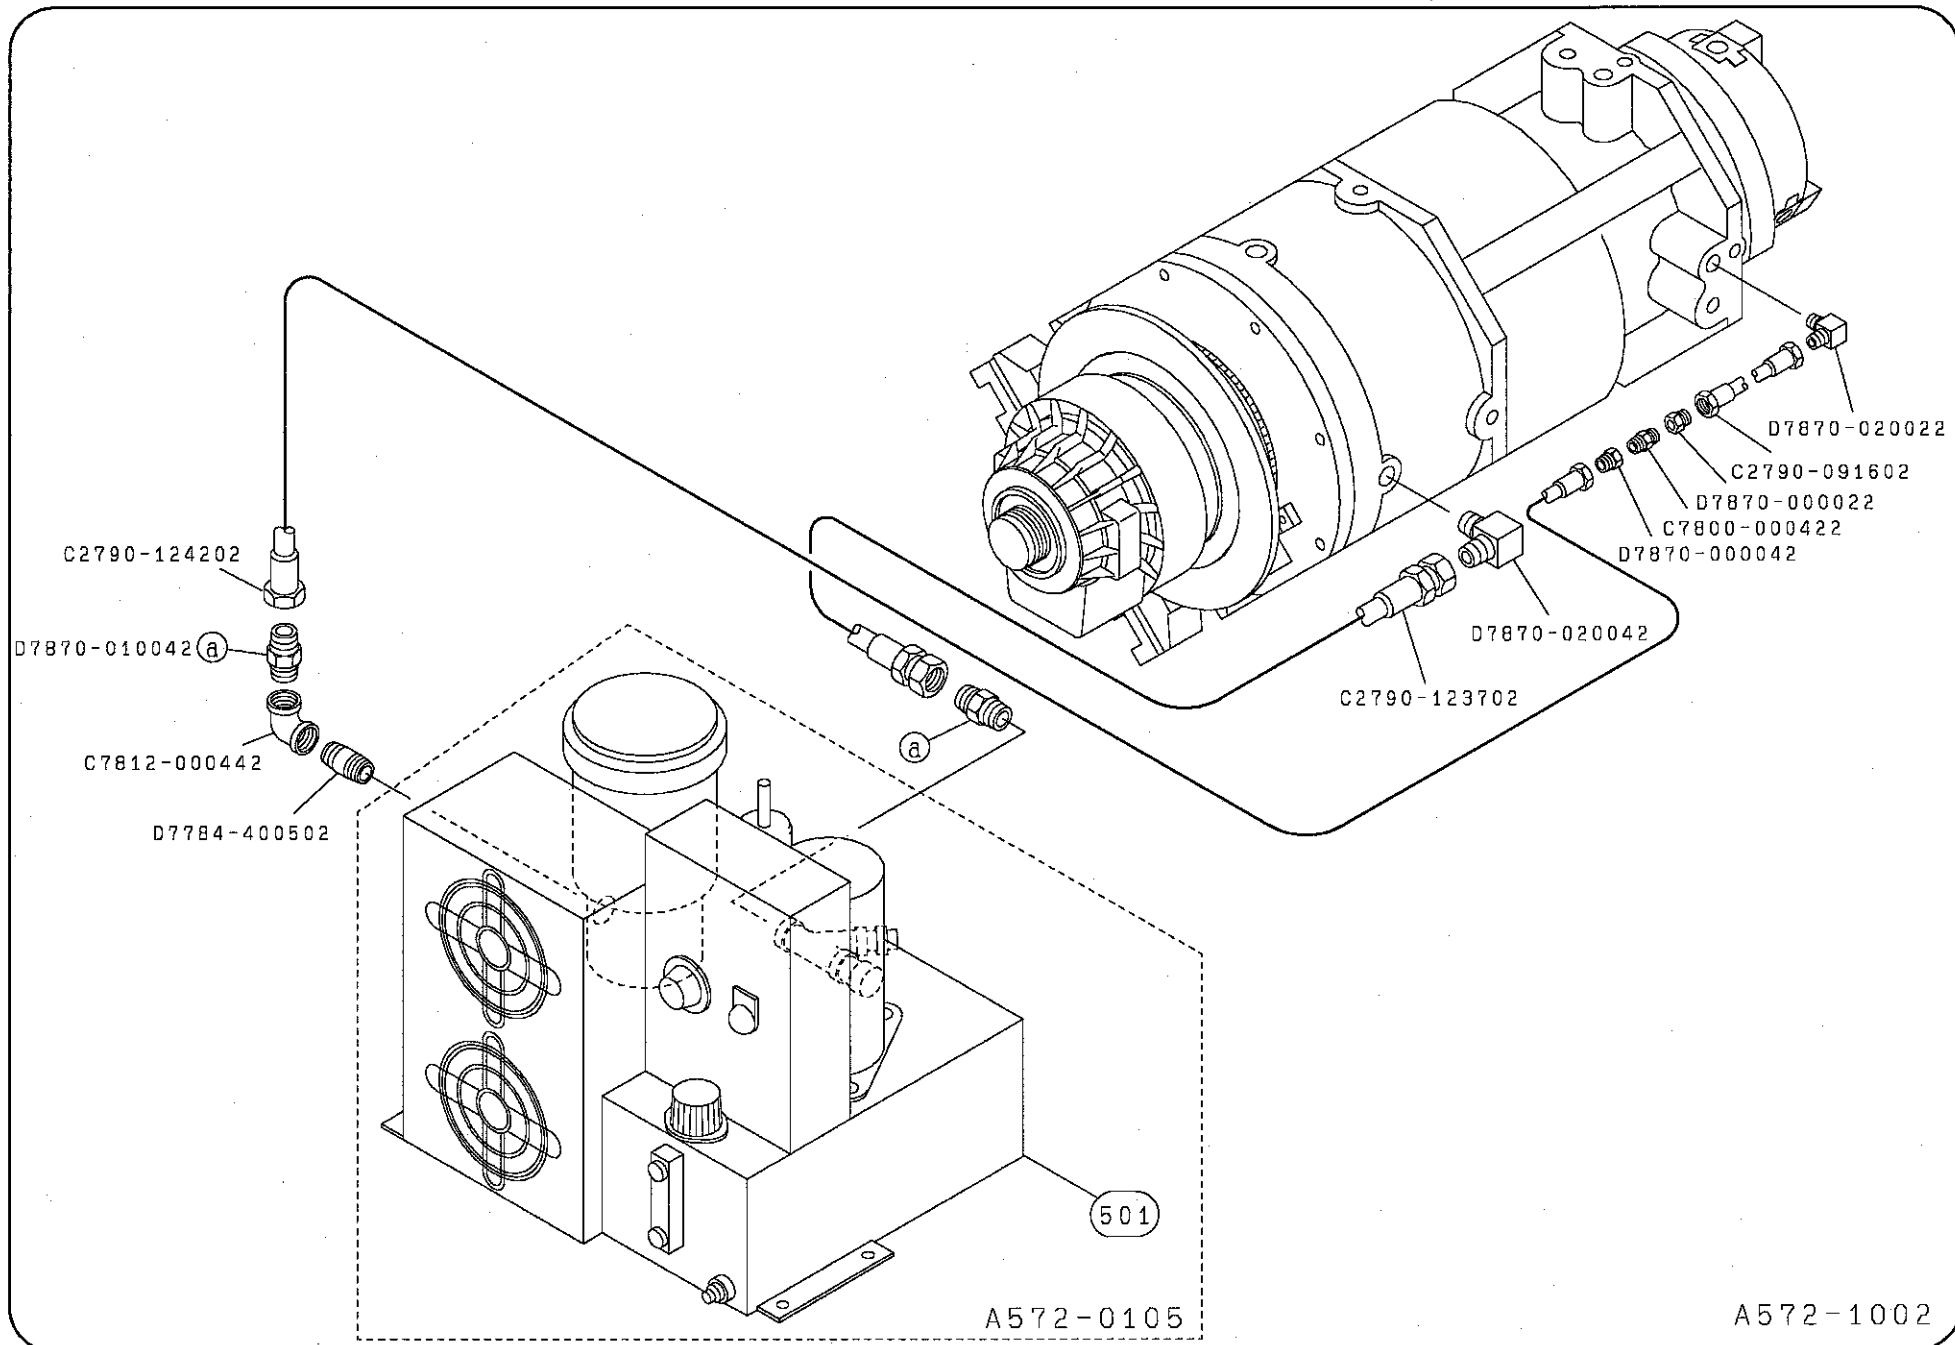

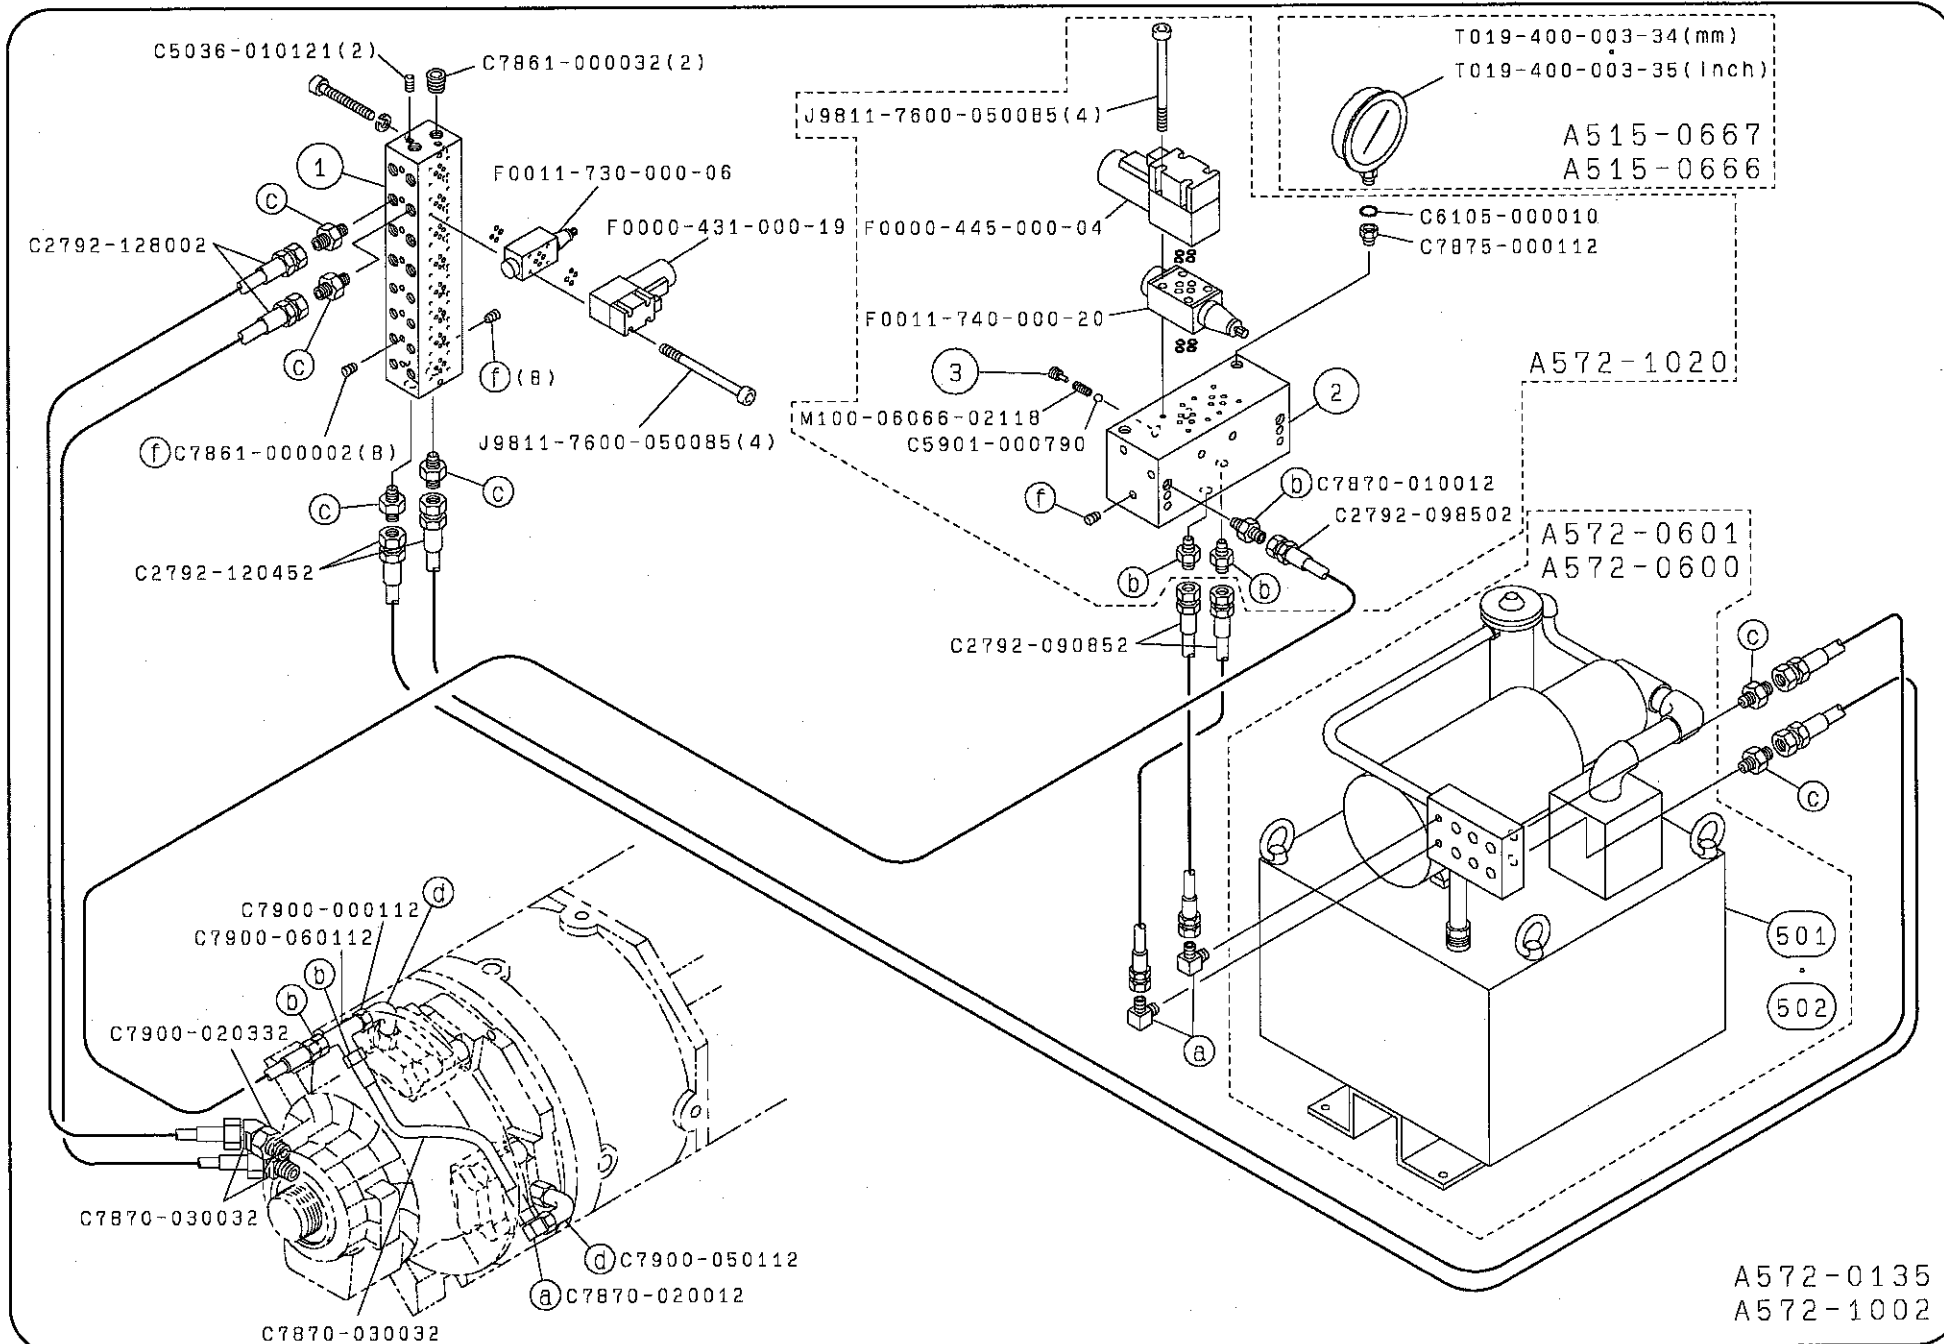


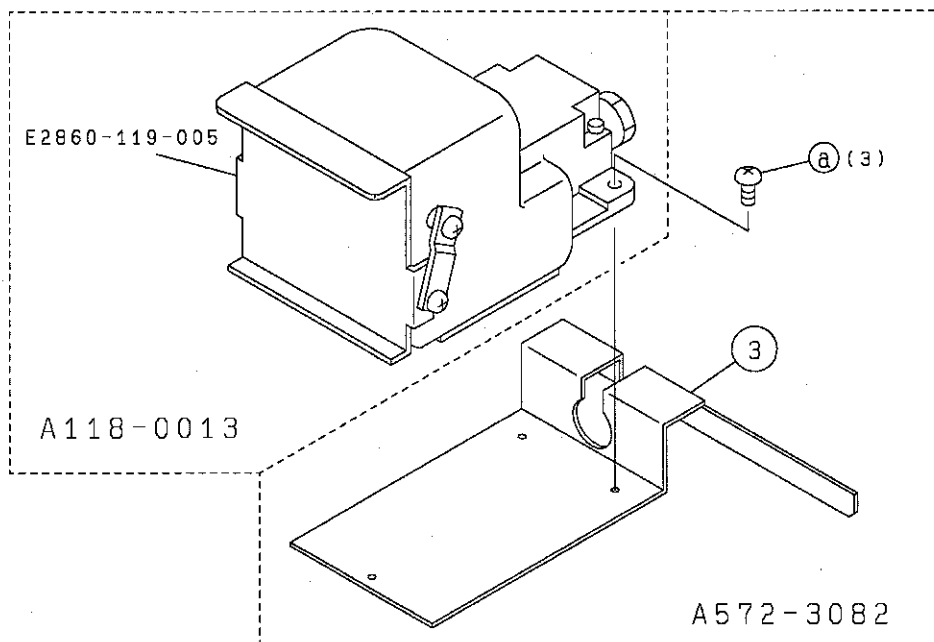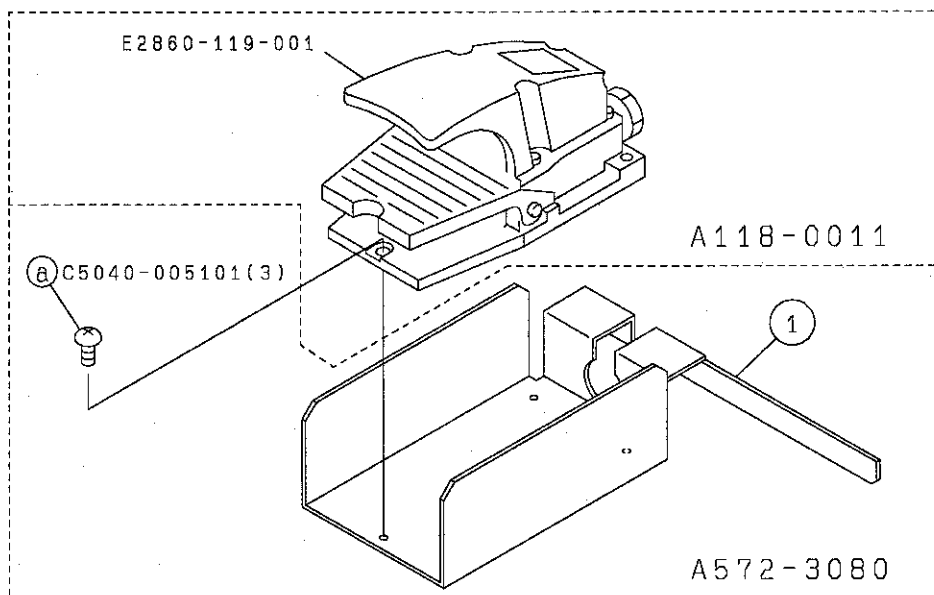

USA

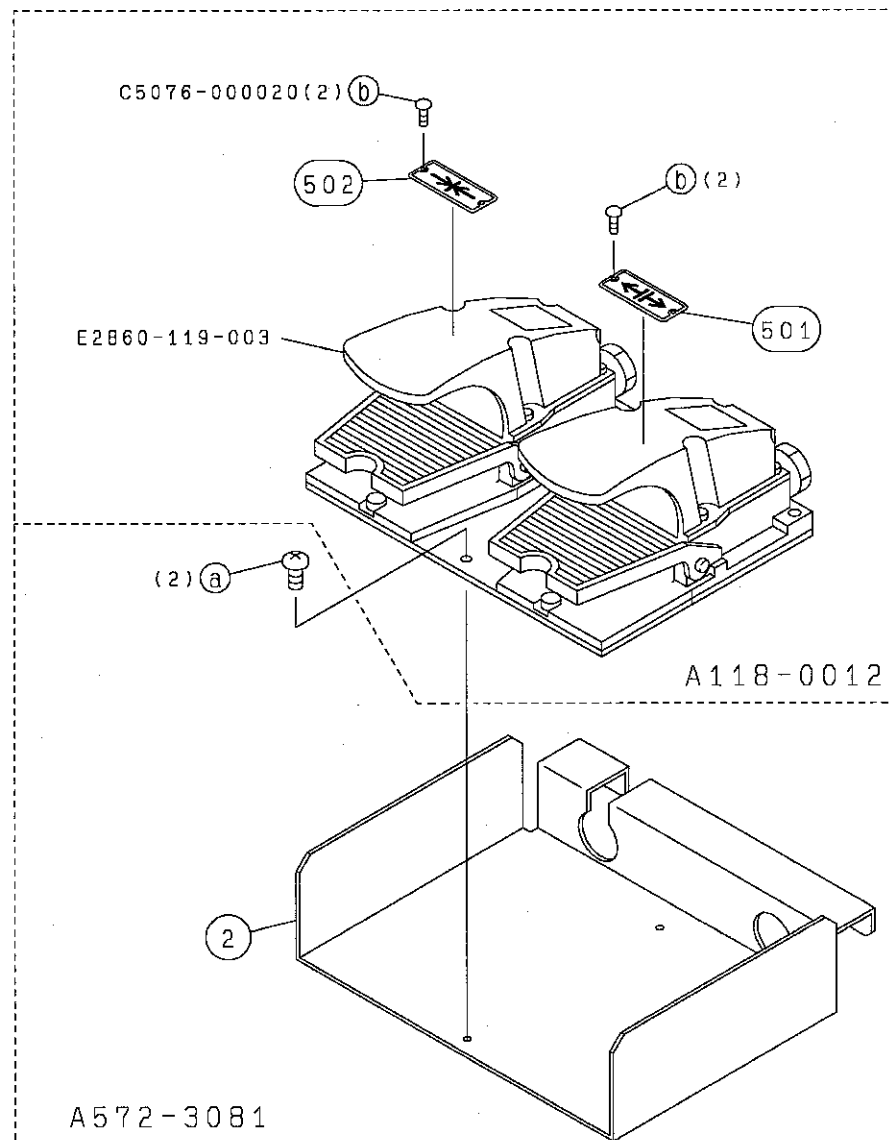

IEC

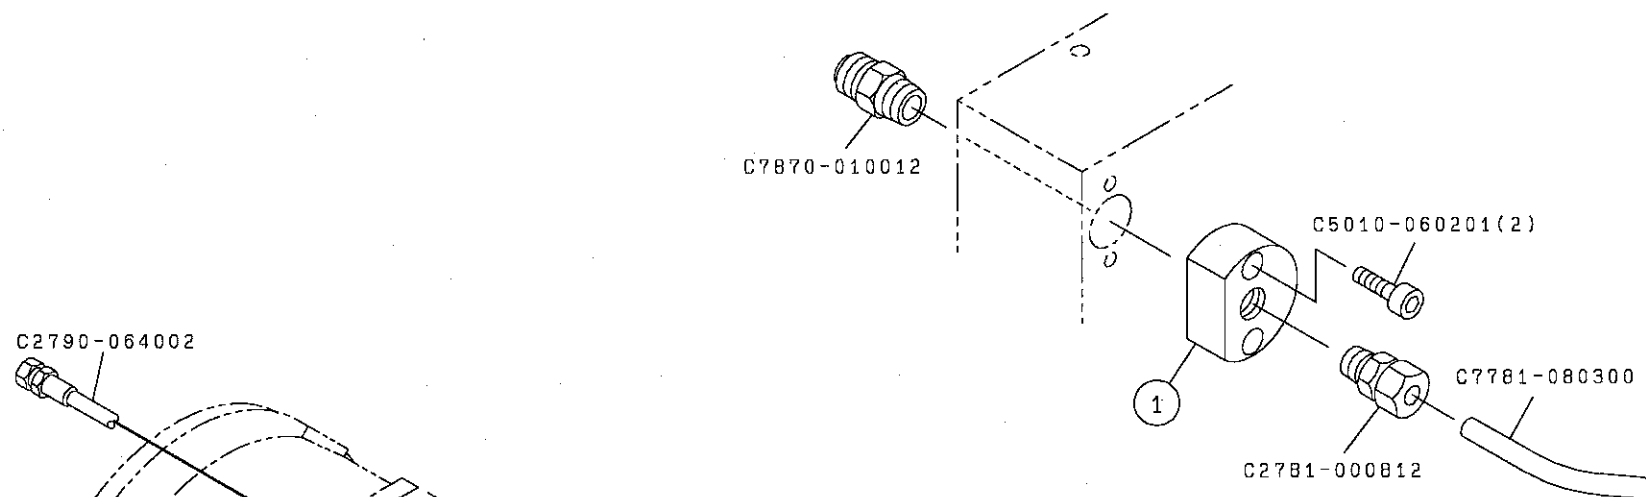


DETAIL A

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
101 -022	572-0125-08-02	SUPPORT	A572-0121	1	104 -035	123-3111-30-1	BLOCK	A555-0116	1
101 -023	572-0125-12	DOG	A572-0121	1	104 -036	515-0100-36-1	BOLT	A555-0116	1
101 -024	572-0125-14	DOG	A572-0121	1	104 -038	555-0105-23	BUSH	A555-0116	1
101 -026	572-1010-03-02	SUPPORT	A572-0121	1	104 -039	555-0106-01-04	SPINDLE	A555-0116	1
101 -027	572-1010-05	RETAINER	A572-0121	1	104 -040	555-0106-02-01	COLLAR	A555-0116	1
101 -028	572-1010-33	PLATE	A572-0121	1	104 -041	555-0106-03-01	COLLAR	A555-0116	1
101 -043	572-0111-08-02	SUPPORT	A572-0200	1	104 -042	555-0106-04-01	COLLAR	A555-0116	1
101 -502	H9023-2600-02-4	TERMINAL BOX SPHC	A572-0121	1					
102 -011	572-0110-02-03	COVER	A572-0102	1	105 -001	572-0111-06-01	SUPPORT	A572-3070	1
102 -012	572-0110-03-05	COVER	A572-0102	1	105 -003	572-0600-07-03	BLOCK	A572-3070	1
102 -031	112-0140-10	JOINT	A572-0135	2	105 -004	572-0600-09-03	DUCT	A572-3070	1
102 -032	555-0106-06-02	PLATE	A572-0135	1	105 -007	572-0600-15	SUPPORT	A572-3070	1
102 -033	555-0110-10	HOLDER	A572-0135	4	105 -009	572-0600-34	BLOCK	A572-3070	1
102 -034	572-0110-01-03	SUPPORT	A572-0135	1	105 -010	572-0600-35	PIPE, gas	A572-3070	1
102 -504	H1011-0000-43	CARRIPER ASSY	A572-0135	2	105 -011	572-0600-37	SUPPORT	A572-9019	1
103 -002	555-0100-14-01	COLLAR	A572-0102	1	105 -501	H0014-0004-78	JOINT, swivel	A572-3070	1
103 -003	555-0105-06-03	FLANGE	A572-0102	1	105 -502	H0026-0005-77	HOSE, vinyl	A572-3070	1
103 -004	572-0120-03-01	LABYRINTH	A572-0102	1	105 -503	H0027-0008-54	HOSE	A572-3070	1
103 -005	572-0101-29-05	BLOCK	A572-0102	1					
103 -009	572-0100-06-03	CAP	A555-0102	1	106 -001	555-3005-12	BOLT	A572-3050	2
103 -010	572-0100-07-08	HOUSING	A572-0102	1	106 -002	555-3005-13-01	PLATE	A572-3050	2
103 -013	572-0120-01-01	HEADSTOCK	A572-0102	1	106 -003	555-3005-14-02	ADPTER	A572-3050	1
103 -014	572-0120-02-01	CAP	A572-0102	1	106 -003	555-3005-14-02	ADPTER	A572-3051	1
103 -037	555-0105-13-01	NUT	A572-0116	1	106 -004	555-3005-24	CAP	A572-3051	1
104 -001	515-0100-23-7	LABYRINTH	A572-0102	1	106 -004	555-3005-24	CAP	A572-3050	1
104 -006	555-0105-02-03	HOUSING	A572-0102	1	106 -005	555-3005-25	PLATE	A572-3051	1
104 -007	555-0105-03-01	LABYRINTH	A572-0102	1	106 -005	555-3005-25	PLATE	A572-3050	1
104 -008	555-0106-05-02	COLLAR	A572-0102	1	106 -006	555-3005-26-01	PLATE	A572-3050	1
					106 -006	555-3005-26-01	PLATE	A572-3051	1
					106 -007	555-3005-57	BOX	A500-3081	1
					106 -008	555-3005-28	BOX	A572-3051	1

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
106 -501	H1020-1126-20	PACKING	A572-3050	2					
106 -502	H1020-1129-92-1	PLATE	A572-3050	1					
106 -502	H1020-1129-92-1	PLATE	A572-3051	1					
107 -001	555-3005-19-02	COLLAR	A572-3100	1					
107 -001	555-3005-19-02	COLLAR	A572-3101	1					
107 -002	555-3007-03-01	ADPTER	A572-3101	1					
107 -003	555-3005-17-03	PIPE	A500-3150	1					
107 -004	555-3007-02	ADAPTER	A500-3100	1					
107 -501	H0001-0004-74-1	CYLINDER, hydraulic	A555-3020	1					
108 -501	H0110-0002-31-1	OIL CONTROLLER	A555-0105	1					
109 -001	572-0610-04-03	MANIFOLD	A572-1002	1					
109 -002	572-0610-15-01	MANIFOLD	A572-1020	1					
109 -003	515-0120-52	PIN	A572-1020	1					
109 -501	H0130-0012-10-1	HYDRAULIC UNIT NA CHI (STD)	A572-0600	1					
109 -502	H0130-0012-11-1	HYDRAULIC UNIT NA CHI (IEC)	A572-0601	1					
110 -001	572-0801-10-01	SUPPORT	A572-3080	1					
110 -002	572-0801-27-01	SUPPORT	A572-3081	1					
110 -003	572-0801-29-01	SUPPORT	A572-3082	1					
110 -501	H1040-1021-98	NAMEPLATE	A118-0012	1					
110 -502	H1040-1021-99	NAMEPLATE	A118-0012	1					
111 -001	572-0700-01	FLANGE	A572-0701	1					

2-2


HEADSTOCK (R. H.) GROUP

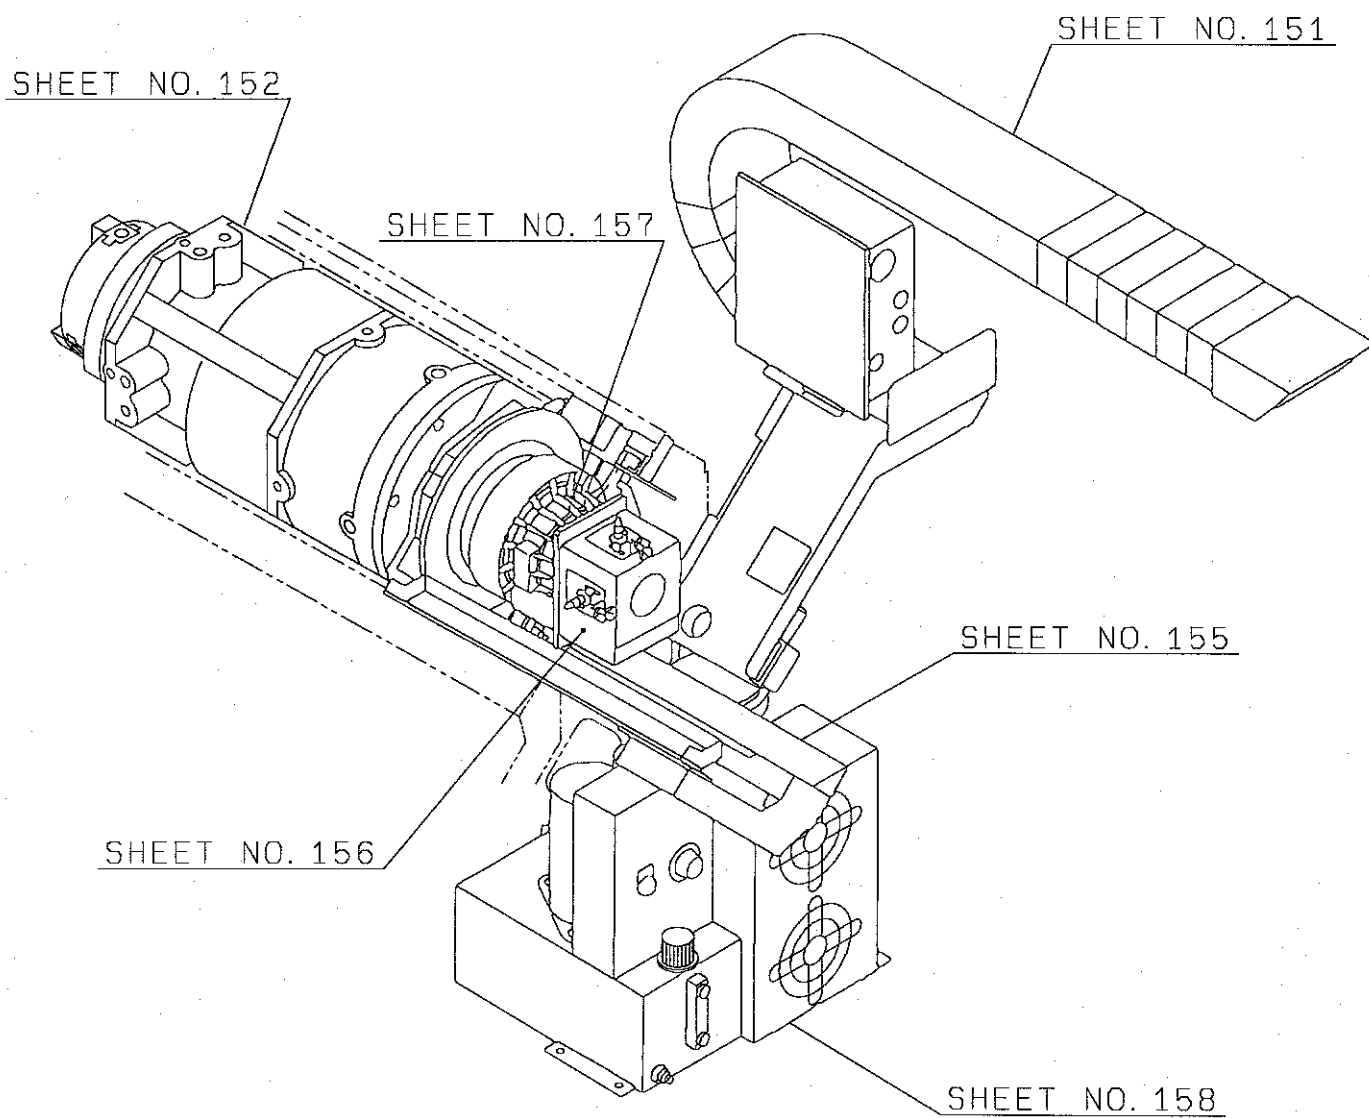

(2-2) HEADSTOCK (R. H.) GROUP


~ C O N T E N T S ~


SHEET NO.	ASSEMBLY NAME	PAGE
151	R. H. CABLEVEYOR	152
152	R. H. HEADSTOCK INSTALLATION AND C-AXIS BRAKE ...	153
153	R. H. MAIN SPINDLE (1)	154
154	R. H. MAIN SPINDLE (2)	155
155	R. H. DRAINPIPE	156
156	R. H. HOLLOW CHUCK AND CYLINDER (1)	157
157	R. H. HOLLOW CHUCK AND CYLINDER (2)	158
158	R. H. HEADSTOCK COOLING SYSTEM	159
159	R. H. HYDRAULIC PIPING	160
160	R. H. CHUCK PEDALS	161
161	R. H. AIR BLOW (FOR CHUCK)	162
I	INDEX NO. LIST	163

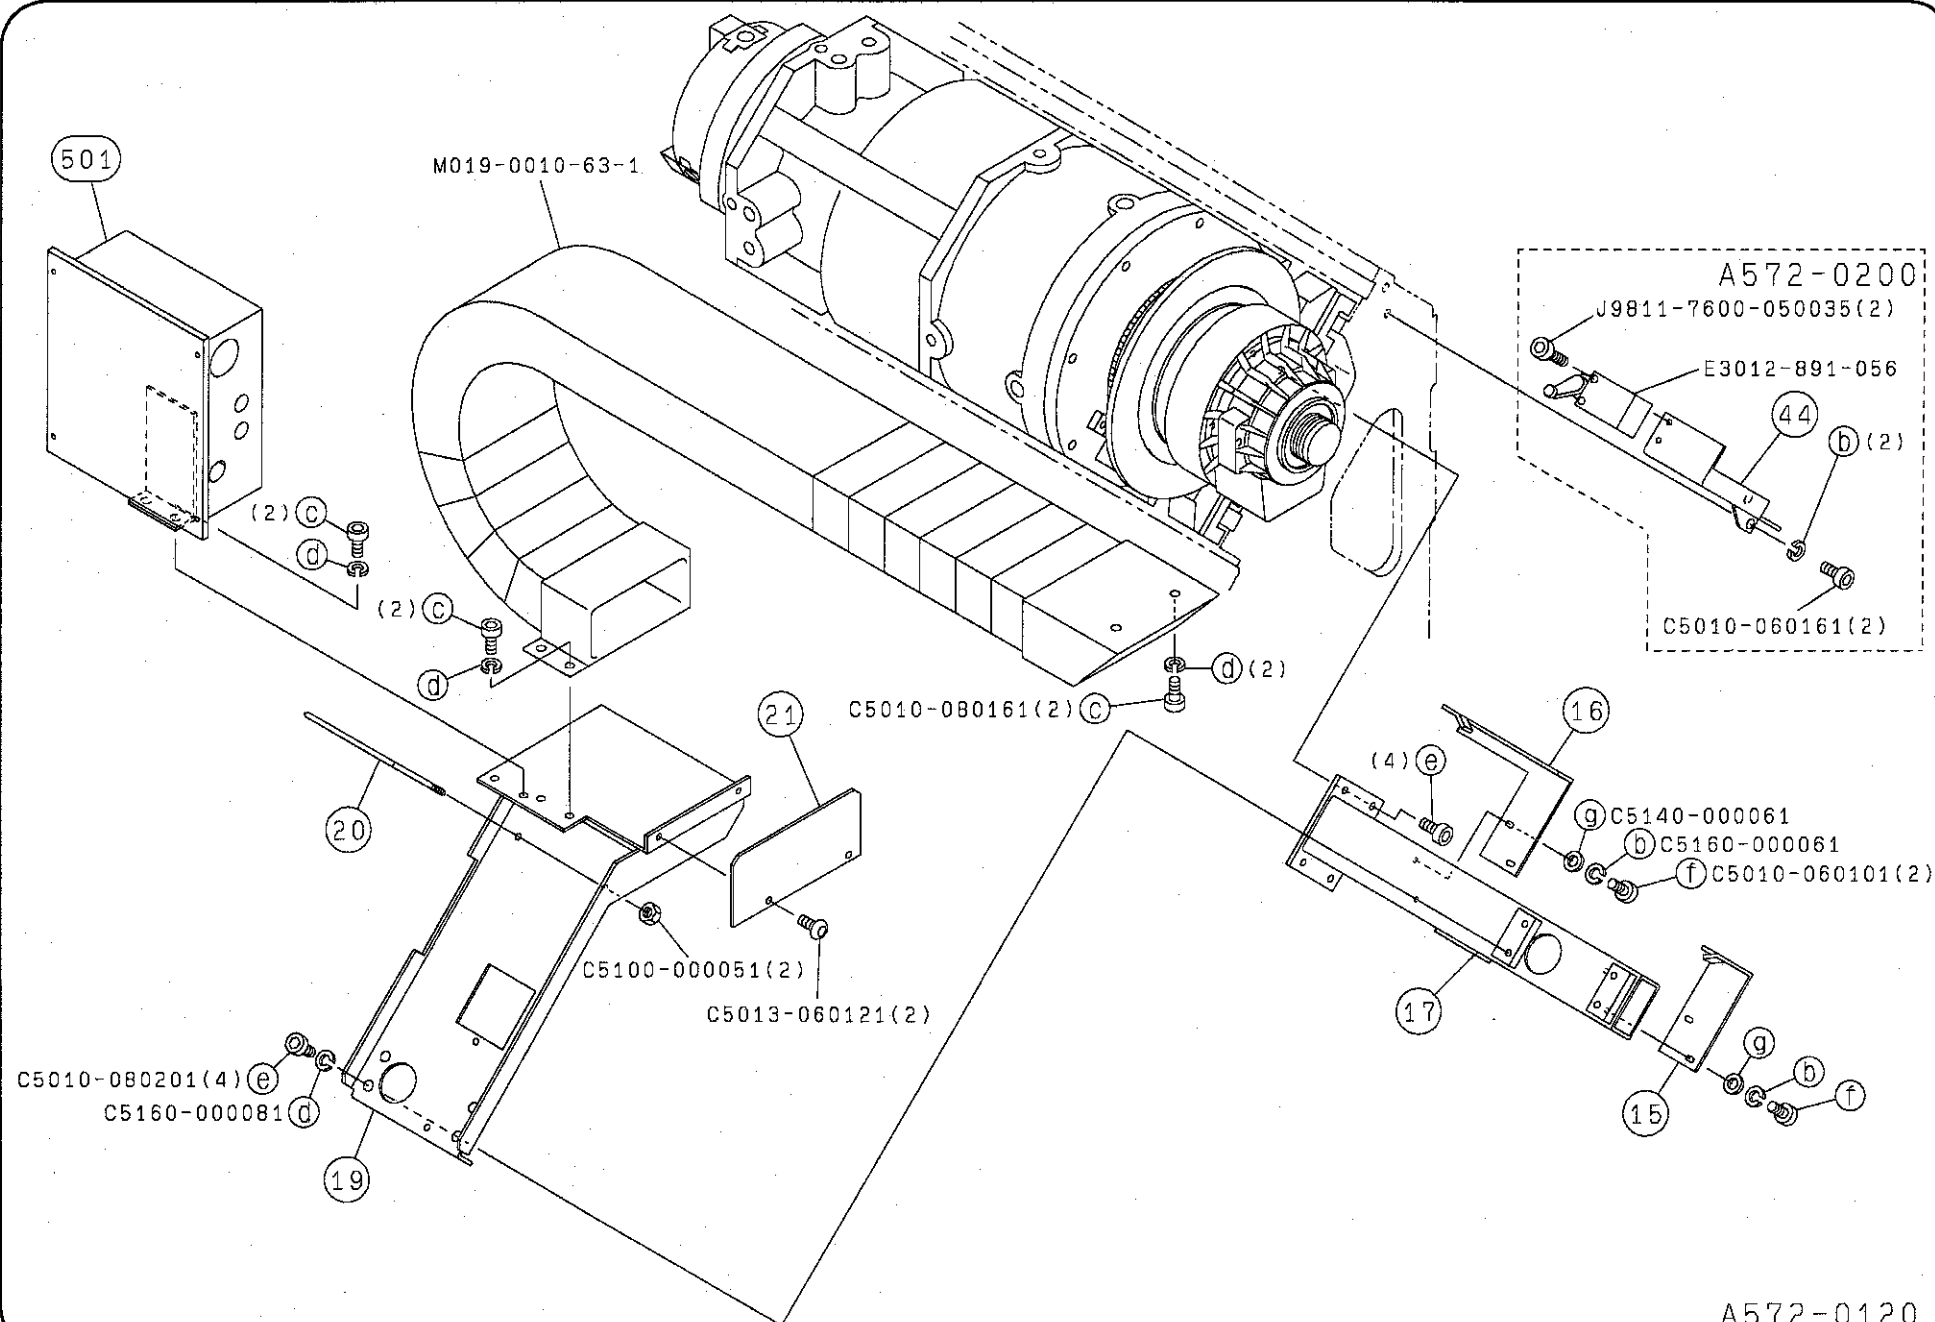



A572-0120

153

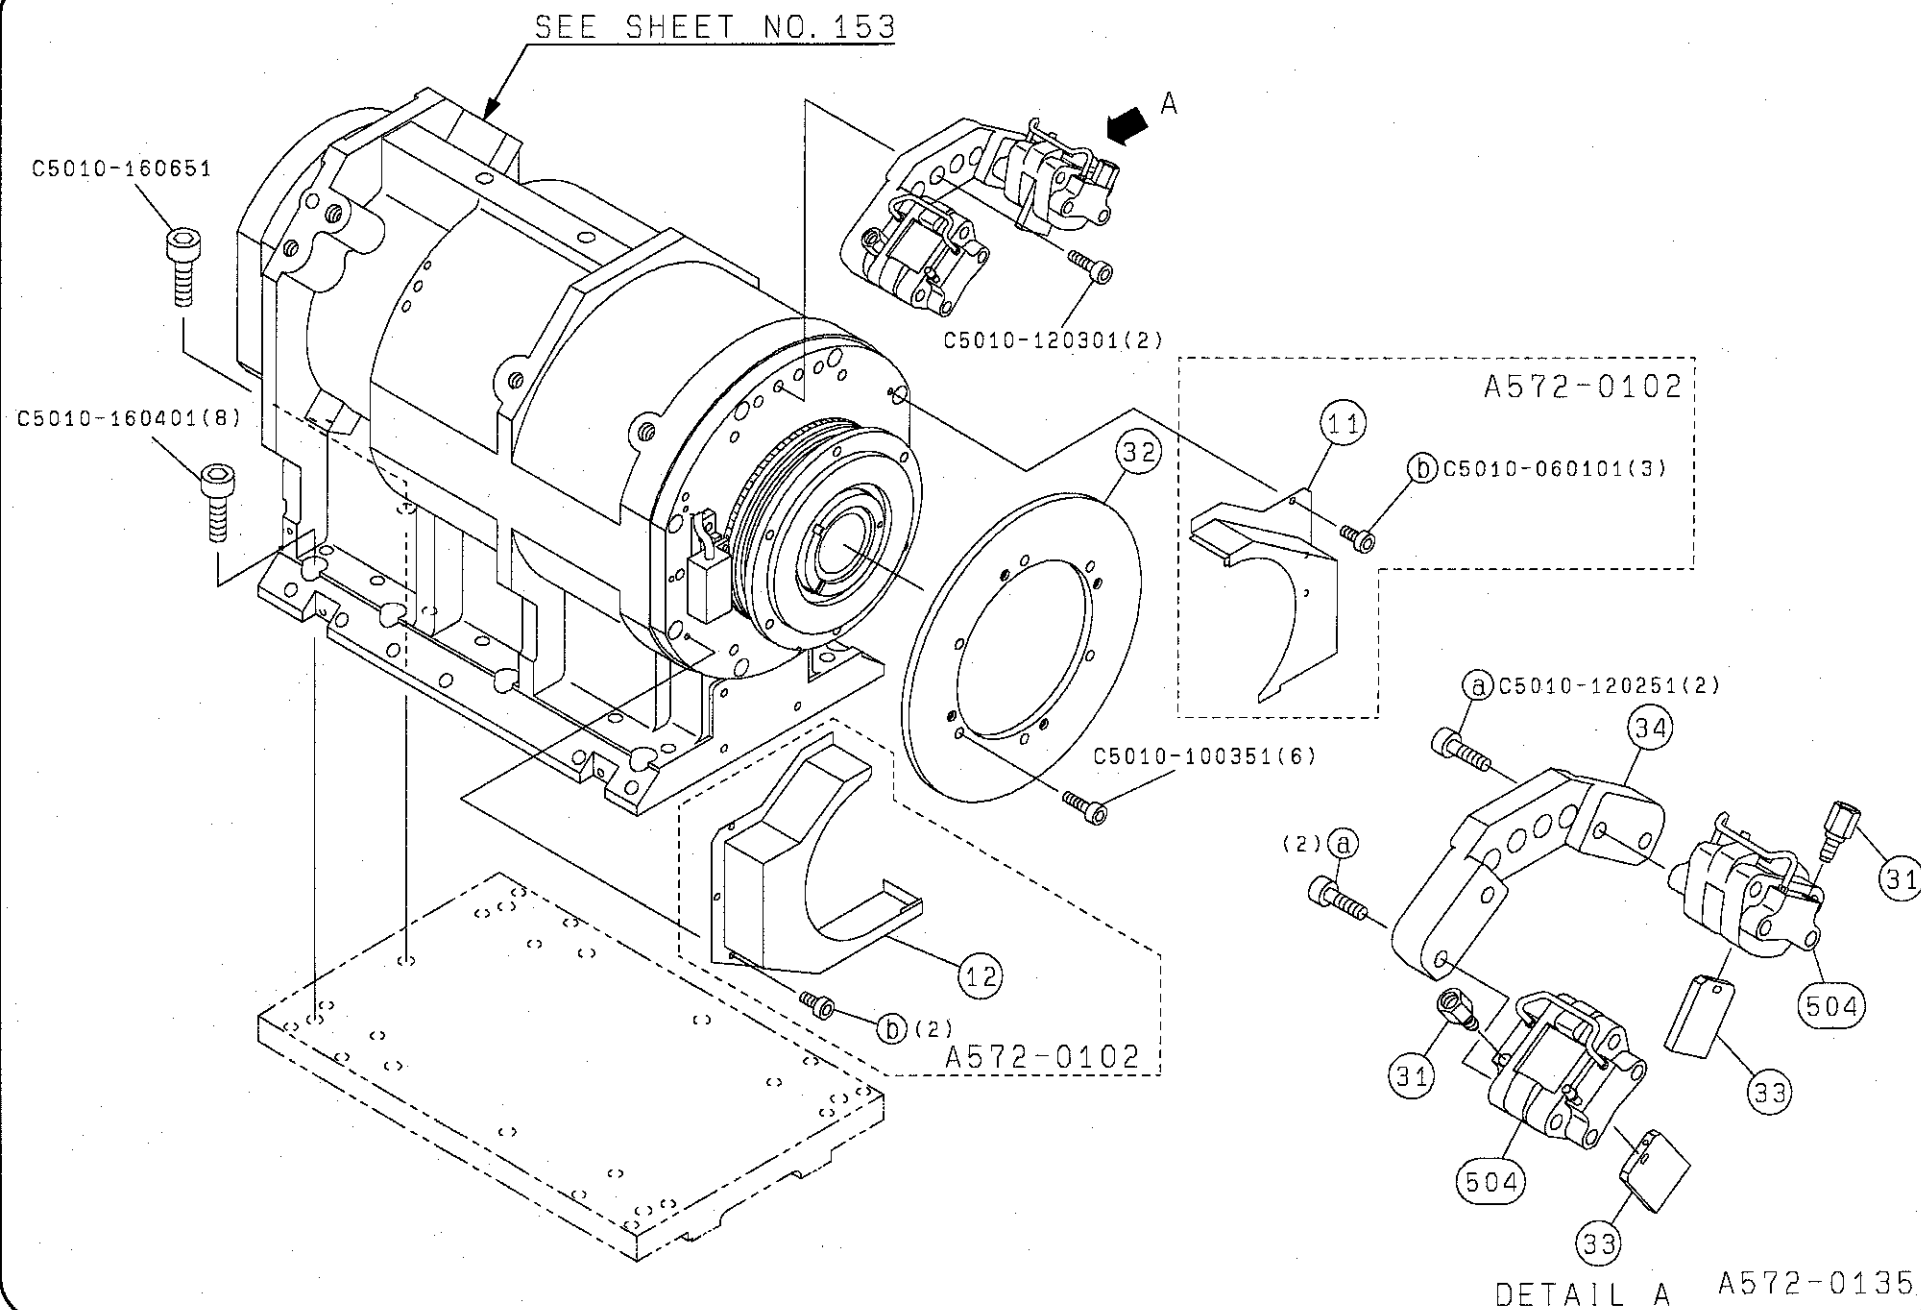


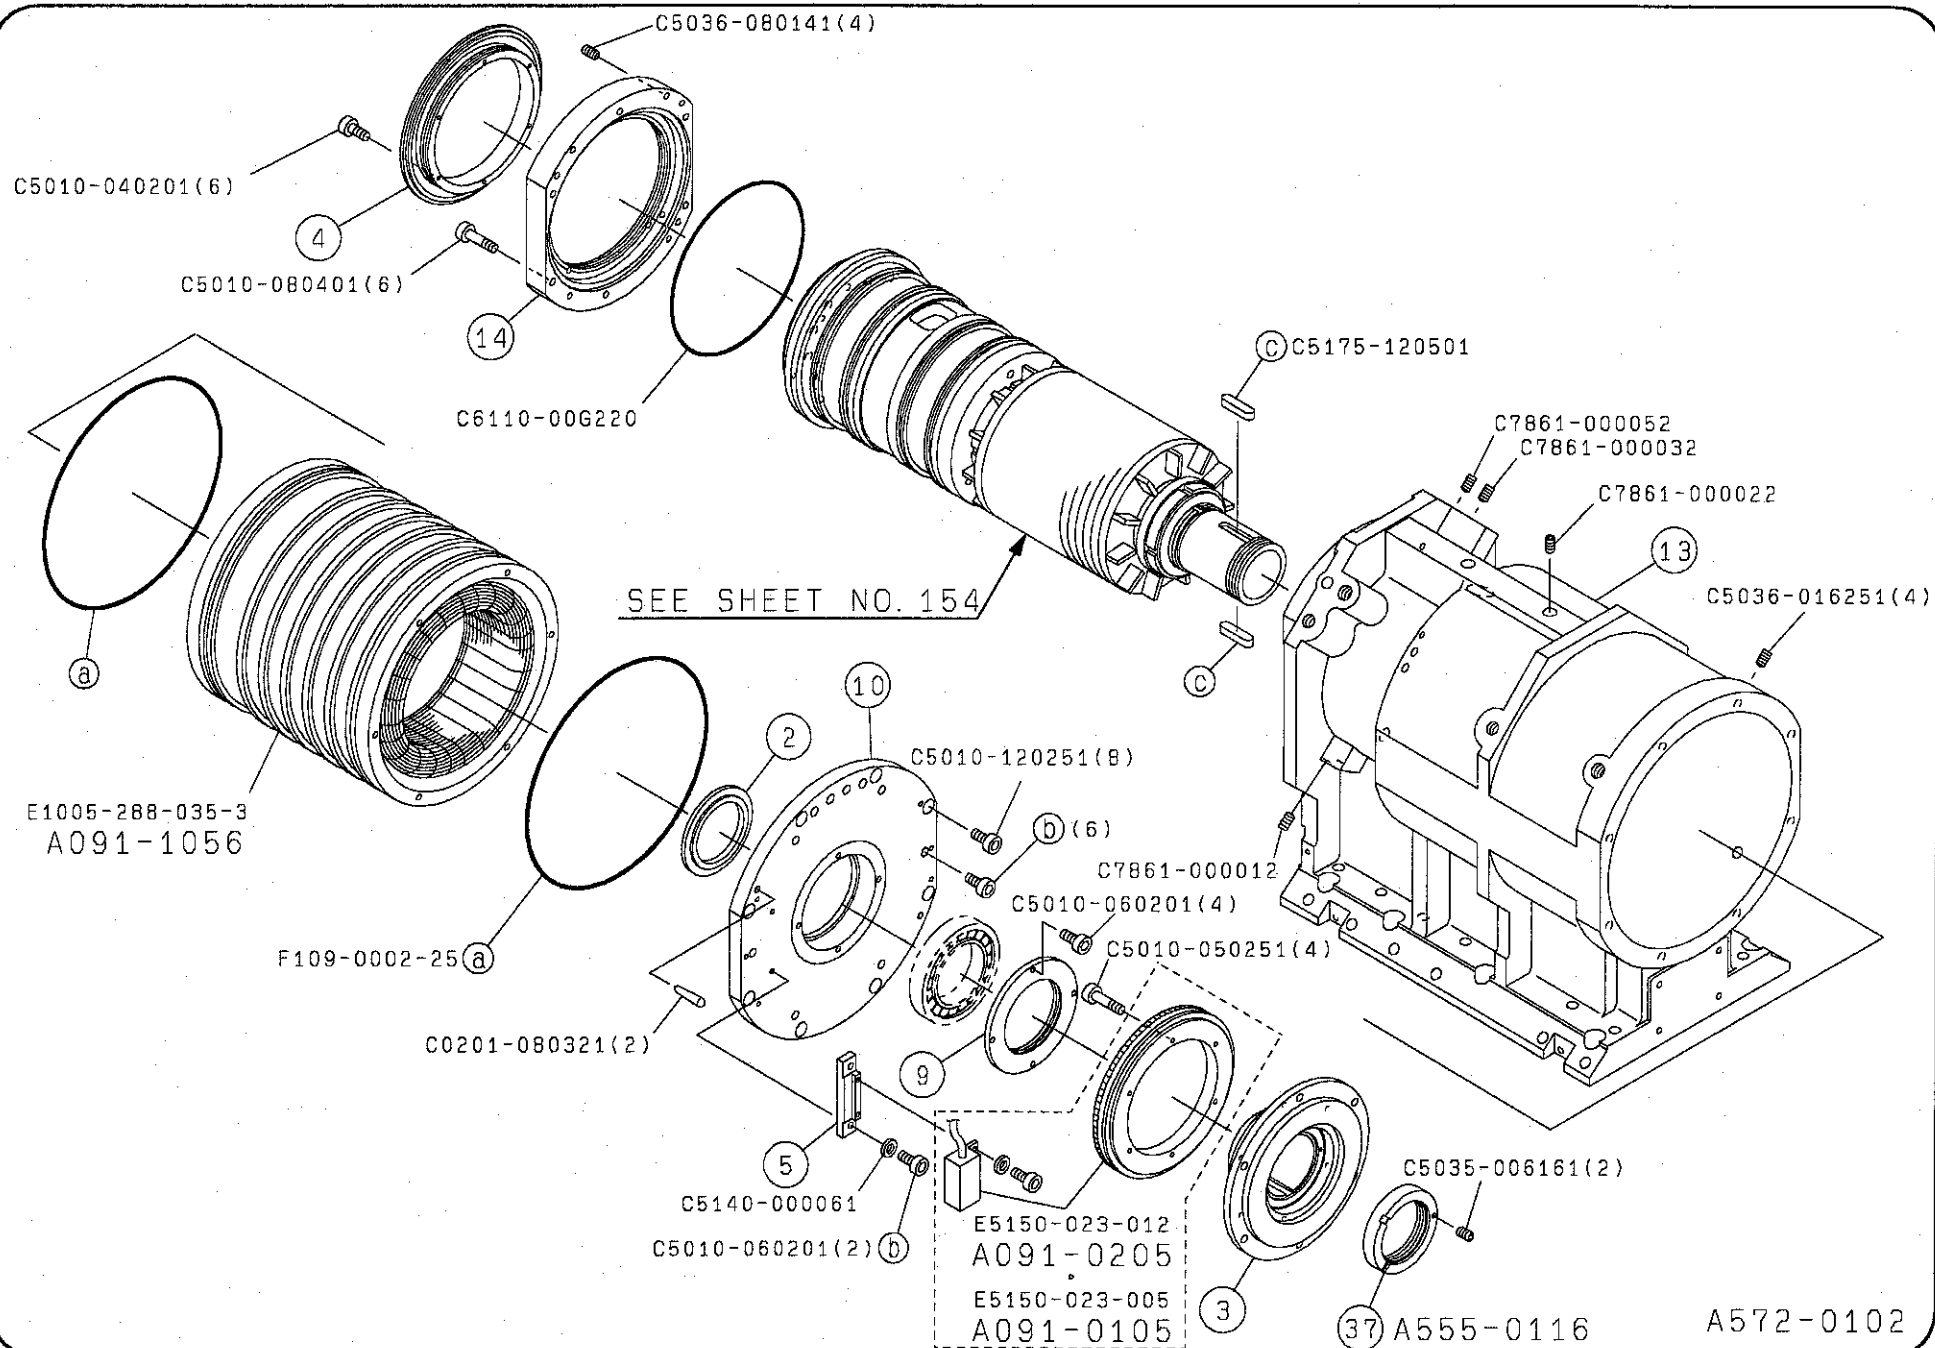


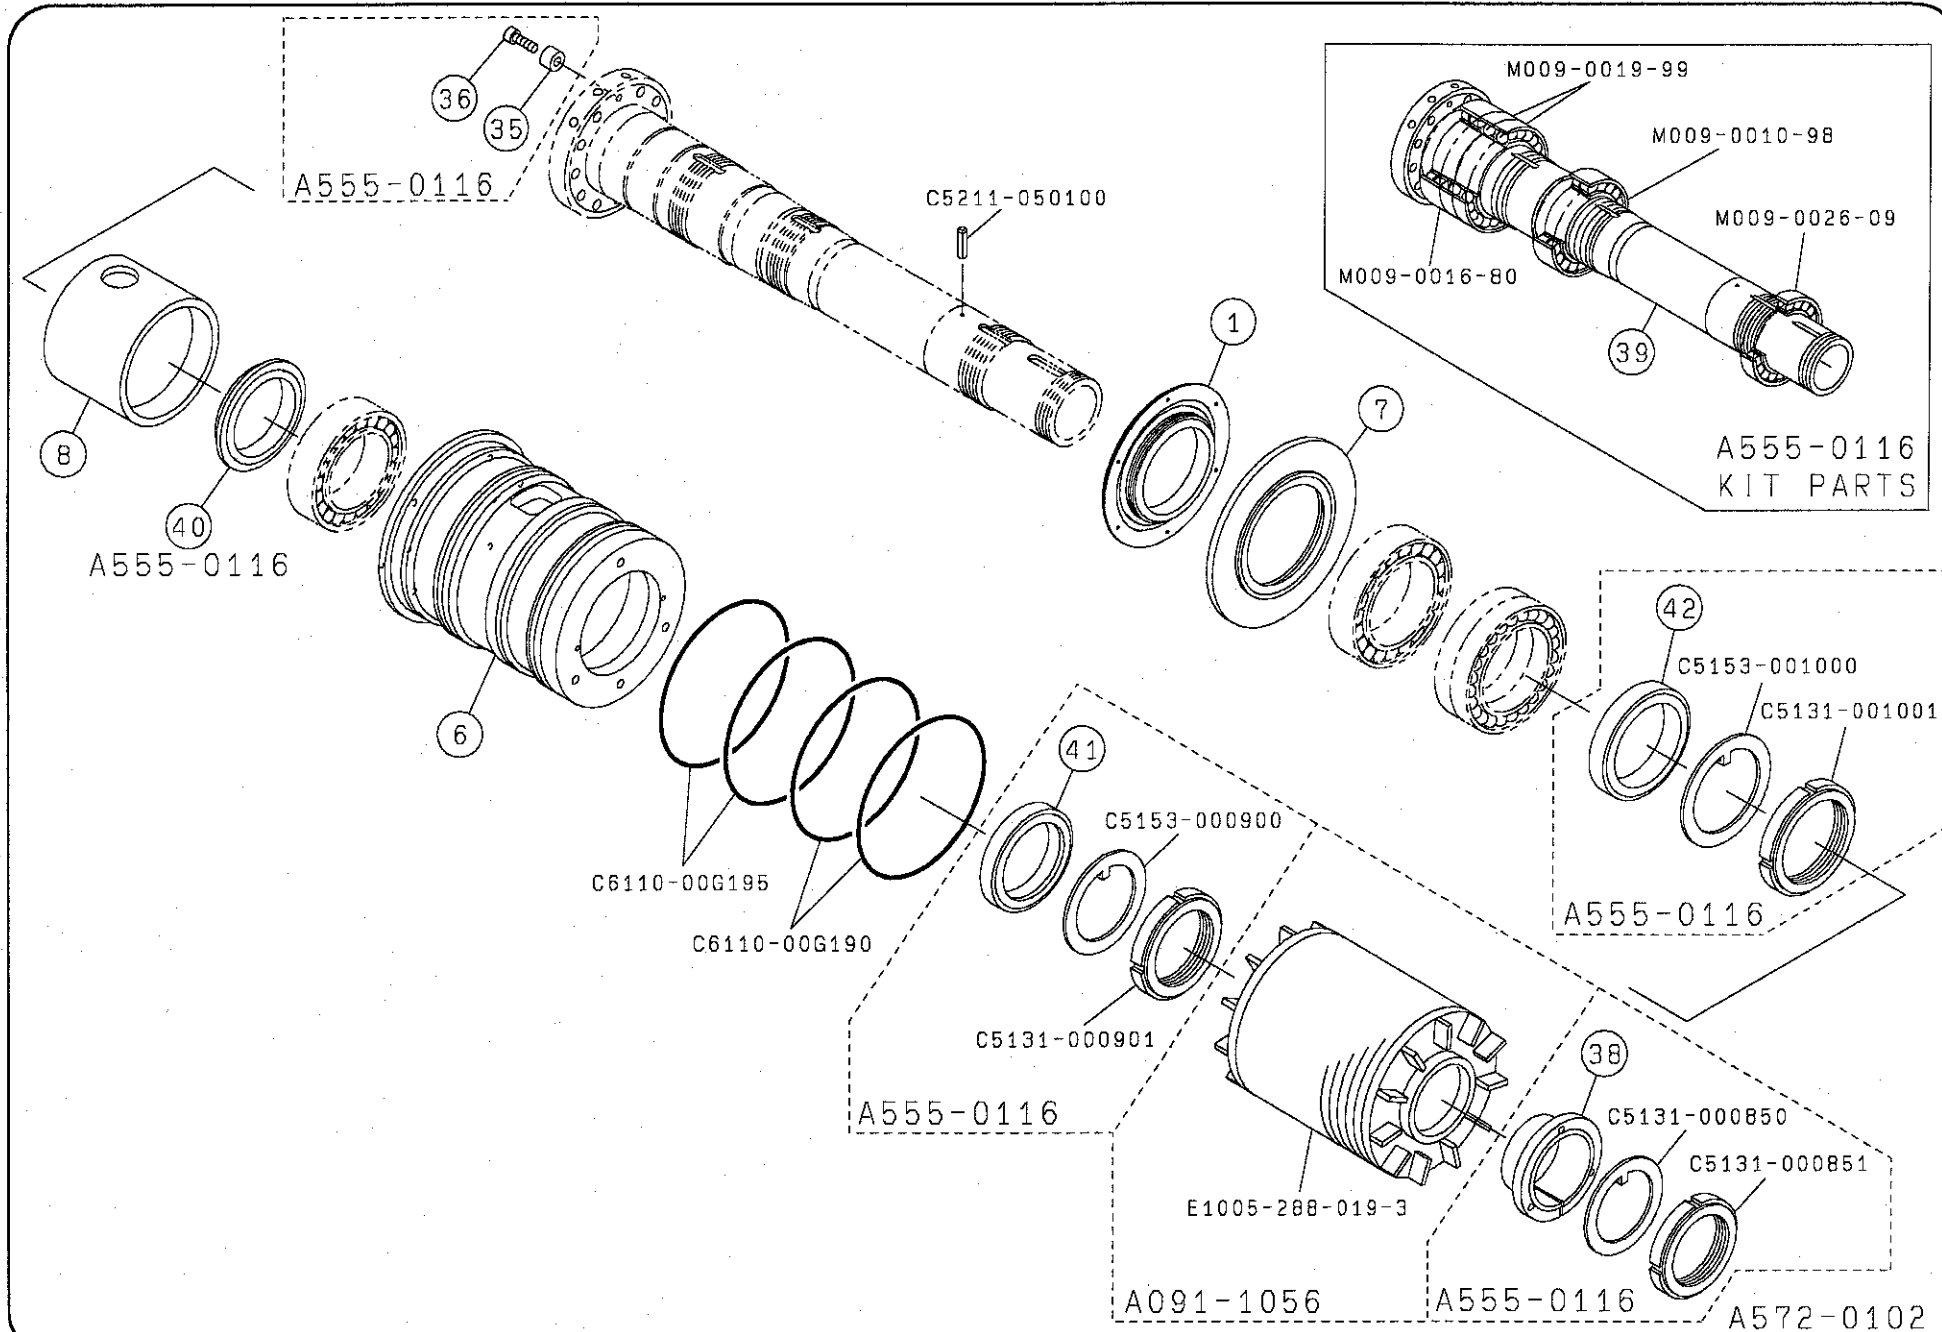

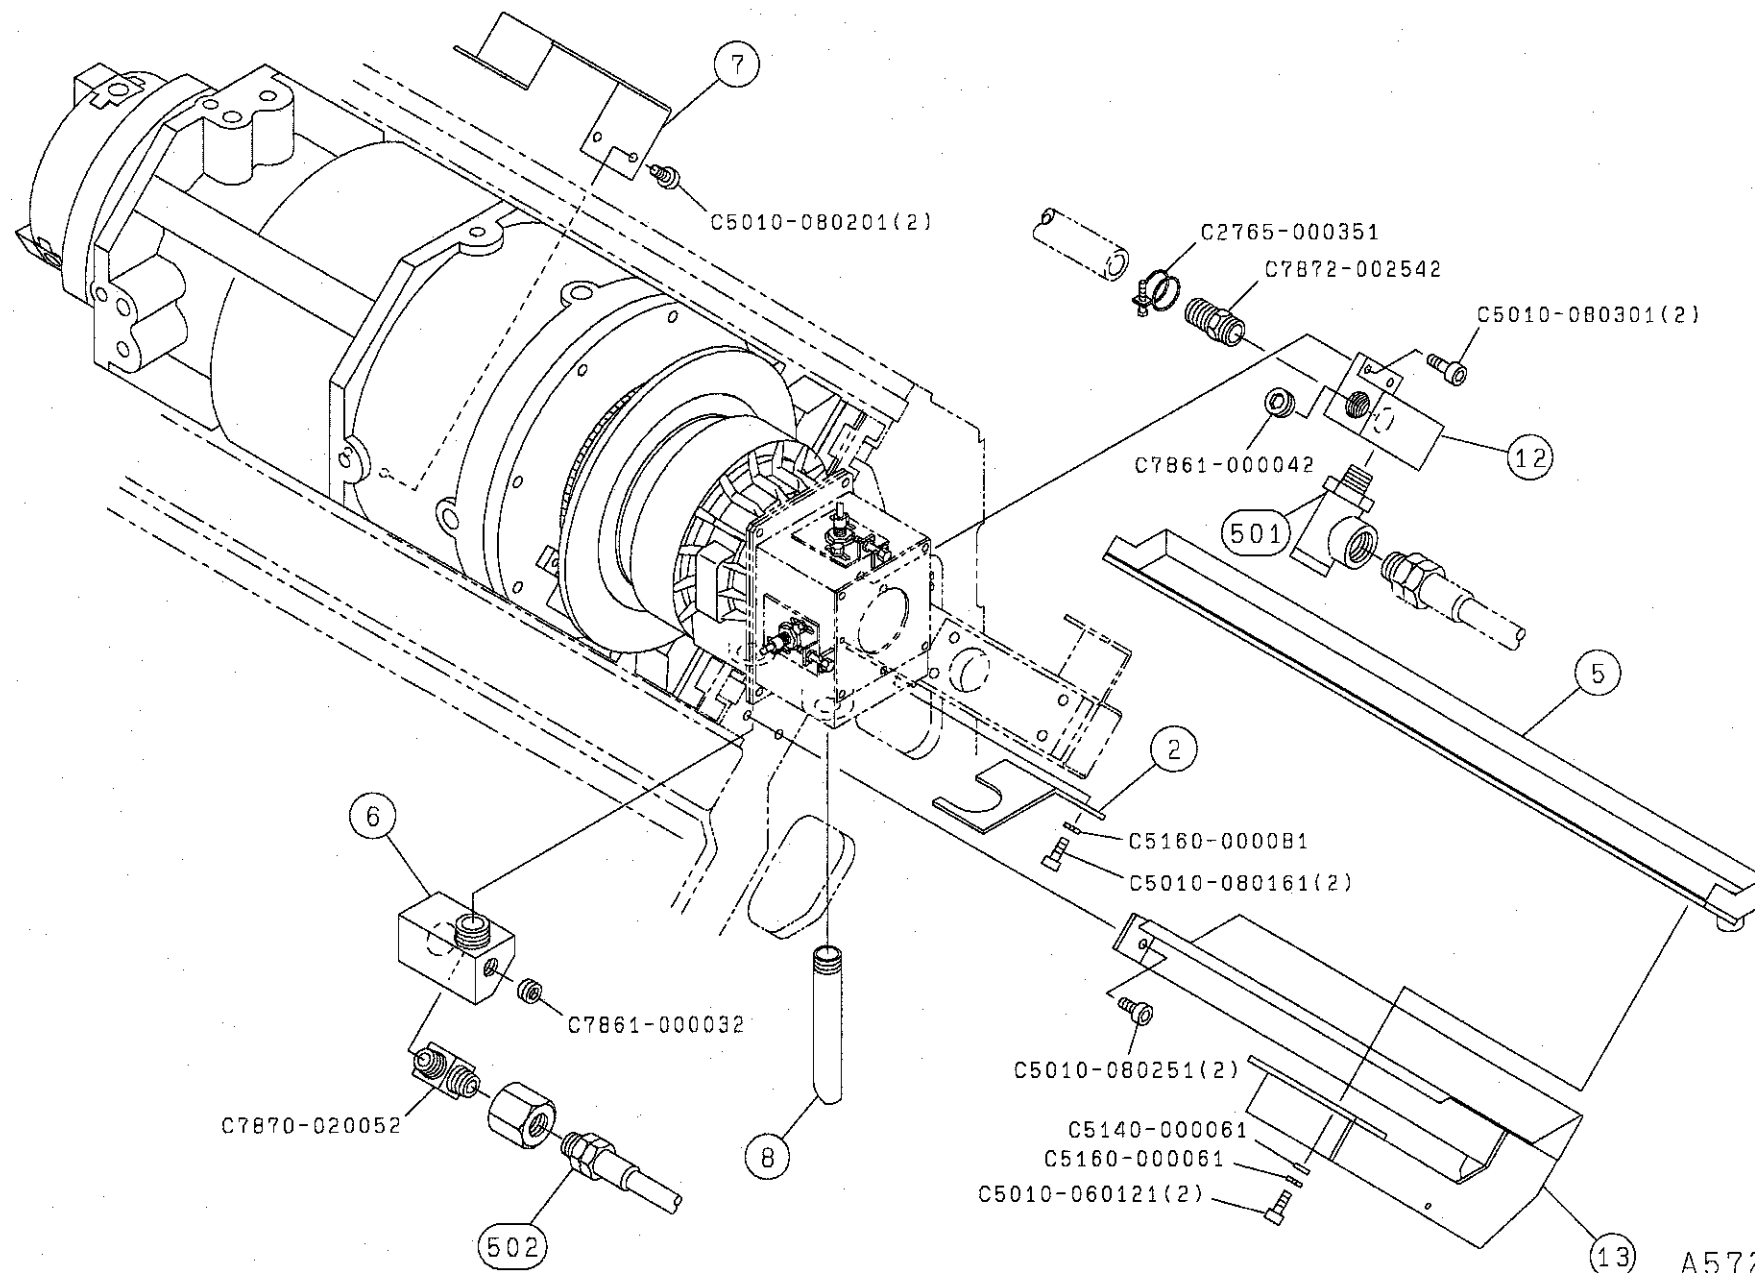



A572-9019
A572-3070

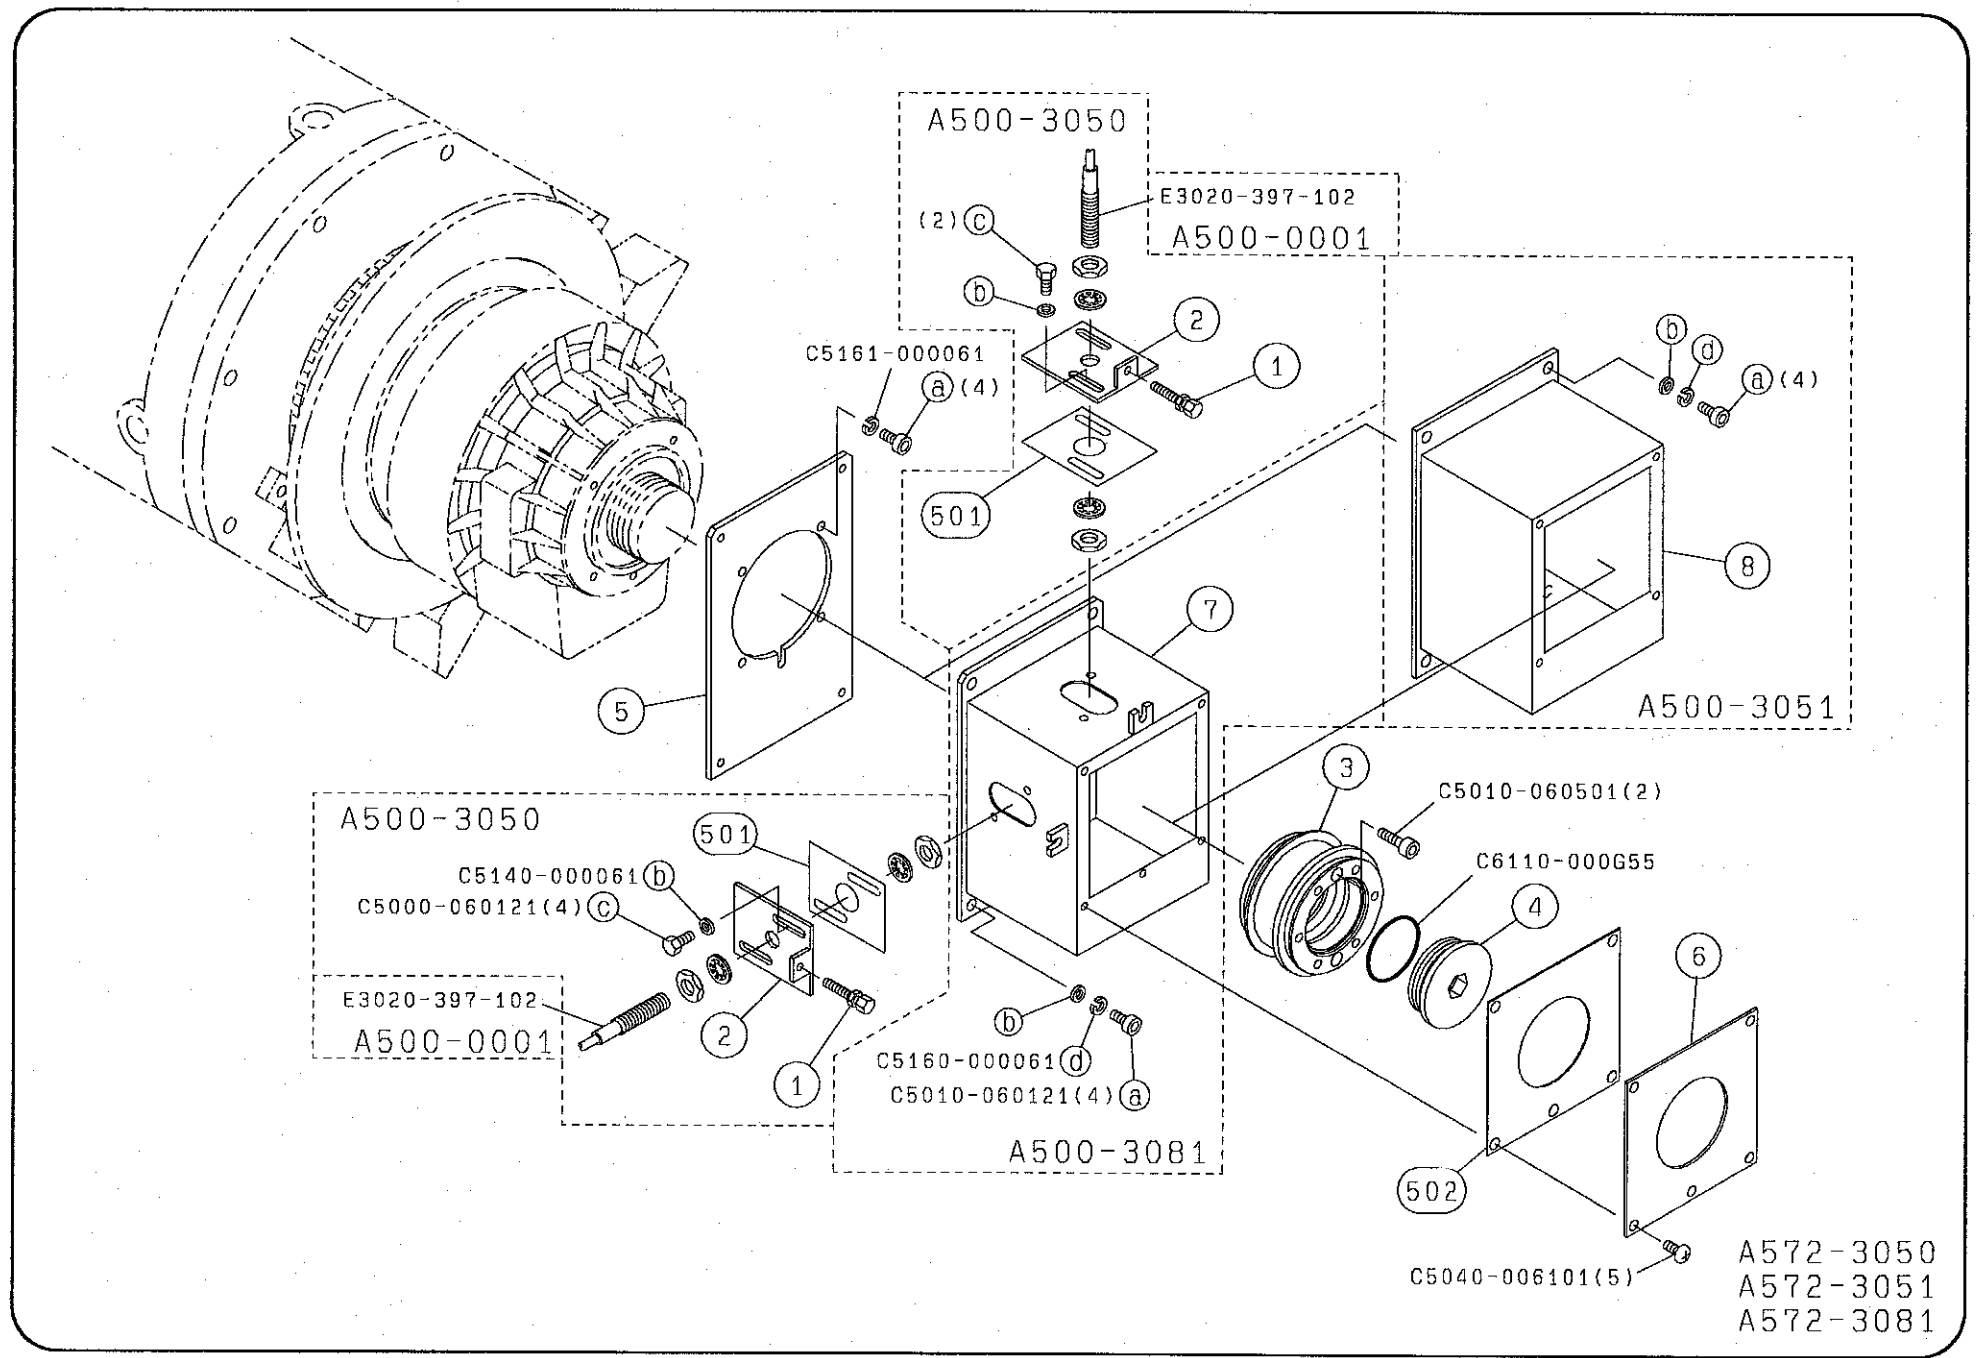


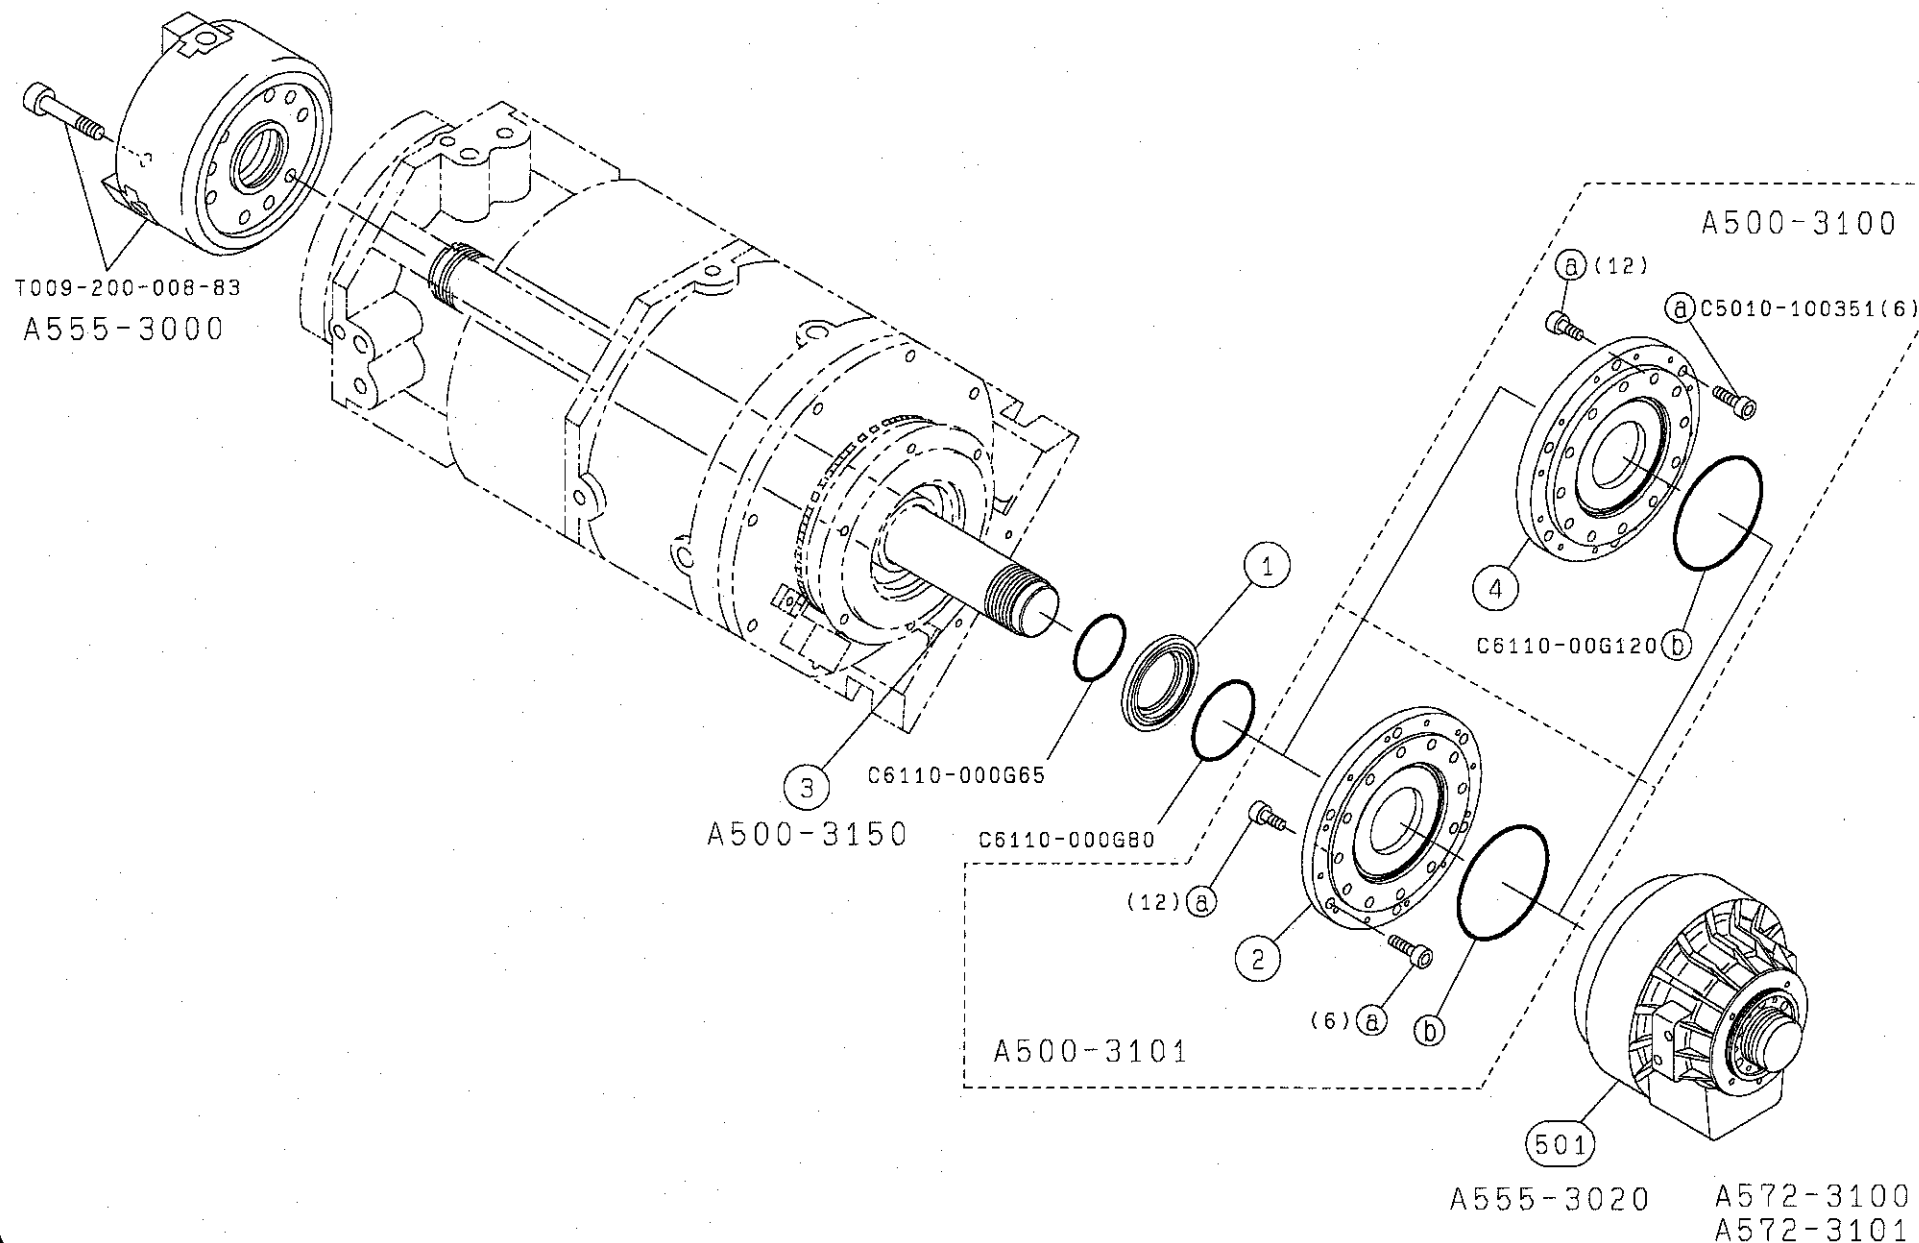


159

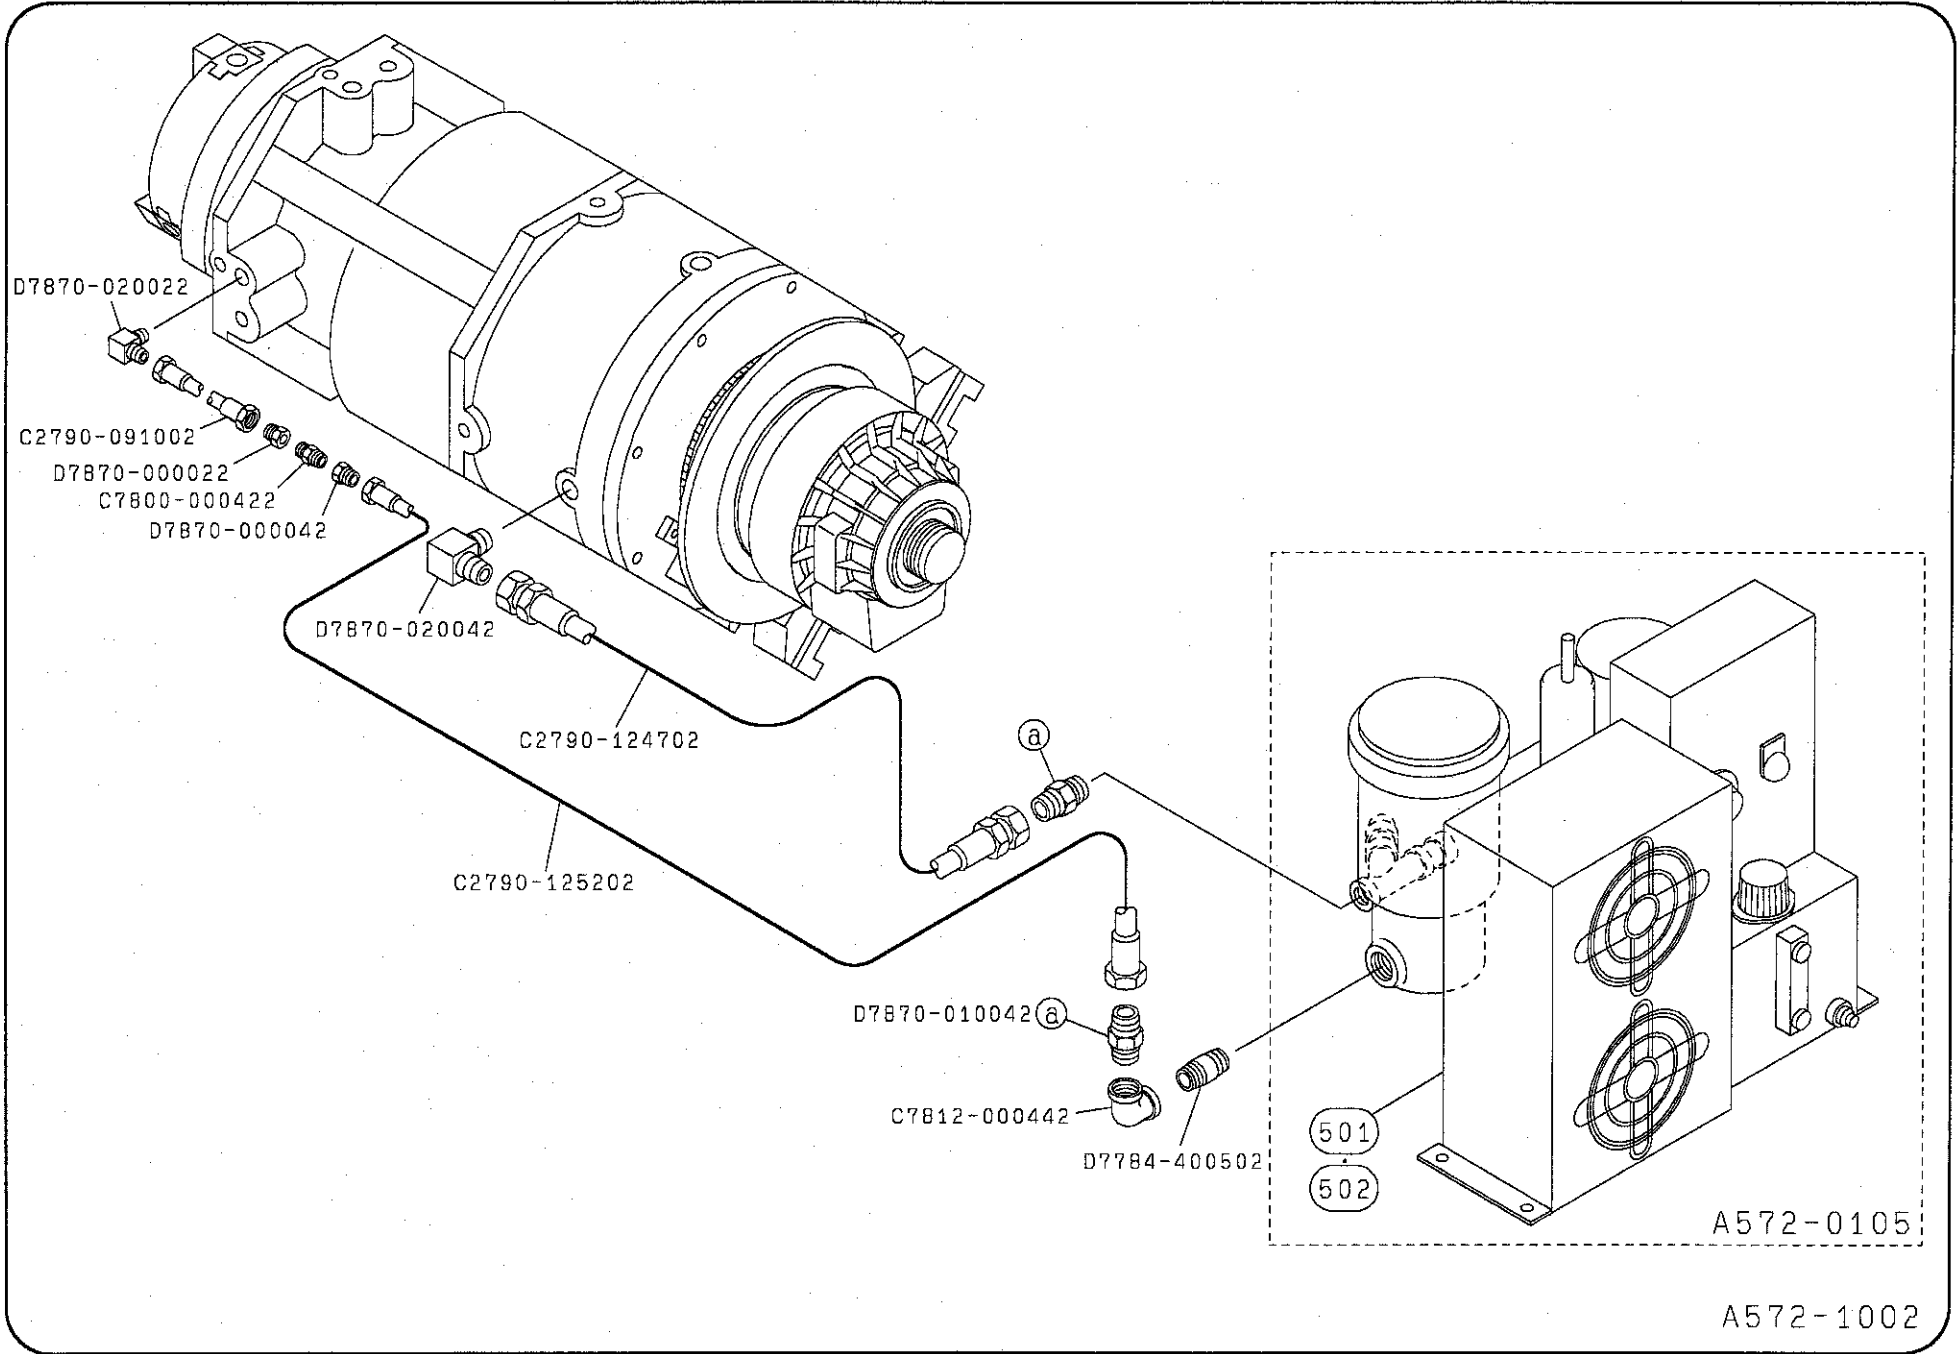


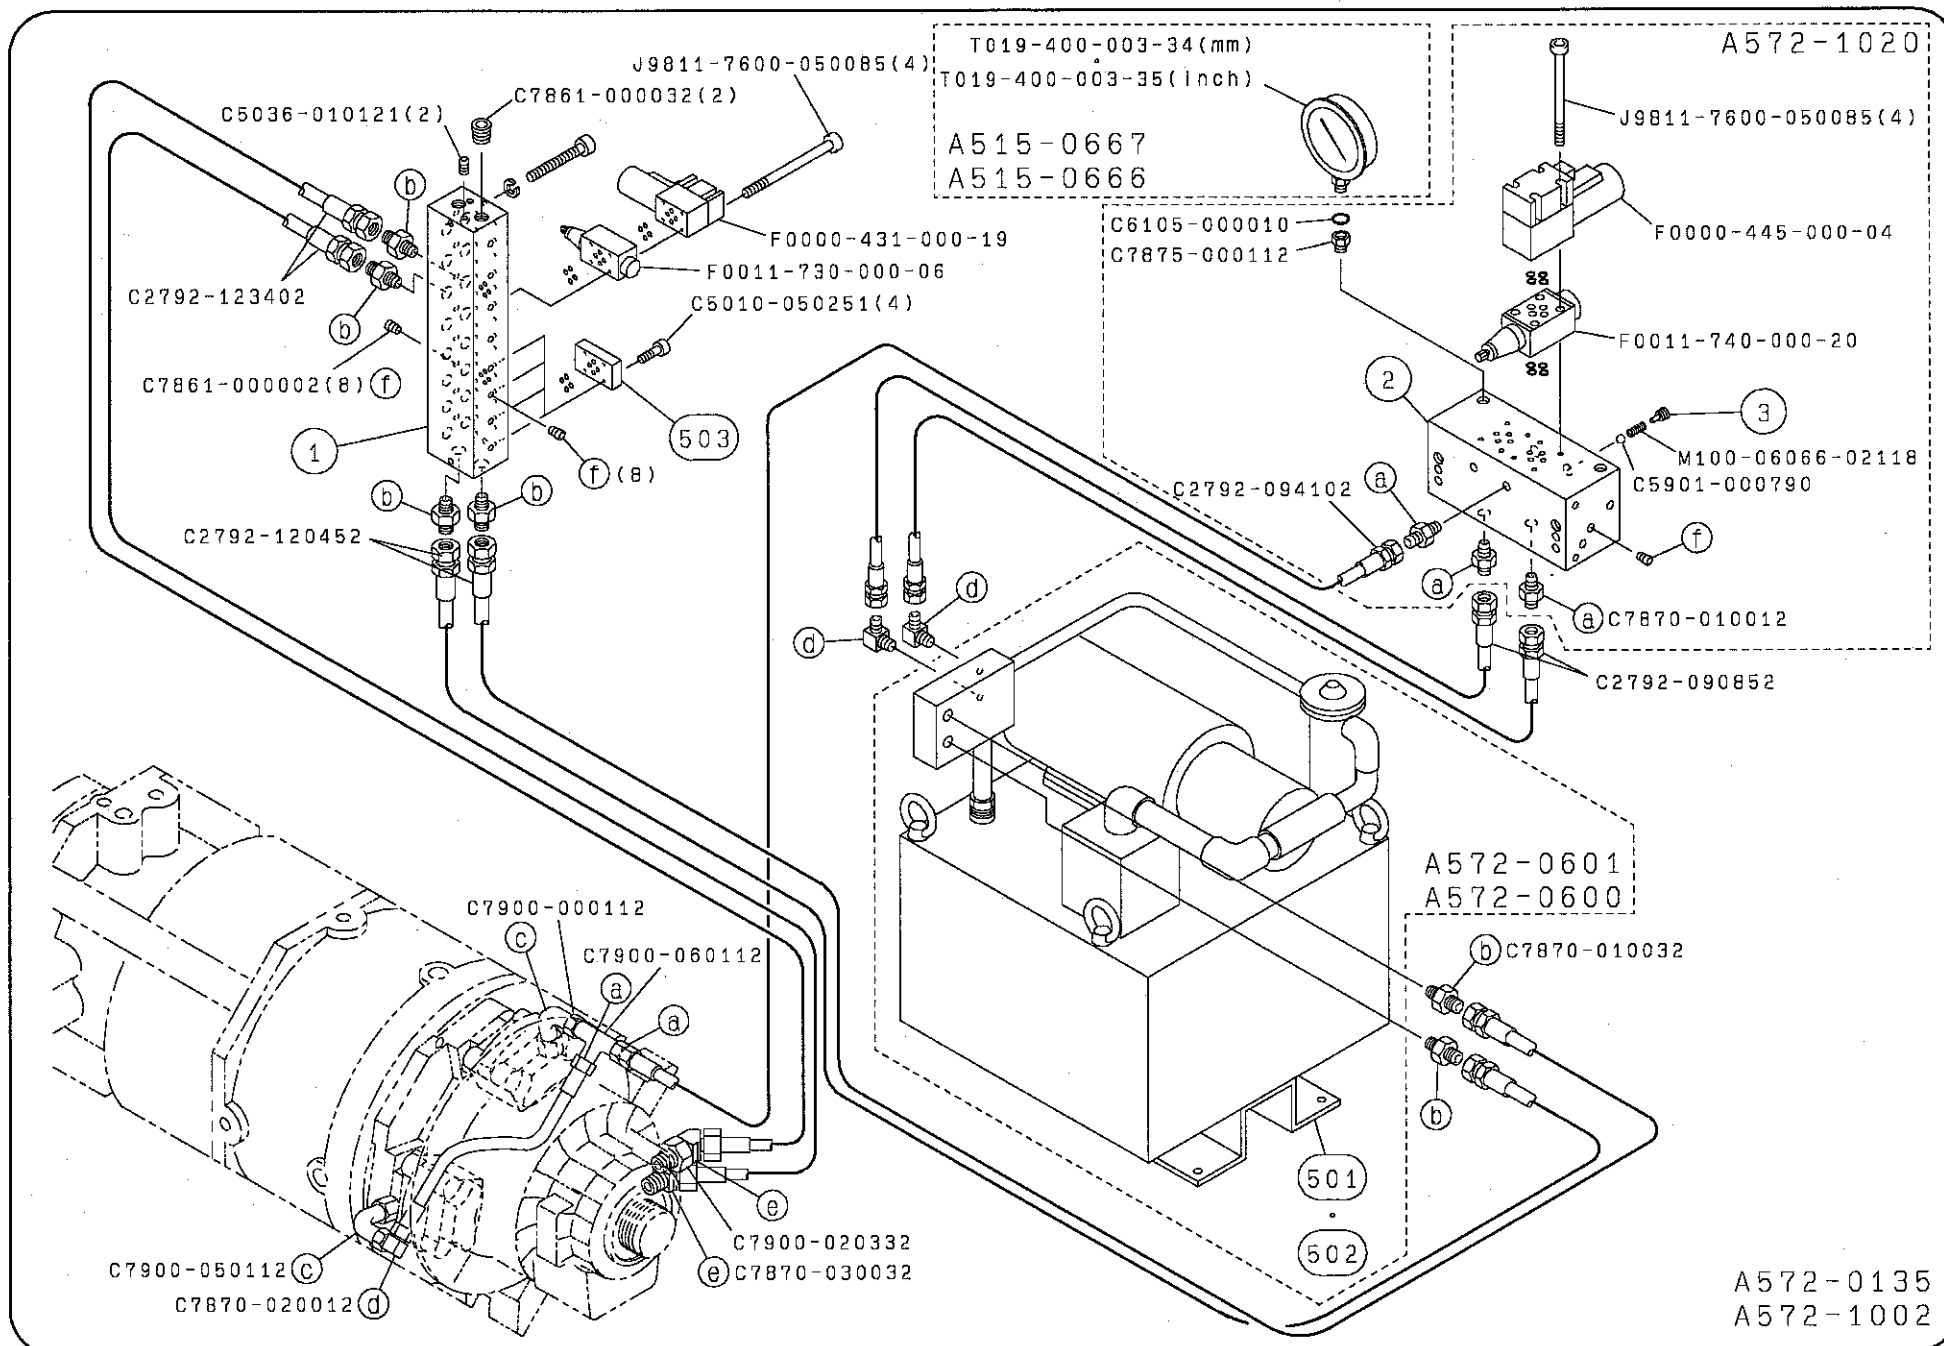



161

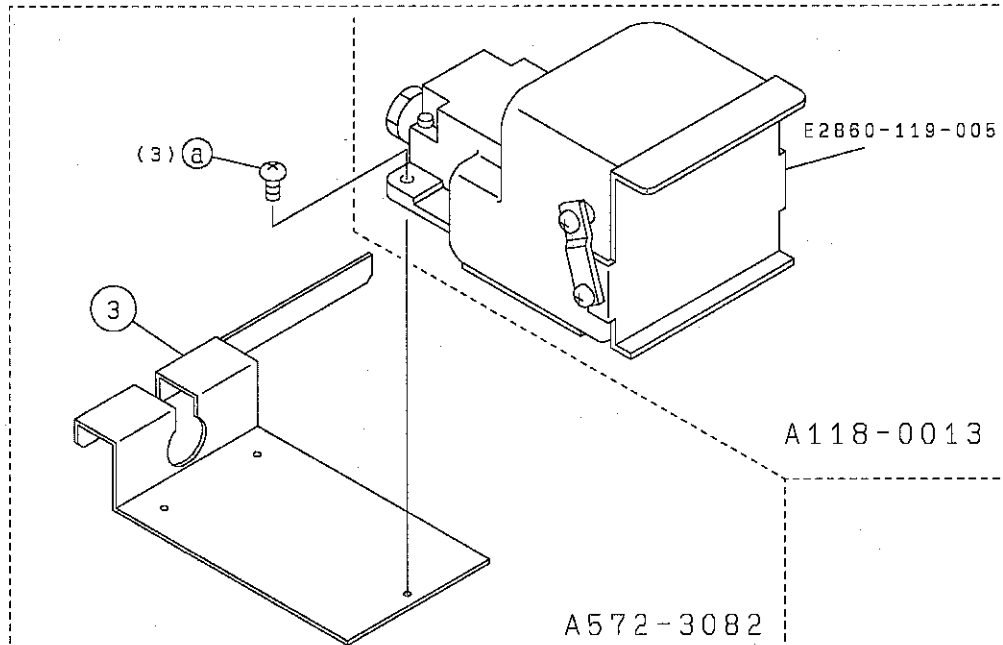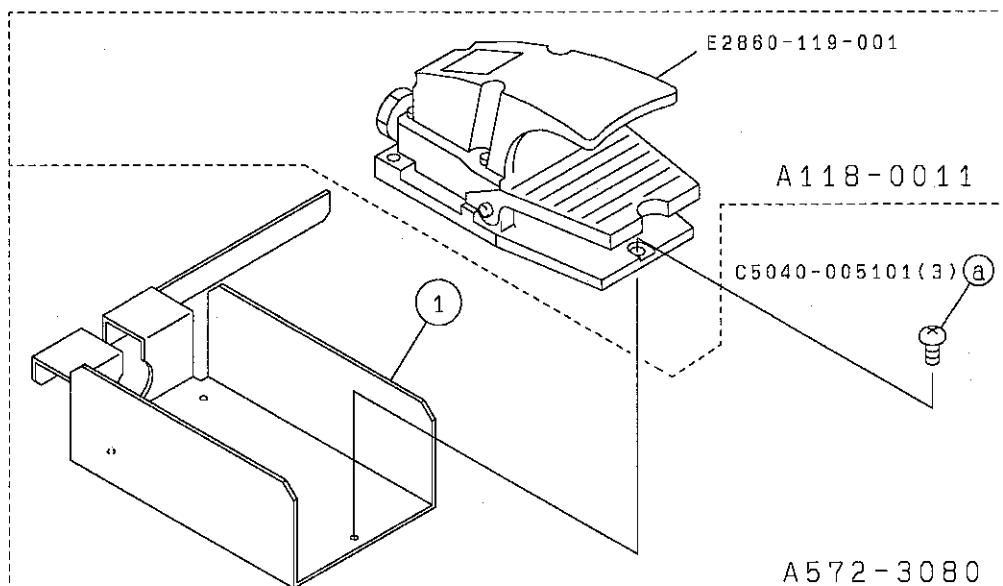

USA

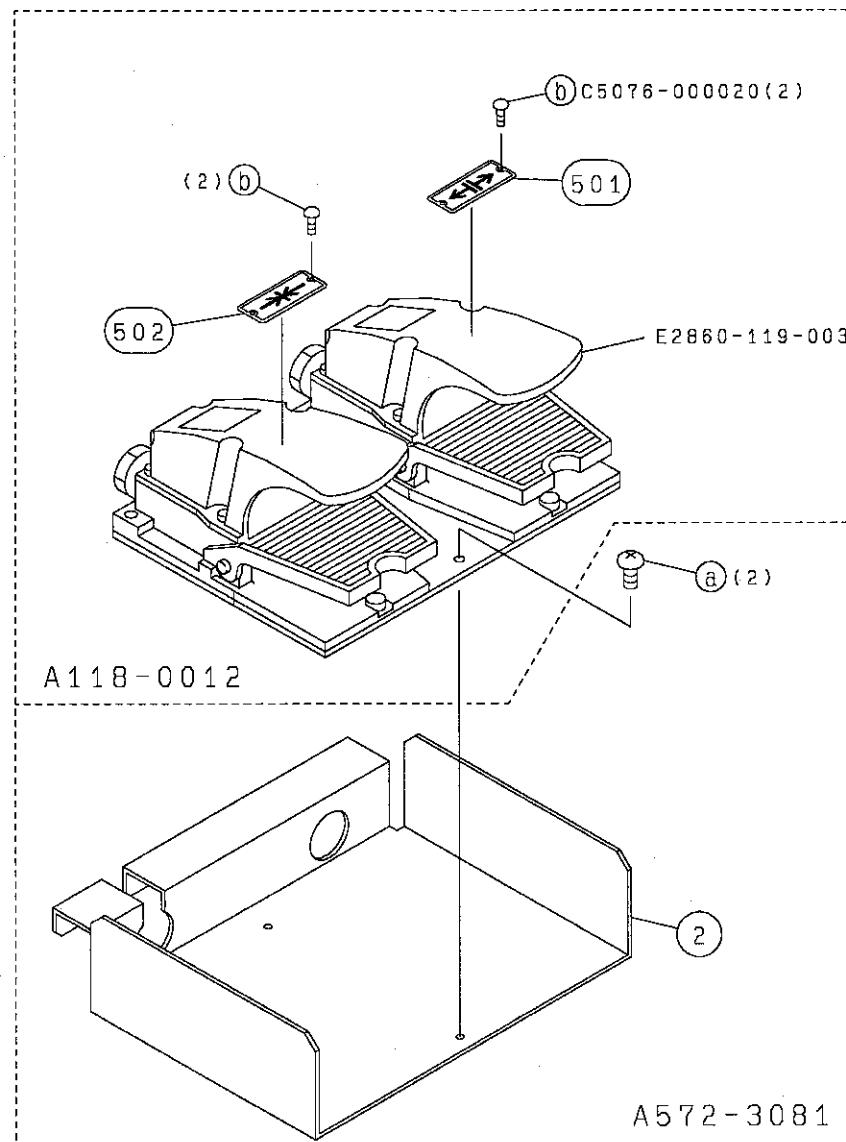


IEC

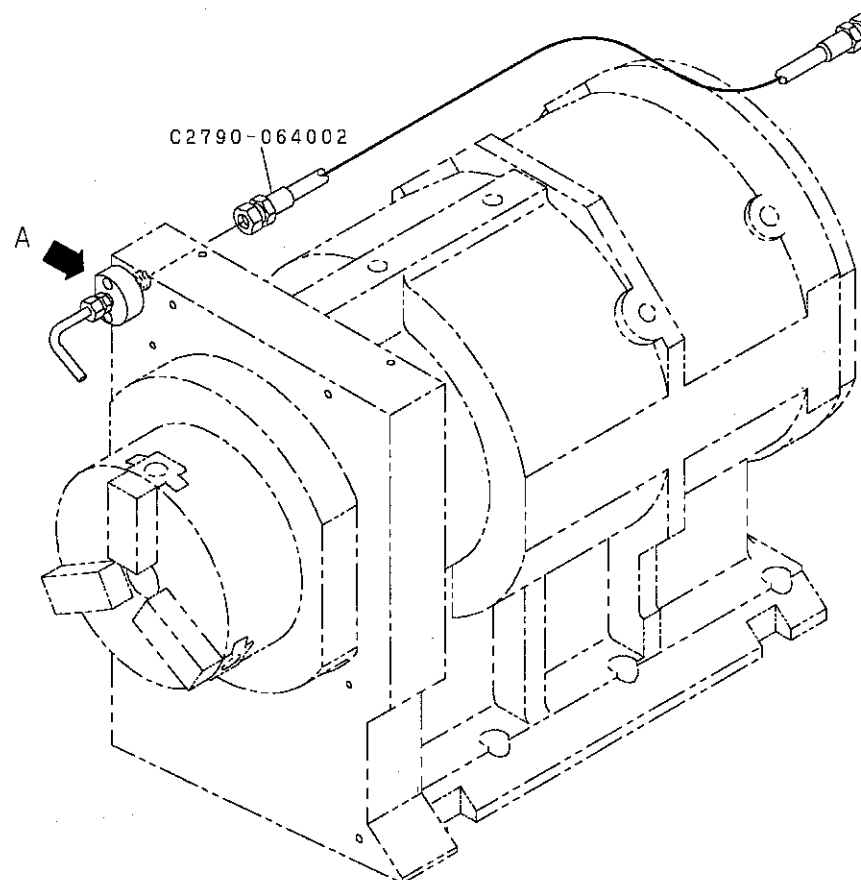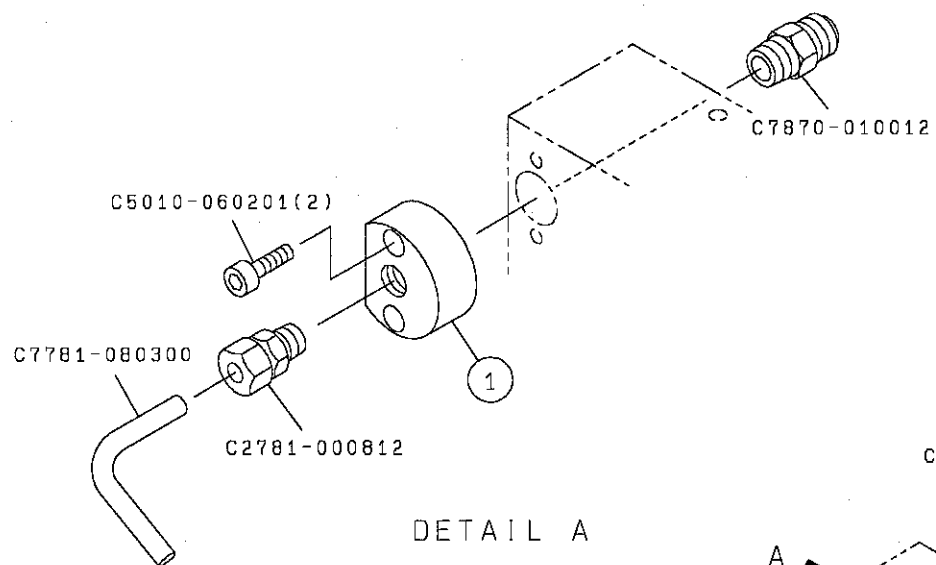

A572-0700

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
151 -015	572-0125-11	DOG	A572-0120	1	154 -035	123-3000-30-1	BLOCK	A555-0116	1
151 -016	572-0125-13	DOG	A572-0120	1	154 -036	515-0100-36-1	BOLT	A555-0116	1
151 -017	572-0125-17-02	SUPPORT	A572-0120	1	154 -038	555-0105-23	BUSH	A555-0116	1
151 -019	572-1010-04-02	SUPPORT	A572-0120	1	154 -039	555-0106-01-04	SPINDLE	A555-0116	1
151 -020	572-1010-05	RETAINER	A572-0120	1	154 -040	555-0106-02-01	COLLAR	A555-0116	1
151 -021	572-1010-33	PLATE	A572-0120	1	154 -041	555-0106-03-01	COLLAR	A555-0116	1
151 -044	572-0112-10-01	SUPPORT	A572-0200	1	154 -042	555-0106-04-01	COLLAR	A555-0106	1
151 -501	H9023-2600-01-4	TERMINAL BOX	A572-0120	1					
152 -011	572-0110-02-03	COVER	A572-0102	1	155 -002	572-0112-05-01	SUPPORT	A572-9019	1
152 -012	572-0110-03-05	COVER	A572-0102	1	155 -005	572-0600-13-03	DUCT	A572-3070	1
152 -031	112-0140-10	JOINT	A572-0135	2	155 -006	572-0600-14-03	BLOCK	A572-3070	1
152 -032	555-0106-06-02	PLATE	A572-0135	1	155 -007	572-0600-15	SUPPORT	A572-3070	1
152 -033	555-0110-10	HOLDER	A572-0135	4	155 -008	572-0600-20	PIPE, gas	A572-3070	1
152 -034	572-0110-01-03	SUPPORT	A572-0135	1	155 -012	572-0610-16	BLOCK	A572-3070	1
152 -504	H1011-0000-43	CARRIPER ASSY	A572-0135	2	155 -013	572-0610-17-01	SUPPORT	A572-3070	1
					155 -501	H0014-0004-78	JOINT, swivel	A572-3070	1
					155 -502	H0027-0008-54	HOSE	A572-3070	1
153 -002	555-0100-14-01	COLLAR	A572-0102	1					
153 -003	555-0105-06-03	FLANGE	A572-0102	1	156 -001	555-3005-12	BOLT	A572-3050	2
153 -004	572-0120-03-01	LABYRINTH	A572-0102	1	156 -002	555-3005-13-01	PLATE	A572-3050	2
153 -005	555-0101-29-05	BLOCK	A572-0102	1	156 -003	555-3005-14-02	ADAPTER	A572-3051	1
153 -009	572-0100-06-03	CAP	A572-0102	1	156 -003	555-3005-14-02	ADAPTER	A572-3050	1
153 -010	572-0100-07-08	HOUSING	A572-0102	1	156 -004	555-3005-24	CAP	A572-3051	1
153 -013	572-0120-01-01	HEADSTOCK	A572-0102	1	156 -004	555-3005-24	CAP	A572-3050	1
153 -014	572-0120-02-01	CAP	A572-0102	1	156 -005	555-3005-25	PLATE	A572-3051	1
153 -037	555-0105-13-01	NUT	A555-0116	1	156 -005	555-3005-25	PLATE	A572-3050	1
					156 -006	555-3005-26-01	PLATE	A572-3051	1
154 -001	515-0100-23-7	LABYRINTH	A572-0102	1	156 -006	555-3005-26-01	PLATE	A572-3050	1
154 -006	555-0105-02-03	HOUSING	A572-0102	1	156 -007	555-3005-31	BOX	A500-3081	1
154 -007	555-0105-03-01	LABYRINTH	A572-0102	1	156 -008	555-3005-28	BOX	A572-3051	1
154 -008	555-0106-05-02	COLLAR	A572-0102	1	156 -501	H1020-1126-20	PACKING	A572-3050	2


SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
156 -502	H1020-1129-92-1	PLATE	A572-3050	1					
156 -502	H1020-1129-92-1	PLATE	A572-3051	1					
157 -001	555-3005-19-02	COLLAR	A572-3100	1					
157 -001	555-3005-19-02	COLLAR	A572-3101	1					
157 -002	555-3007-03-01	ADAPTER	A572-3101	1					
157 -003	555-3005-17-03	PIPE	A500-3150	1					
157 -004	555-3007-02	ADAPTER	A500-3100	1					
157 -501	H0001-0004-74-01	CYLINDER, hydraulic	A572-3020	1					
158 -501	H0110-0002-31-1	OIL CONTROLLER	A555-0105	1					
158 -502	H0110-0002-42	OIL CONTROLLER	A555-0106	1					
159 -001	572-0610-04-03	MANIFOLD	A572-1002	1					
159 -002	572-0610-15-01	MANIFOLD	A572-1020	1					
159 -003	515-0120-52	PIN	A572-1020	1					
159 -501	H0130-0012-10-1	HYDRAULIC UNIT NA CHI (STD)	A572-0600	1					
159 -502	H0130-0012-11-1	HYDRAULIC UNIT NA CHI (IEC)	A572-0601	1					
159 -503	H0039-0000-67	PLATE	A572-1002	4					
160 -001	572-0801-10-01	SUPPORT	A572-3080	1					
160 -002	572-0801-27-01	SUPPORT	A572-3081	1					
160 -003	572-0801-29-01	SUPPORT	A572-3082	1					
160 -501	H1040-1021-98	NAMEPLATE	A118-0012	1					
160 -502	H1040-1021-99	NAMEPLATE	A118-0012	1					
161 -001	572-0700-01	FLANGE	A572-0700	1					

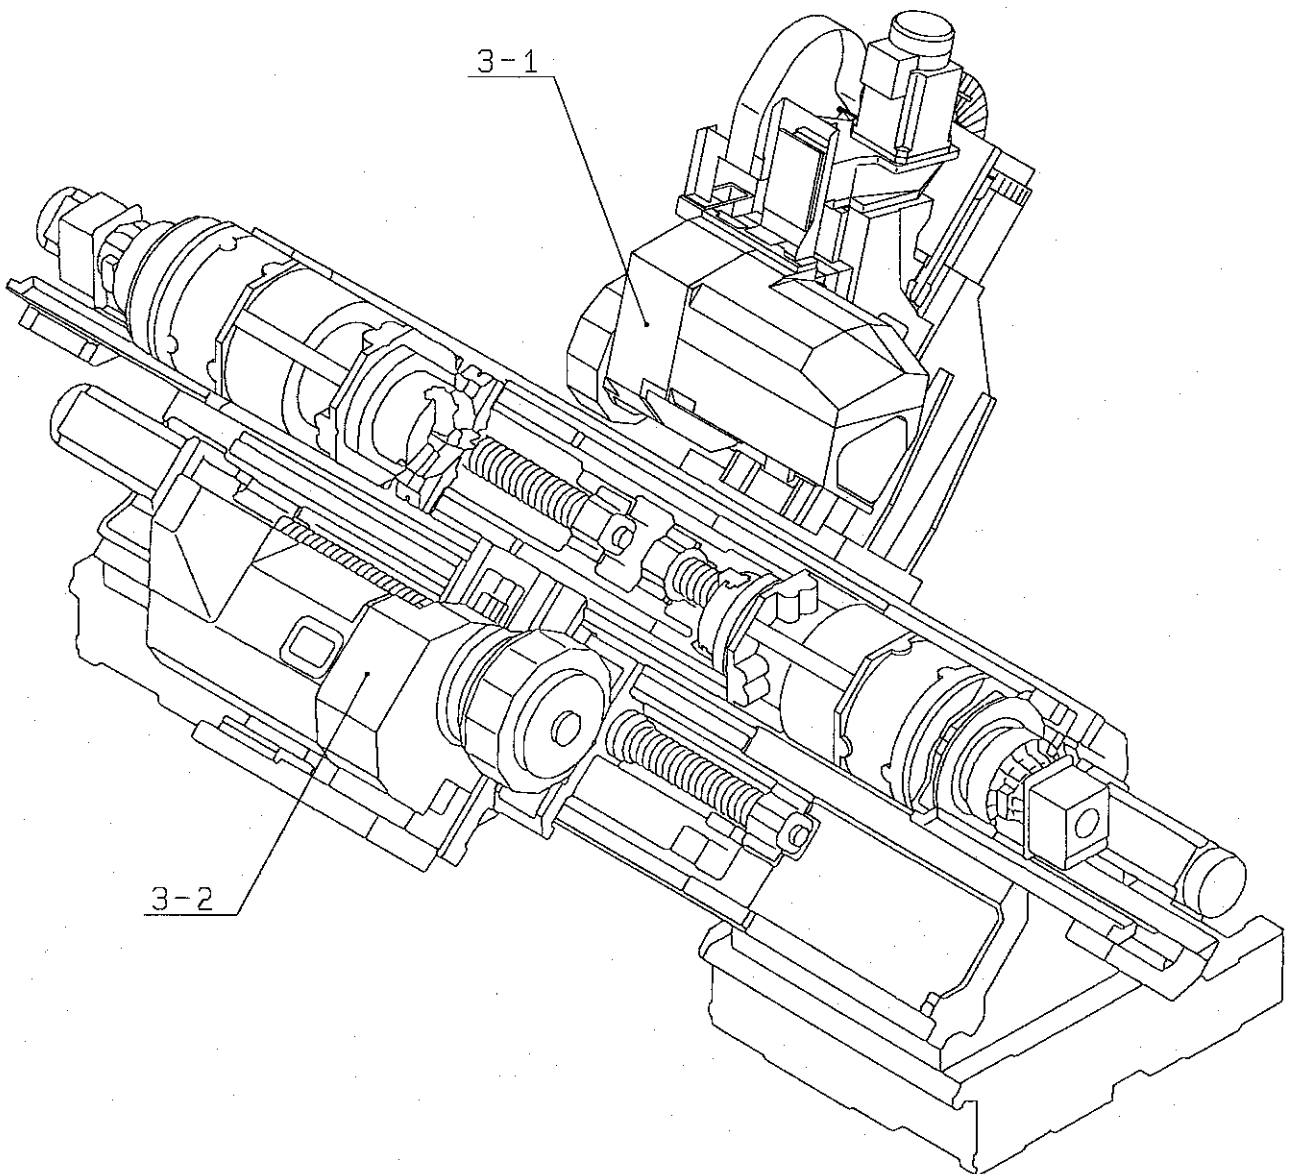

(3) TURRET & X-AXIS GROUP

~ C O N T E N T S ~


GROUP NAME		PAGE
3-1	UPPER TURRET & X-AXIS GROUP	203
3-2	LOWER TURRET & X-AXIS GROUP	251

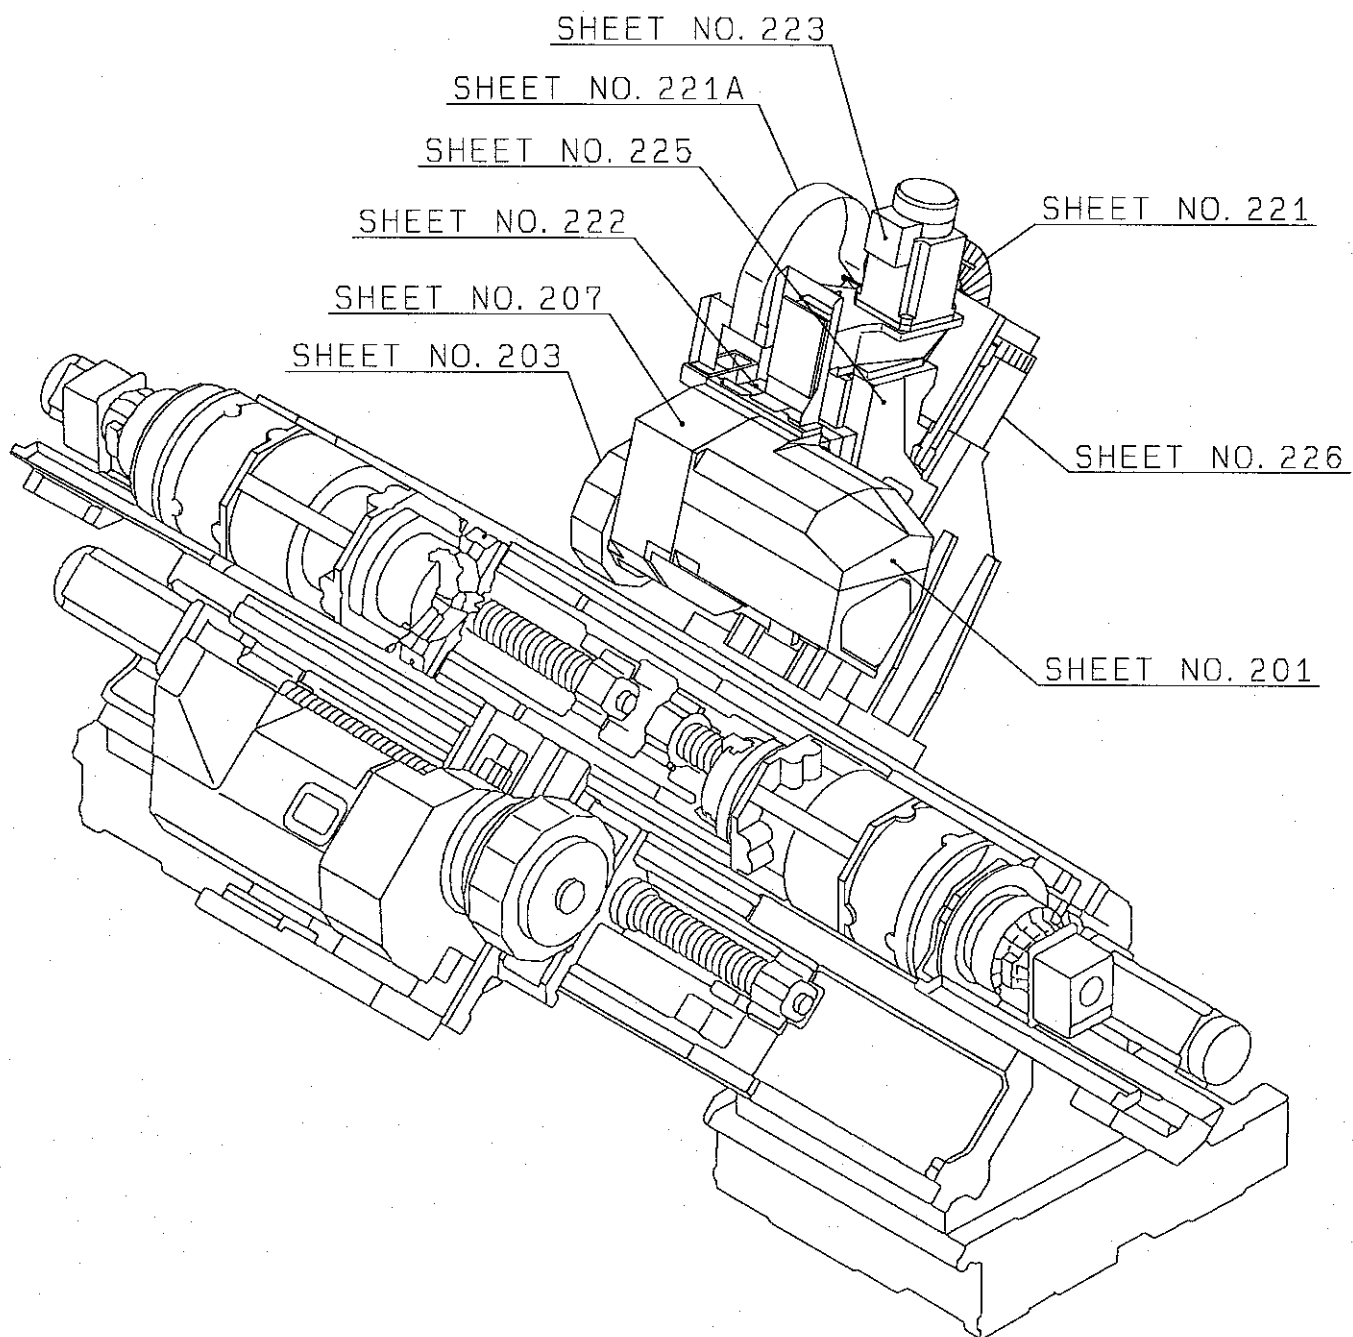

(3-1) UPPER TURRET & X-AXIS GROUP


~ C O N T E N T S ~

SHEET NO.	ASSEMBLY NAME	PAGE
201	UPPER INDEX INSTALLATION, V12	204
202	INDEX TURRET, V12 (1)	205
203	INDEX TURRET, V12 (2)	206
204	INDEX TURRET, V12 (3)	207
205	TURRET SHAFT, V12 (1)	208
206	TURRET SHAFT, V12 (2)	209
207	TURRET SHAFT, V12 (3)	210
208	INDEX DRIVE DEVICE, V12	211
209	M-AXIS DRIVE DEVICE, V12	212
210	HYDRAULIC SYSTEM	213
221	XA-AXIS CABLE DUCT	214
221A	YS-AXIS CABLE DUCT	214A
222	CROSS-SLIDE INSTALLATION	215
223	YS-AXIS DRIVE DEVICE	216
224	YS-AXIS BALL-SCREW	217
225	YS-SADDLE INSTALLATION	218
226	XA-AXIS DRIVE DEVICE	219
227	XA-AXIS BALL-SCREW	220
228	UPPER SADDLE LUBRICATION SYSTEM	221
232	TOOLING SYSTEM, V12 (1)	223
233	TOOLING SYSTEM, V12 (2)	224
234	TOOLING SYSTEM, V12 (3)	225
I	INDEX NO. LIST	226

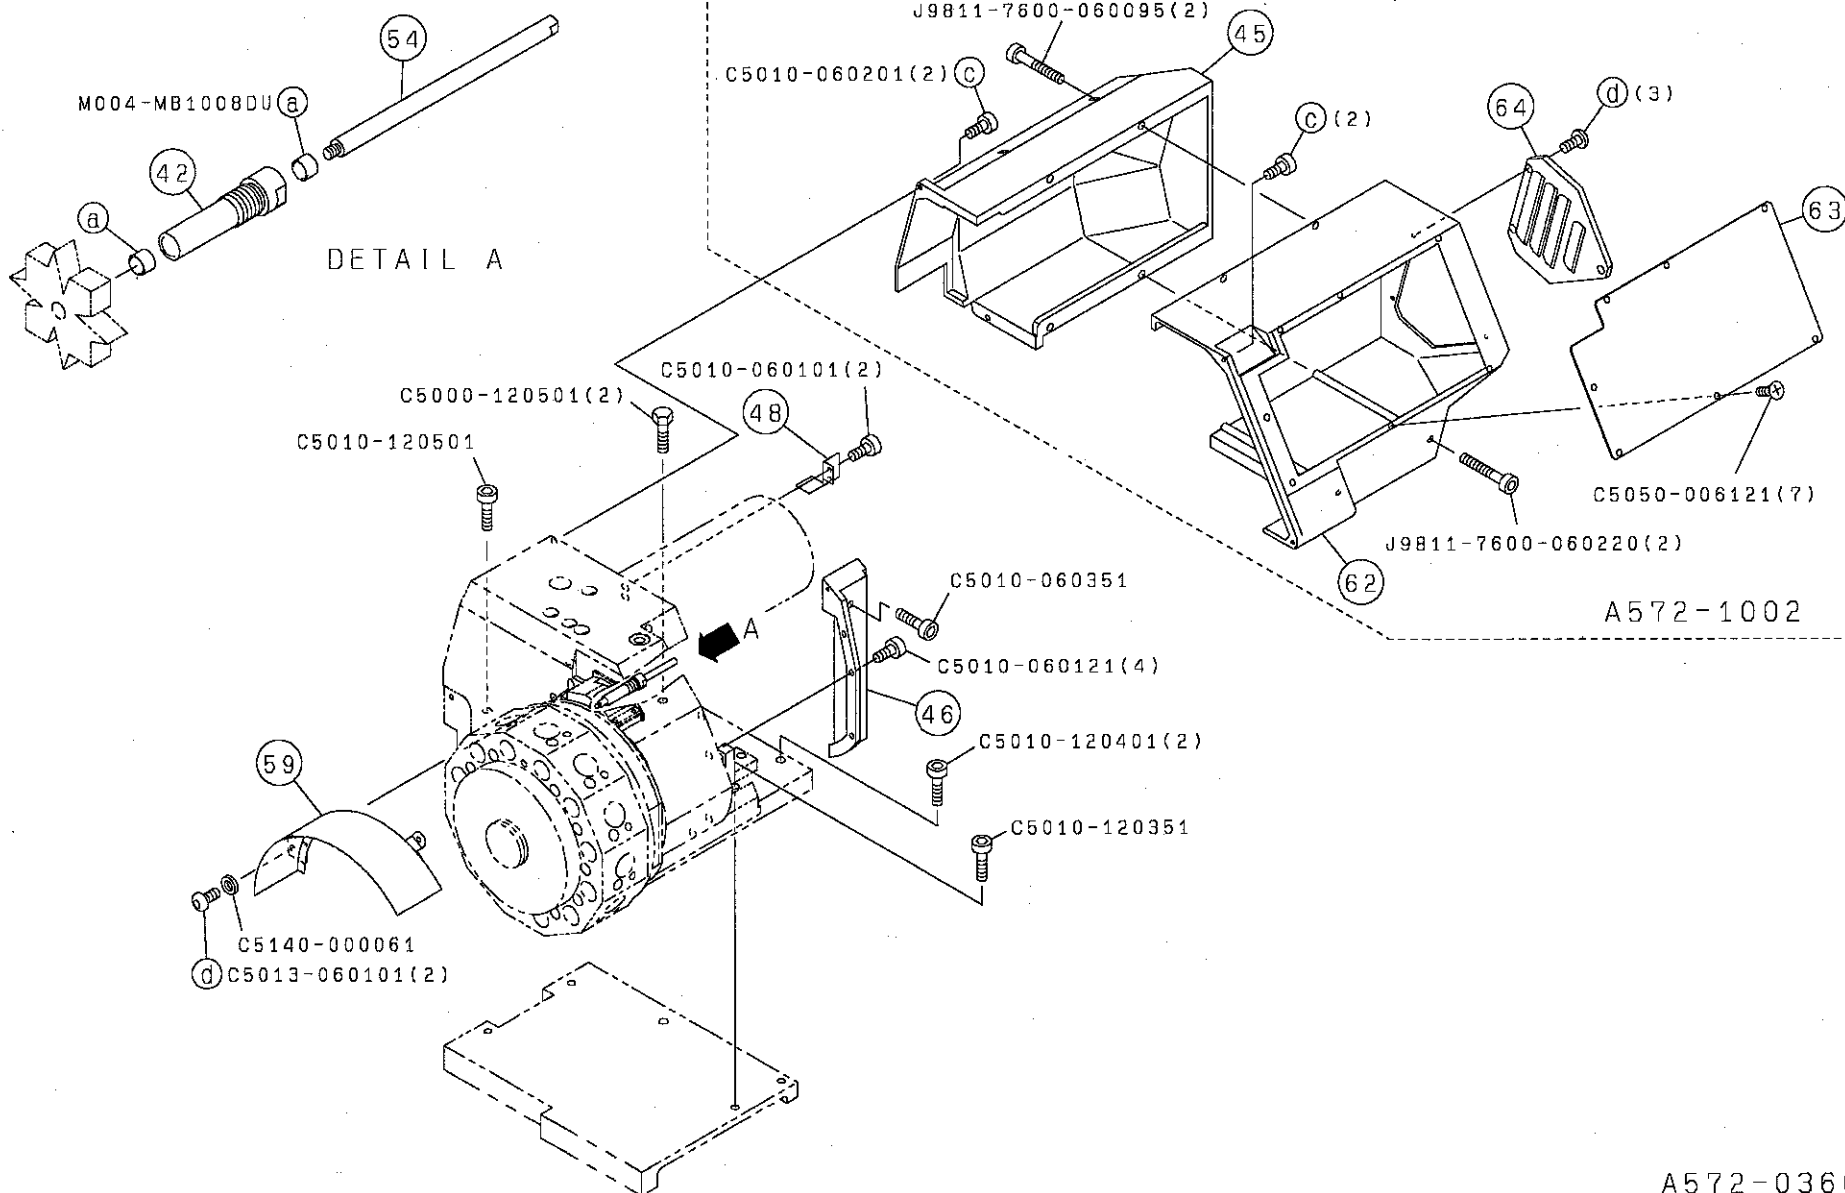



A572-0360

205

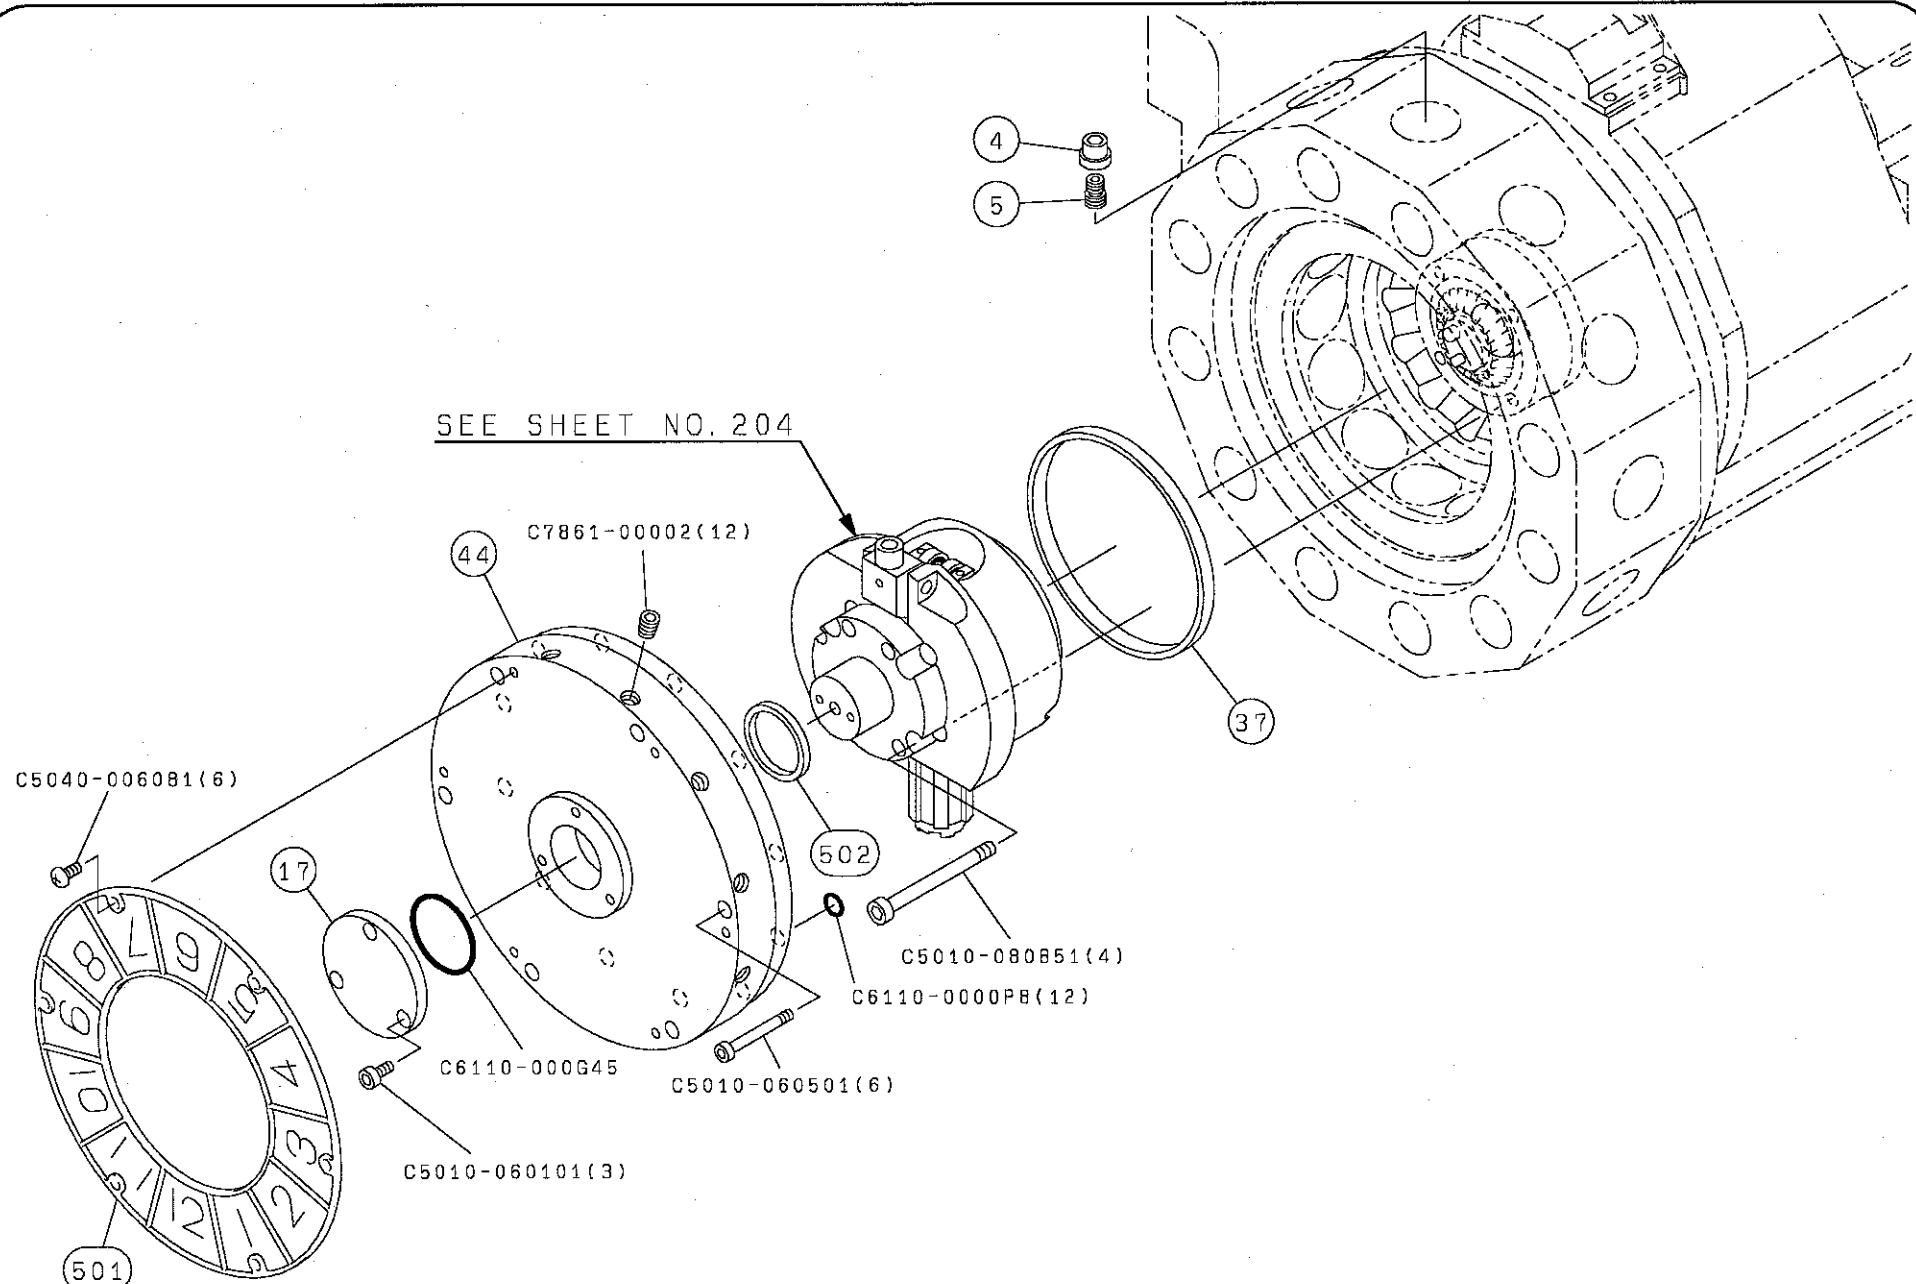


A572-0360

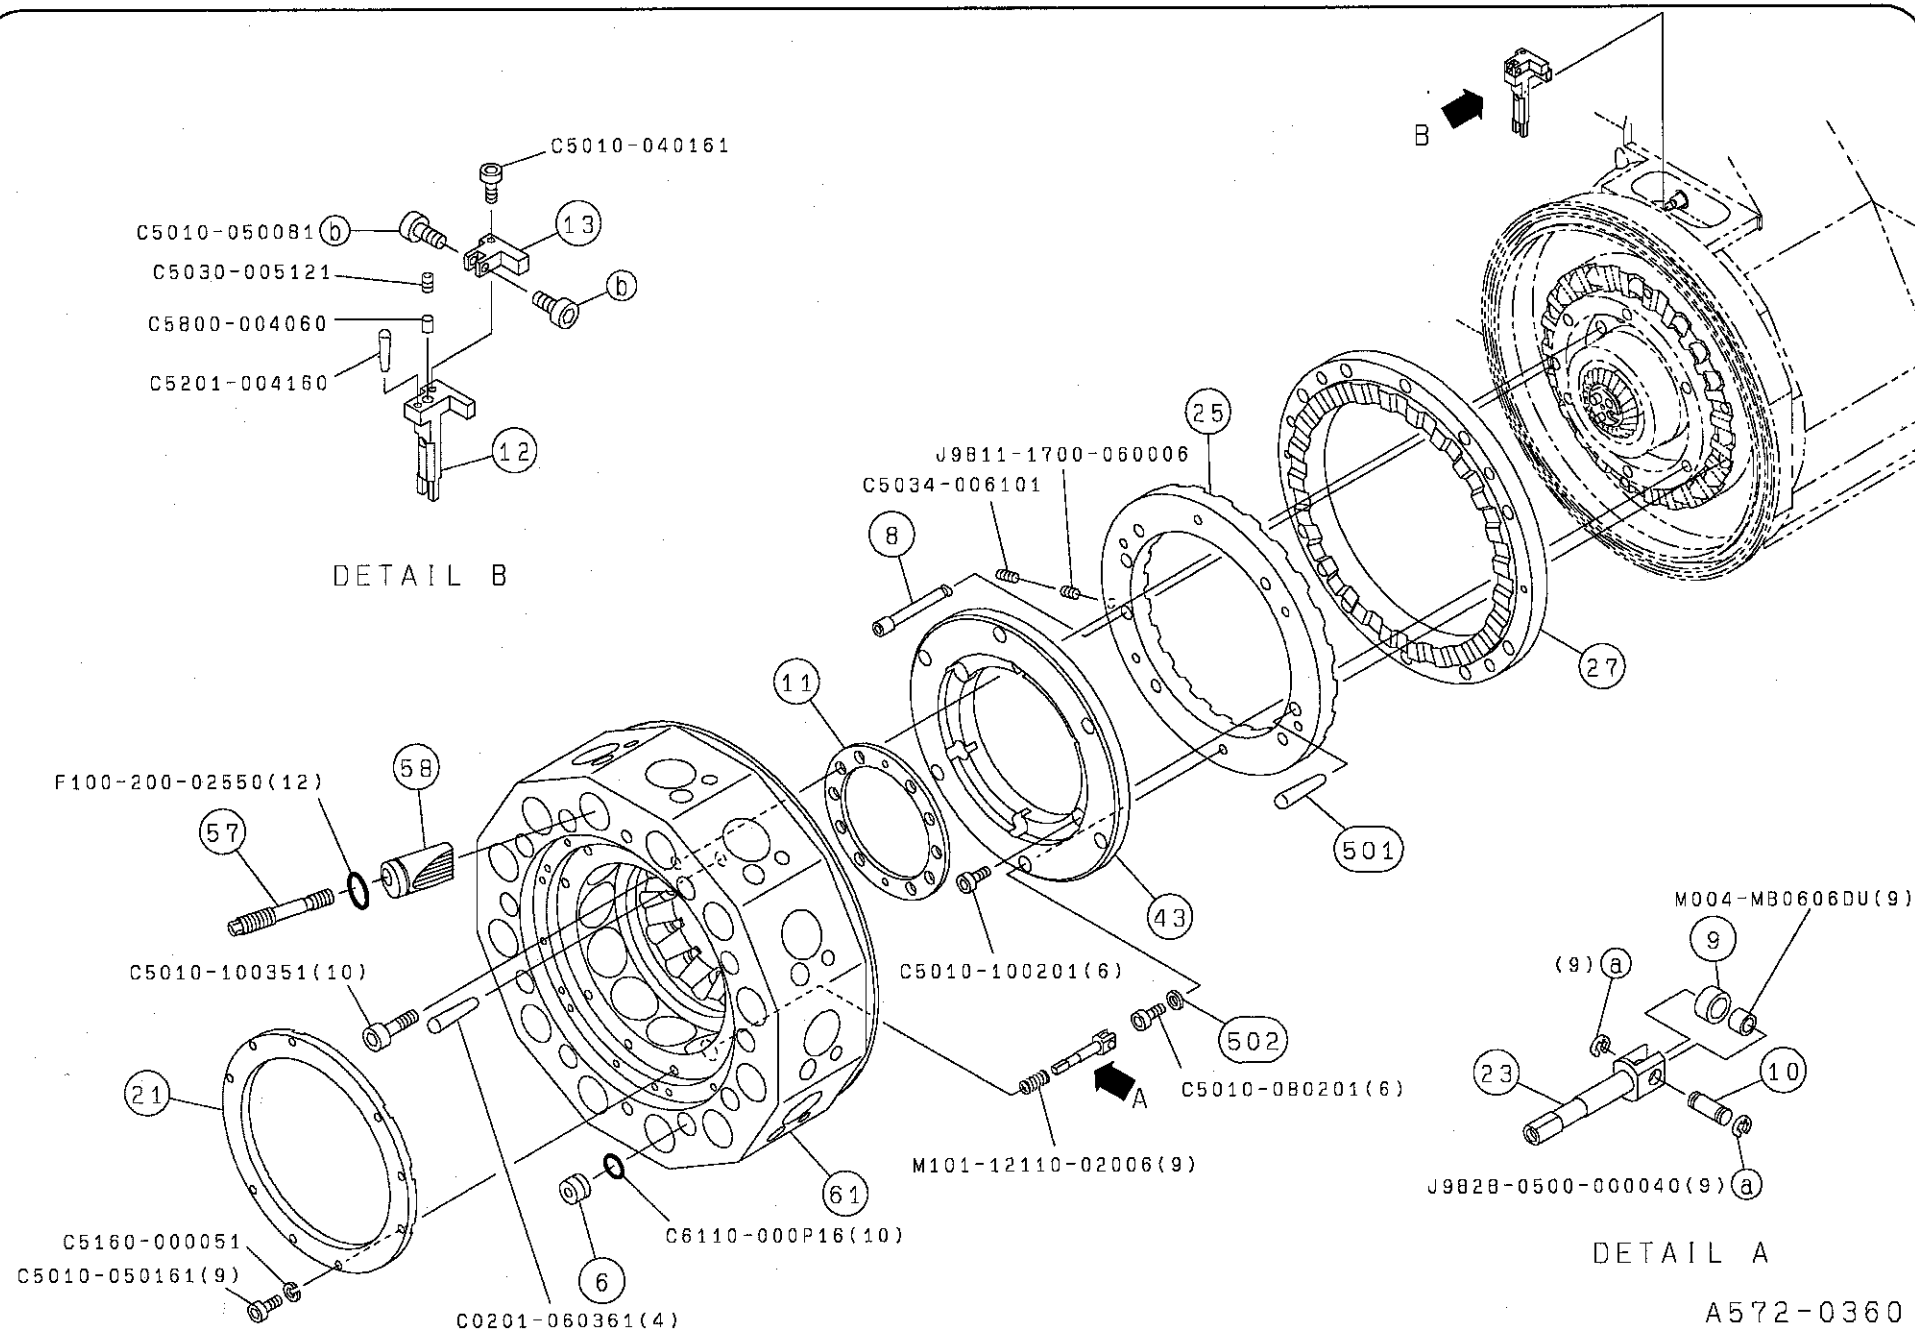

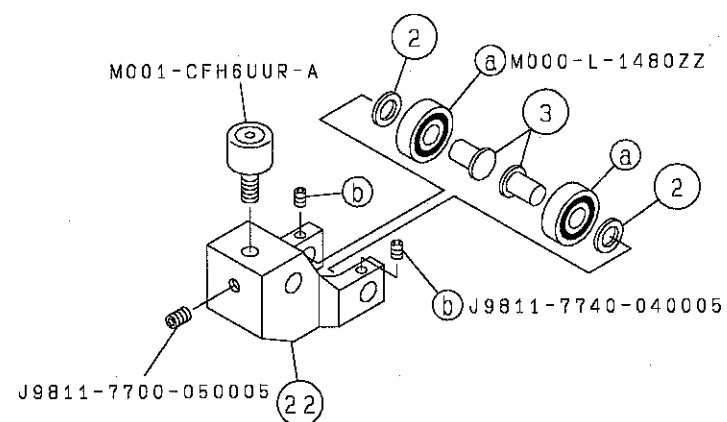


DETAIL A

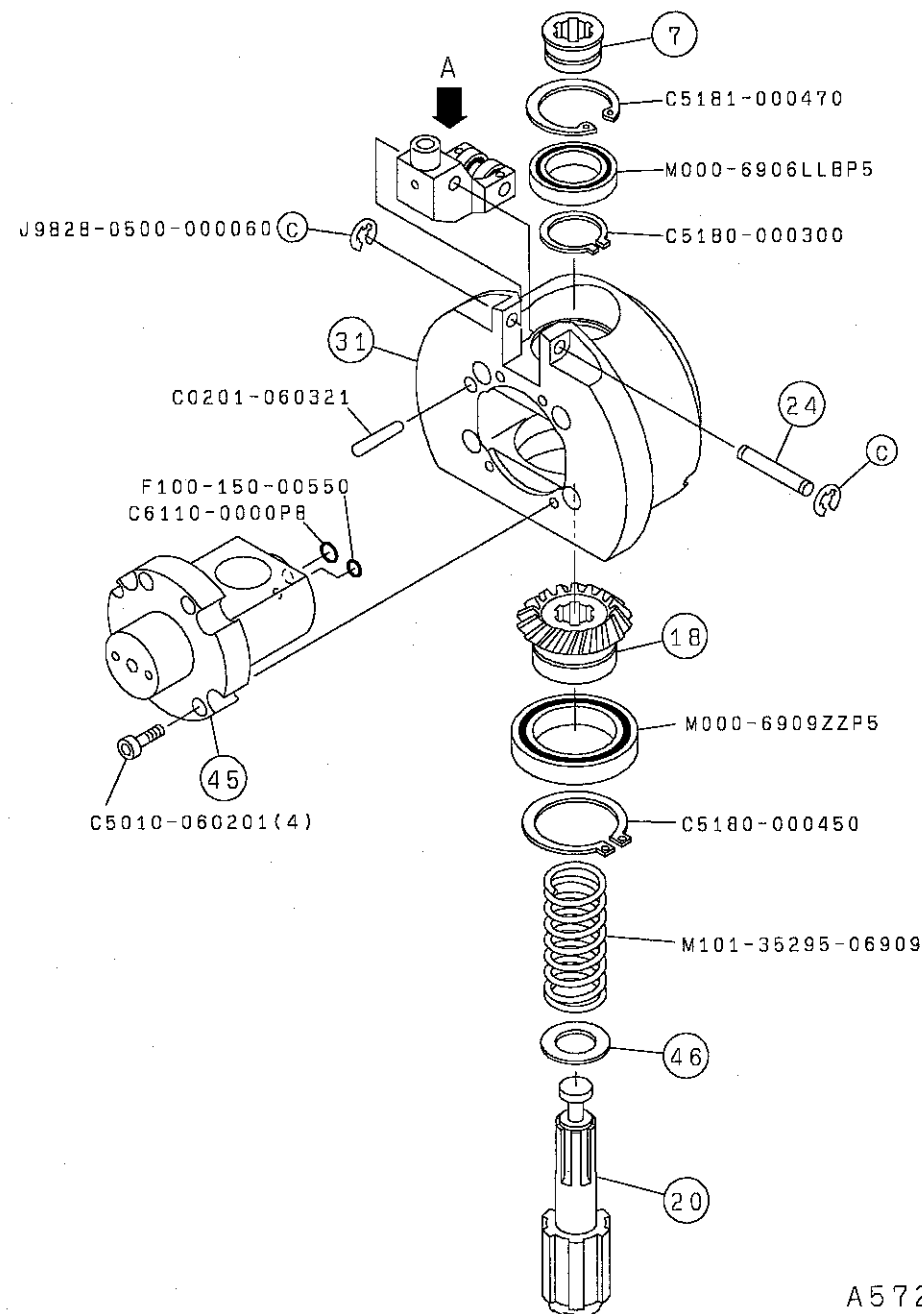


A572-0360


208

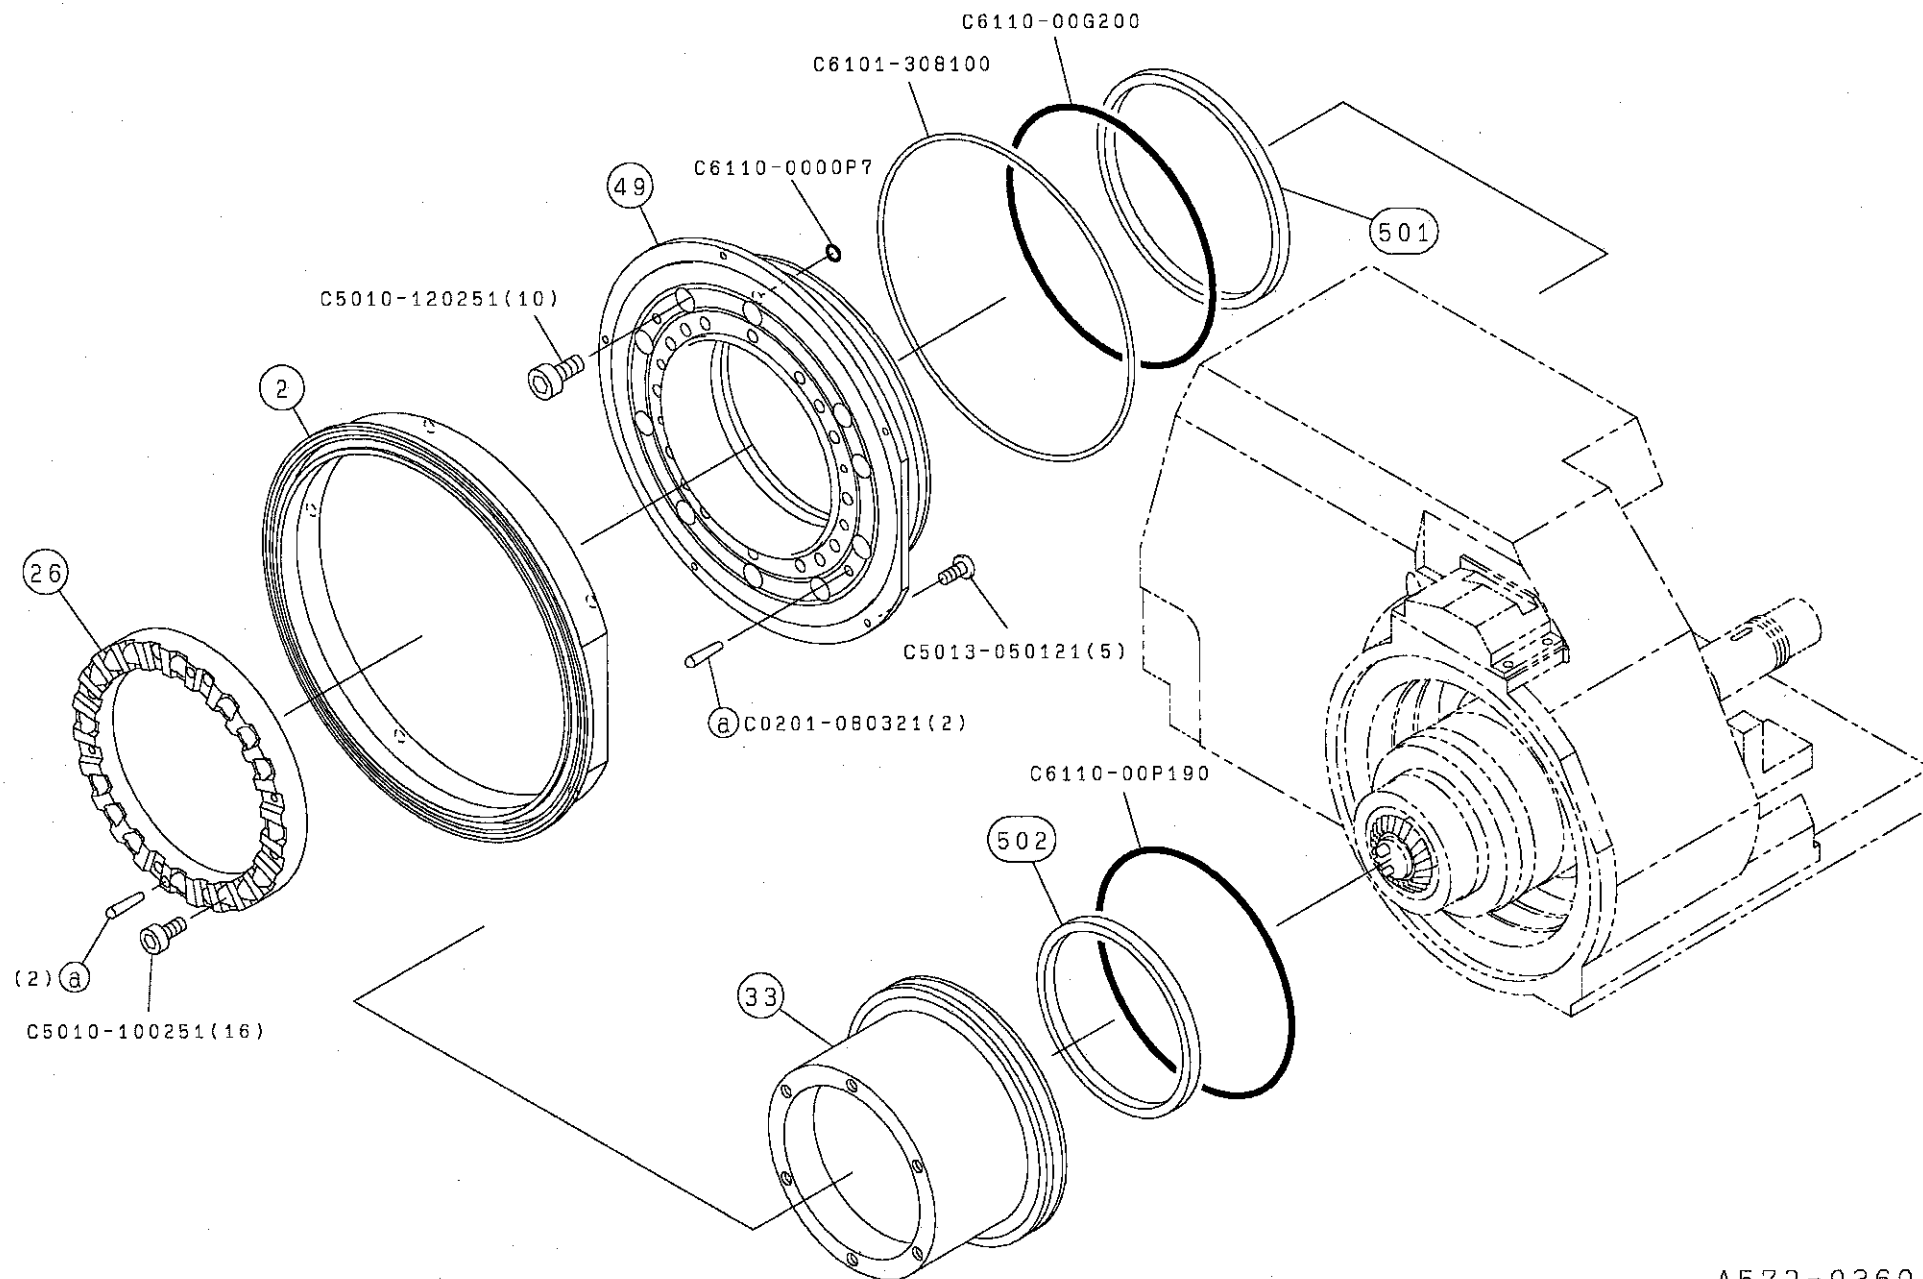


A572-0360

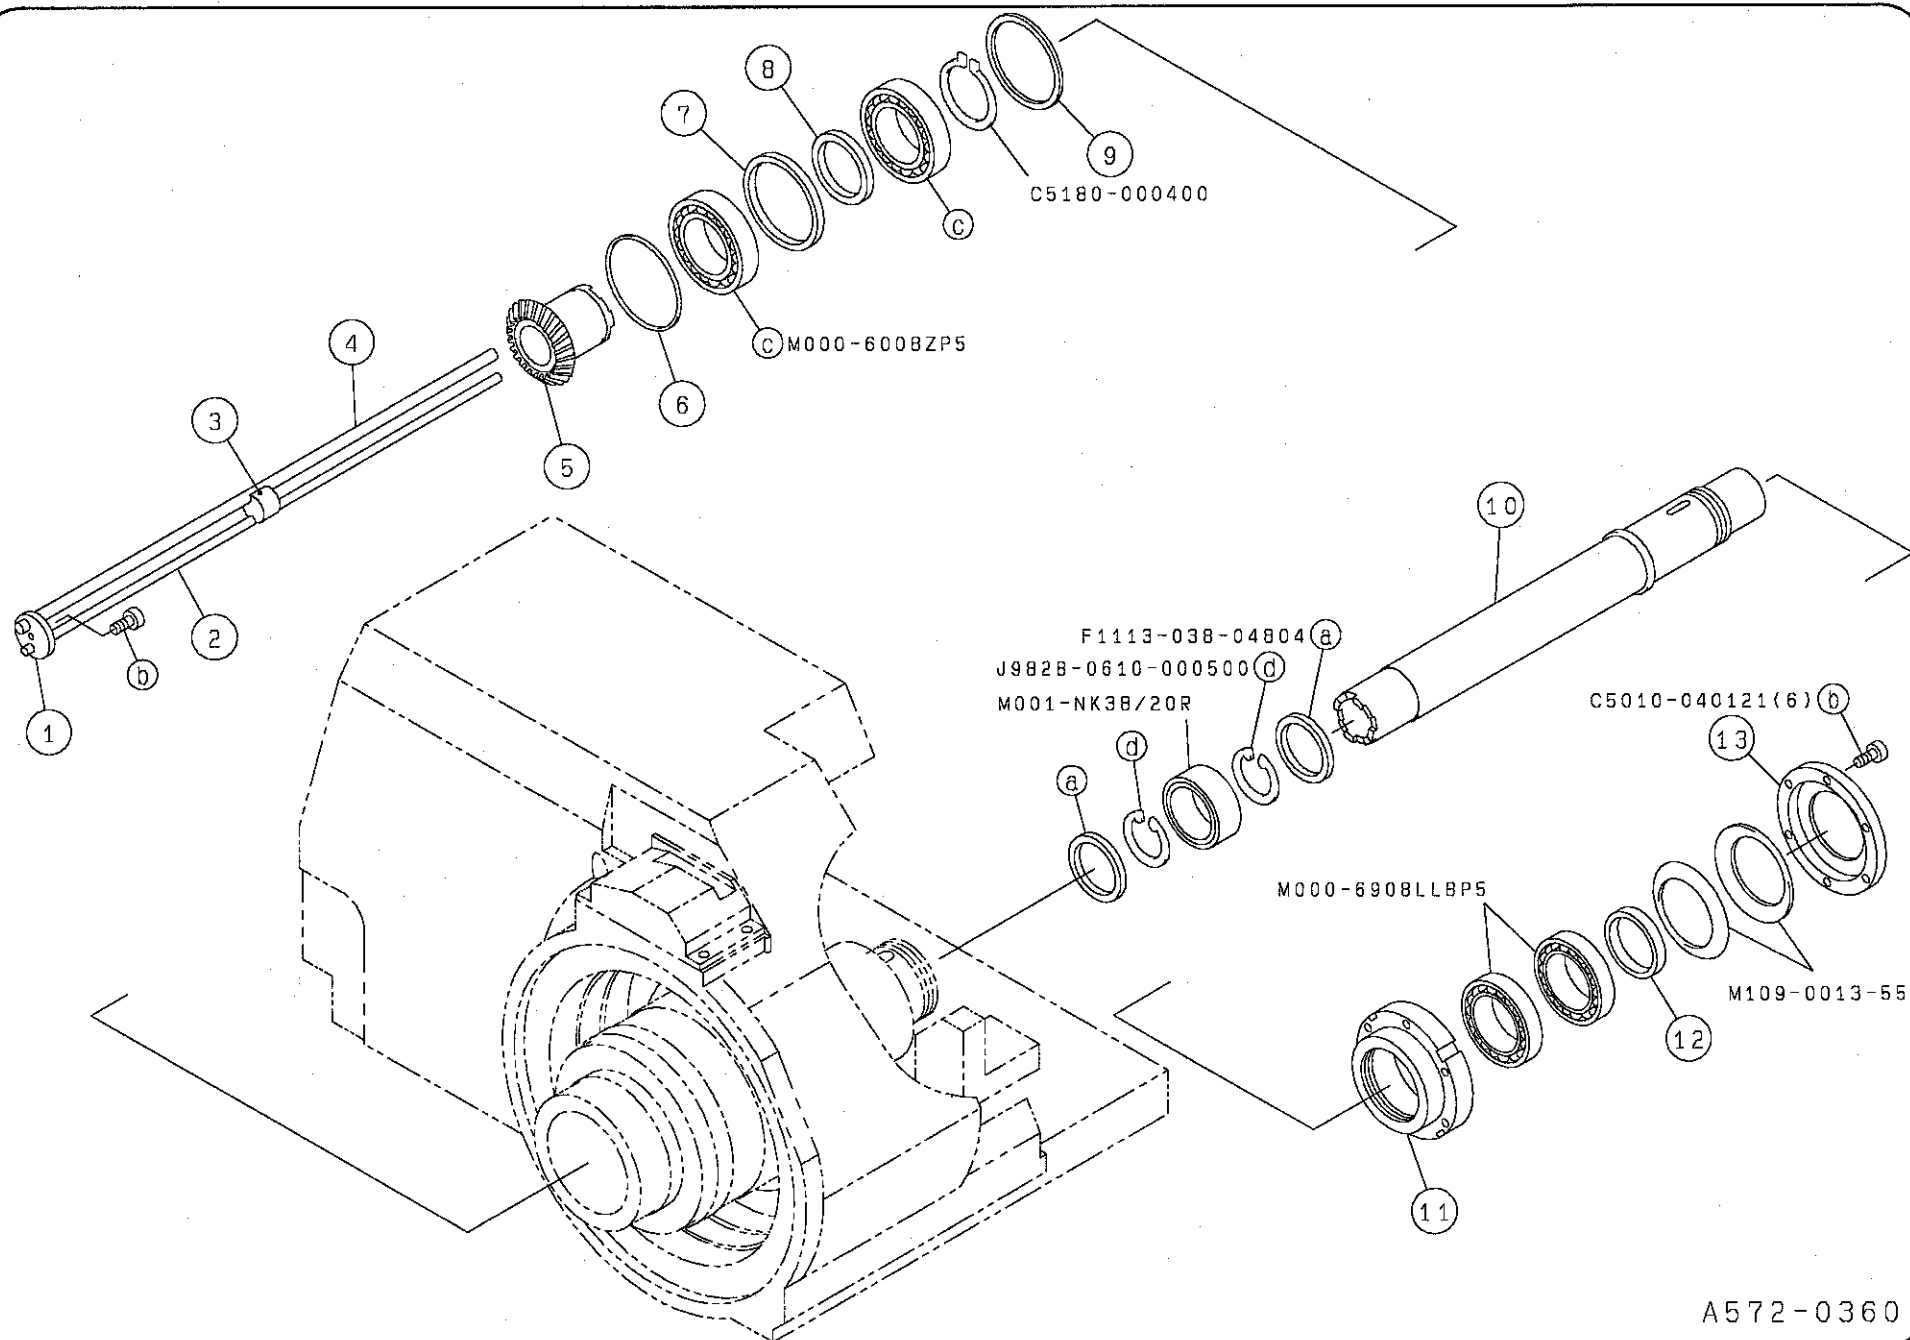


210

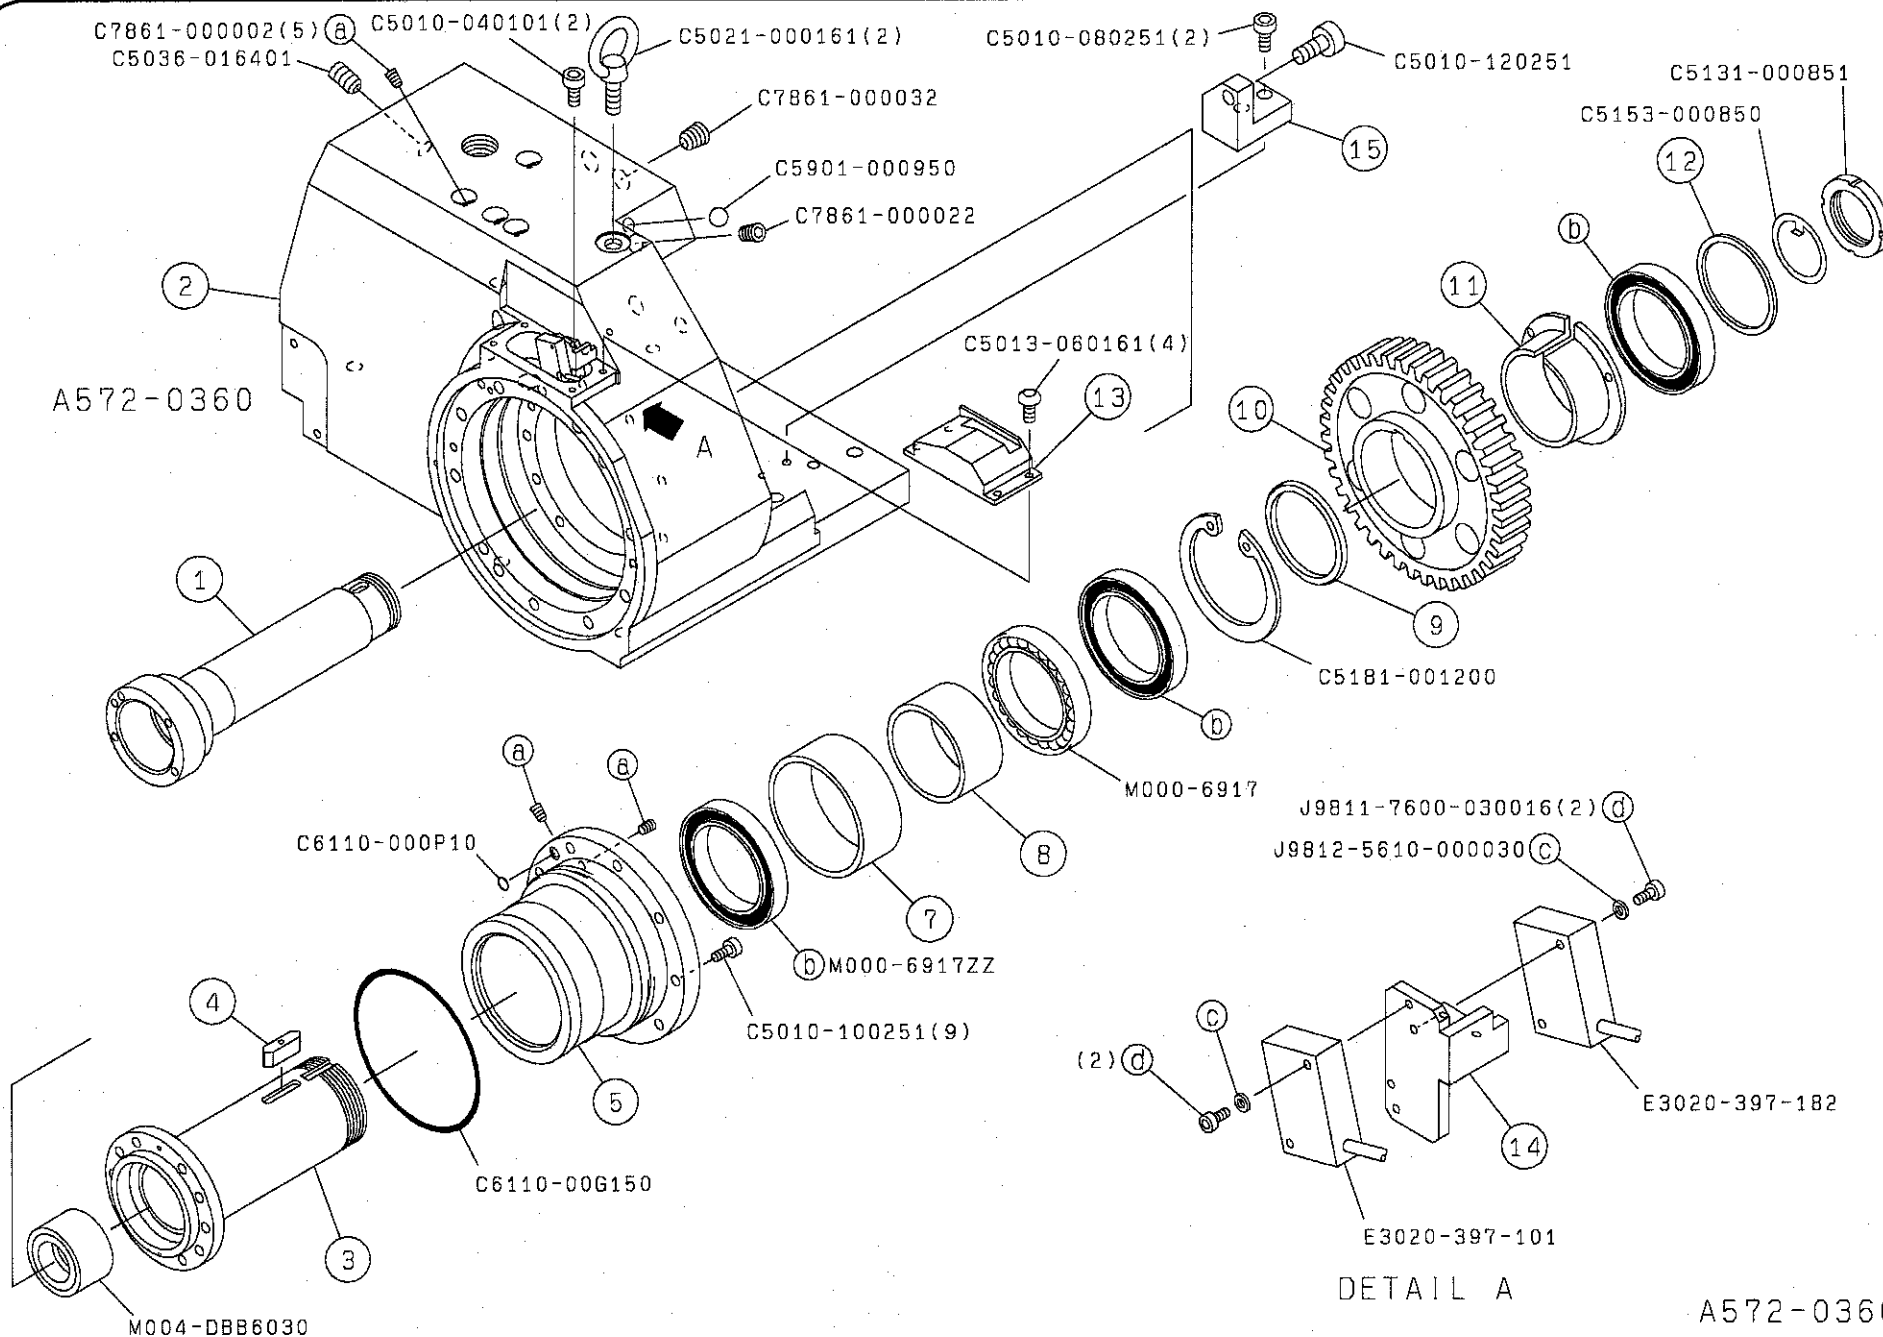


211

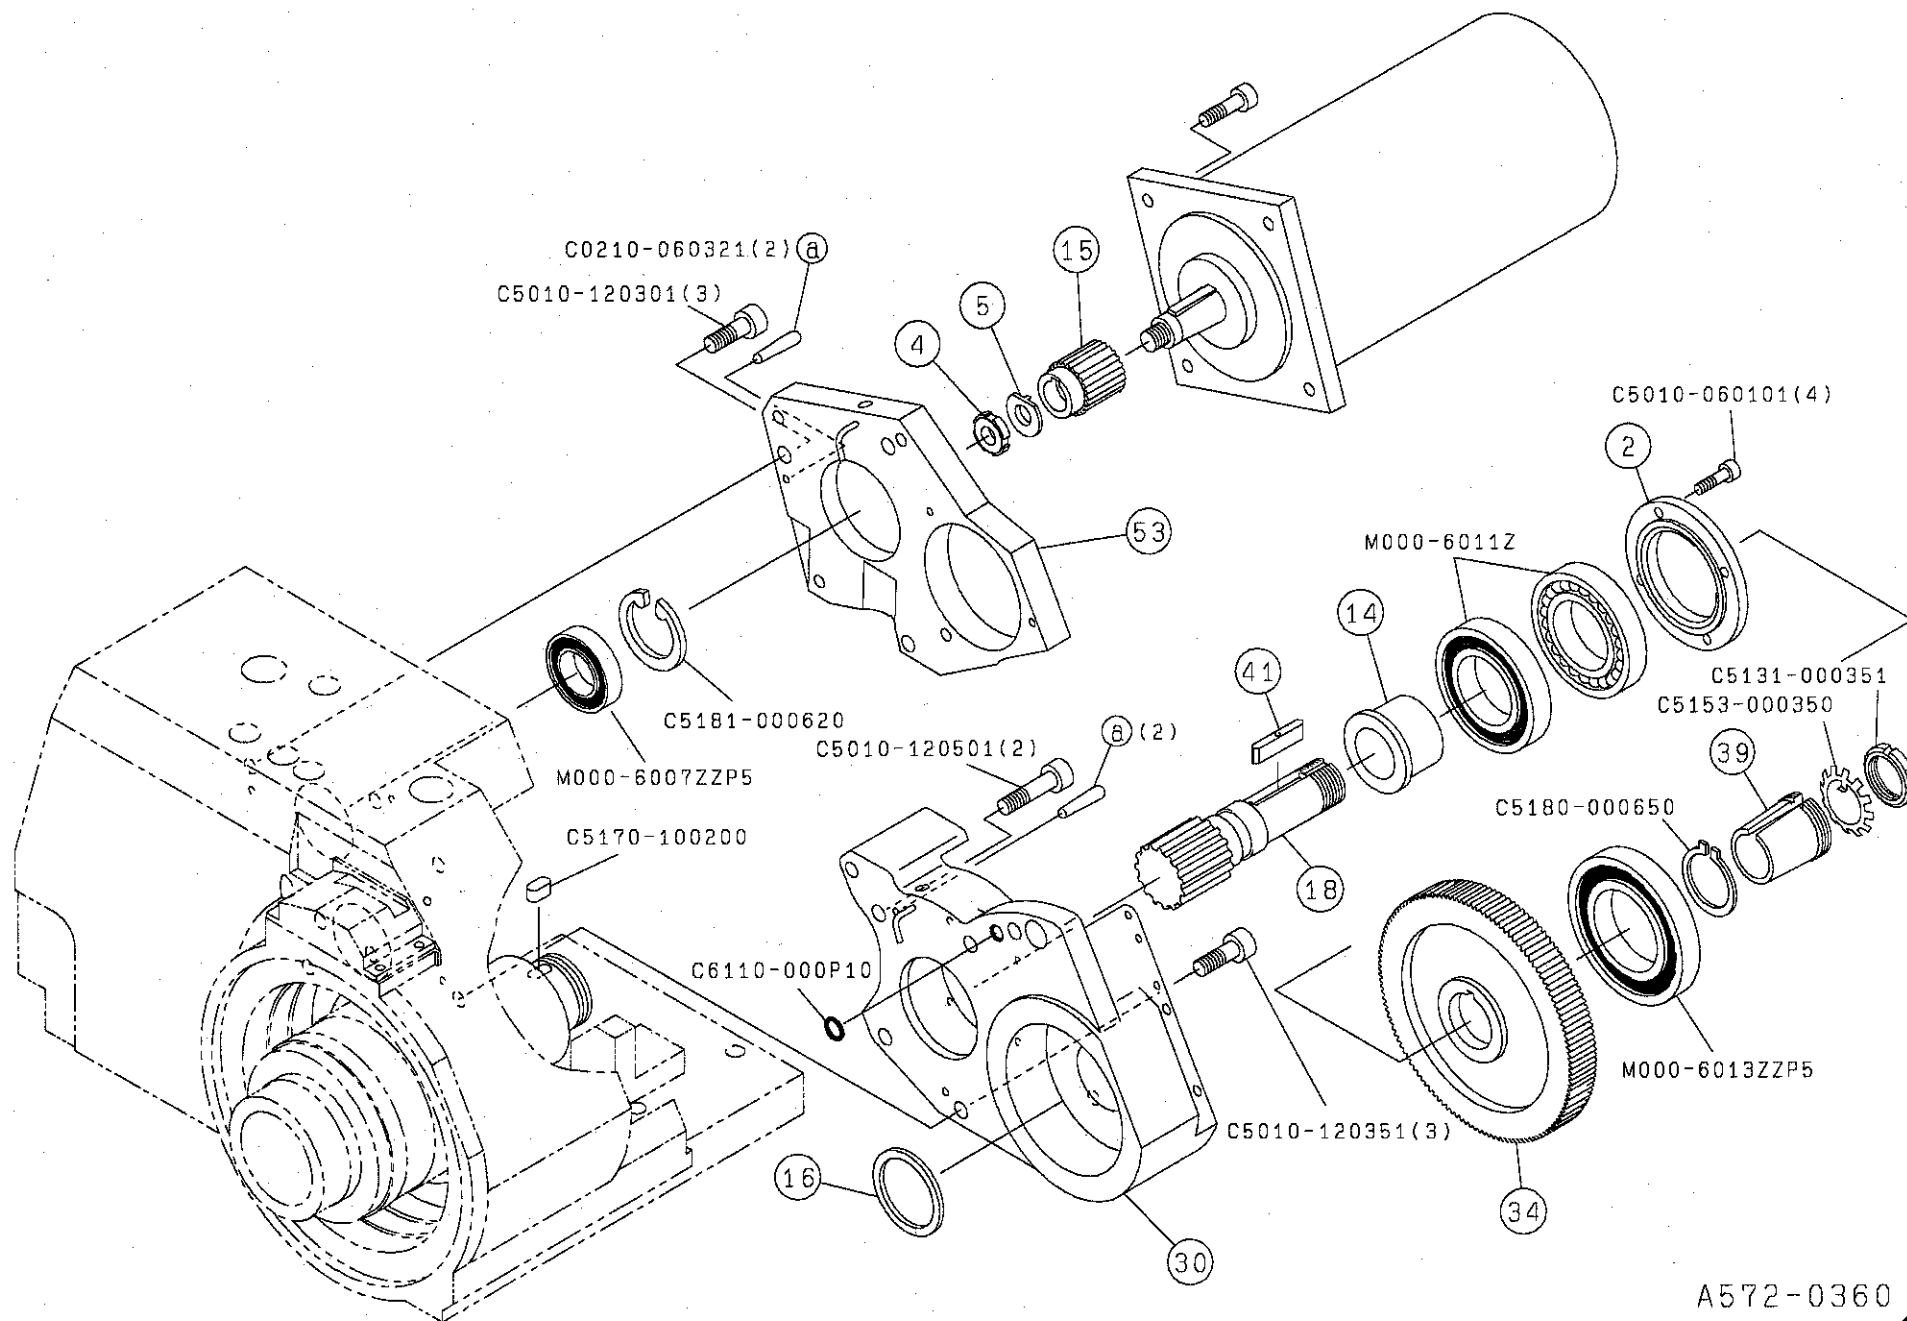

A572-0360

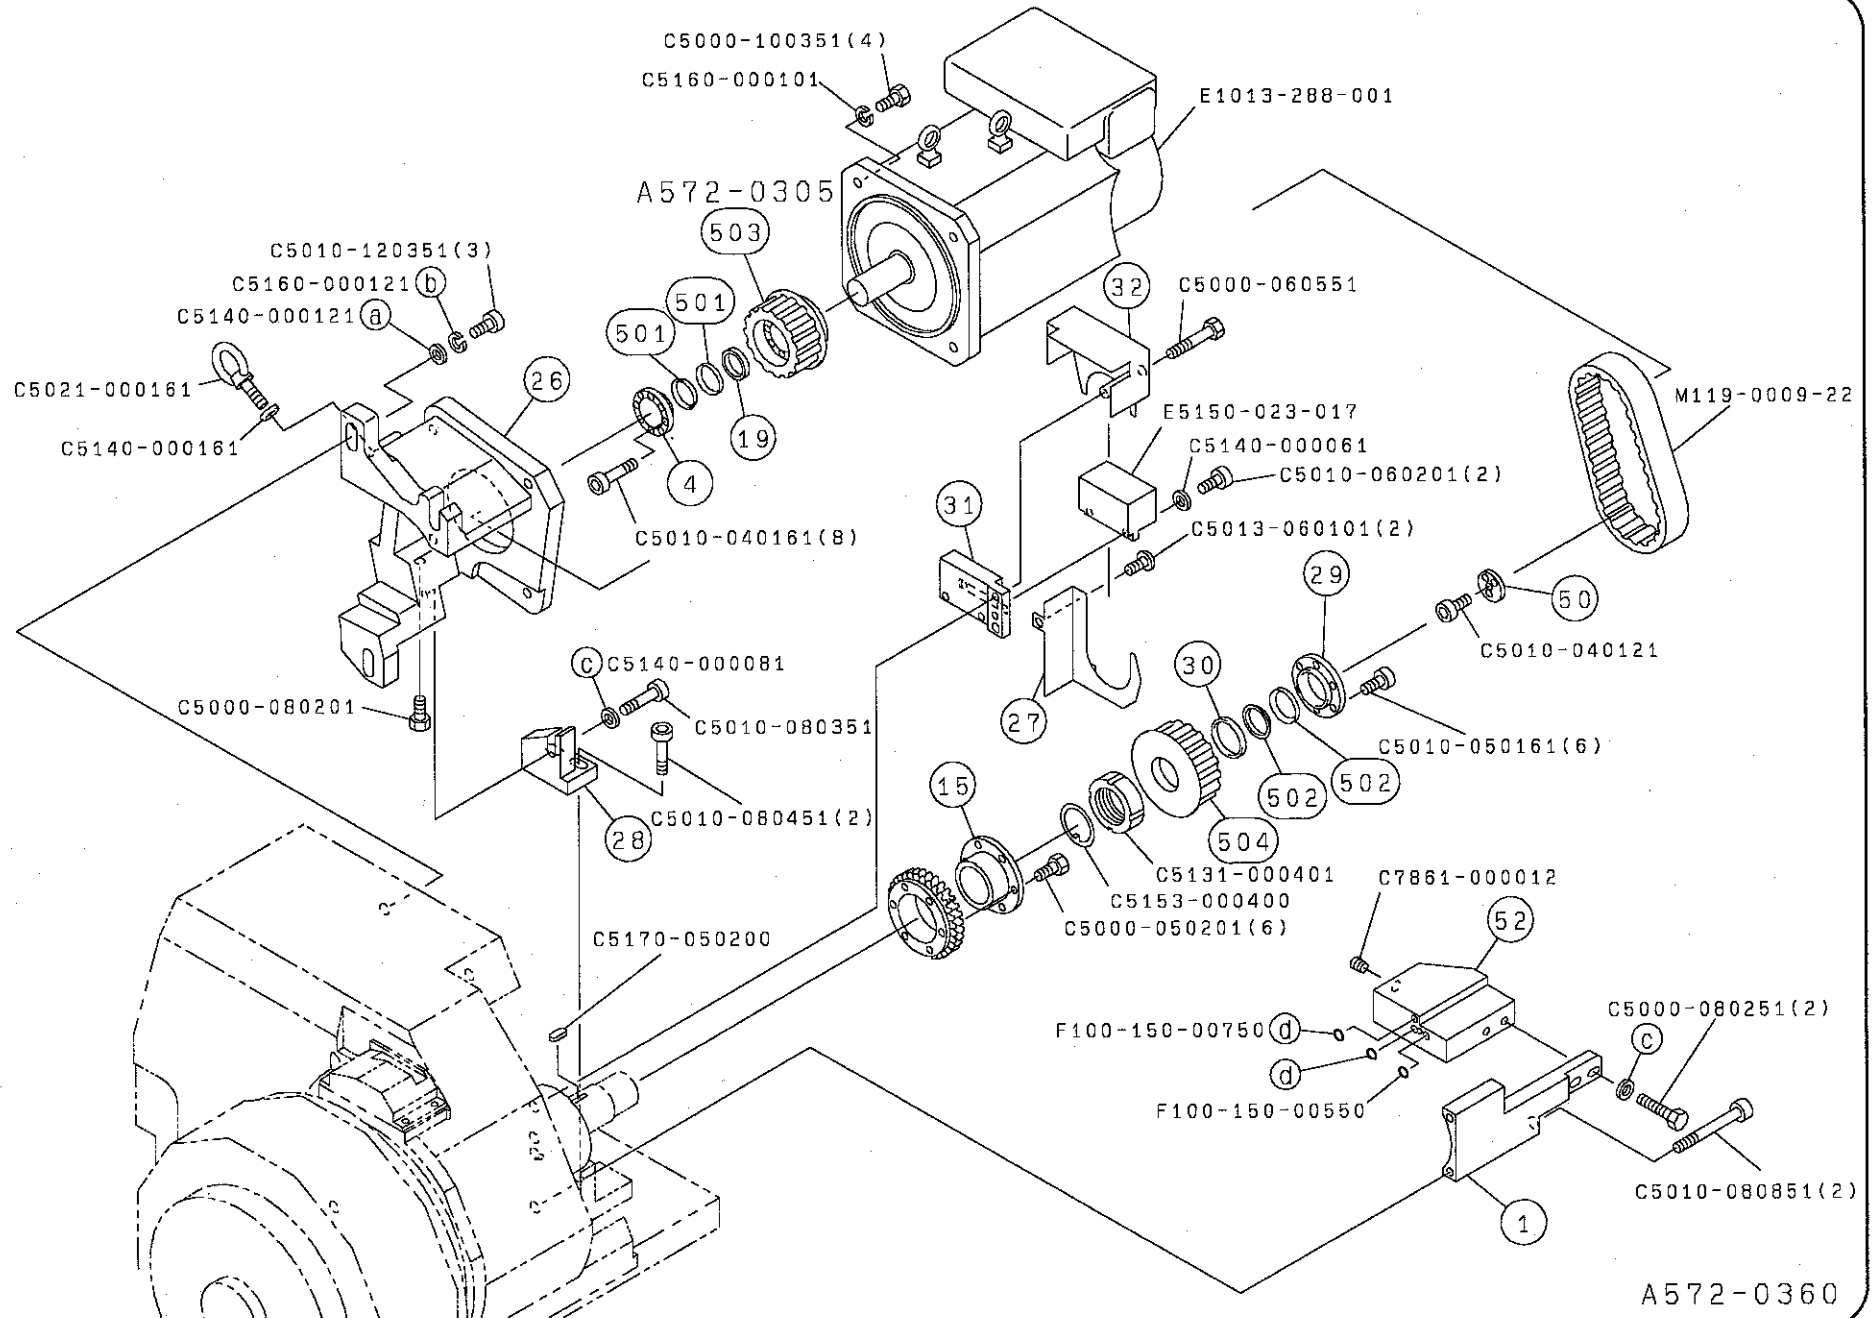


213

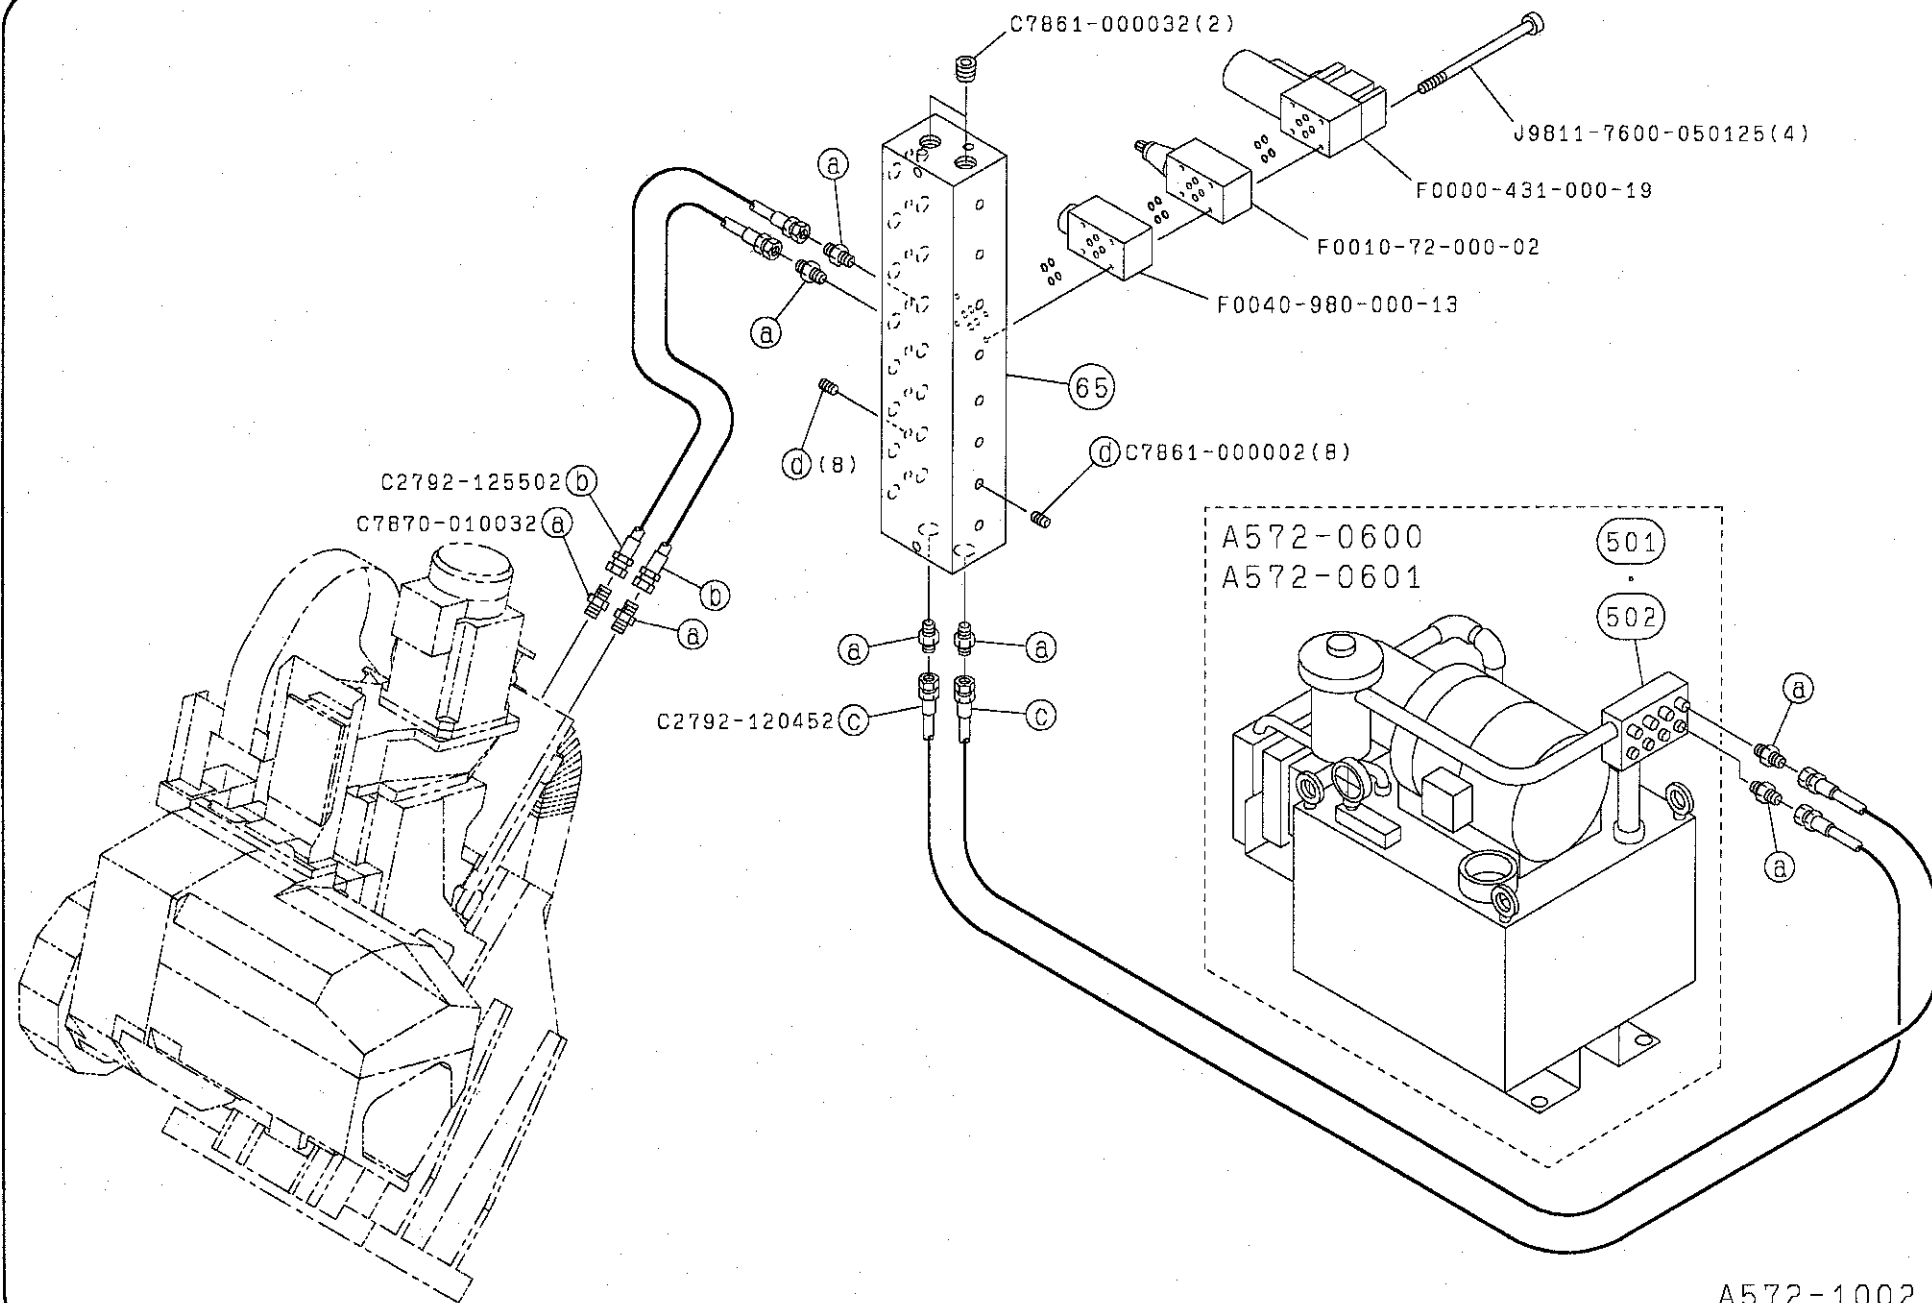


A572-1002

214

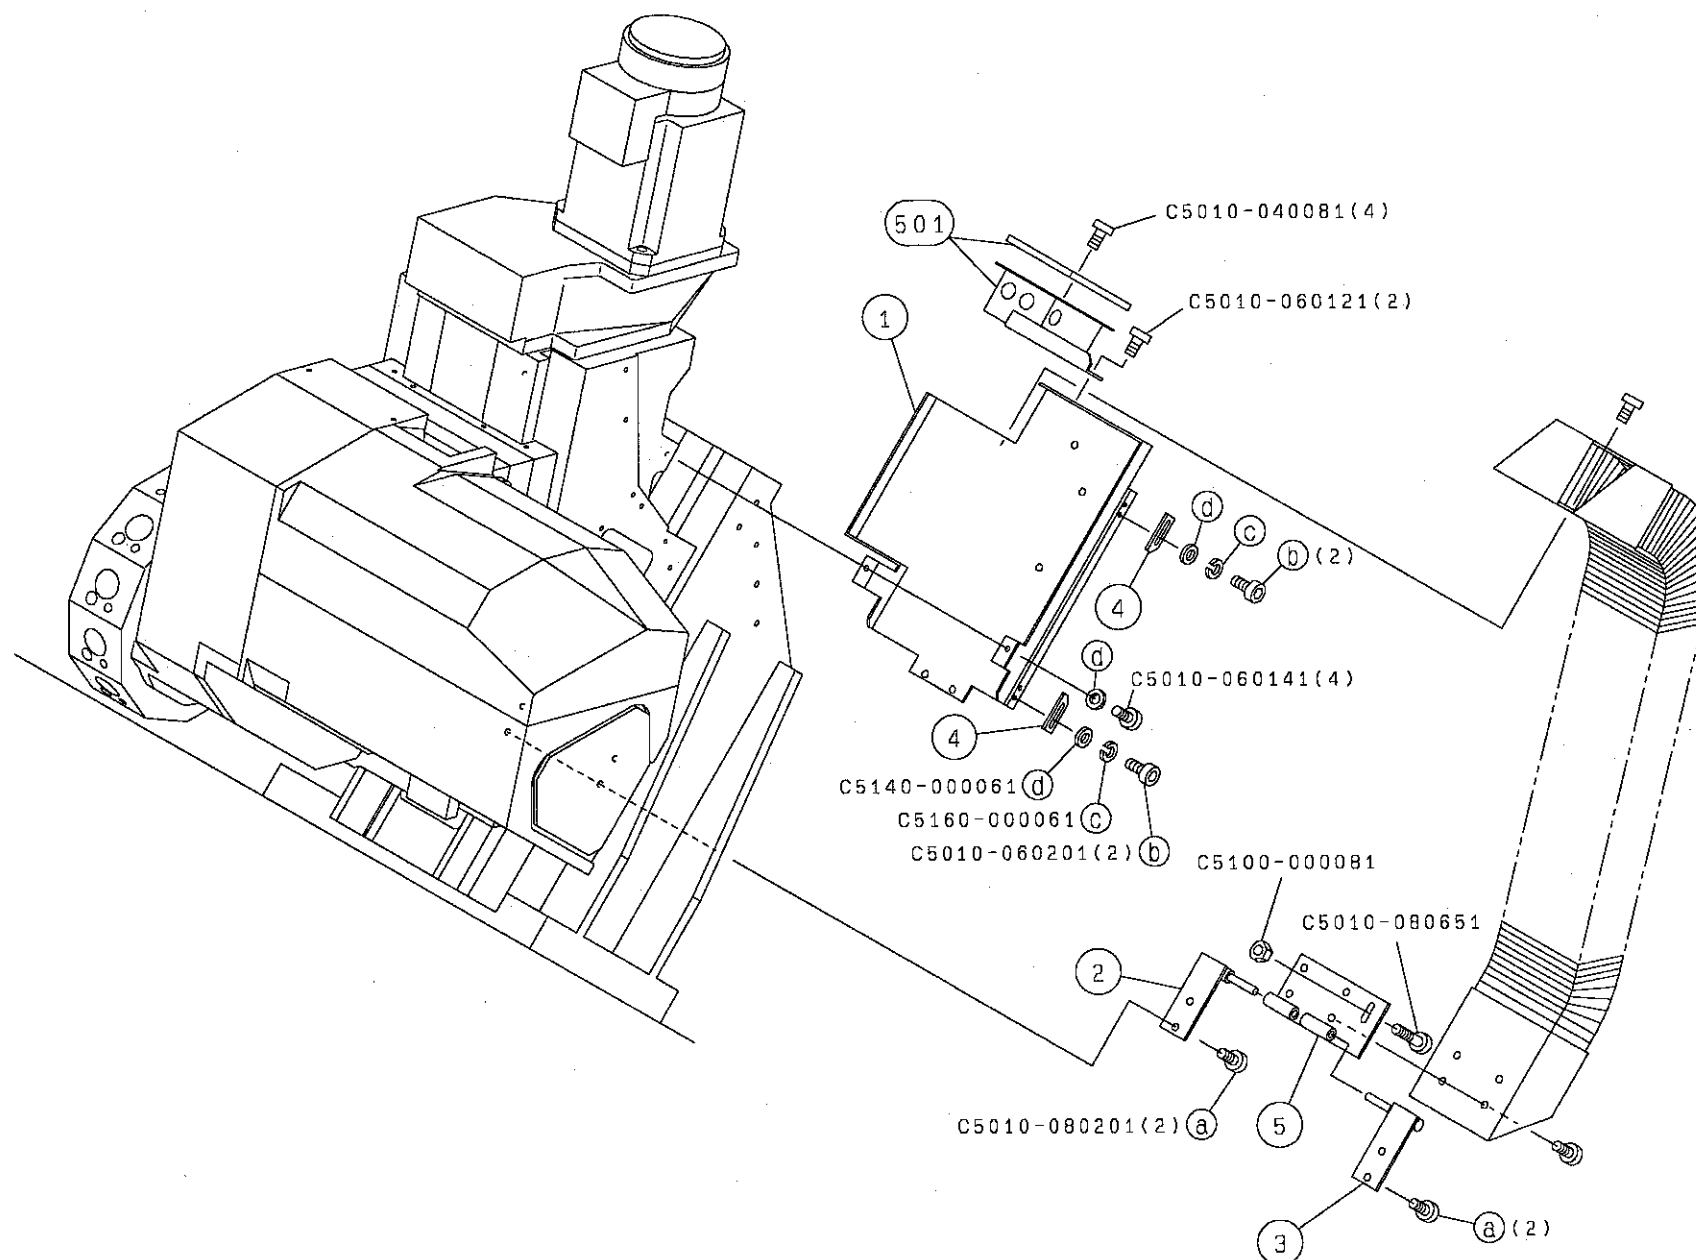



A572-1002

214A

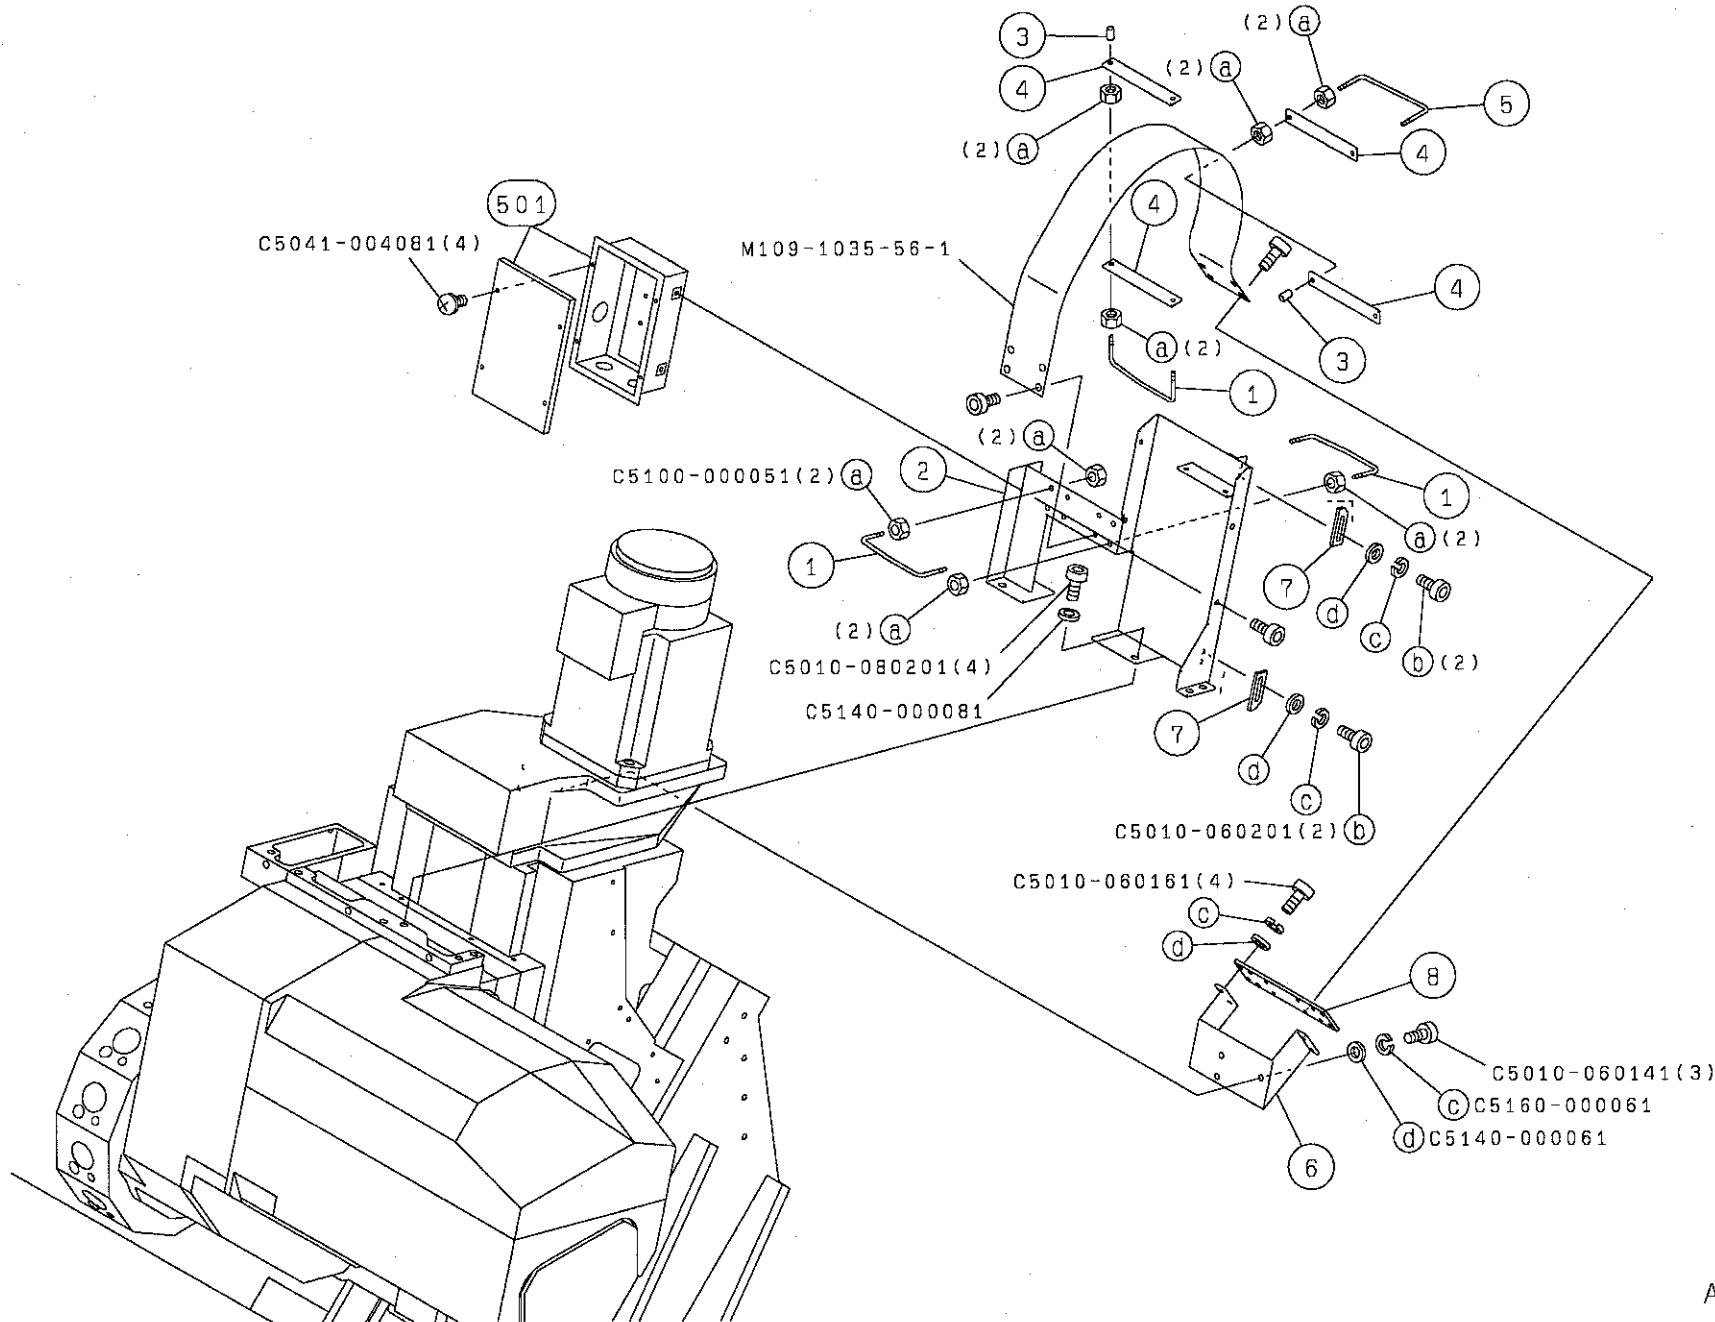


A572-1002

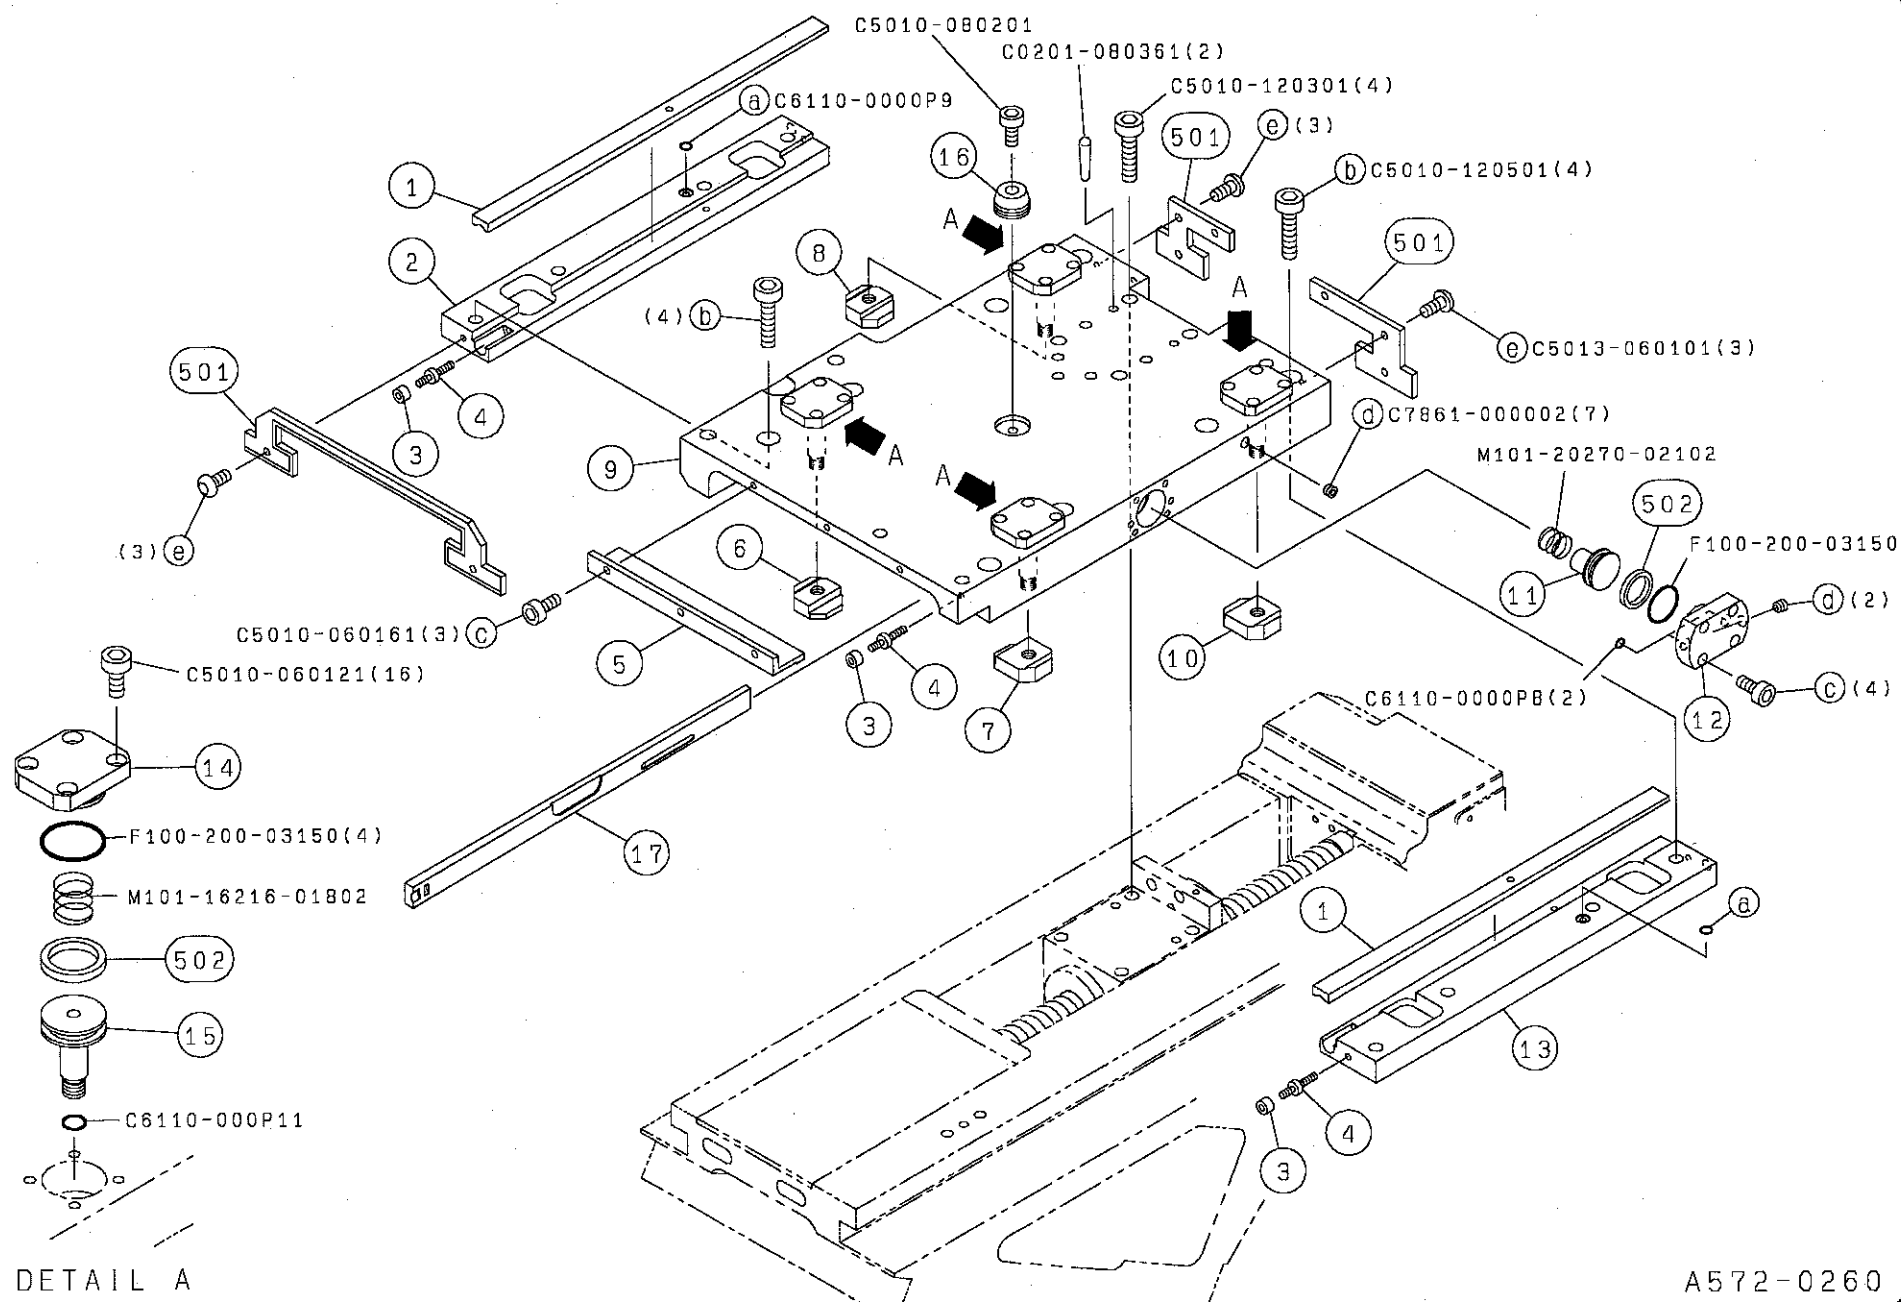


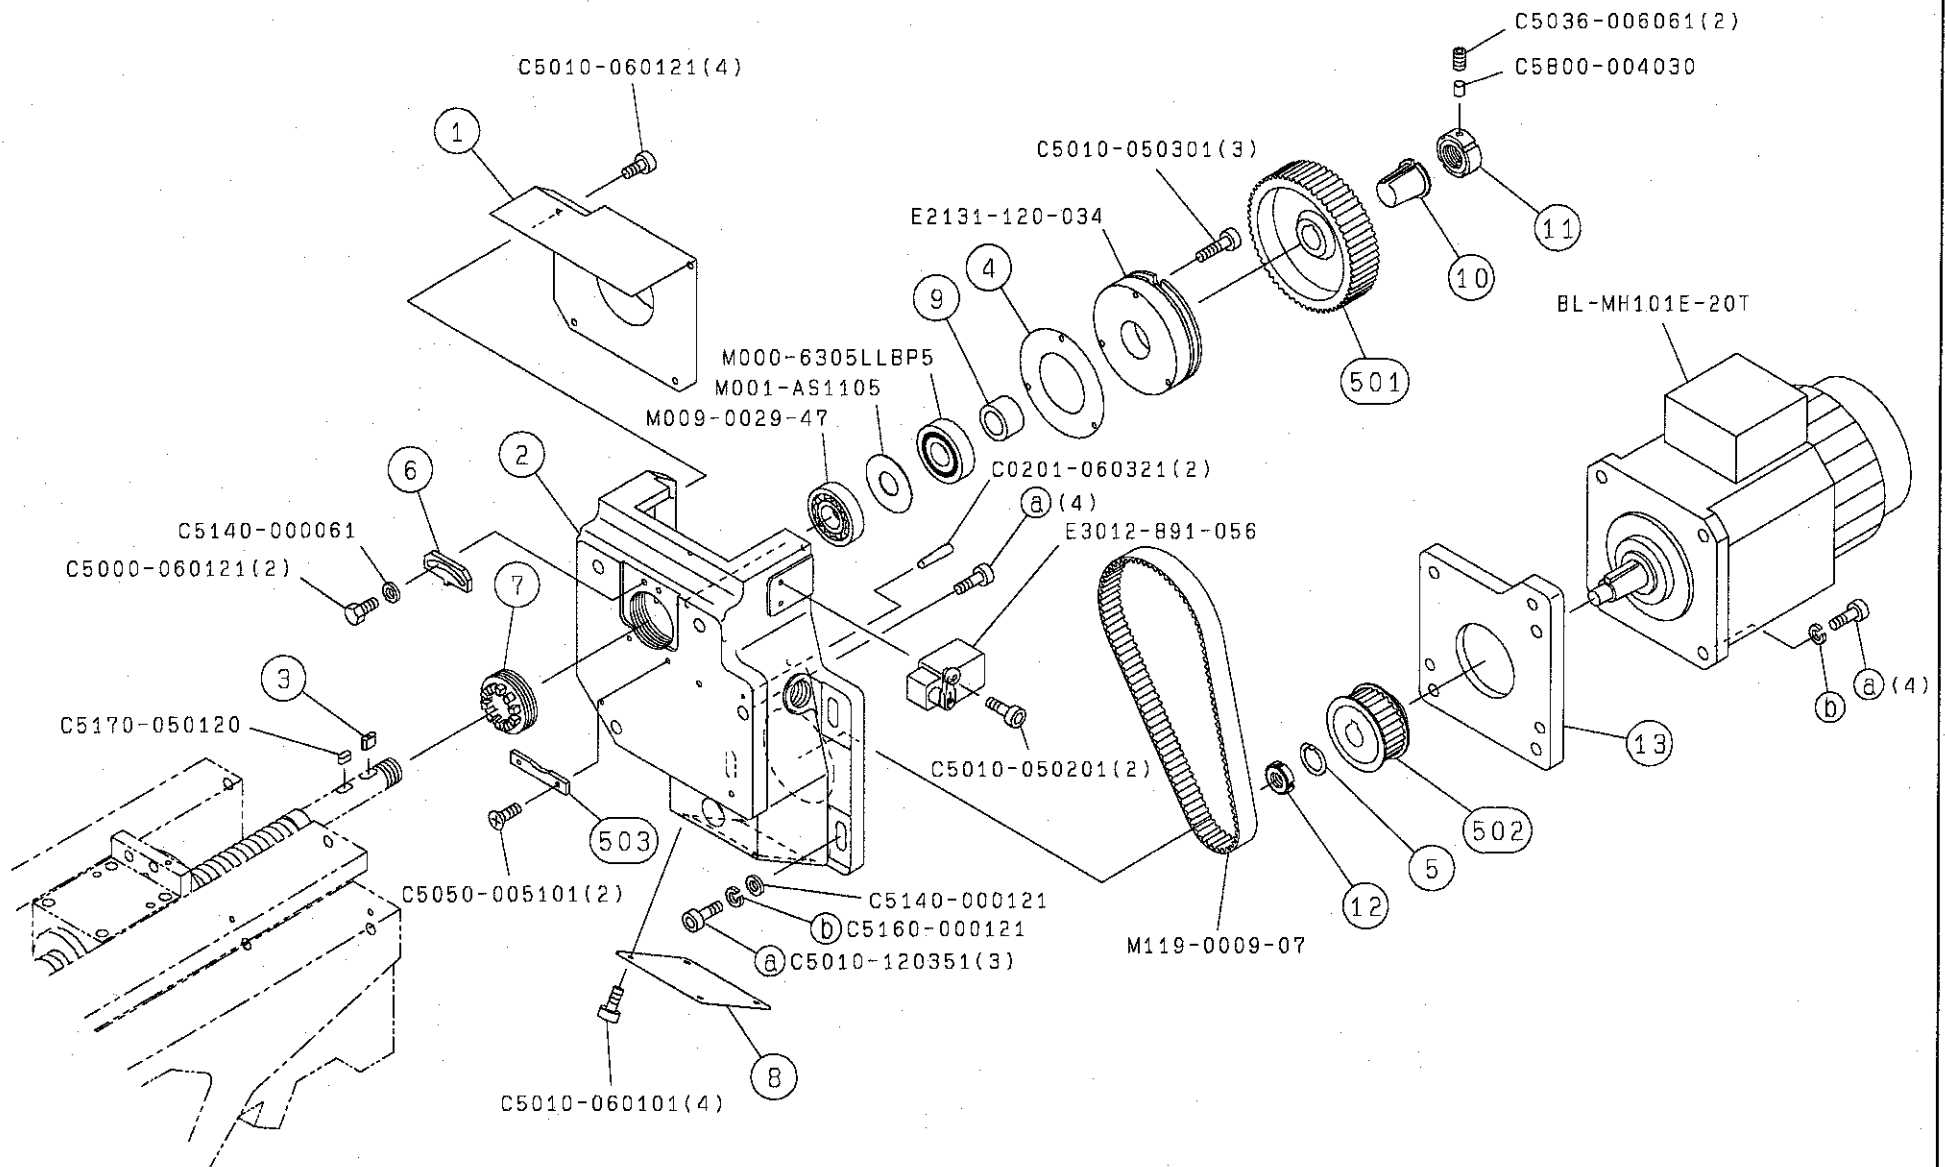


A572-0260

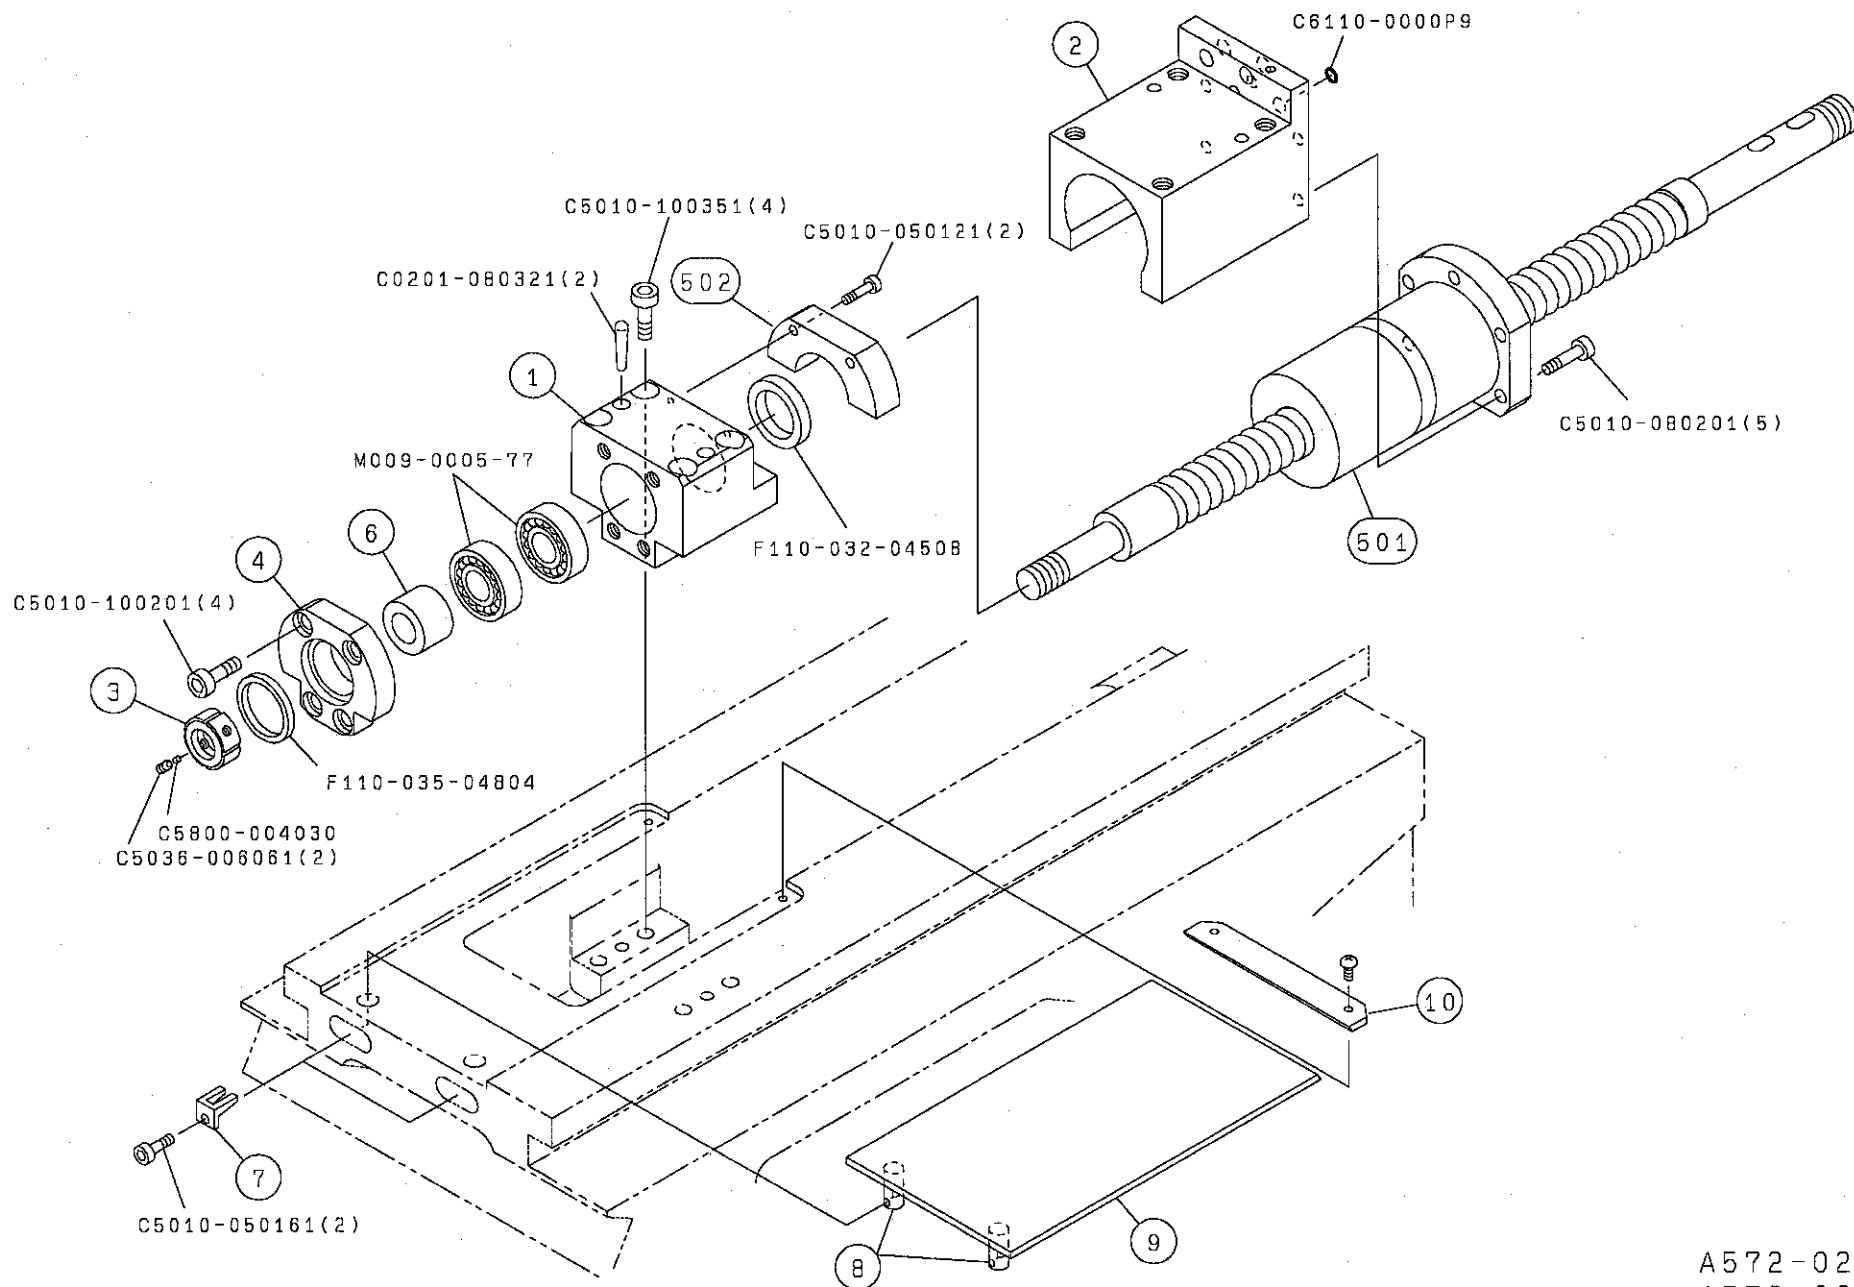

A572-0260
A572-0275

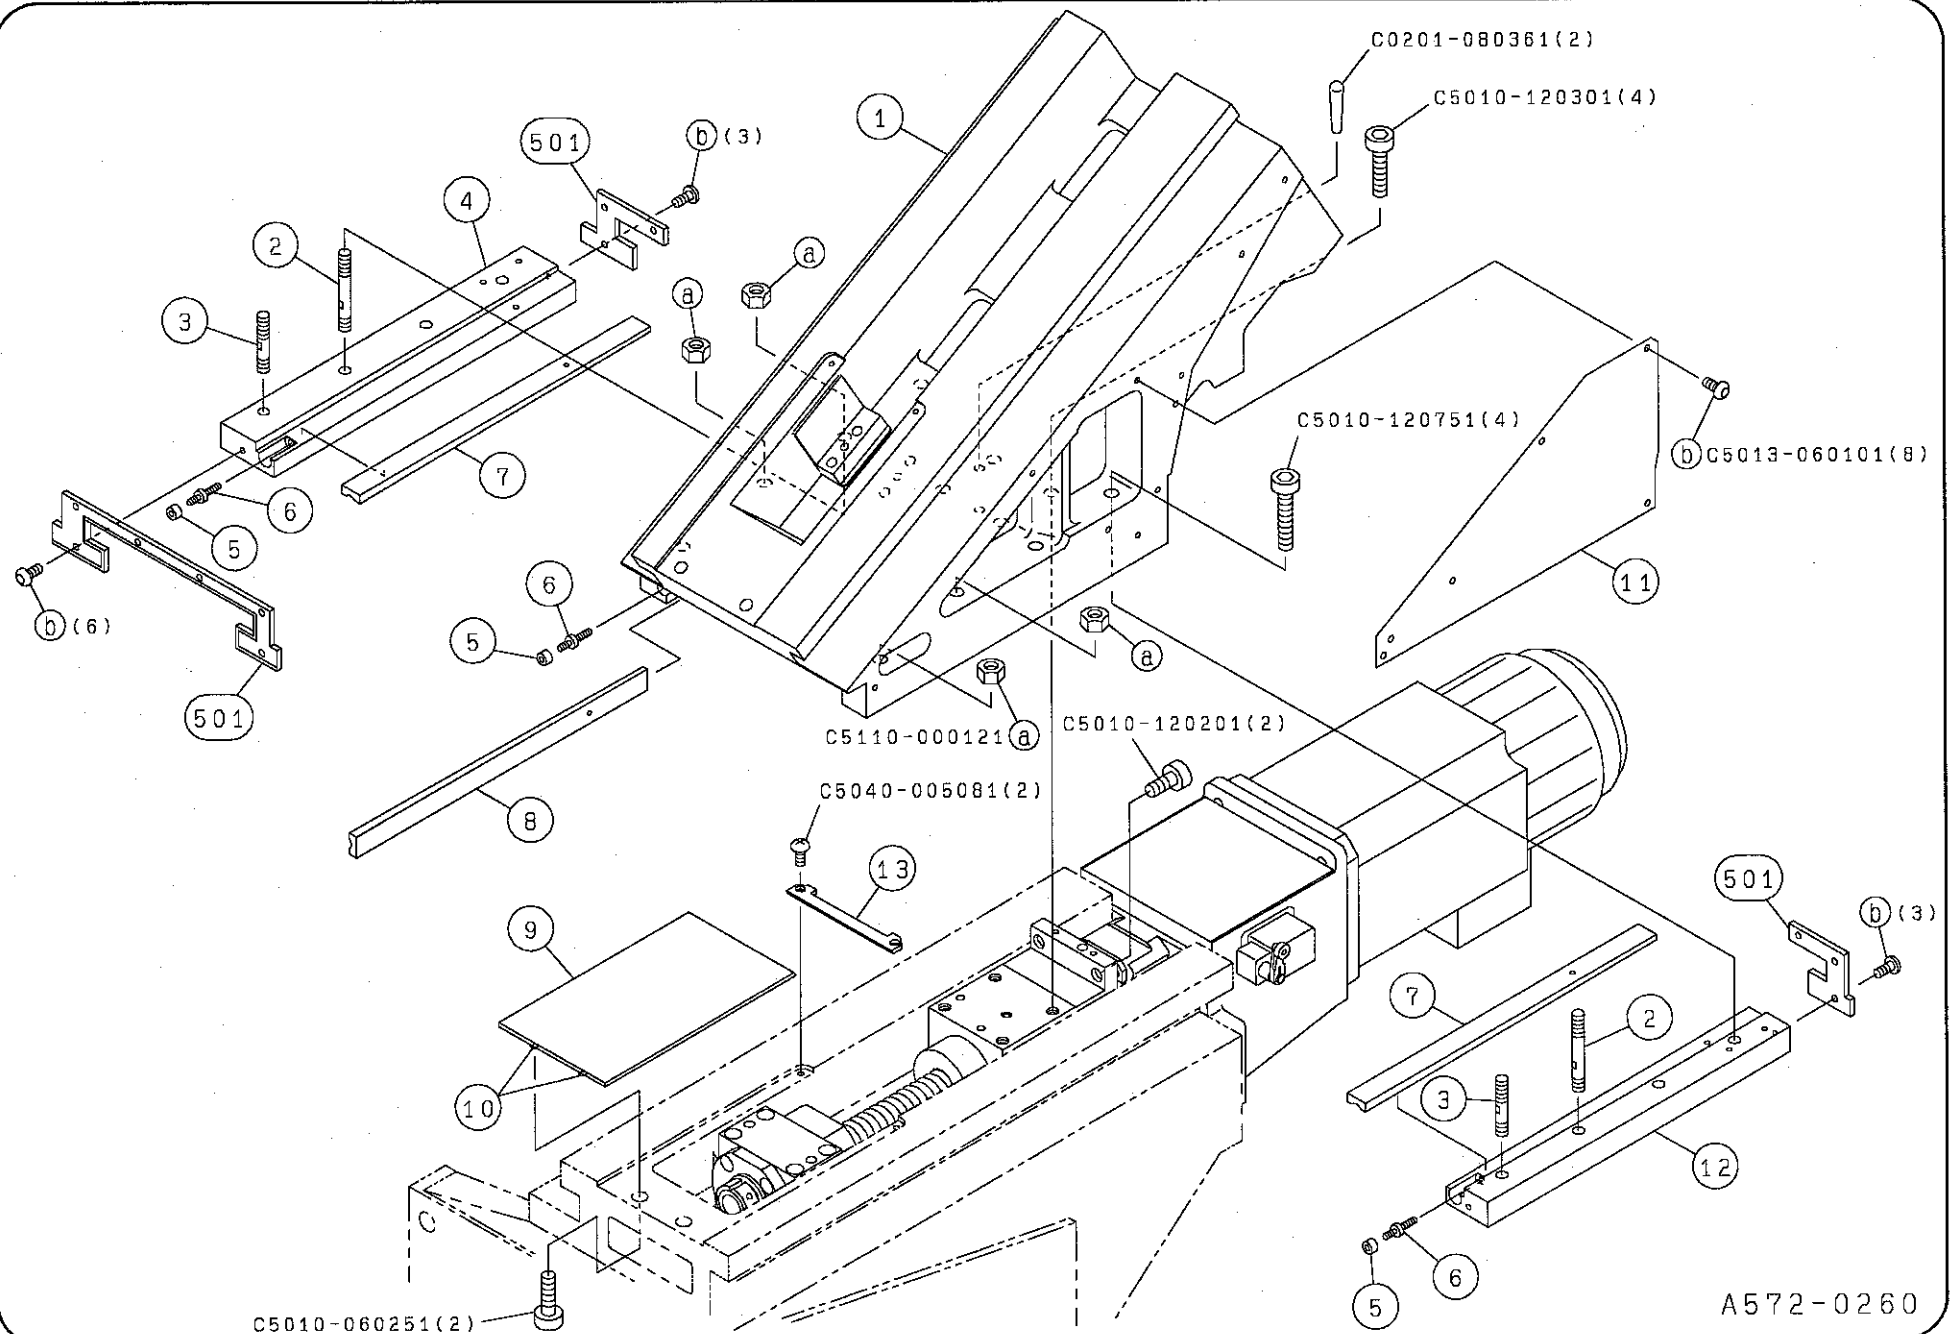


A572-0260

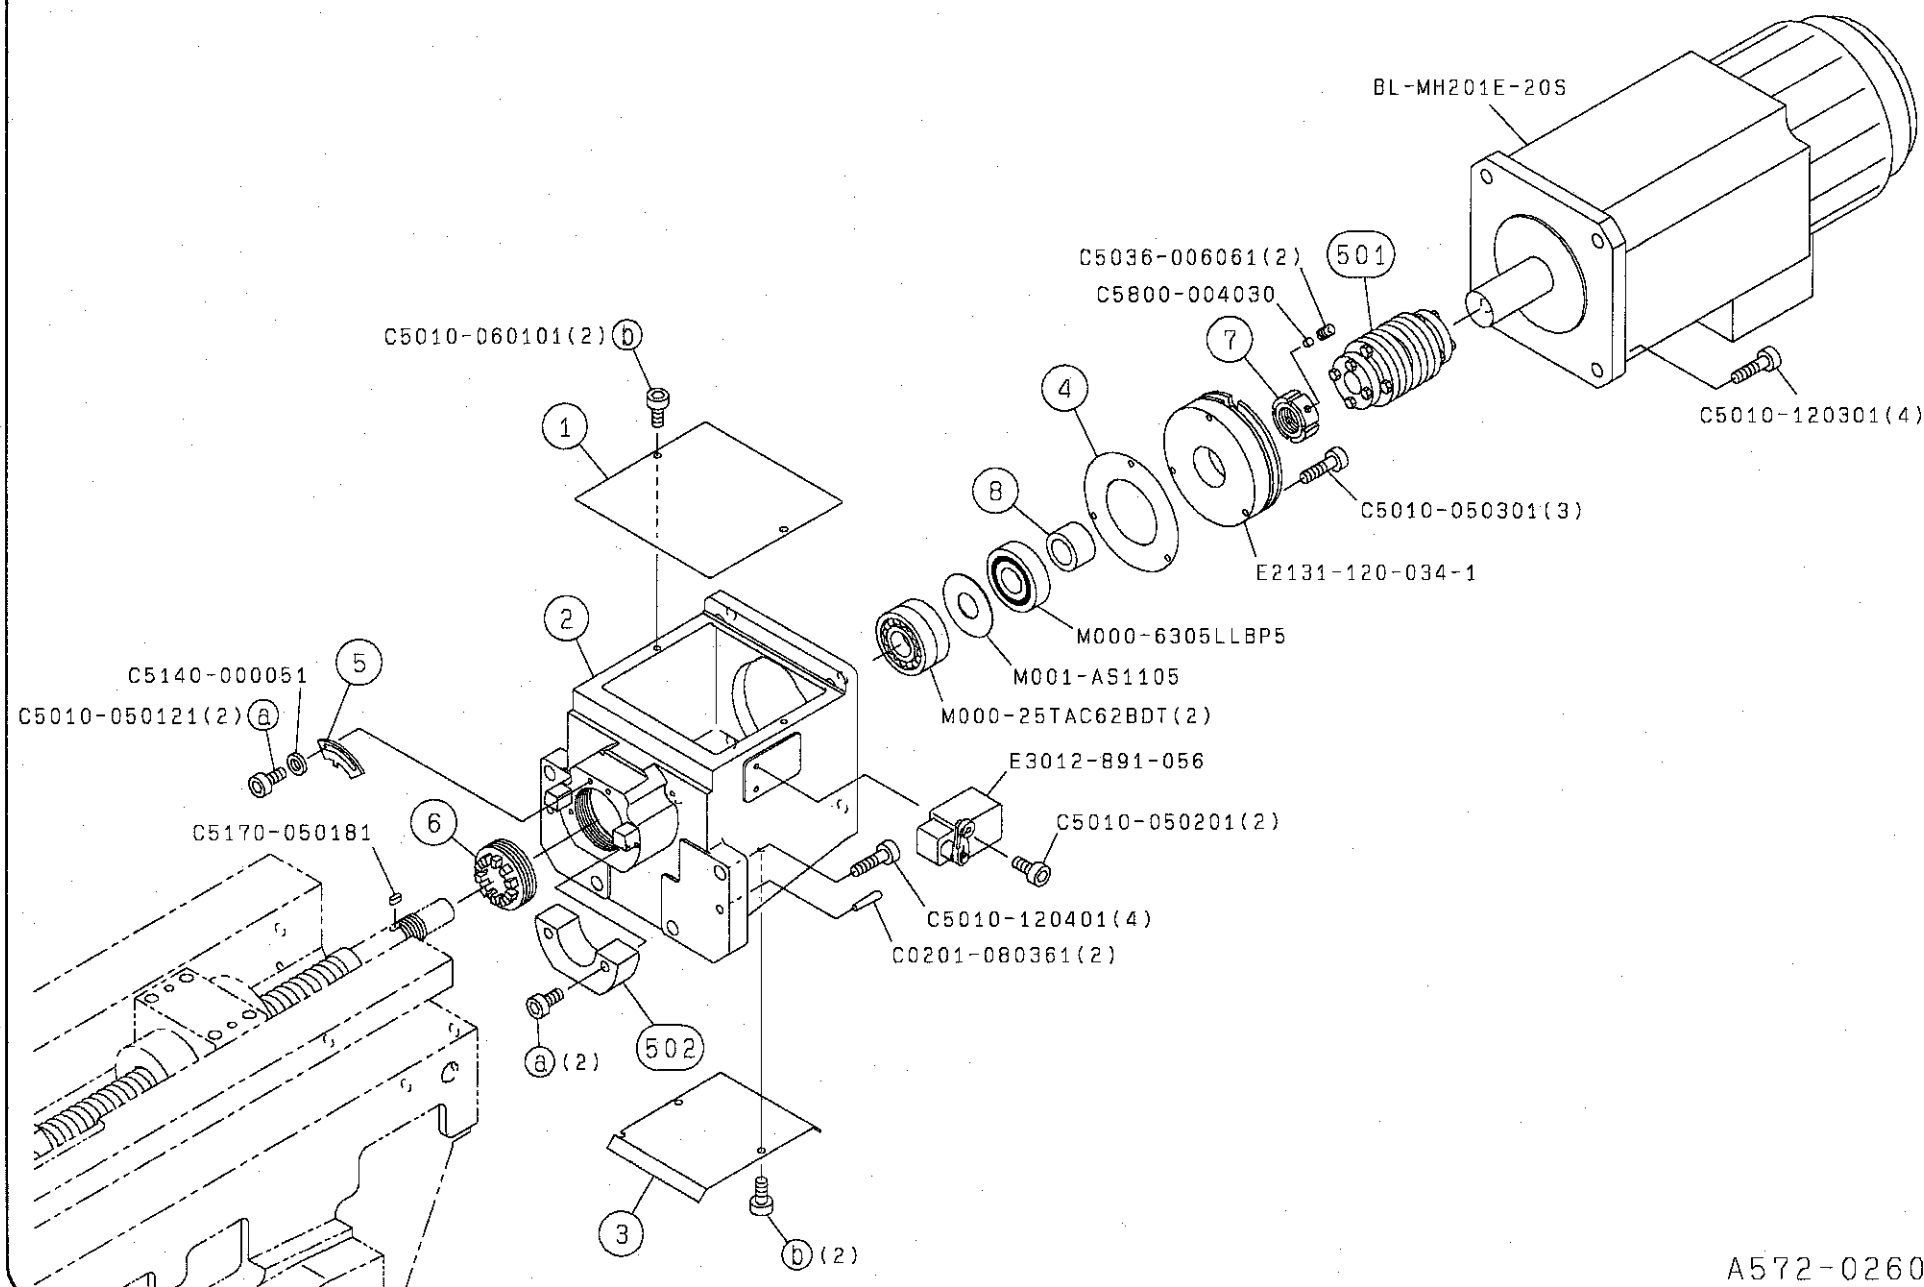



A572-0260

220

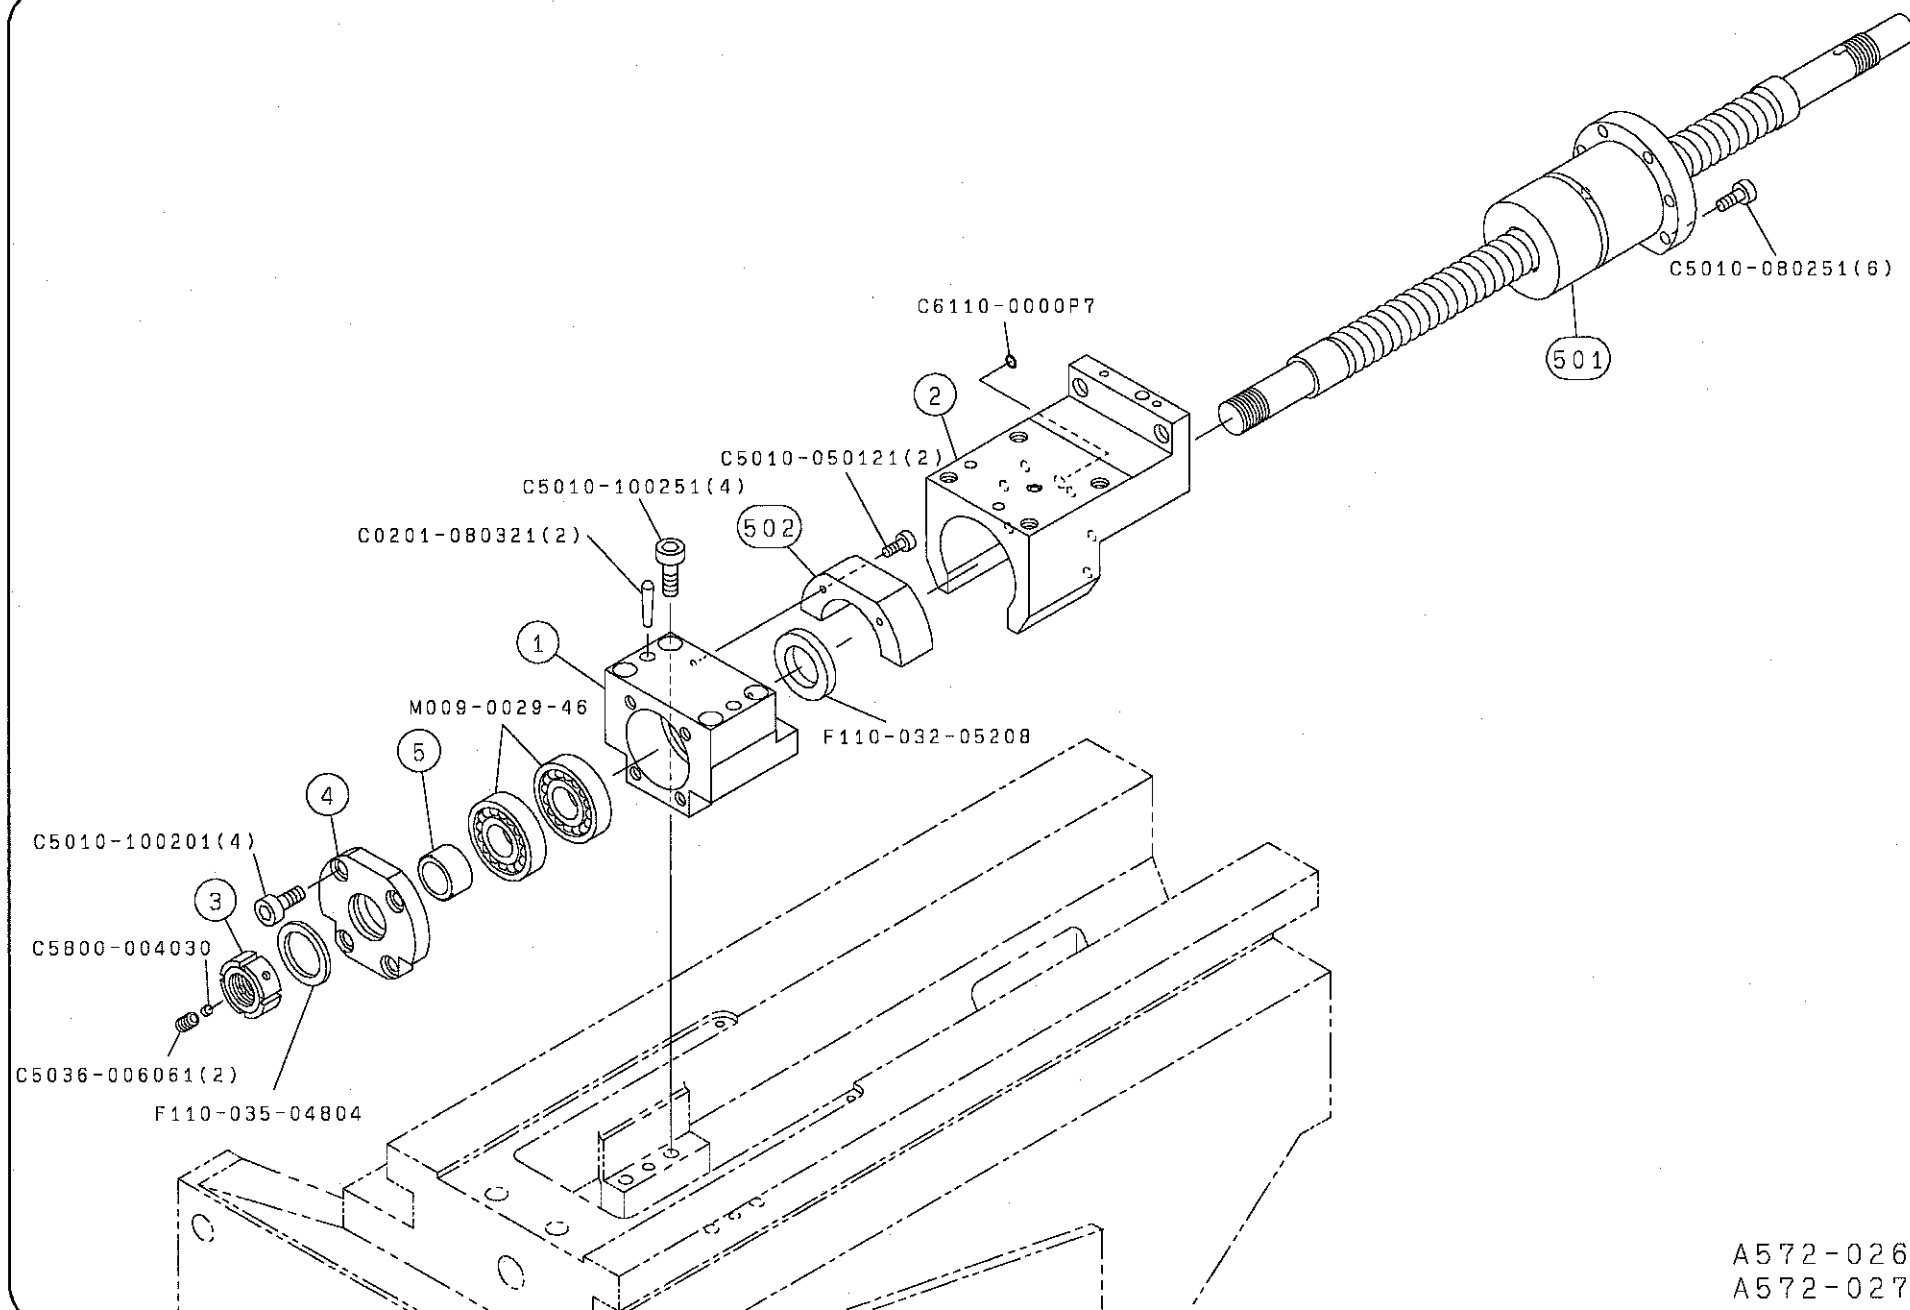


A572-0260
A572-0274

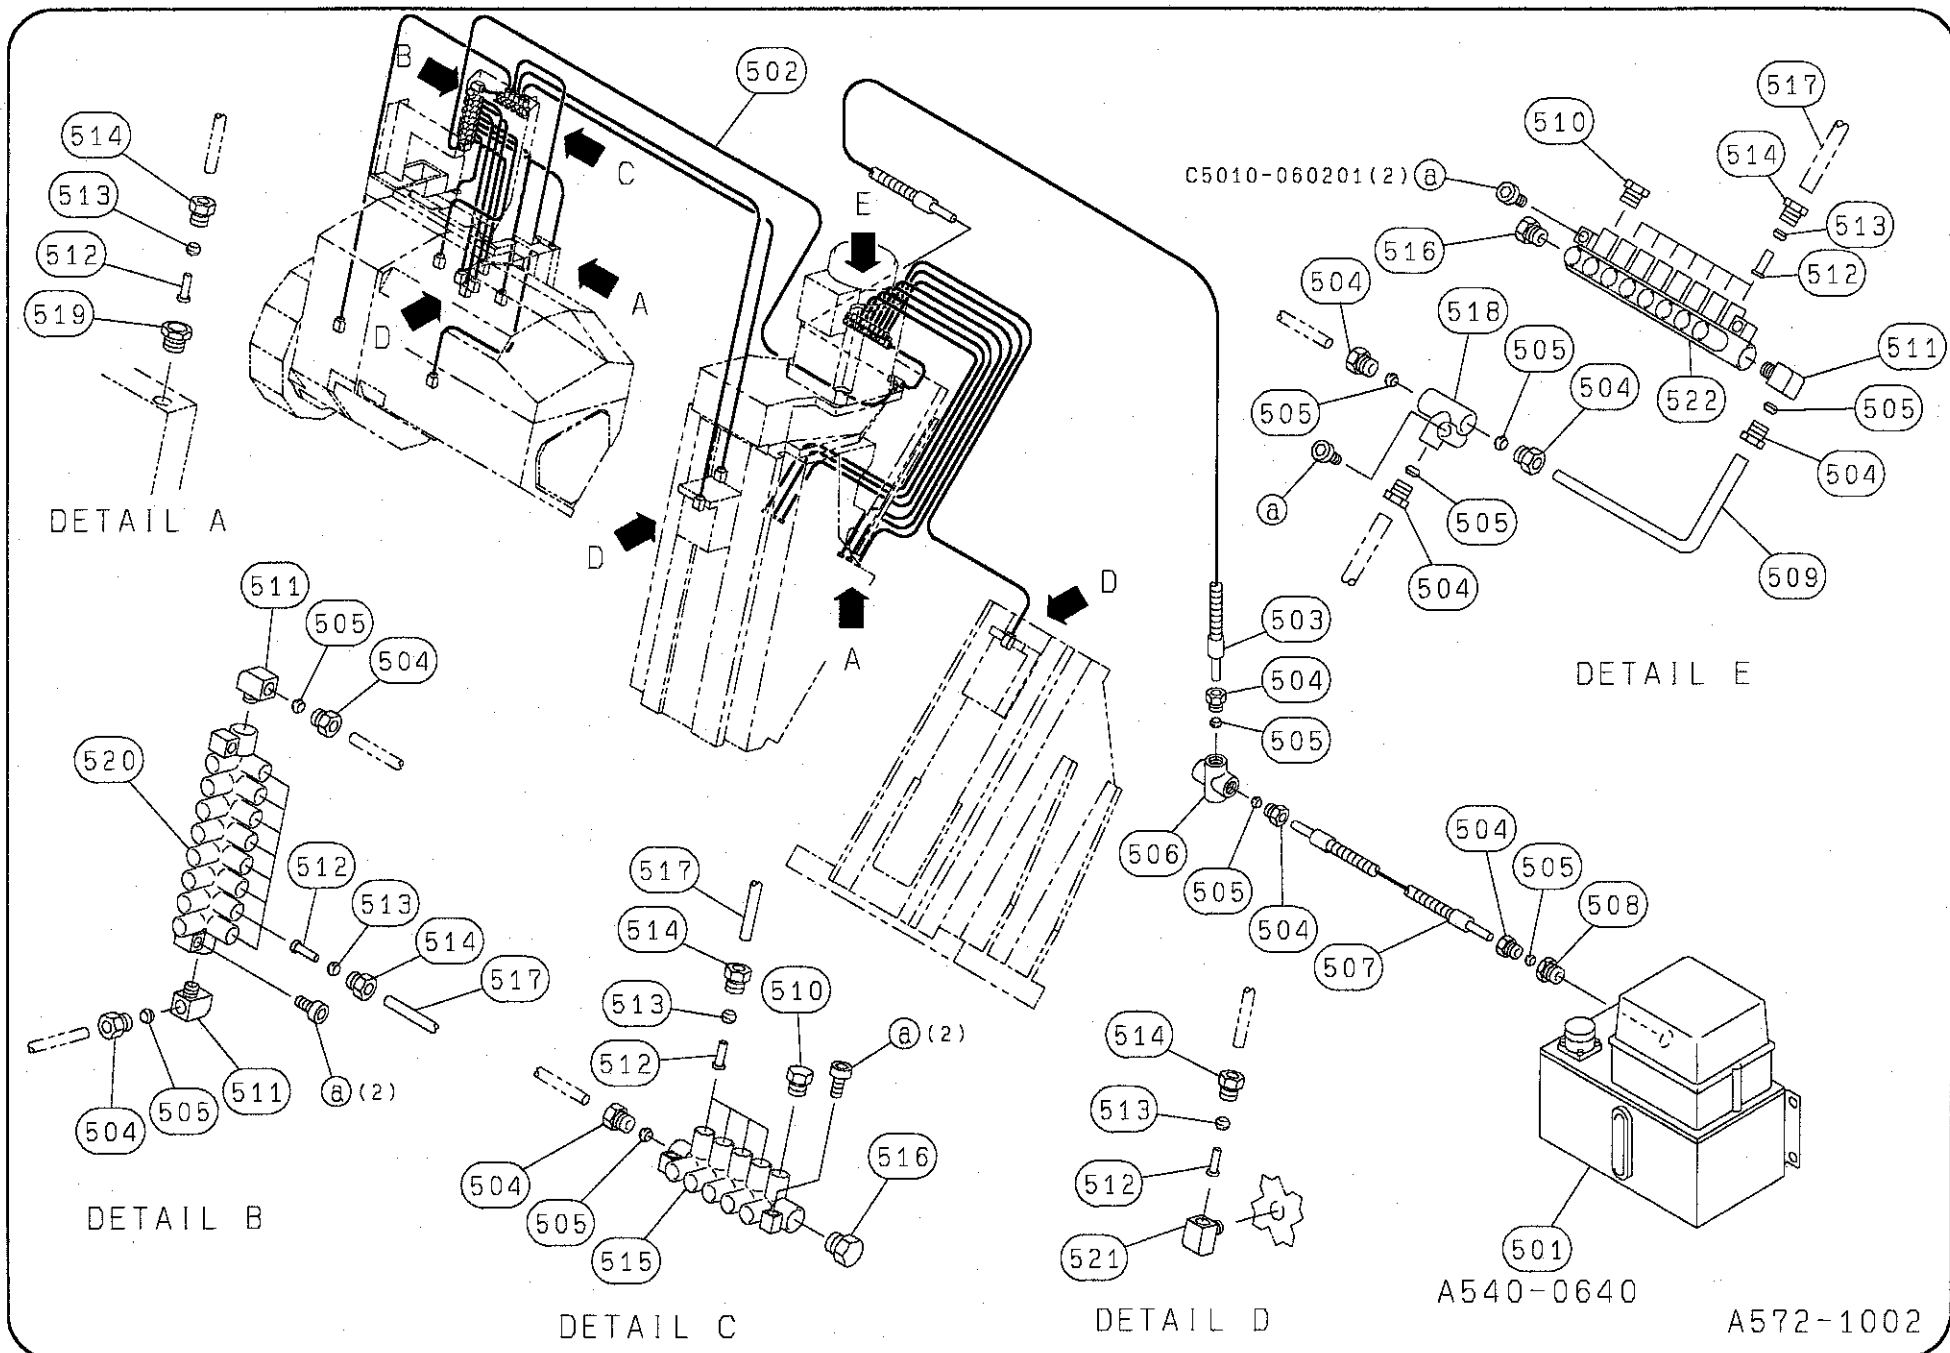


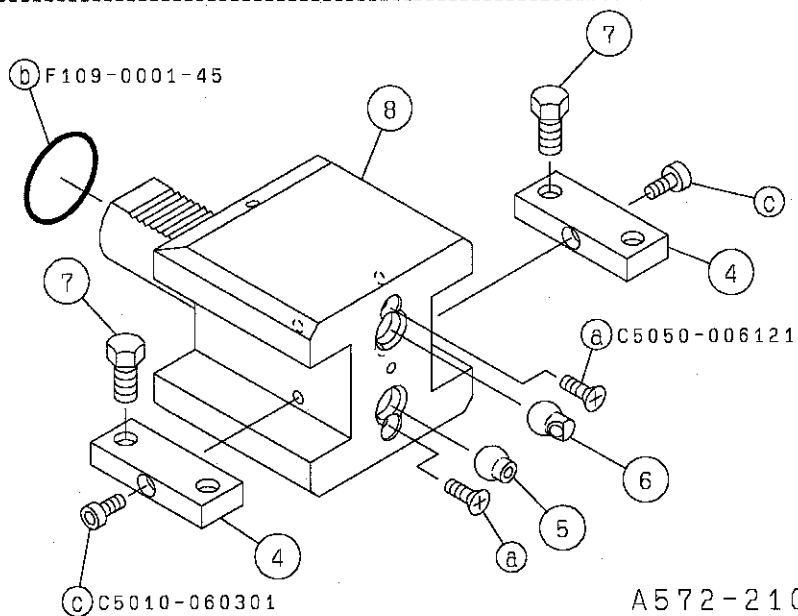


A572-2105

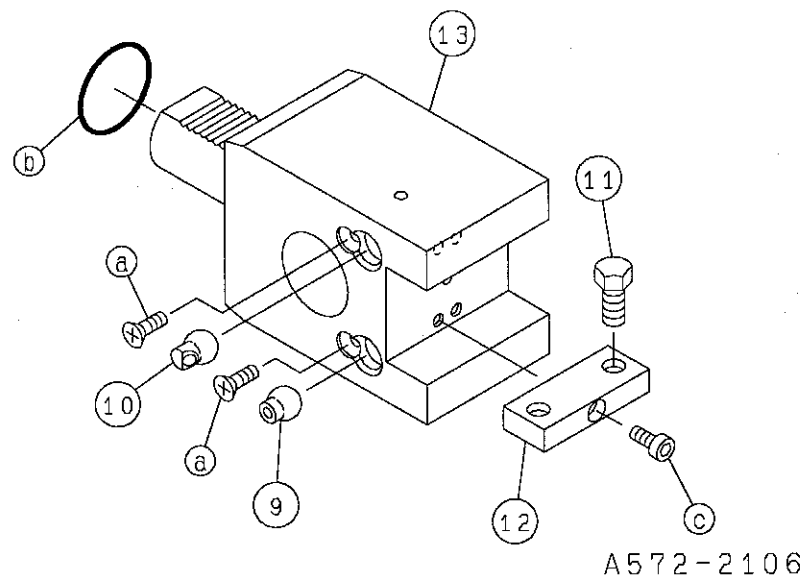


A572-2106

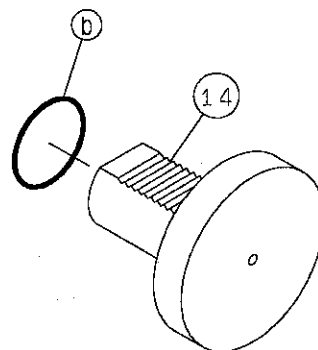


A555-2290

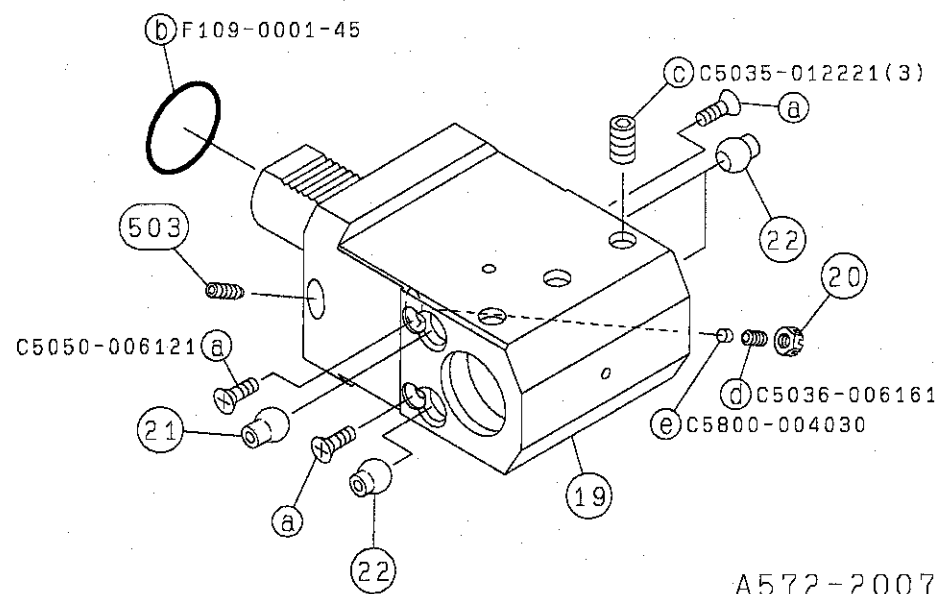

A572-2007

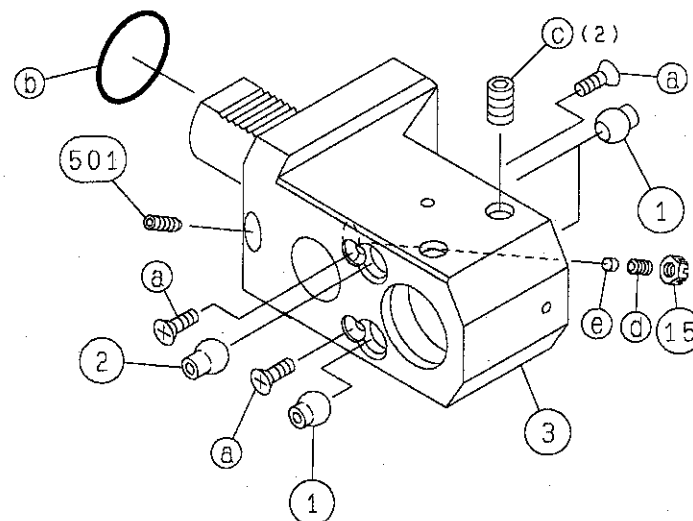


A572-2008

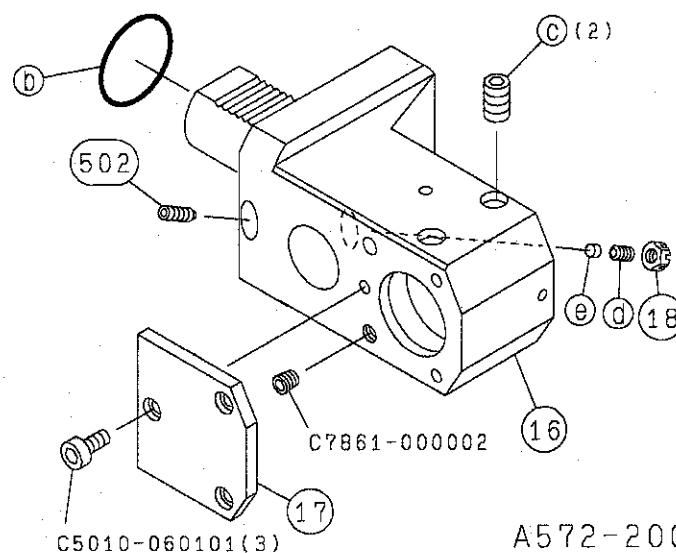

A572-2009

225

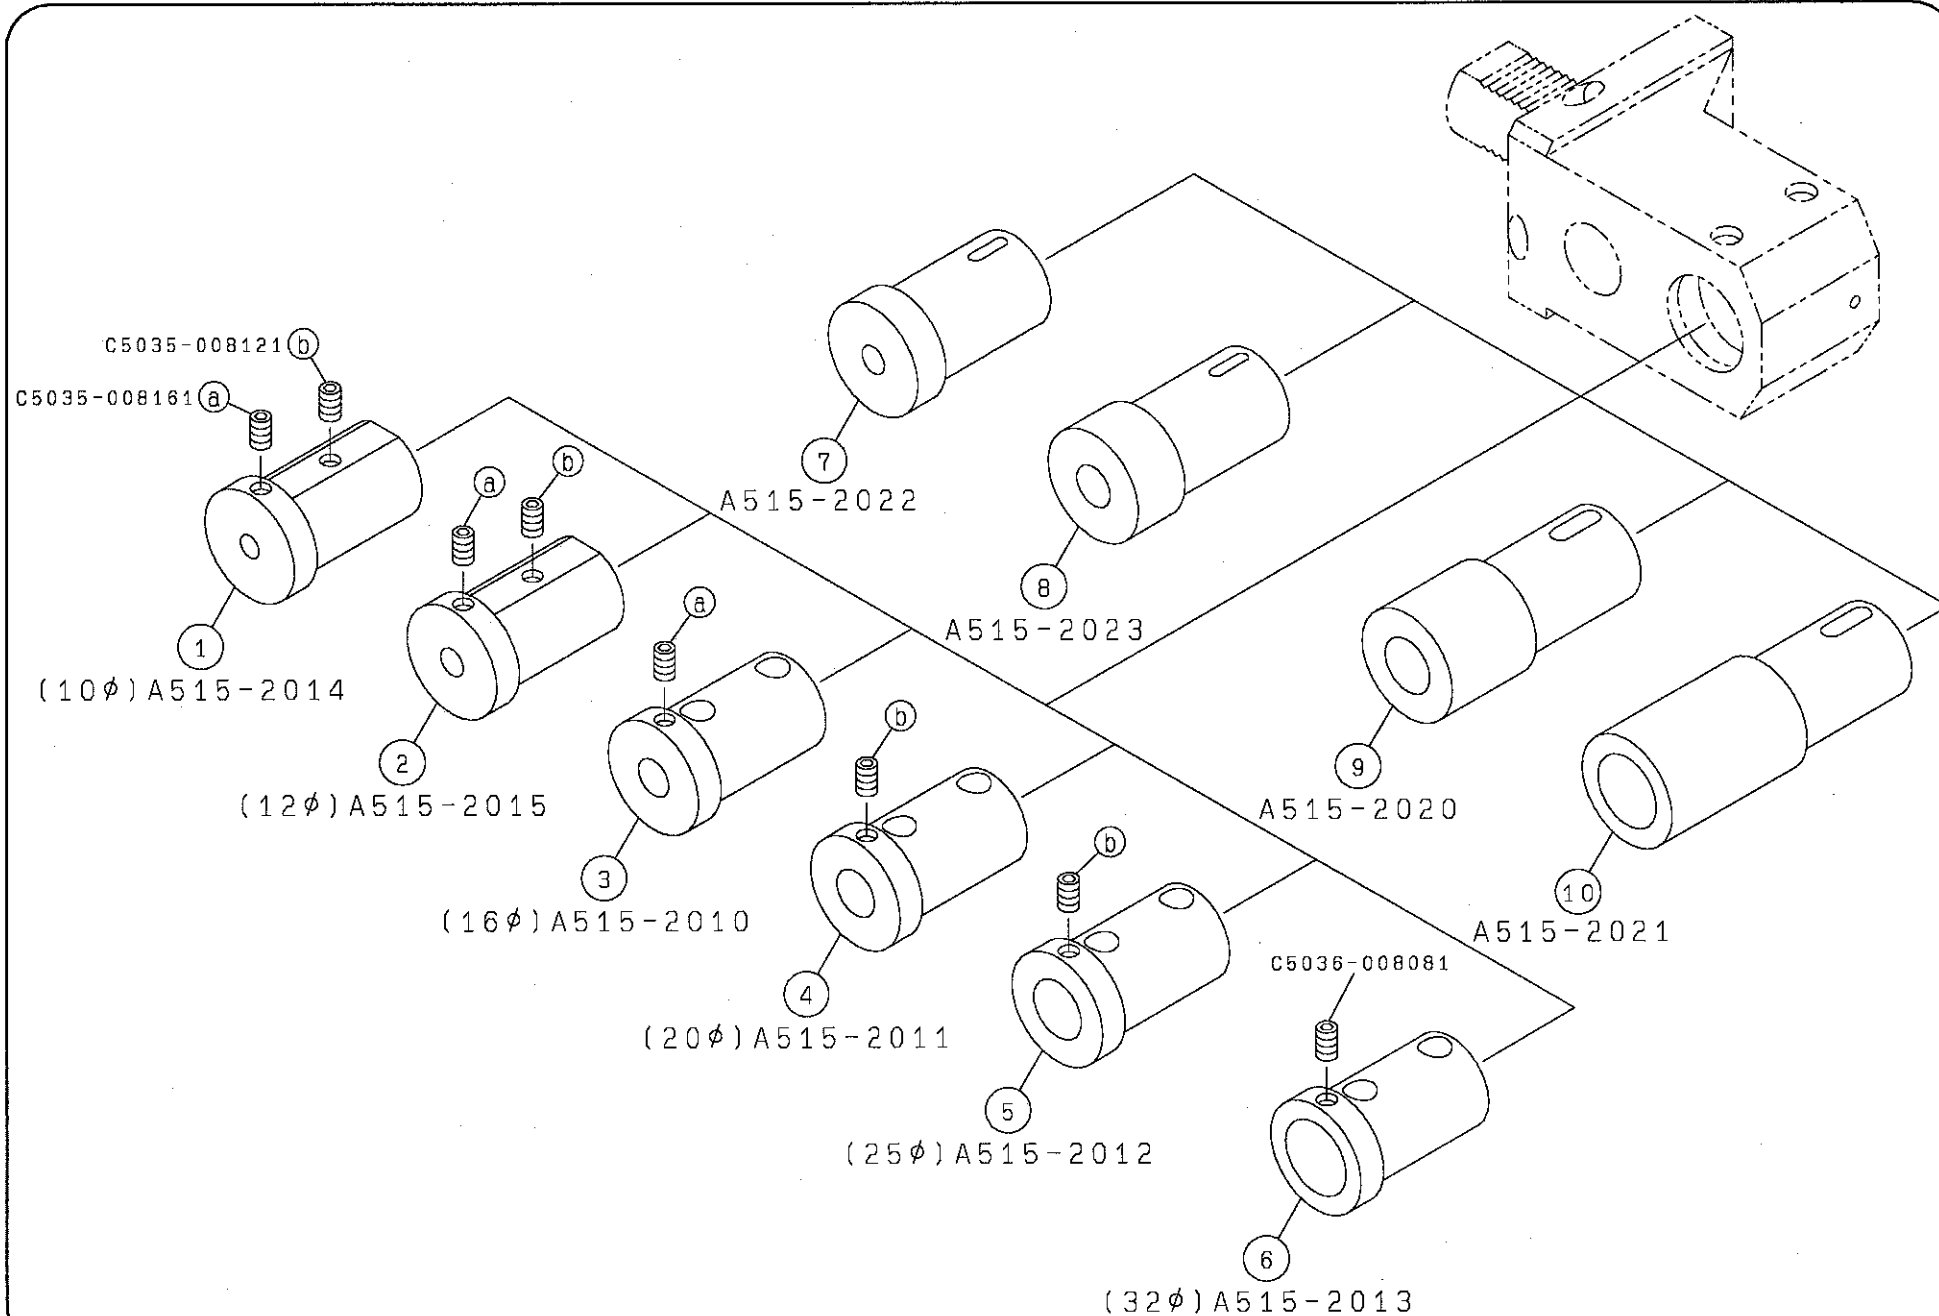

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
201 -042	572-0311-12	HOLDER	A572-0360	1	203 -058	572-0310-87-02	BLOCK	A572-0360	12
201 -045	572-0360-36	COVER	A572-1002	1	203 -061	572-0320-01-05	TURRET	A572-0360	1
201 -046	572-0360-23-01	COVER	A572-0360	1	203 -501	H1002-1000-36	PIN S45C	A572-0360	2
201 -048	572-0310-37-02	PLATE	A572-0360	1	203 -502	H1004-0003-17	GT-WASHER GOSHO	A572-0360	6
201 -054	572-0311-13	SHAFT	A572-0360	1					
201 -059	572-0360-18-03	COVER	A572-0360	1	204 -002	555-0320-16	COLLAR	A572-0360	2
201 -062	572-0360-37-01	COVER	A572-1002	1	204 -003	555-0320-17	SHAFT	A572-0360	2
201 -063	572-0360-12-02	CAP	A572-1002	1	204 -007	572-0300-37-01	CAP	A572-0360	1
201 -064	572-0311-03	CAP	A572-1002	1	204 -018	572-0300-70-02	GEAR	A572-0360	1
					204 -020	572-0310-13-03	CLUTCH	A572-0360	1
202 -004	572-0311-22	PIN	A572-0360	12	204 -022	572-0310-20-04	BLOCK	A572-0360	1
202 -005	572-0311-23	BOLT	A572-0360	12	204 -024	572-0310-22	PIN	A572-0360	1
202 -017	572-0300-61-01	CAP	A572-0360	1	204 -031	572-0310-10-03	BOX	A572-0360	1
202 -037	572-0310-18-01	BUSHING	A572-0360	1	204 -045	572-0310-32-06	SHAFT	A572-0360	1
202 -044	572-0310-31-02	HOUSING	A572-0360	1	204 -046	572-0311-21-01	COLLAR	A572-0360	1
202 -501	H1040-1045-55-3	NAMEPLATE	A572-0360	1					
202 -502	H0031-0005-01	X-RING NIHON BARU KA	A572-0360	1	205 -002	572-0310-52-01	LABYRINTH	A572-0360	1
					205 -026	572-0360-03-01	CLUTCH	A572-0360	1
203 -006	572-0300-07-02	CAP	A572-0360	10	205 -033	572-0310-12-02	PISTON	A572-0360	1
203 -008	572-0300-10-04	SHAFT	A572-0360	1	205 -049	572-0360-04-02	FLANGE	A572-0360	1
203 -009	572-0300-42	COLLAR	A572-0360	9	205 -501	H0031-0007-76	PACKING SAKAGAMI	A572-0360	1
203 -010	572-0300-43	PIN	A572-0360	9	205 -502	H0031-0007-83	PACKING SAKAGAMI	A572-0360	1
203 -011	572-0300-26-04	COLLAR	A572-0360	1					
203 -012	572-0360-15-03	DOG	A572-0360	1	206 -001	572-0311-18	CAP	A572-0360	1
203 -013	572-0360-14-01	DOG	A572-0360	1	206 -002	572-0300-84-05	PIPE	A572-0360	1
203 -021	572-0310-17	RING	A572-0360	1	206 -003	572-0311-19	SUPPORT	A572-0360	1
203 -023	572-0310-21	SHAFT	A572-0360	9	206 -004	572-0300-83-04	PIPE	A572-0360	1
203 -025	572-0360-02-04	CLUTCH	A572-0360	1	206 -005	572-0300-55-02	GEAR	A572-0360	1
203 -027	572-0310-05-04	CLUTCH	A572-0360	1	206 -006	572-0300-38-01	COLLAR	A572-0360	1
203 -043	572-0310-28-03	FACE PLATE	A572-0360	1	206 -007	572-0300-46	COLLAR	A572-0360	1
203 -057	572-0310-86	BOLT	A572-0360	12	206 -008	572-0300-45	COLLAR	A572-0360	1


SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
206 -009	572-0300-34	COLLAR	A572-0360	1	208 -041	572-0310-25	KEY	A572-0360	1
206 -010	572-0300-44-05	SHAFT	A572-0360	1	208 -053	572-0360-29-01	BASE, motor	A572-0360	1
206 -011	572-0310-15-03	HOUSING	A572-0360	1					
206 -012	572-0300-47-02	COLLAR	A572-0360	1	209 -001	572-0310-42-02	BLOCK	A572-0360	1
206 -013	572-0310-34-01	HOLDER	A572-0360	1	209 -004	555-0320-38	FLANGE	A572-0360	1
					209 -015	572-0300-48-01	COLLAR	A572-0360	1
207 -001	572-0310-07-04	SHAFT	A572-0360	1	209 -019	572-0300-85	COLLAR	A572-0360	1
207 -002	572-0360-34-02	TOOL POST	A572-0360	1	209 -026	572-0360-24-02	BASE, motor	A572-0360	1
207 -003	572-0310-11-02	SHAFT	A572-0360	1	209 -027	572-0310-76-03	COVER	A572-0360	1
207 -004	572-0300-71-02	KEY	A572-0360	1	209 -028	572-0310-77-02	BLOCK	A572-0360	1
207 -005	572-0360-22-01	HOUSING	A572-0360	1	209 -029	572-0310-80	FLANGE	A572-0360	1
207 -007	572-0300-28-01	COLLAR	A572-0360	1	209 -030	572-0310-81	COLLAR	A572-0360	1
207 -008	572-0300-27-01	COLLAR	A572-0360	1	209 -031	572-0310-88	BASE	A572-0360	1
207 -009	572-0300-66-01	COLLAR	A572-0360	1	209 -032	572-0310-89-01	COVER	A572-0360	1
207 -010	572-0310-24-01	GEAR	A572-0360	1	209 -050	572-0310-44-02	CAP	A572-0360	1
207 -011	572-0310-16-01	SLEEVE	A572-0360	1	209 -052	572-0310-73-03	BLOCK	A572-0360	1
207 -012	572-0300-67-01	COLLAR	A572-0360	1	209 -501	H1012-0002-16	POWER LOCK TUBAKI MOTO	A572-0360	2
207 -013	572-0360-17-03	COVER	A572-0360	1	209 -502	H1012-0003-09	POWER LOCK TUBAKI MOTO	A572-0360	2
207 -014	572-0360-13-05	SUPPORT	A572-0360	1	209 -503	H1019-0009-17	PULLEY, scynchro B ANDO	A572-0305	1
207 -015	572-0360-35	BLOCK	A572-0360	1	209 -504	H1019-0009-18	PULLEY, scynchro B ANDO	A572-0360	1
208 -002	555-0300-21-02	CAP	A572-0360	1	210 -065	572-0610-04-03	MANIFOLD	A572-1002	1
208 -004	112-0320-09	NUT	A572-0360	1	210 -501	H0130-0012-10-1	HYDRAULIC UNIT NA CHI	A572-0600	1
208 -005	555-0300-40-01	WASHER	A572-0360	1	210 -502	H0130-0012-11-1	HYDRAULIC UNIT NA CHI	A572-0601	1
208 -014	572-0300-32-02	SLEEVE	A572-0360	1					
208 -015	572-0300-33	GEAR	A572-0360	1	221 -001	572-0262-14-02	SUPPORT	A572-1002	1
208 -016	572-0300-36-02	COLLAR	A572-0360	1	221 -002	572-0262-25	SUPPORT	A572-1002	1
208 -018	572-0300-63-01	GEAR	A572-0360	1	221 -003	572-0262-26	SUPPORT	A572-1002	1
208 -030	572-0360-26-02	BASE	A572-0360	1	221 -004	572-0263-12	DOG	A572-1002	2
208 -034	572-0310-14	GEAR	A572-0360	1	221 -005	572-0262-11	SUPPORT	A572-1002	1
208 -039	572-0310-23	SLEEVE	A572-0360	1	221 -501	H9009-1200-08-1	TERMINAL BOX	A572-1002	1

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
221A-001	572-0263-57	BOLT	A572-1002	4	223 -001	572-0263-52	COVER	A572-0260	1
221A-002	572-0263-60	SUPPORT	A572-1002	1	223 -002	572-0263-36-01	BRACKET	A572-0260	1
221A-003	592-0244-01	NUT	A572-1002	4	223 -003	515-0200-17-01	KEY	A572-0260	1
221A-004	592-0263-13	PLATE	A572-1002	4	223 -004	572-0220-14	SPASER	A572-0260	1
221A-005	572-0263-15	BOLT	A572-1002	1	223 -005	118-2100-86-1	WASHER	A572-0260	1
221A-006	572-0263-10	SUPPORT	A572-1002	1	223 -006	555-0230-22	STOPPER	A572-0260	1
221A-007	572-0263-12	DOG	A572-1002	2	223 -007	555-0230-21-04	NUT	A572-0260	1
221A-008	572-0263-11	PLATE	A572-1002	1	223 -008	572-0263-30	COVER	A572-0260	1
221A-501	H9011-1700-05	TERMINAL BOX	A572-1002	1	223 -009	572-0262-18	COLLAR	A572-0260	1
222 -001	572-0263-43	GIB	A572-0260	2	223 -010	522-0220-22-03	BUSHING	A572-0260	1
222 -002	572-0263-42-02	BACK PLATE	A572-0260	1	223 -011	555-0230-11-01	NUT	A572-0260	1
222 -003	101-0300-14	NUT	A572-0260	3	223 -012	118-2100-85	NUT	A572-0260	1
222 -004	101-0300-13-1	BOLT	A572-0260	3	223 -013	572-0263-06	BASE	A572-0260	1
222 -005	572-0263-54	SUPPORT	A572-0260	1	223 -501	H1019-0009-42-2	PULLEY, scynchro B ANDO	A572-0260	1
222 -006	572-0263-47-01	NUT	A572-0260	1	223 -502	H1019-0009-41-1	PULLEY, scynchro B ANDO	A572-0260	1
222 -007	572-0263-45-01	NUT	A572-0260	1	223 -503	H1020-1139-83	PLATE	A572-0260	1
222 -008	572-0263-48-01	NUT	A572-0260	1	224 -001	572-0263-08	BRACKET	A572-0260	1
222 -009	572-0263-40-01	CROSS-SLIDE	A572-0260	1	224 -002	572-0263-28-02	HOUSING	A572-0260	1
222 -010	572-0263-46-01	NUT	A572-0260	1	224 -003	555-0230-12-02	NUT	A572-0260	1
222 -011	572-0263-49-01	PISTON	A572-0260	1	224 -004	555-0230-19-02	CAP	A572-0260	1
222 -012	572-0263-38	CAP	A572-0260	1	224 -006	555-0230-10	COLLAR	A572-0260	1
222 -013	572-0263-41-02	BACK PLATE	A572-0260	1	224 -007	515-0395-11-01	SUPPORT	A572-0260	1
222 -014	572-0263-39	CAP	A572-0260	4	224 -008	515-0395-10-01	NUT	A572-0260	2
222 -015	522-0250-24	PISTON	A572-0260	4	224 -009	572-0263-04	PLATE	A572-0260	1
222 -016	572-0201-08-02	PIN	A572-0260	1	224 -010	572-0263-29	PLATE	A572-0260	1
222 -017	572-0263-44	GIB	A572-0260	1	224 -501	H1014-0010-42	BALL-SCREW	A572-0275	1
222 -501	H1023-0018-36-1	WIPER	A572-0260	1	224 -502	H1020-1139-82	STOPPER	A572-0260	1
222 -502	H0031-0017-36	PACKING	A572-0260	5	225 -001	572-0263-50-02	SADDLE	A572-0260	1
					225 -002	572-0263-37	BOLT	A572-0260	2

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
225 -003	522-0250-39	BOLT	A572-0260	2	228 -501	H0120-0002-82	TANK, lubrication SHOWA	A572-0640	1
225 -004	572-0263-33-01	BACK PLATE	A572-0260	1	228 -502	H0022-0003-98	HOSE FSC612 SHOE A	A572-1002	1
225 -005	108-0301-18-2	NUT	A572-0260	3	228 -503	H0022-0003-48	HOSE FSC642 SHOWA	A572-1002	1
225 -006	108-0301-17-1	BOLT	A572-0260	3	228 -504	H0012-0001-12	PLUG PA6 SHOWA	A572-1002	10
225 -007	572-0263-34	GIB	A572-0260	2	228 -505	H0012-0001-11	SLEEVE PB6 SHOWA	A572-1002	10
225 -008	572-0263-35	GIB	A572-0260	1	228 -506	H0015-0002-26	CROSS PJD406 SHOW A	A572-1002	1
225 -009	572-0262-06-01	PLATE	A572-0260	1	228 -507	H0022-0004-45	HOSE FSC631 SHOWA	A572-1002	1
225 -010	522-0221-31-4	NUT	A572-0260	2	228 -508	H0012-0004-21	NIPPLE KH2 SHOWA	A572-1002	1
225 -011	572-0263-53	COVER	A572-0260	1	228 -509	H0026-0006-73	PIPE, nylon 6X200	A572-1002	1
225 -012	572-0263-32-01	BACK PLATE	A572-0260	1	228 -510	H0012-0008-13	SEAL PLUG PG8C SH OWA	A572-1002	5
225 -013	572-0262-17	PLATE	A572-0260	1	228 -511	H0012-0005-94	ELBOW PH6-M10 SHO WA	A572-1002	3
225 -501	H1023-0018-40-1	WIPER	A572-0260	1	228 -512	H0010-0011-04	INSERT AL4 SHOWA	A572-1002	32
226 -001	572-0262-23	CAP	A572-0260	1	228 -513	H0012-0000-89	SLEEVE PB4 SHOWA	A572-1002	32
226 -002	572-0262-21	BRACKET	A572-0260	1	228 -514	H0012-0000-88	PLUG PA4 SHOWA	A572-1002	32
226 -003	572-0262-24	CAP	A572-0260	1	228 -515	H0019-0002-41	DISTRIBUTOR DS5 S HOWA	A572-1002	1
226 -004	572-0220-14	SPACER	A572-0260	1	228 -516	H0012-0004-37	SEAL PLUG PG10C S HOWA	A572-1002	2
226 -005	572-0231-43	STOPPER	A572-0260	1	228 -517	H0026-0006-72	PIPE, nylon 4X4000 O	A572-1002	1
226 -006	555-0230-21-04	NUT	A572-0260	1	228 -518	H0012-0004-22	TEE PKD6 SHOWA	A572-1002	1
226 -007	555-0230-11-01	NUT	A572-0260	1	228 -519	H0012-0002-48	NIPPLE PD4 SHOWA	A572-1002	8
226 -008	572-0262-18	COLLAR	A572-0260	1	228 -520	H0019-0002-40	DISTRIBUTOR DS8 S HOWA	A572-1002	1
226 -501	H1012-0004-01	COUPLING	A572-0260	1	228 -521	H0010-0300-28	ELBOW PH4 SHOWA	A572-1002	8
226 -502	H1020-1139-84	STOPPER	A572-0260	1	228 -522	H0019-0002-88	DISTRIBUTOR DS8 S HOWA	A572-1002	1
227 -001	572-0220-09-01	BRACKET	A572-0260	1	232 -004	572-2100-02	BLOCK	A572-2105	2
227 -002	572-0262-22	BRACKET	A572-0260	1	232 -005	118-8001-30-1	CAP	A572-2105	1
227 -003	555-0230-11-01	NUT	A572-0260	1	232 -006	572-0311-25	NOZZLE	A572-2105	1
227 -004	572-0220-05-01	CAP	A572-0260	1	232 -007	127-3300-26	BOLT	A572-2105	4
227 -005	572-0200-12	COLLAR	A572-0260	1	232 -008	572-2100-20-01	HOLDER (VDI OUT1)	A572-2105	1
227 -501	H1014-0010-43-1	BALL-SCREW	A572-0274	1	232 -009	118-8001-30-1	CAP	A572-2106	1
227 -502	H1020-1137-25	STOPPER	A572-0260	1	232 -010	572-0311-25	NOZZLE	A572-2106	1

229

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
232 -011	127-3300-26	BOLT	A572-2106	2					
232 -012	572-2100-02	BLOCK	A572-2106	1					
232 -013	572-2100-21-01	HOLDER (VDI OUT2)	A572-2106	1					
232 -014	555-2500-08	HOLDER	A555-2290	1					
233 -001	118-8001-30-1	CAP	A572-2008	3					
233 -002	572-0311-24	NOZZLE	A572-2008	1					
233 -003	572-2000-19-01	HOLDER	A572-2008	1					
233 -015	572-2000-11-01	NUT	A572-2008	1					
233 -016	572-2000-20-01	HOLDER (U DRILL)	A572-2009	1					
233 -017	572-2000-03	CAP	A572-2009	1					
233 -018	572-2000-11-01	NUT	A572-2009	1					
233 -019	572-2000-18-01	HOLDER (INSIDE 1)	A572-2007	1					
233 -020	572-2000-11-01	NUT	A572-2007	1					
233 -021	572-0311-24	NOZZLE	A572-2007	1					
233 -022	118-8001-30-1	CAP	A572-2007	3					
233 -501	H1001-1001-06-2	BOLT	A572-2008	2					
233 -502	H1001-1001-06-2	BOLT	A572-2009	2					
233 -503	H1001-1001-06-2	BOLT	A572-2007	2					
234 -001	515-2000-21-2	SLEEVE	A515-2014	1					
234 -002	515-2000-10-2	SLEEVE	A515-2015	1					
234 -003	515-2000-04-1	SLEEVE	A515-2010	1					
234 -004	515-2000-05-1	SLEEVE	A515-2011	1					
234 -005	515-2000-06-1	SLEEVE	A515-2012	1					
234 -006	515-2000-07-1	SLEEVE	A515-2013	1					
234 -007	515-2010-04-3	SLEEVE	A515-2022	1					
234 -008	515-2010-01-3	SLEEVE	A515-2023	1					
234 -009	515-2010-02-4	SLEEVE	A515-2020	1					
234 -010	515-2010-03-3	SLEEVE	A515-2021	1					

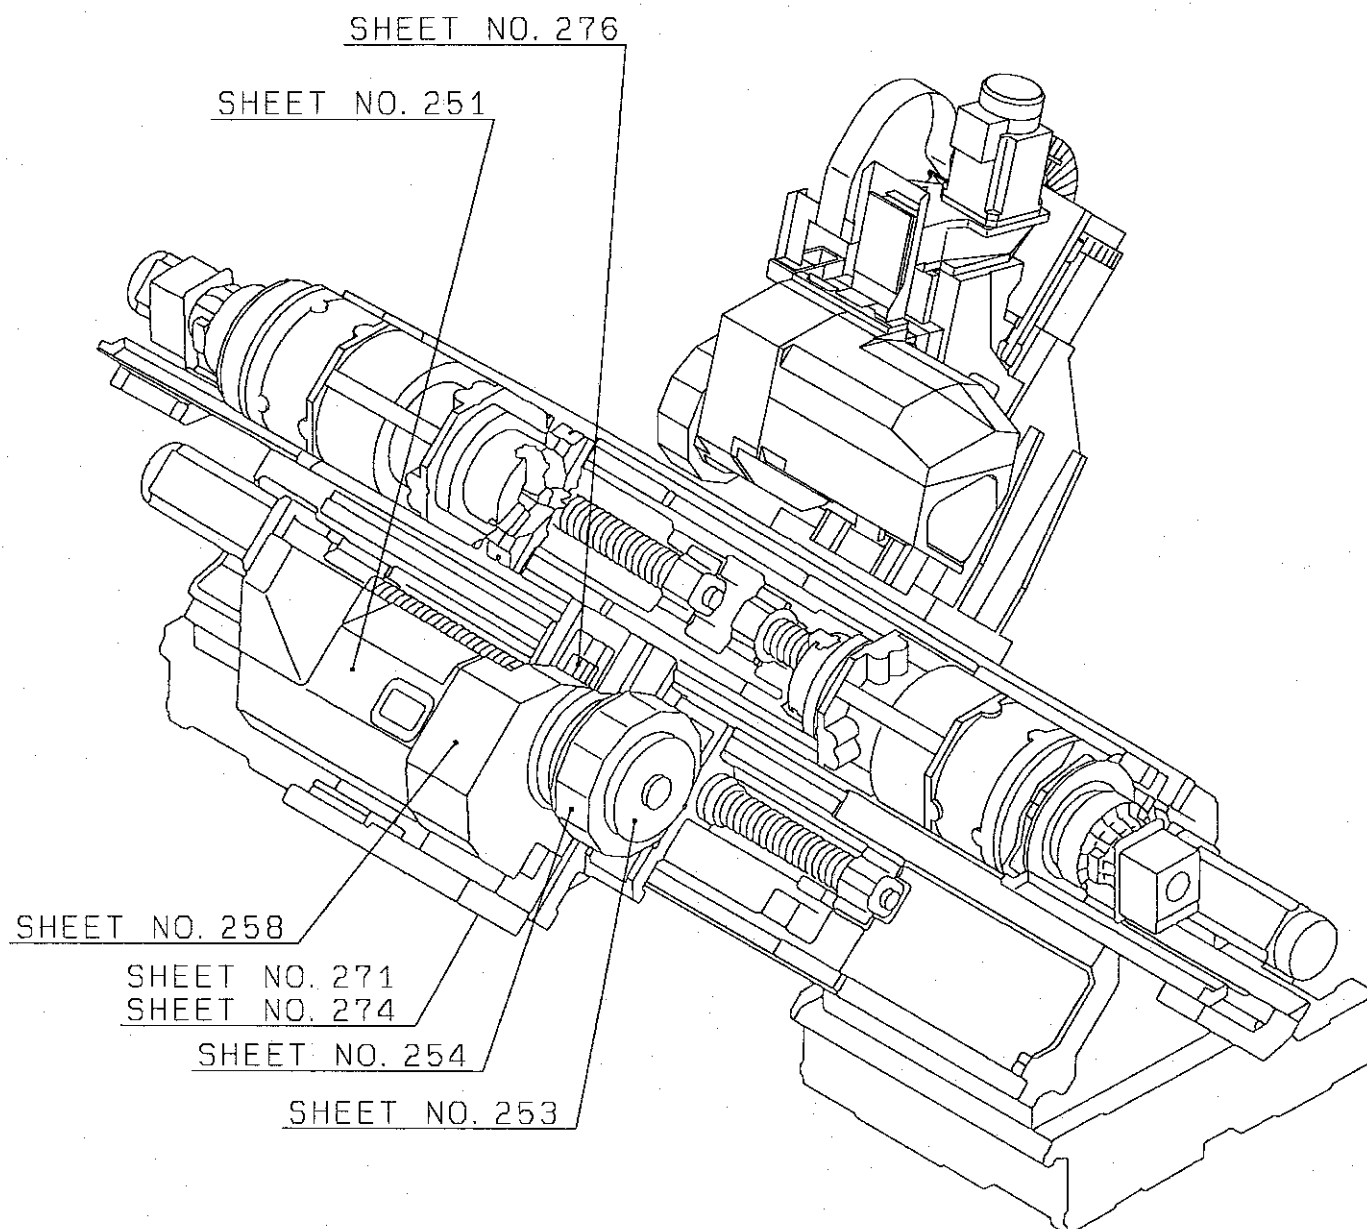


(3-2) LOWER TURRET & X-AXIS GROUP


~ C O N T E N T S ~

SHEET NO.	ASSEMBLY NAME	PAGE
251	LOWER INDEX INSTALLATION, V12	252
252	INDEX TURRET, V12 (1)	253
253	INDEX TURRET, V12 (2)	254
254	INDEX TURRET, V12 (3)	255
255	INDEX TURRET, V12 (4)	256
256	TURRET SHAFT, V12 (1)	257
257	TURRET SHAFT, V12 (2)	258
258	TURRET SHAFT, V12 (3)	259
259	INDEX DRIVE DEVICE, V12	260
260	M-AXIS DRIVE DEVICE, V12	261
261	HYDRAULIC SYSTEM	262
271	XB-AXIS COVERS (L. H)	263
271A	XB-AXIS COVERS (R. H)	263A
272	XB-AXIS WIPER	264
273	CROSS-SLIDE INSTALLATION	265
274	XB-AXIS DRIVE DEVICE	266
275	XB-AXIS BALL-SCREW (1)	267
276	XB-AXIS BALL-SCREW (2)	268
277	LOWER CROSS SLIDE LUBRICATION SYSTEM	269
278	LOWER SADDLE LUBRICATION SYSTEM	270
282	TOOLING SYSTEM, V12 (1)	272
283	TOOLING SYSTEM, V12 (2)	273
284	TOOLING SYSTEM, V12 (3)	274
I	INDEX NO. LIST	275


252

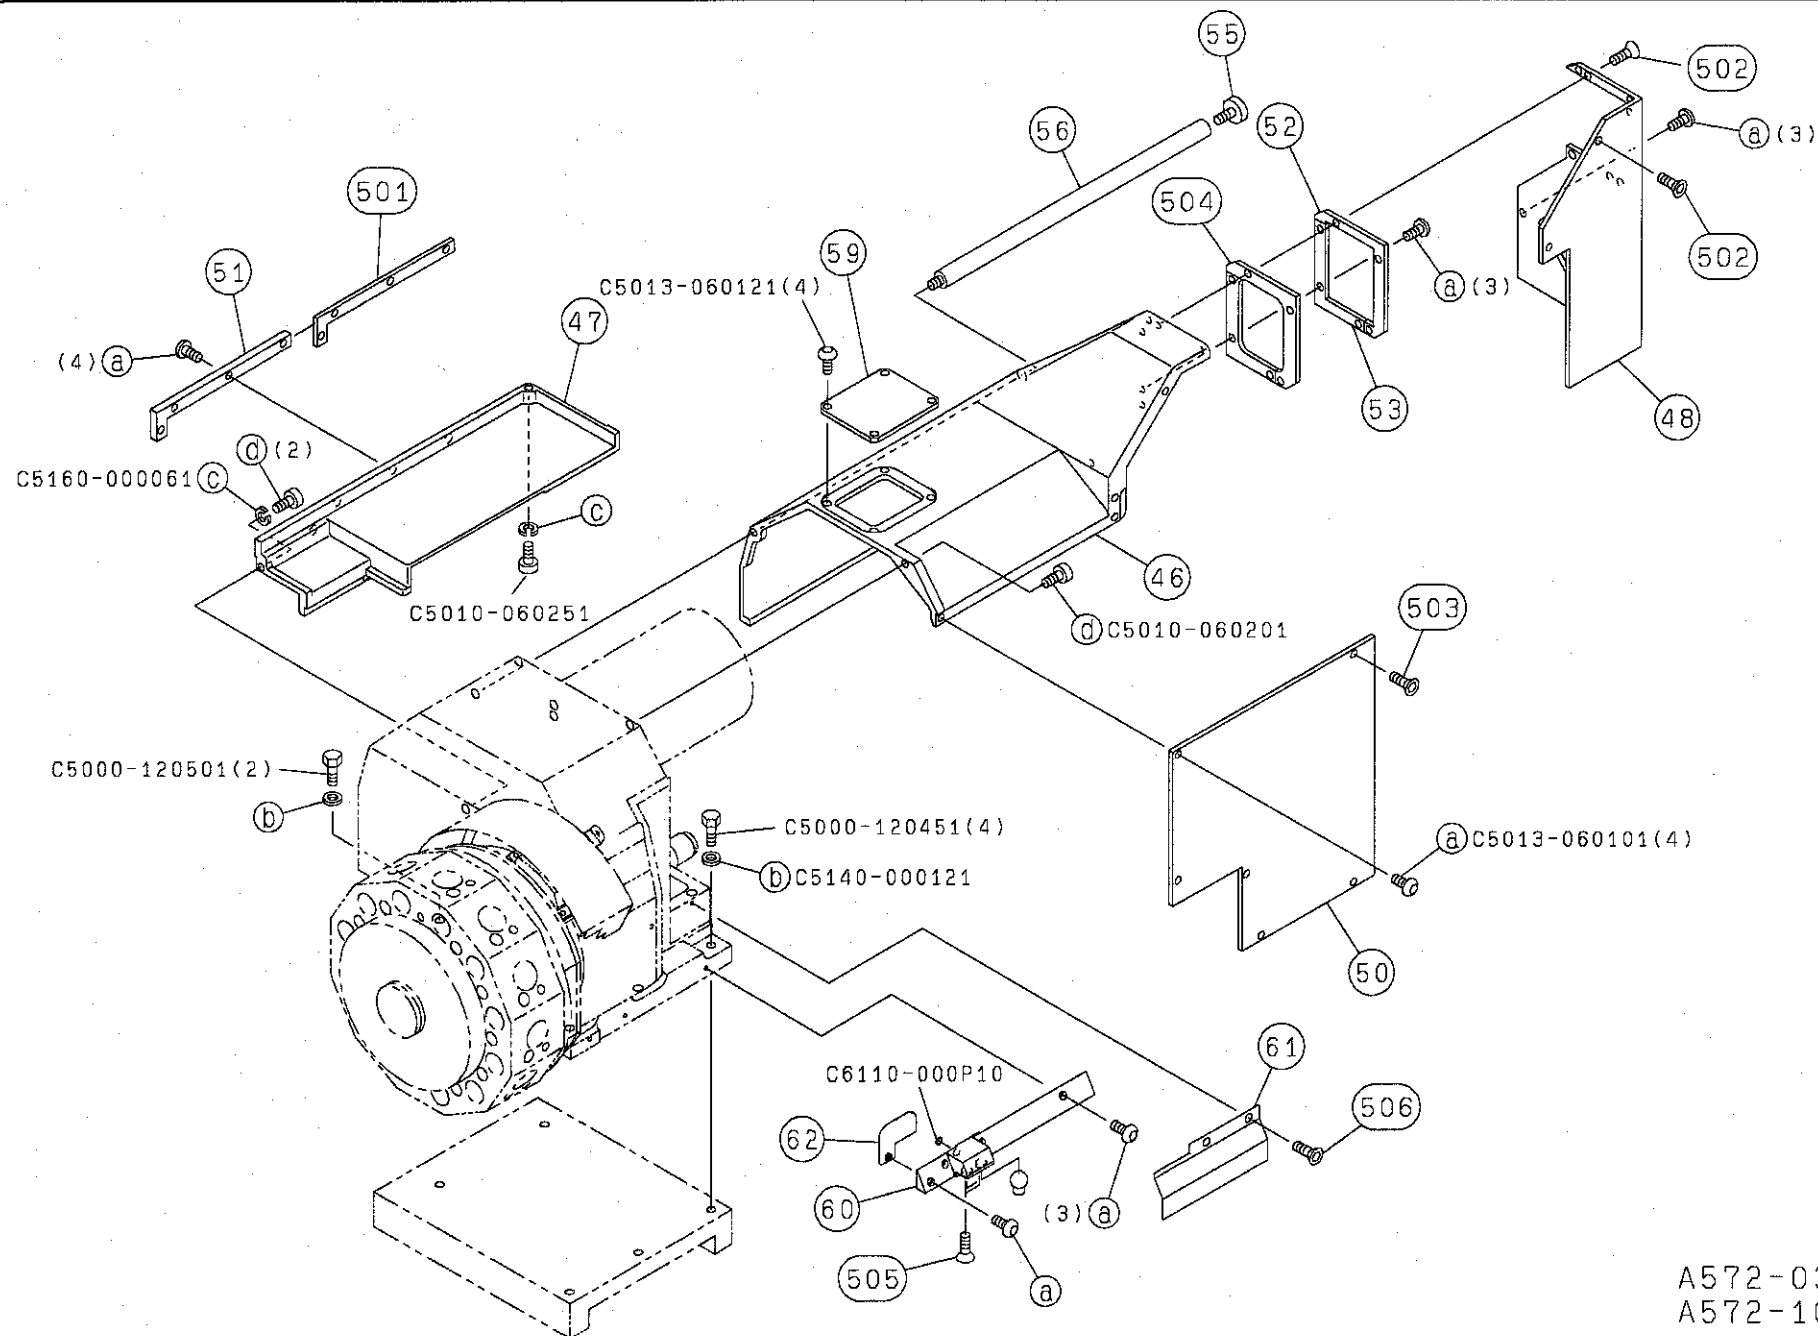


A572-0307
A572-1002

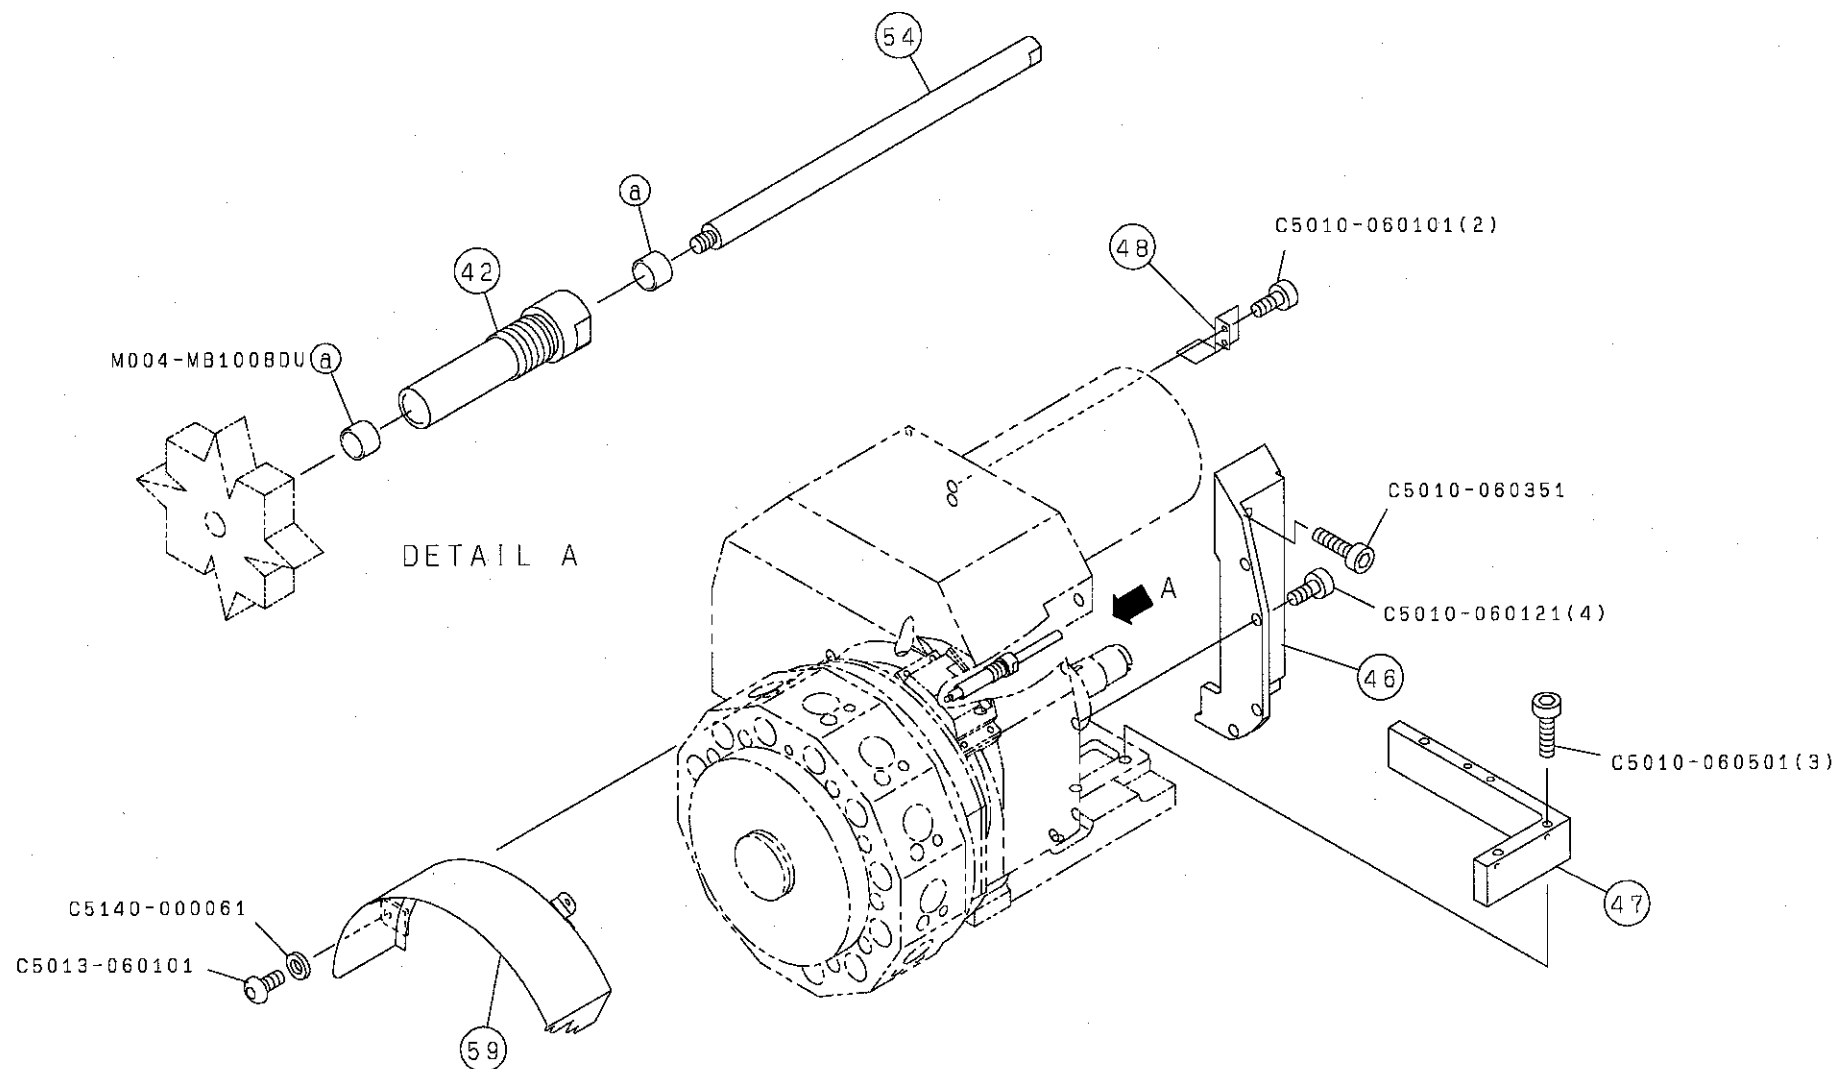


A572-0300
A572-0302

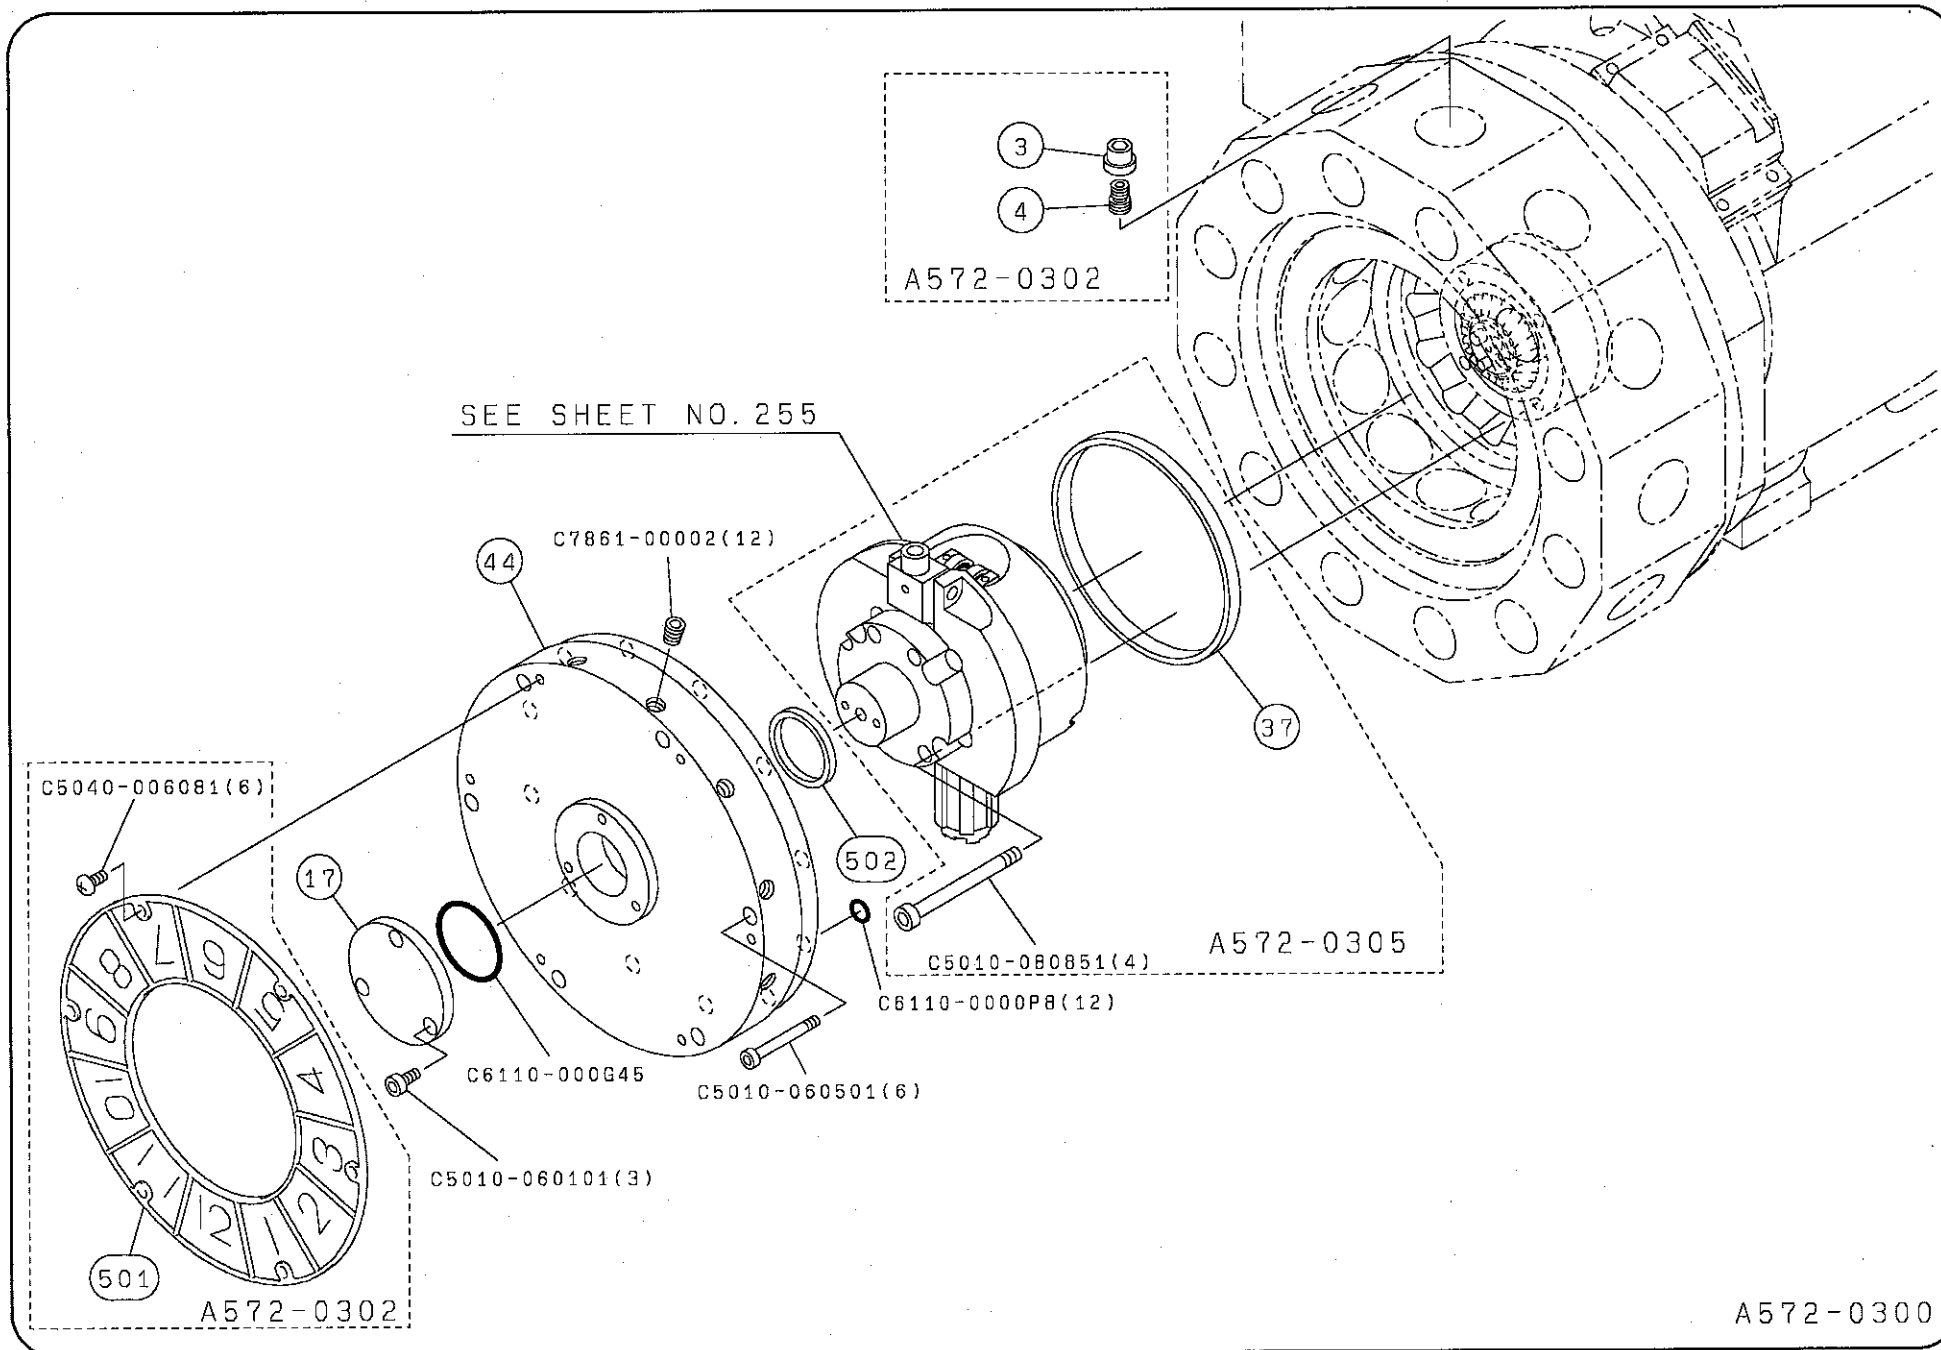


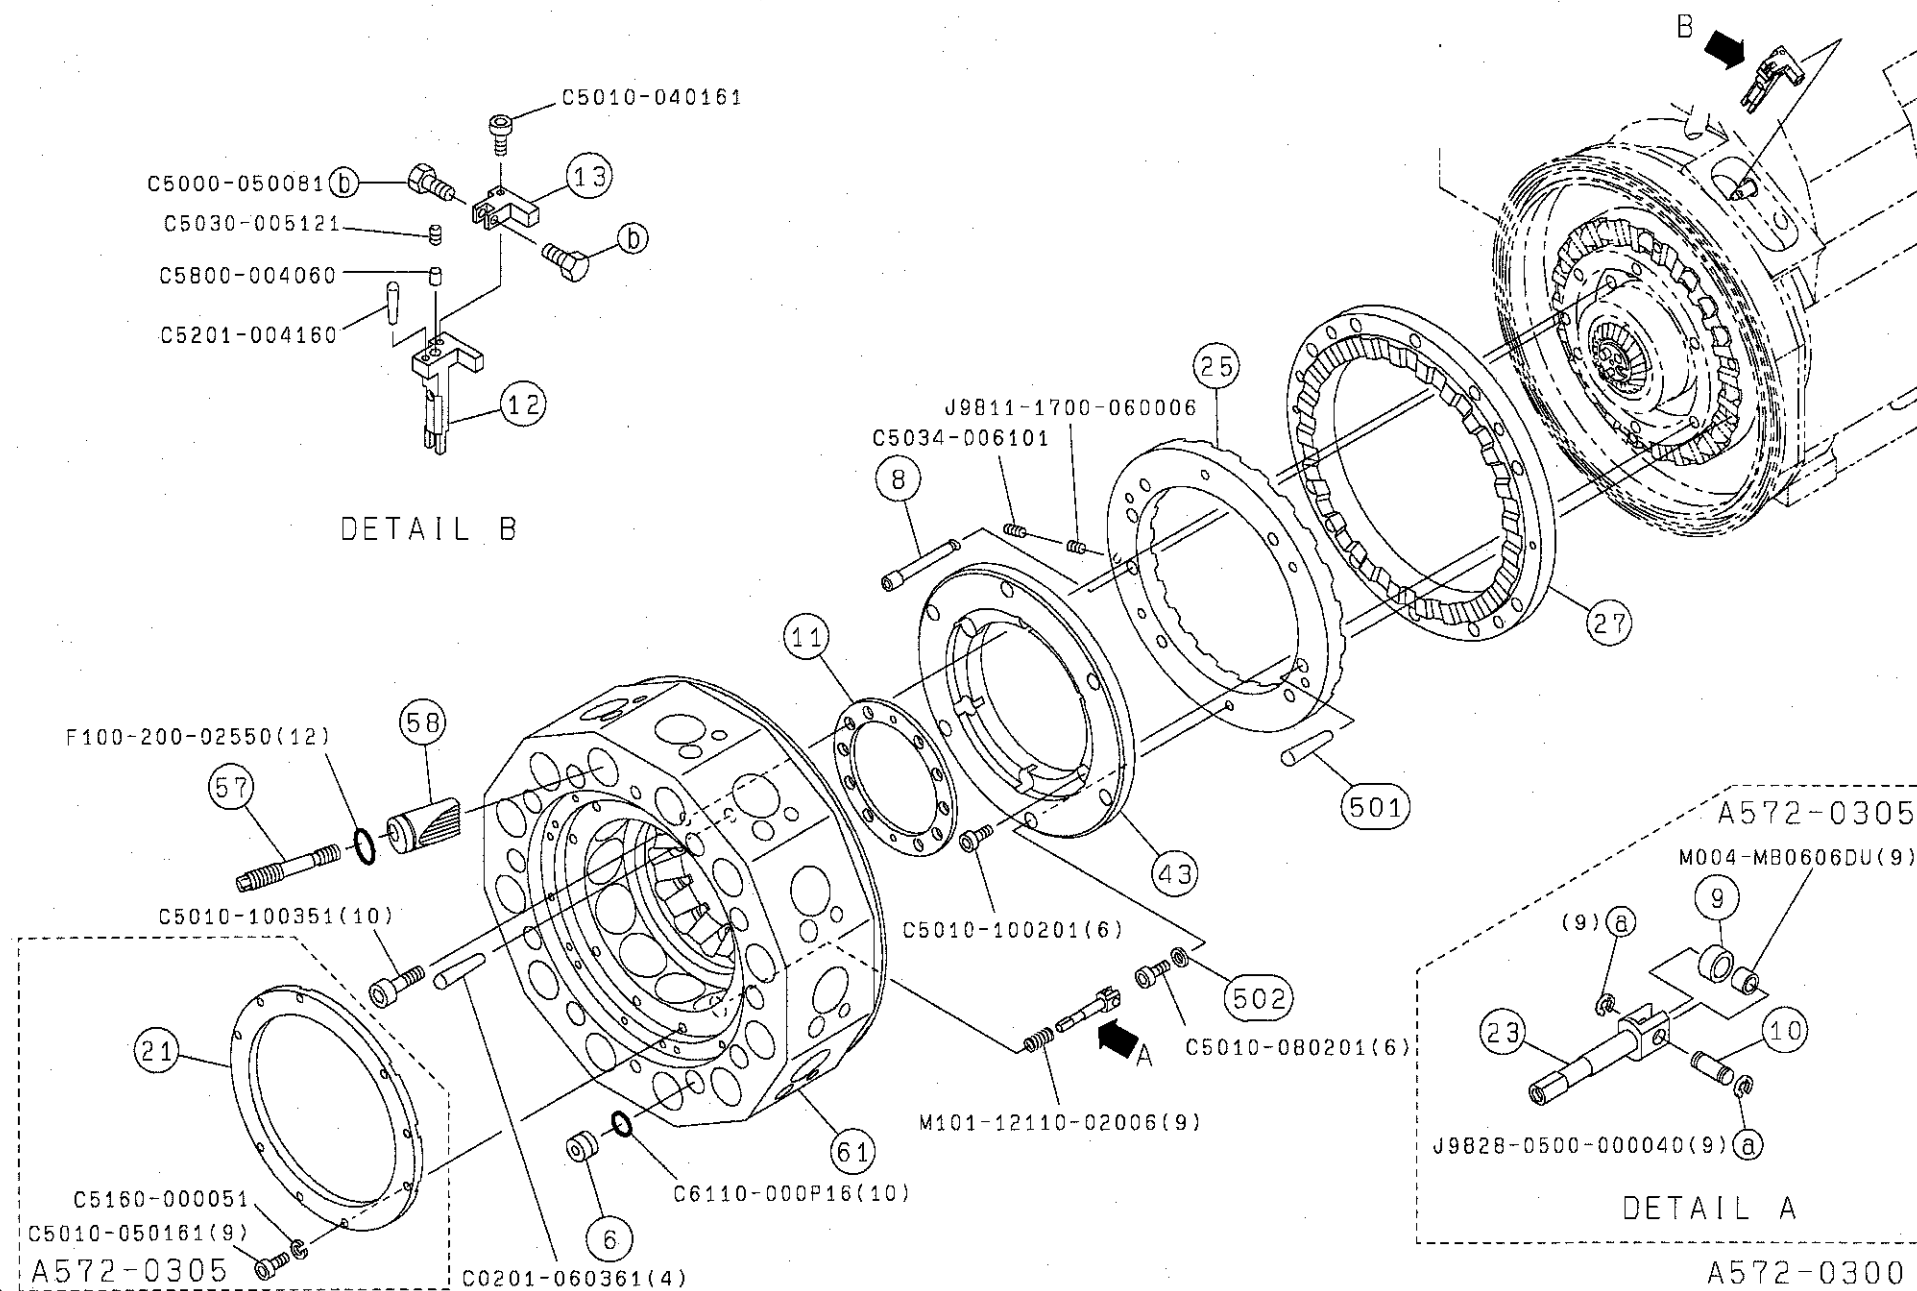

256

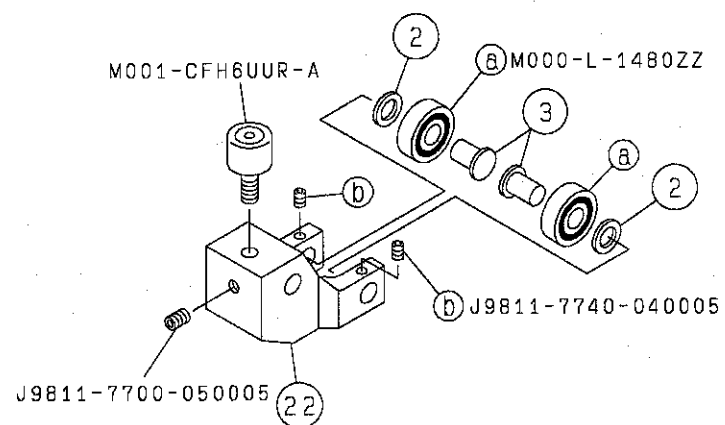


DETAIL A

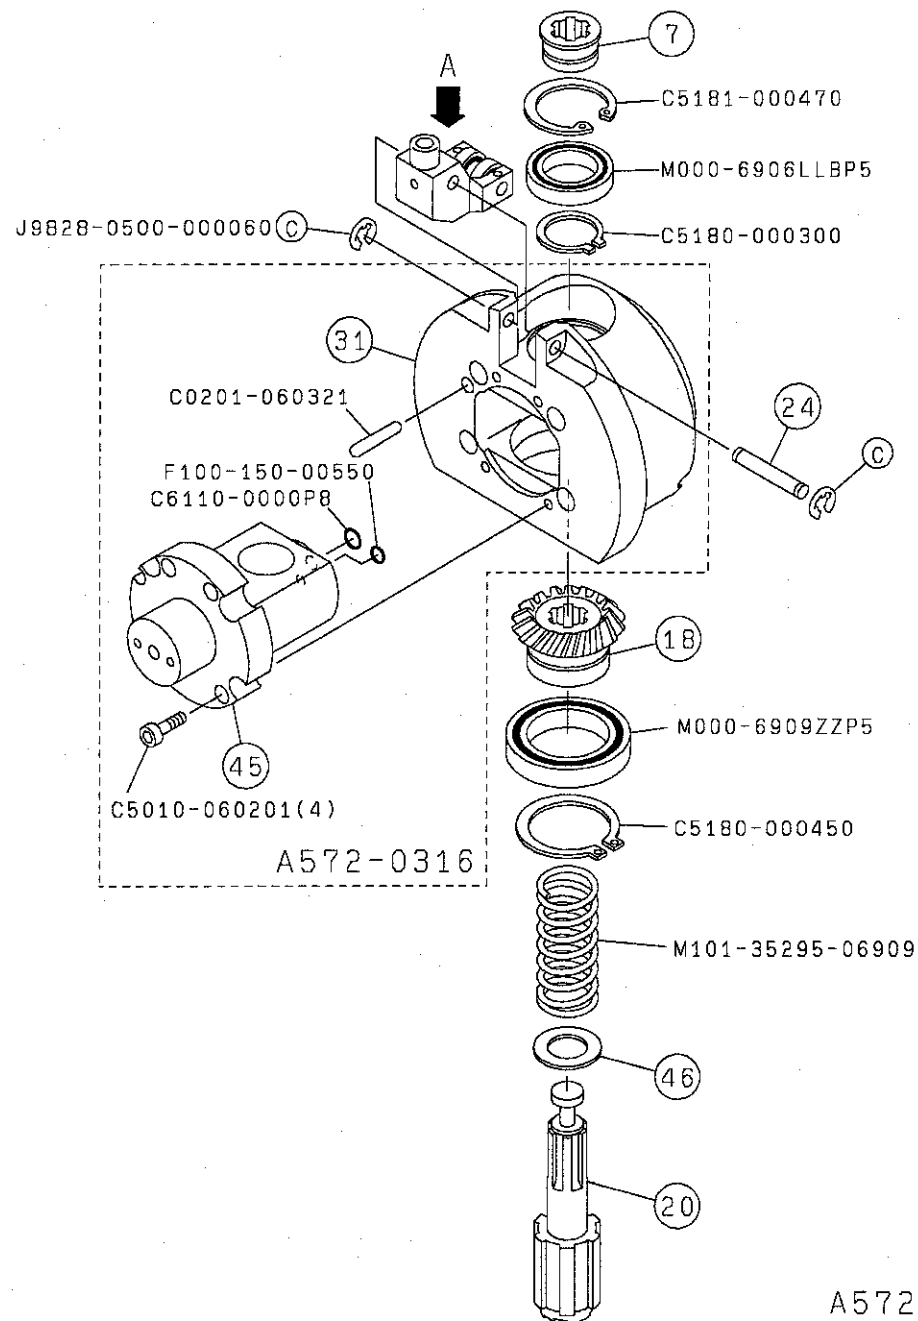



A572-0305

257

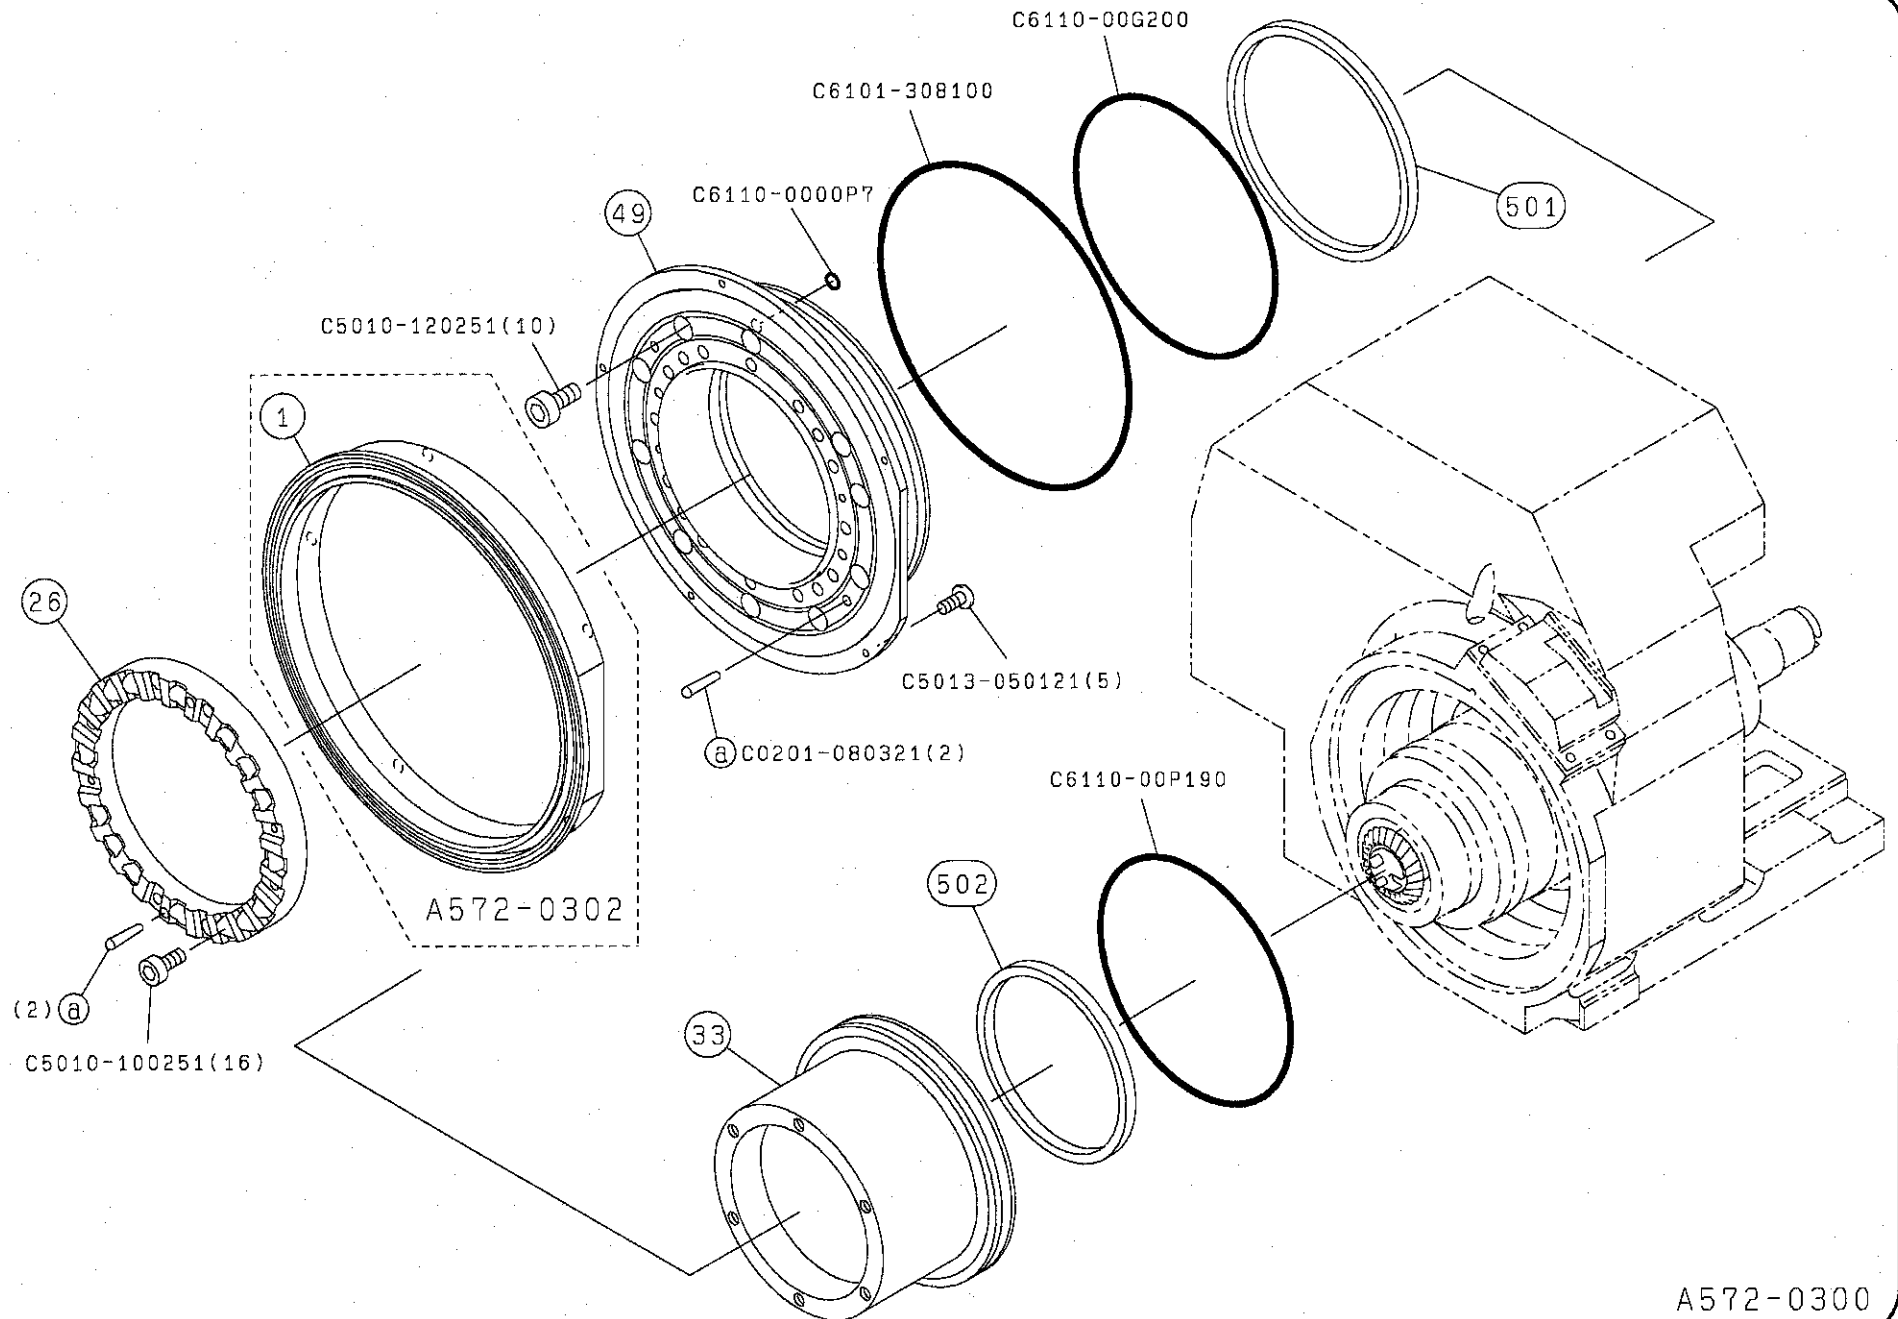



258

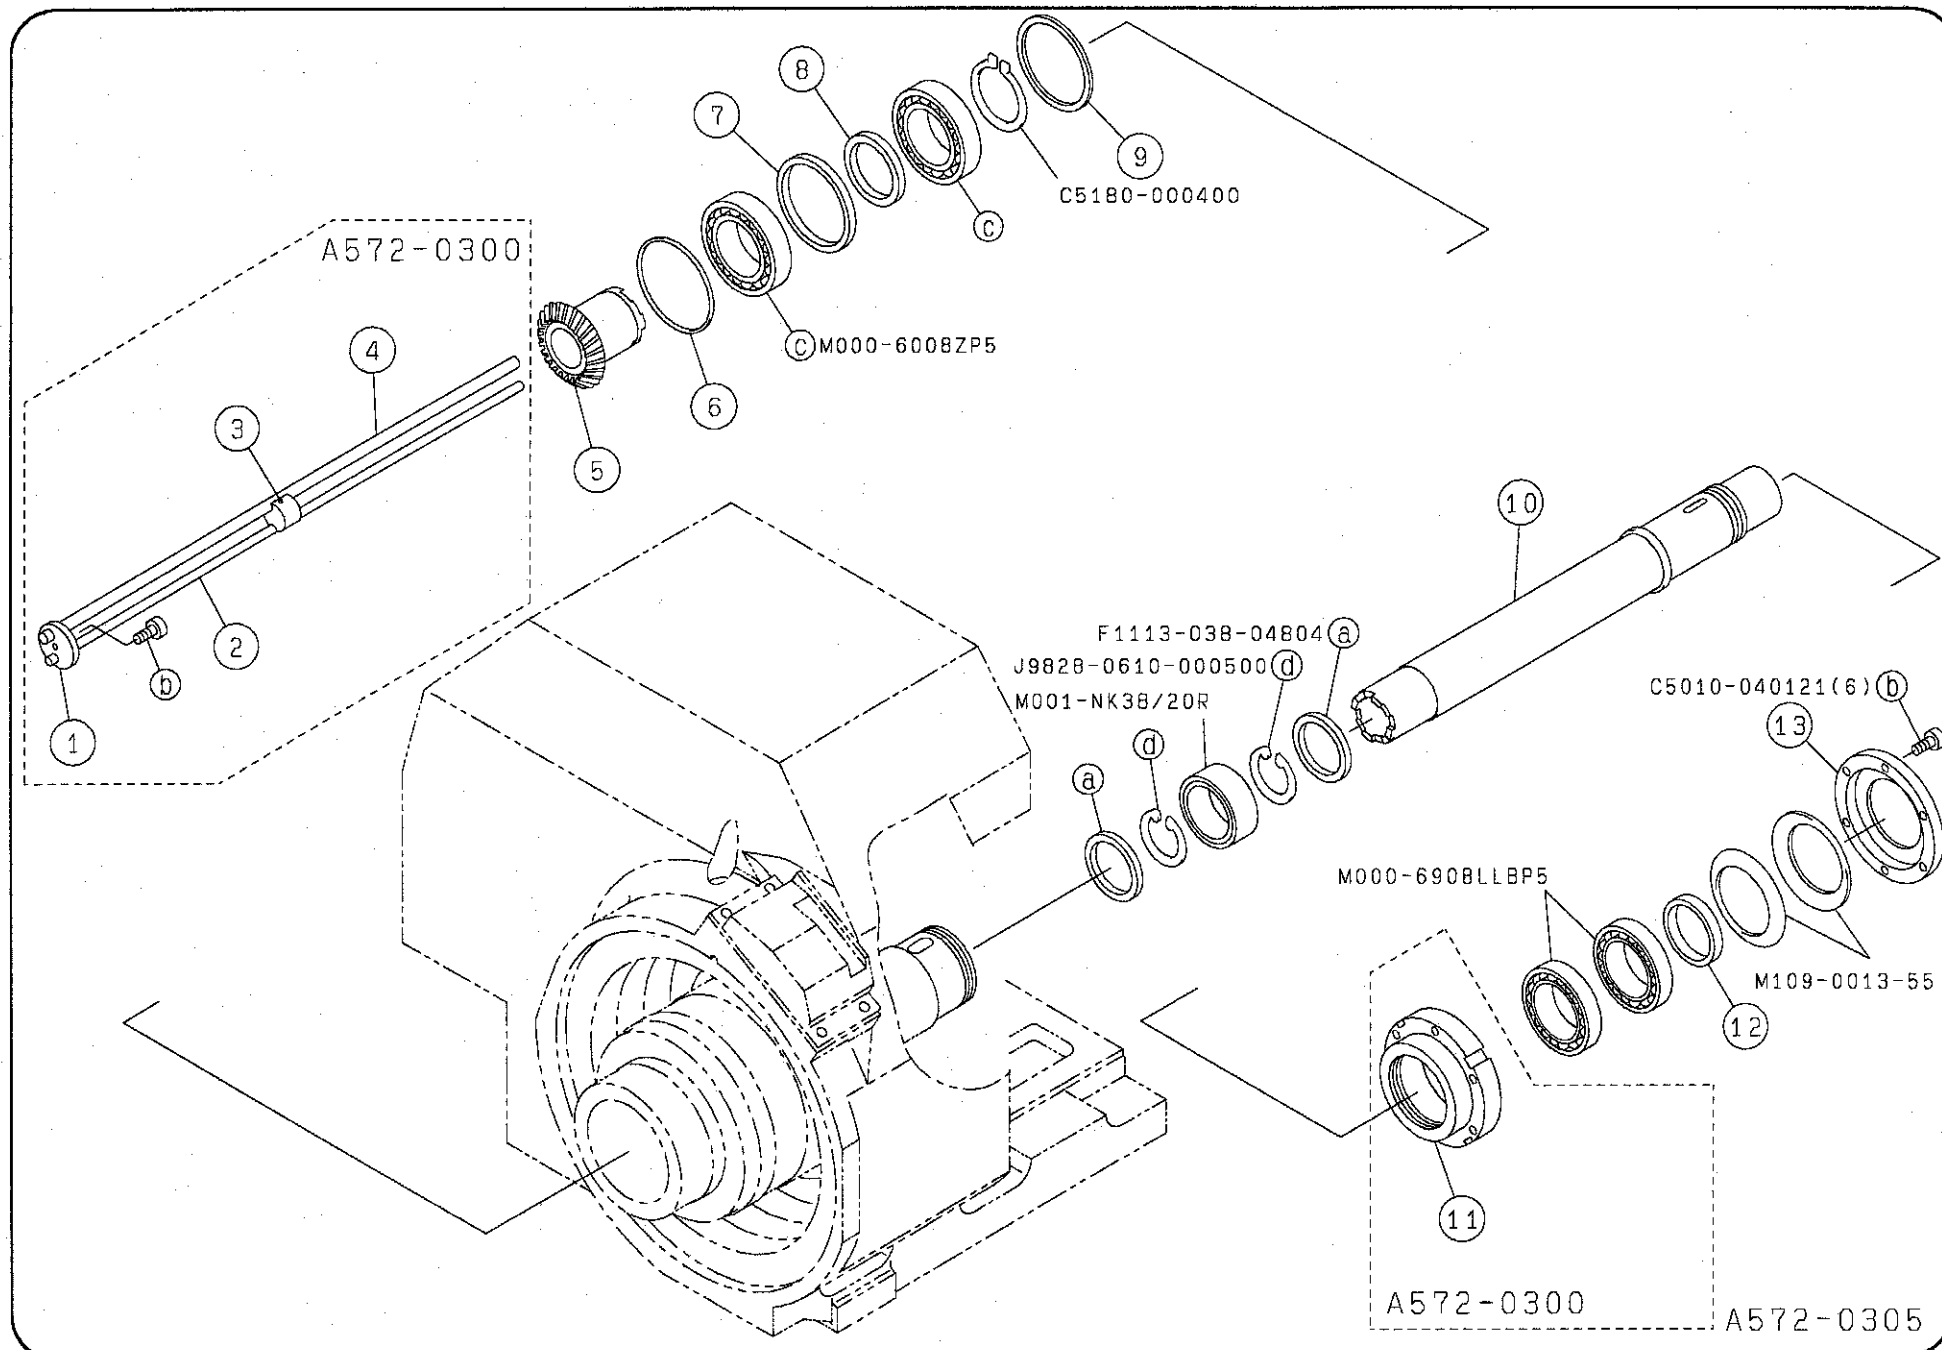


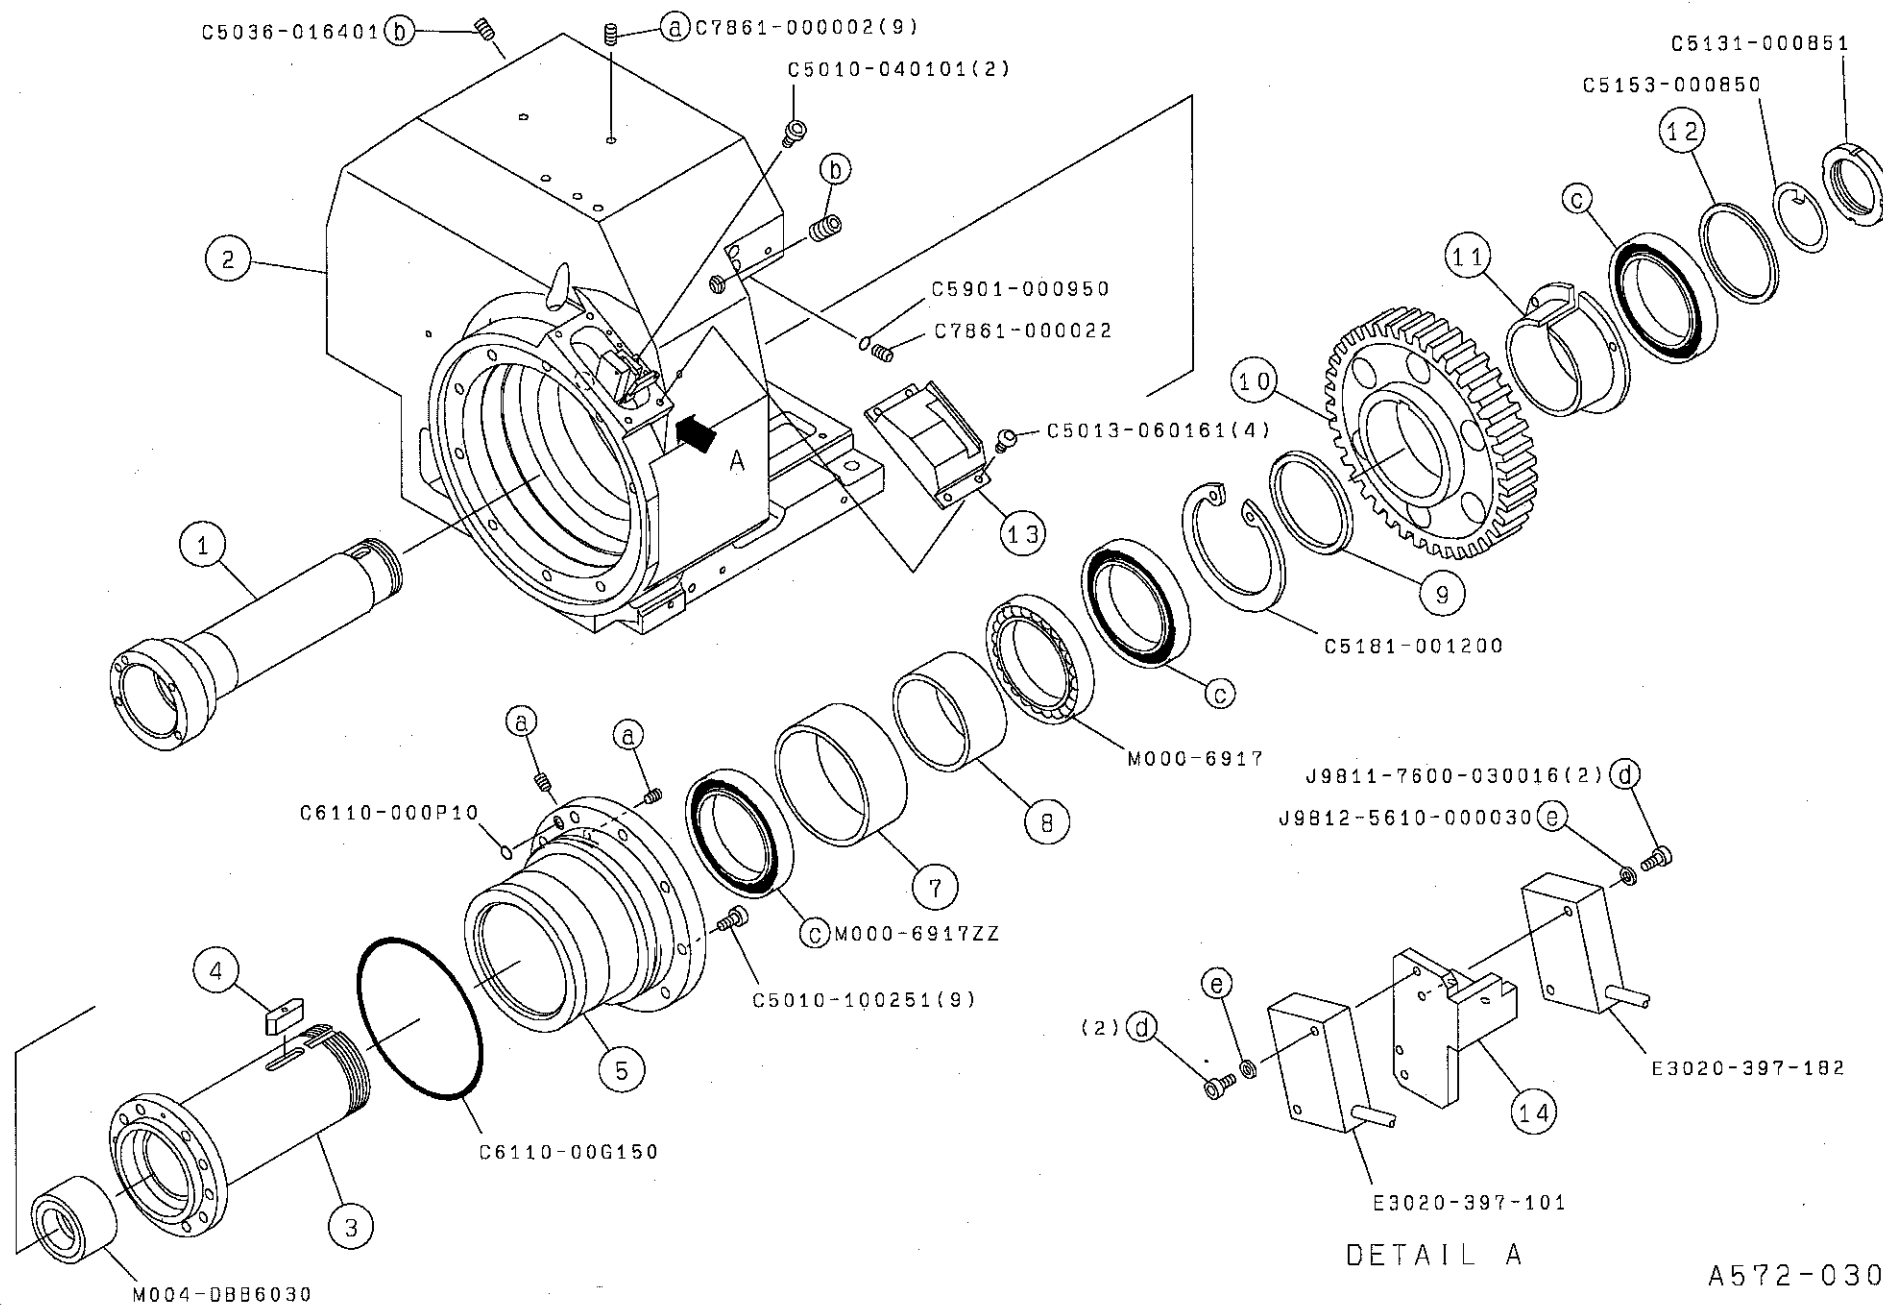


260

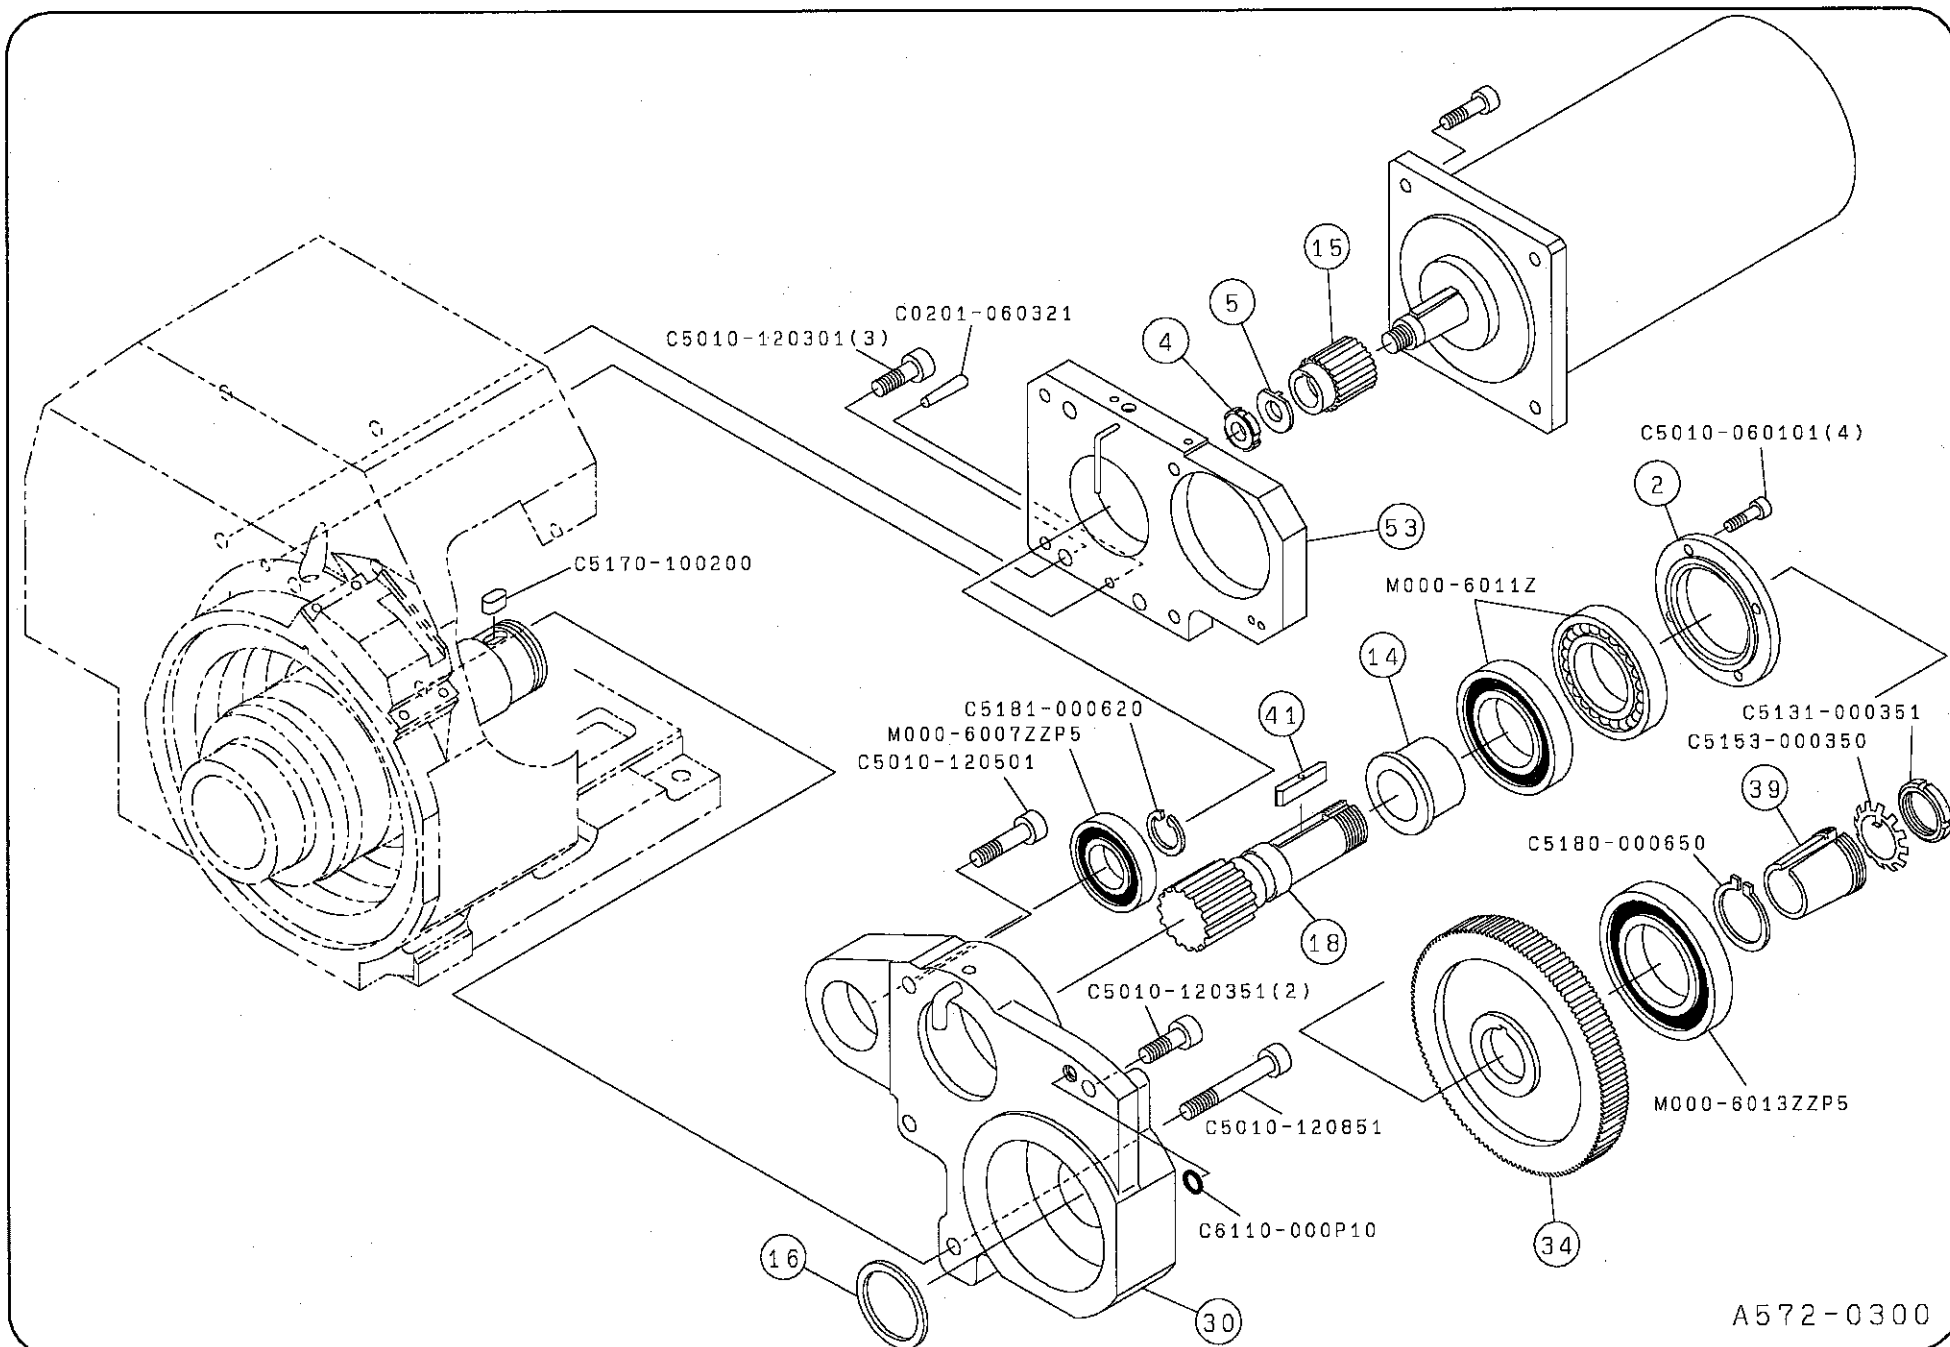

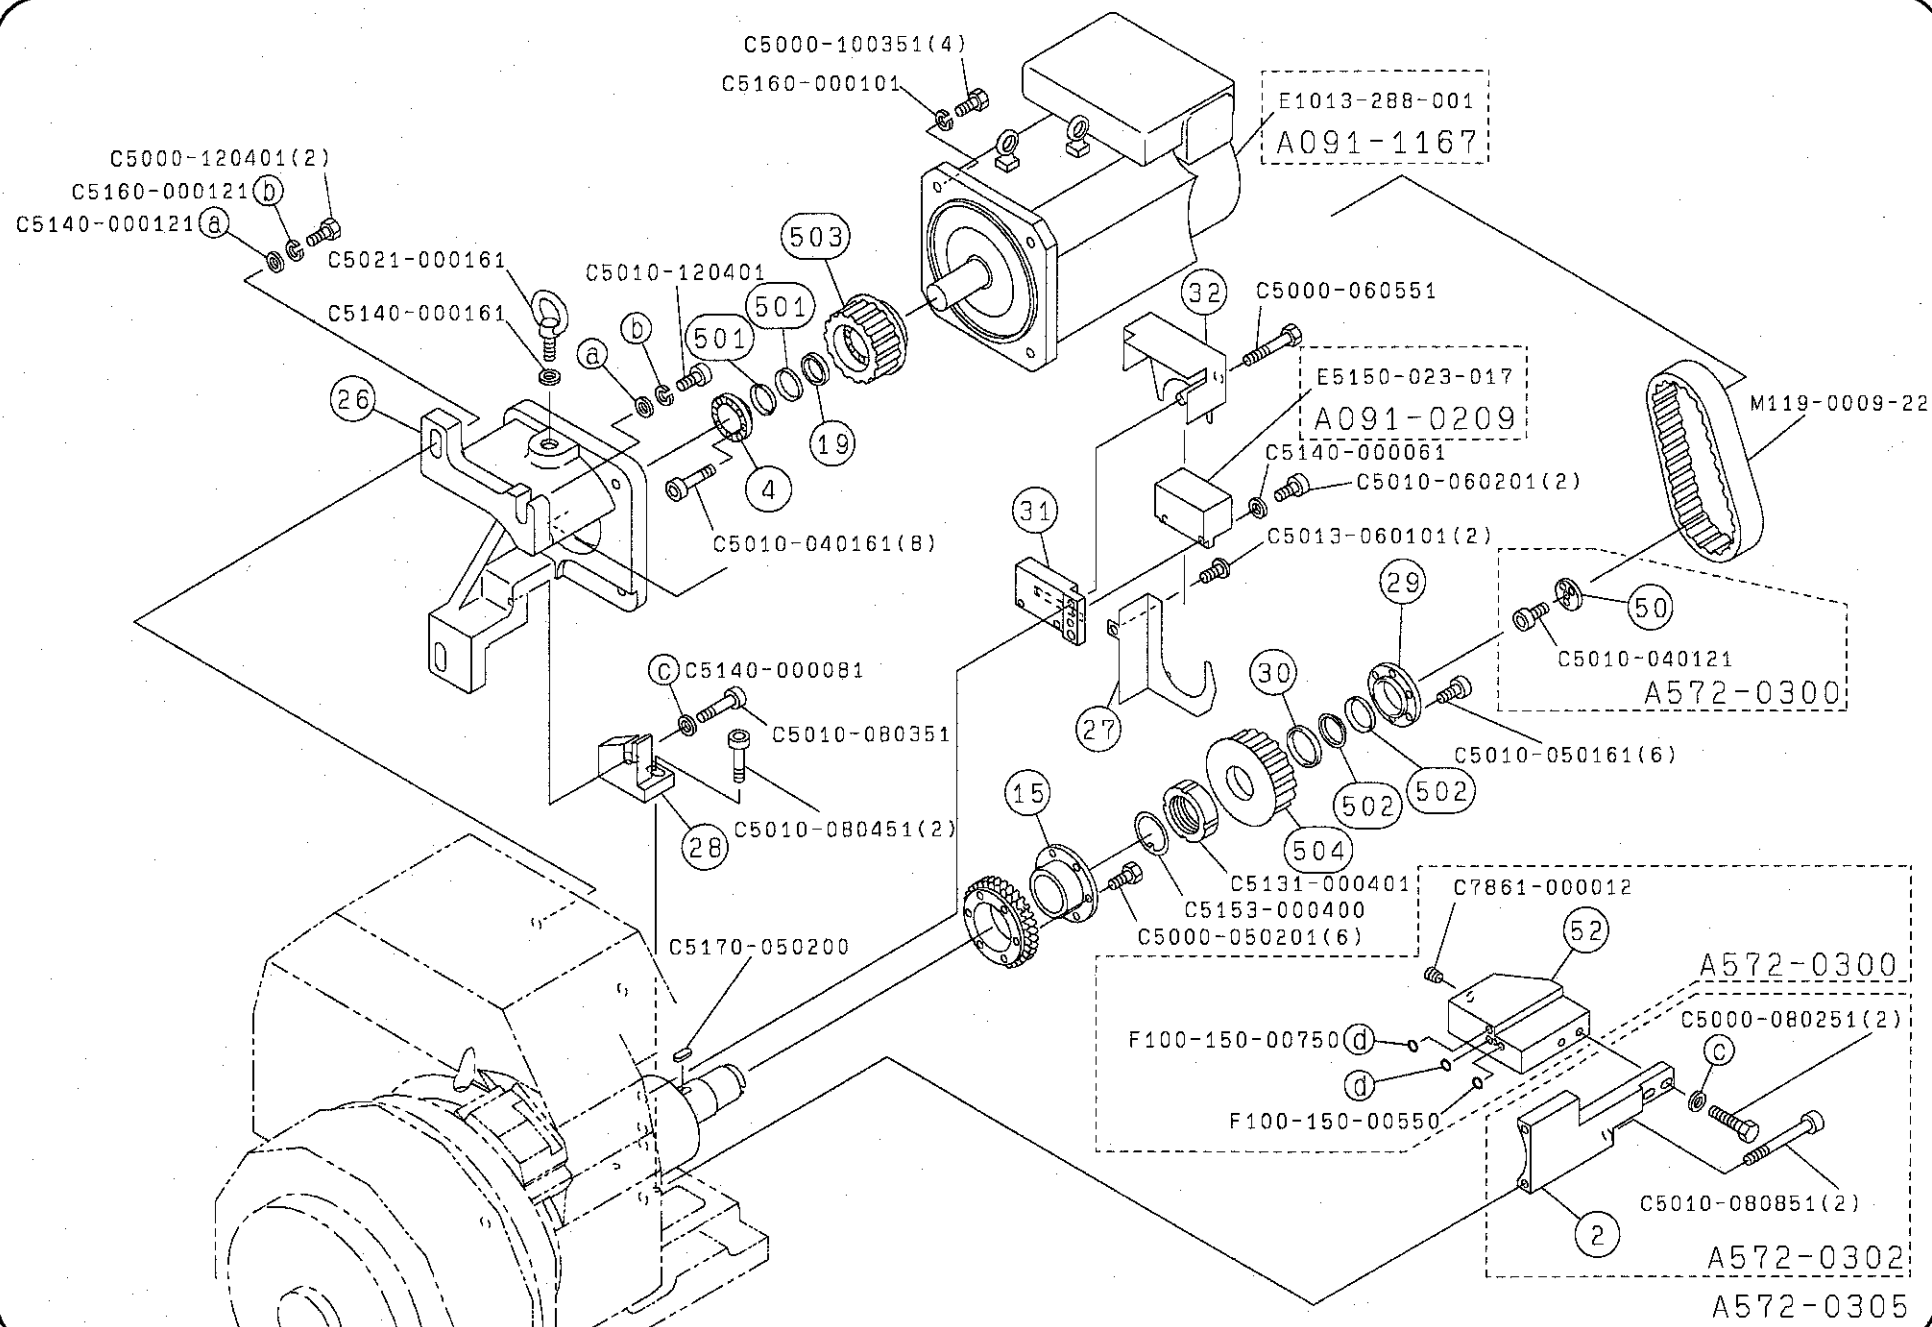

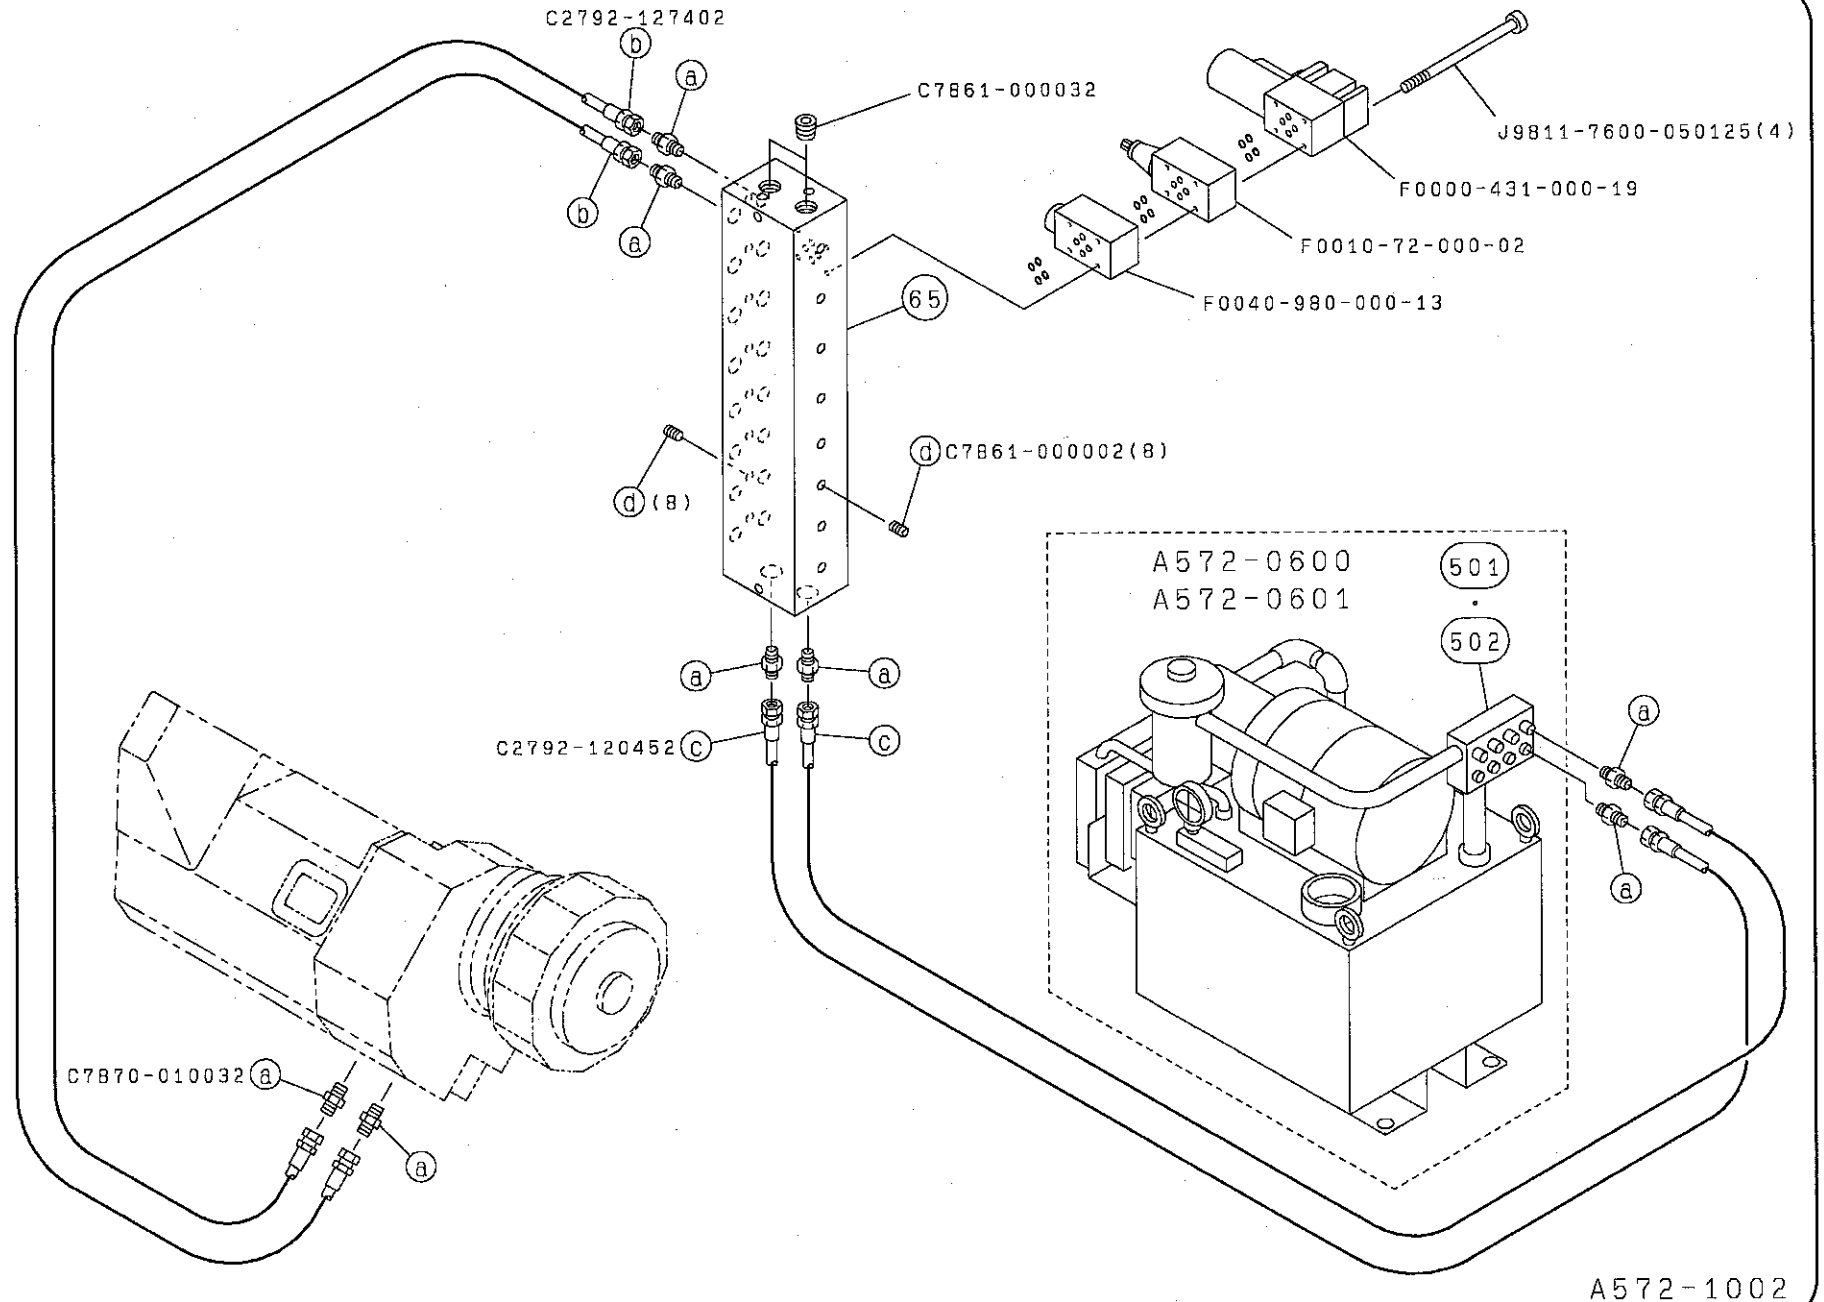


263

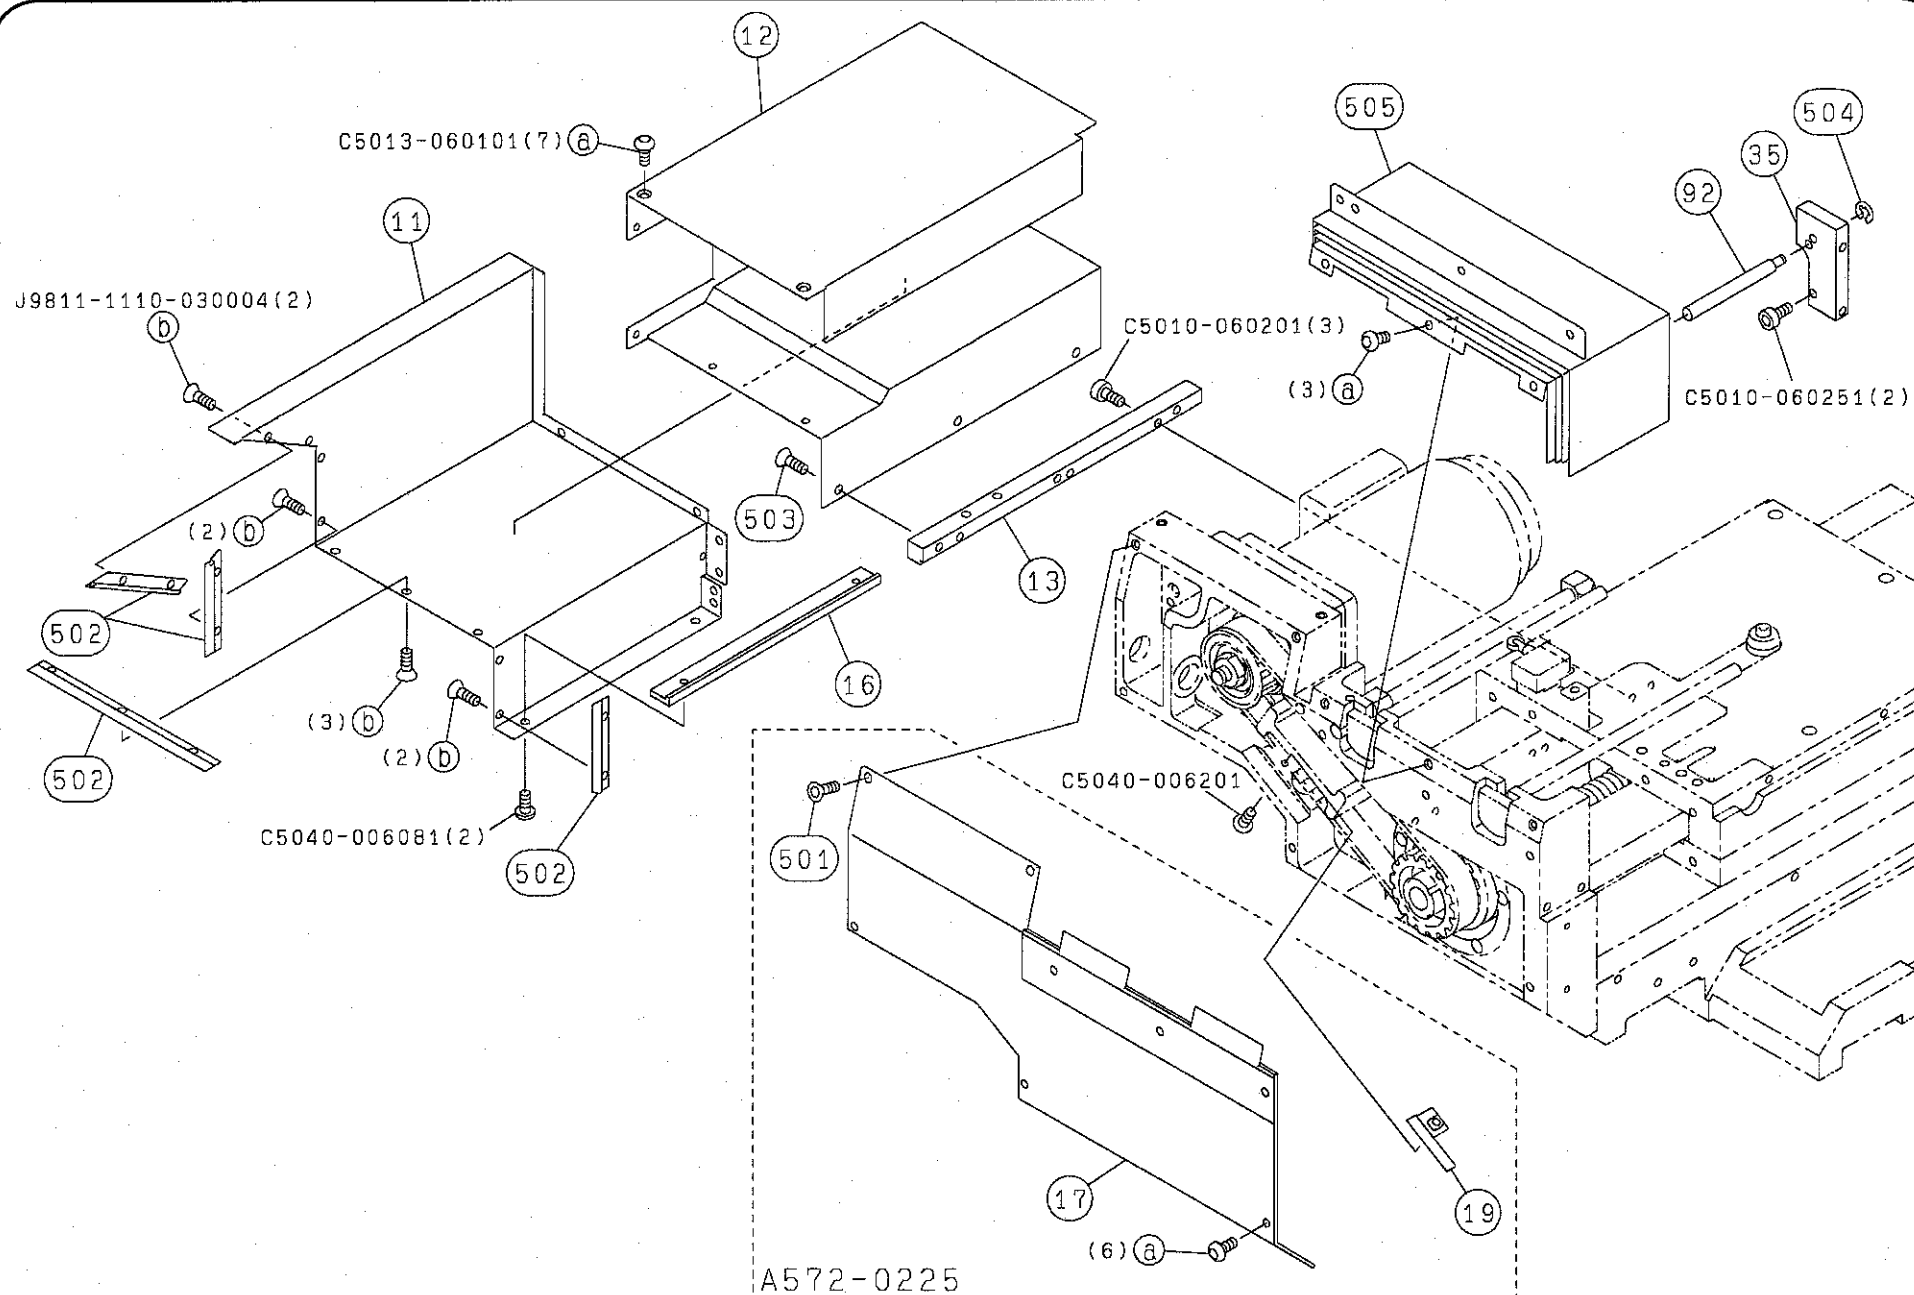


A572-1002


263A

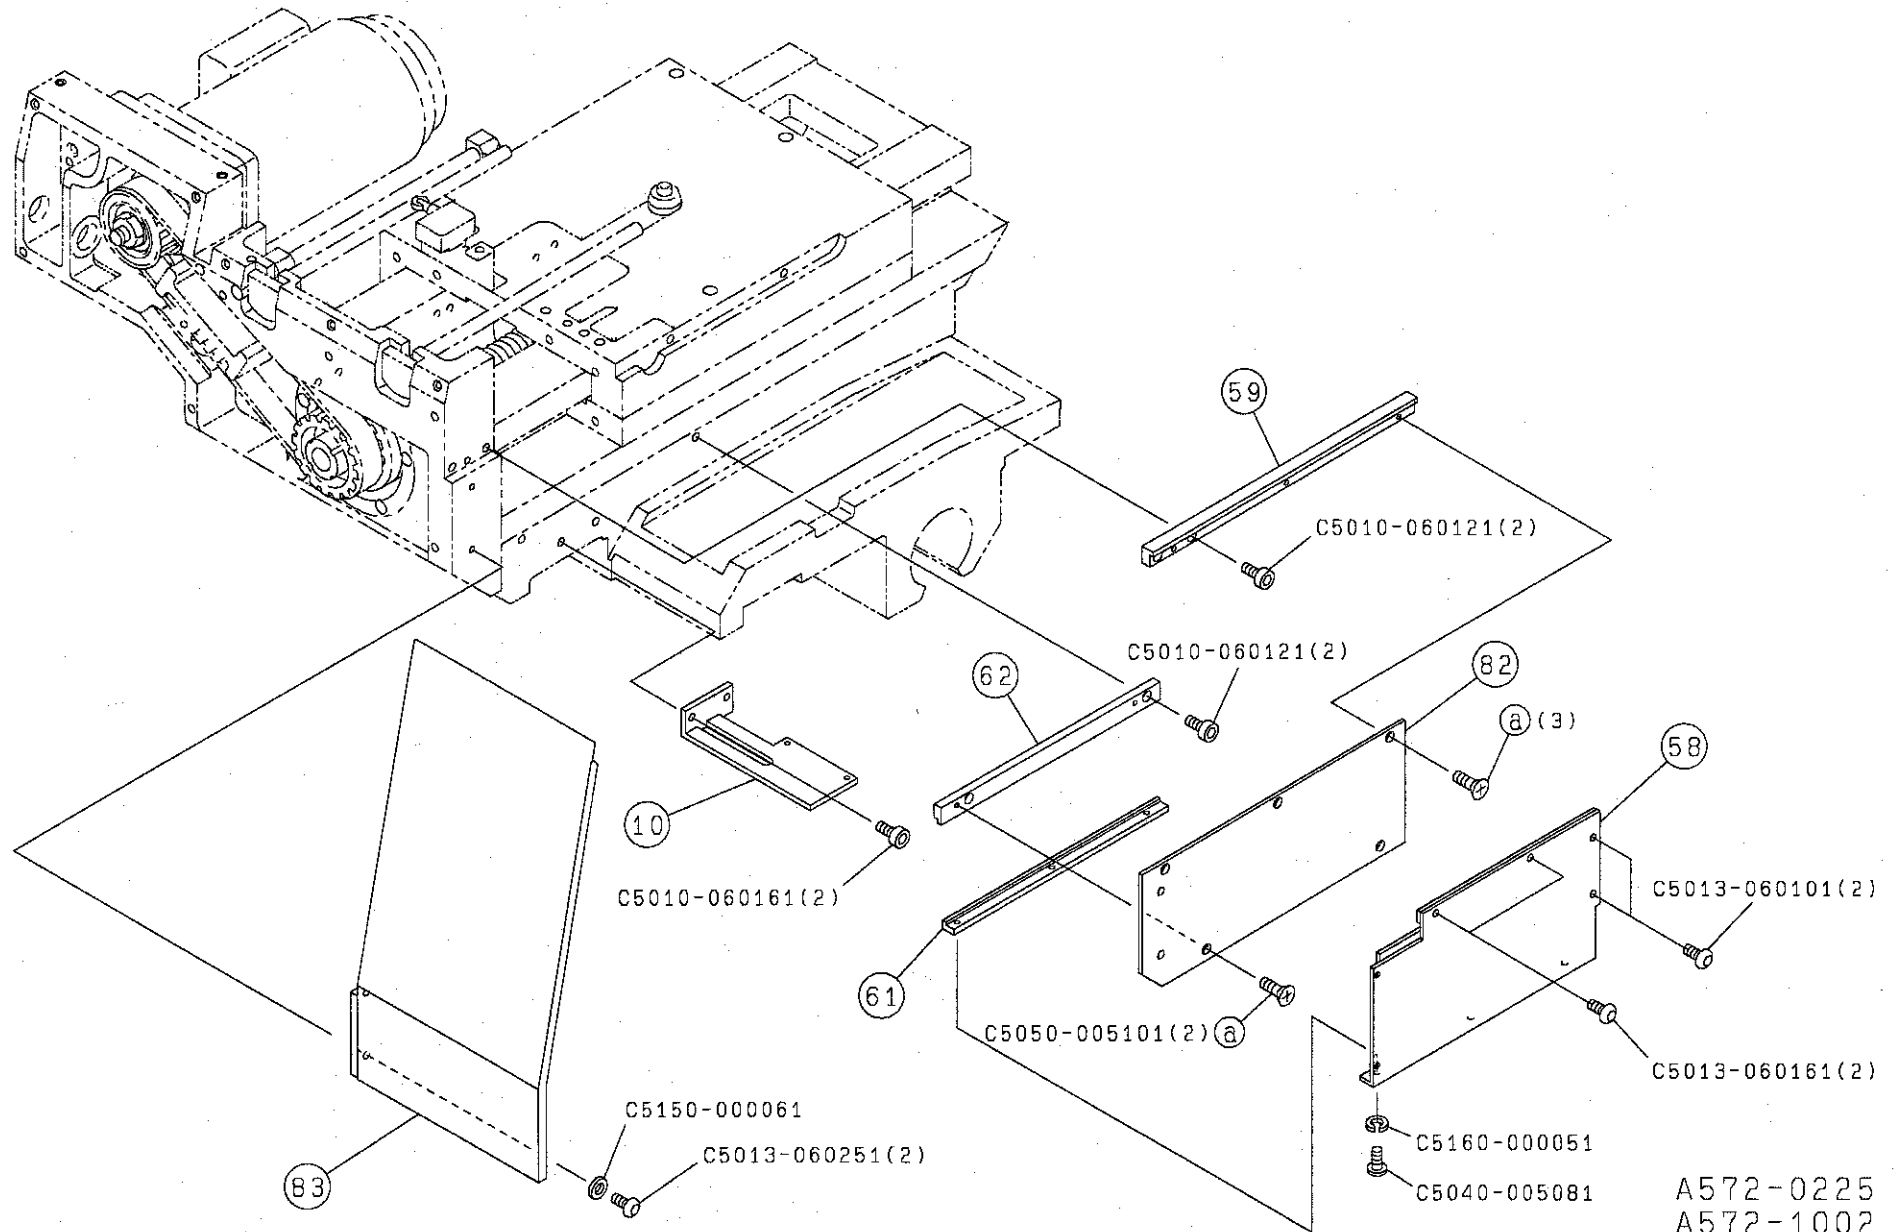


A572-0225
A572-1002

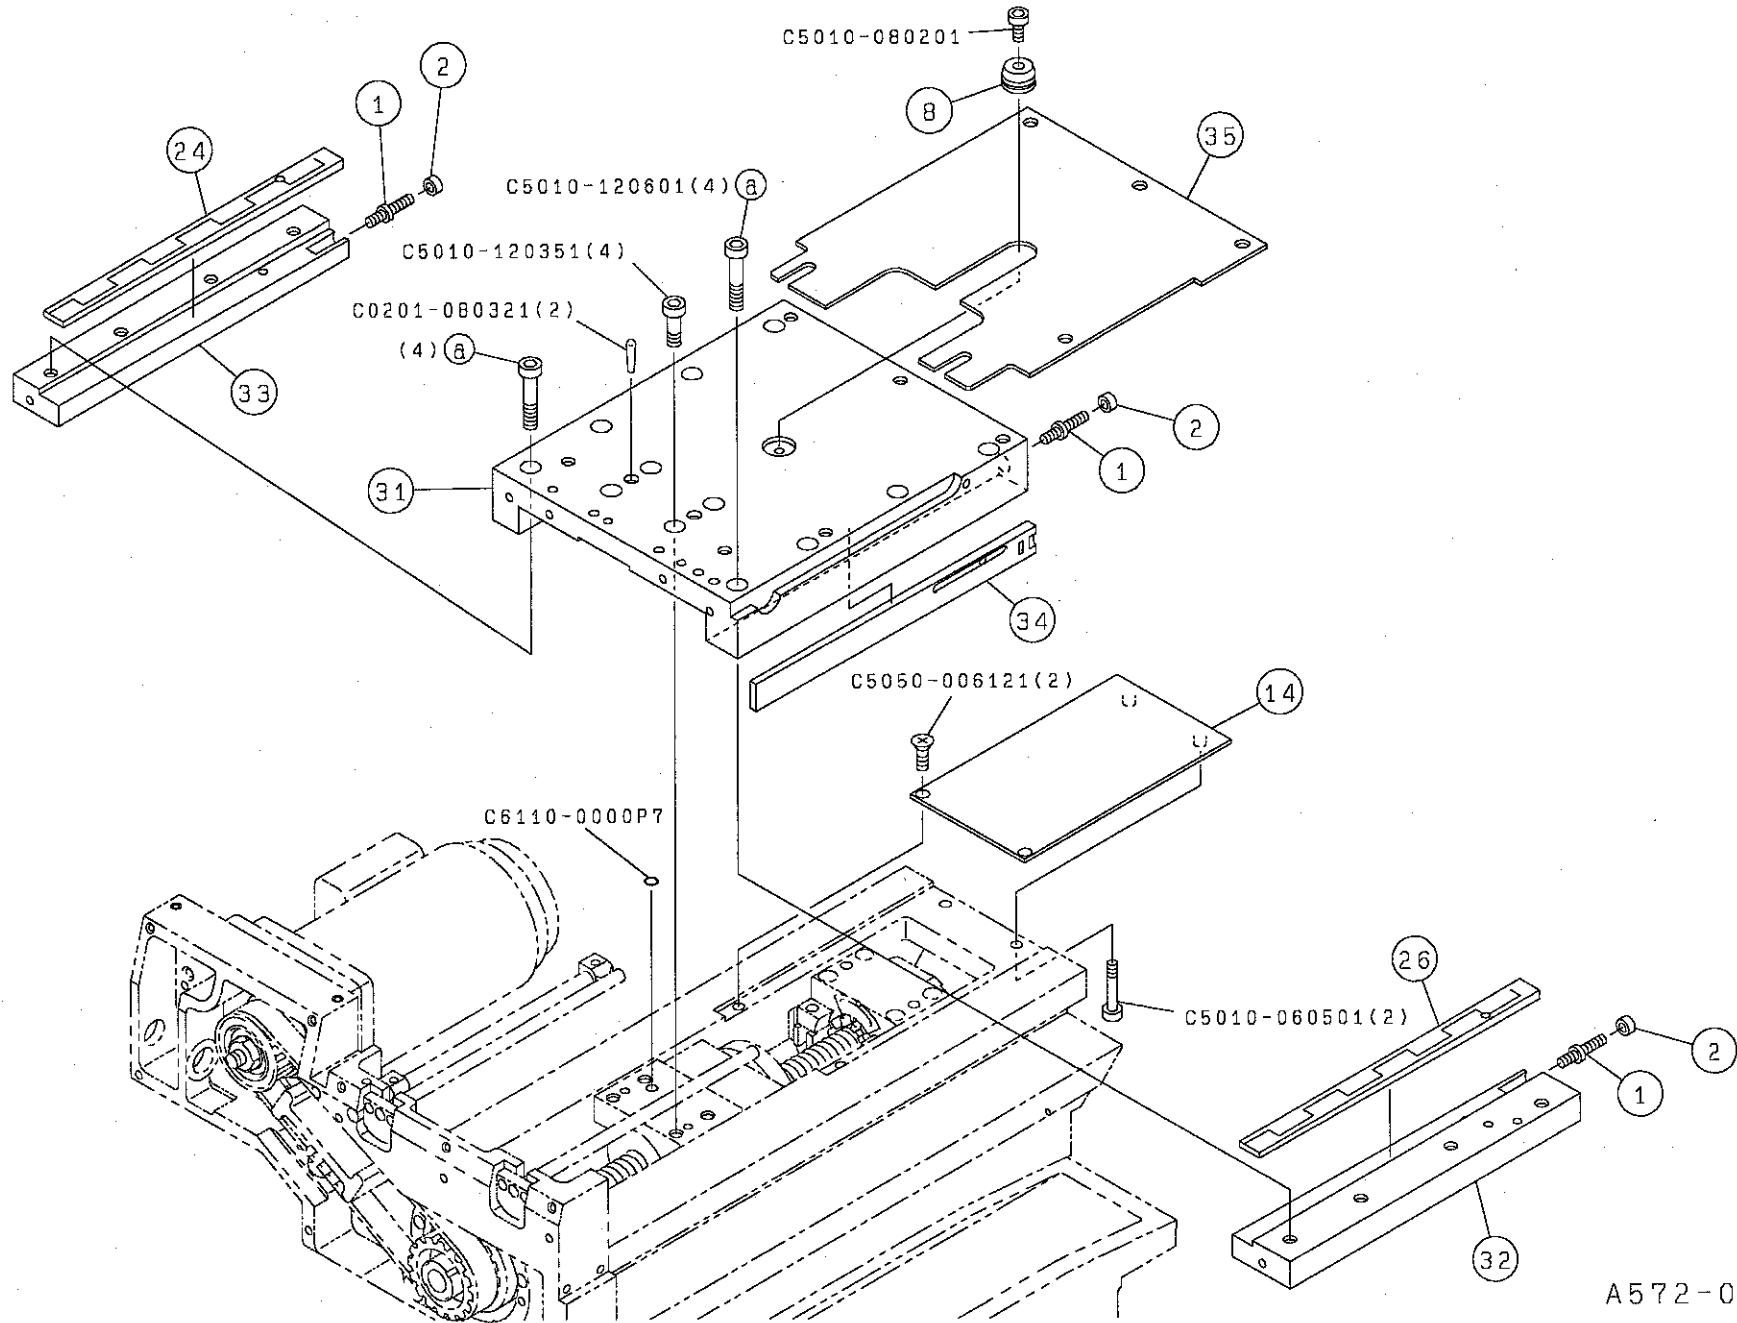



A572-0225



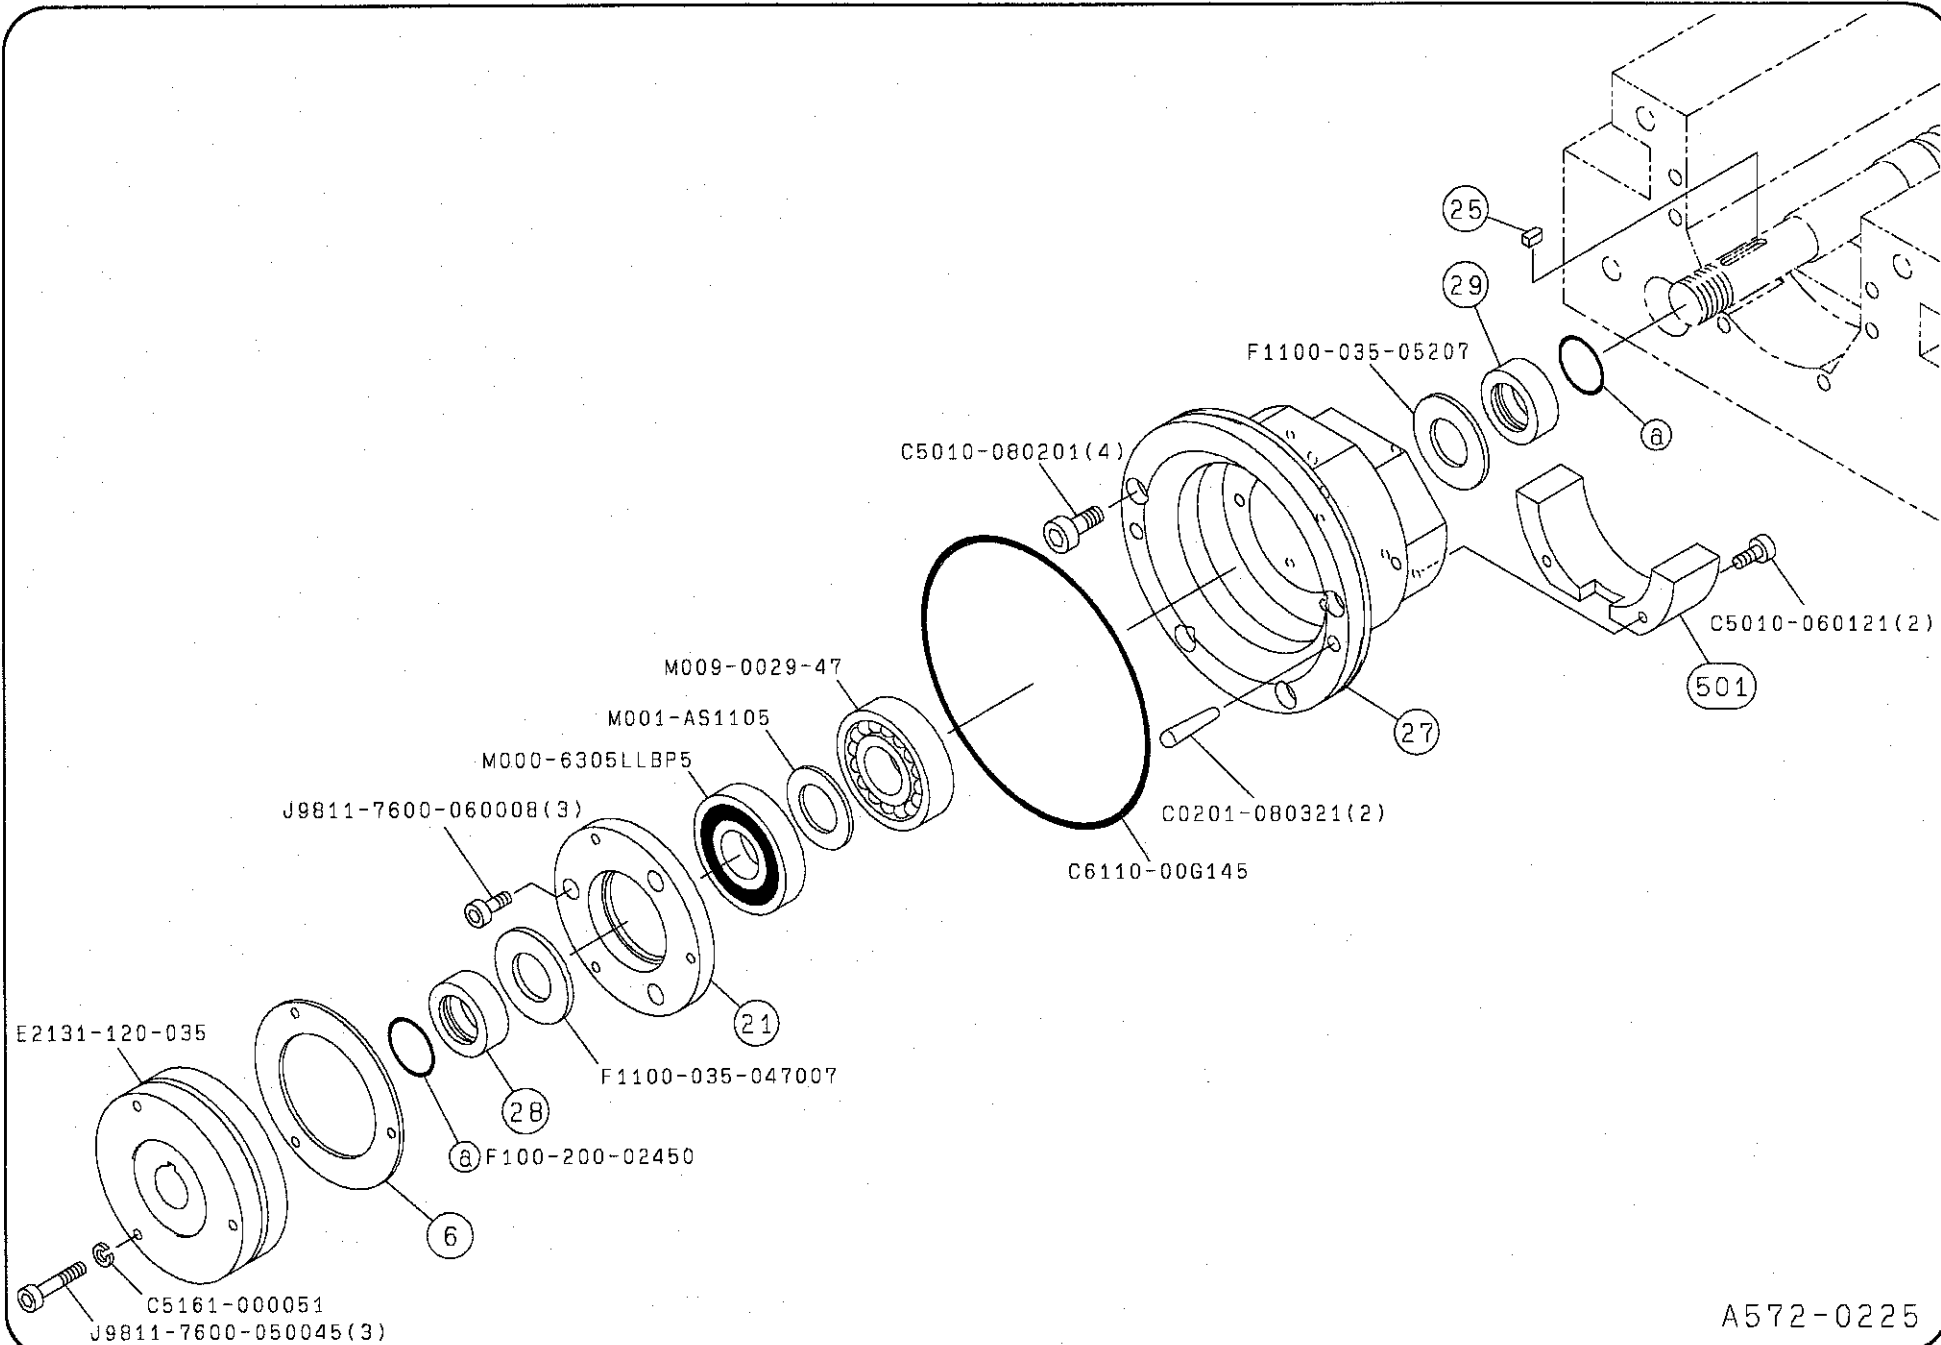


A572-0225

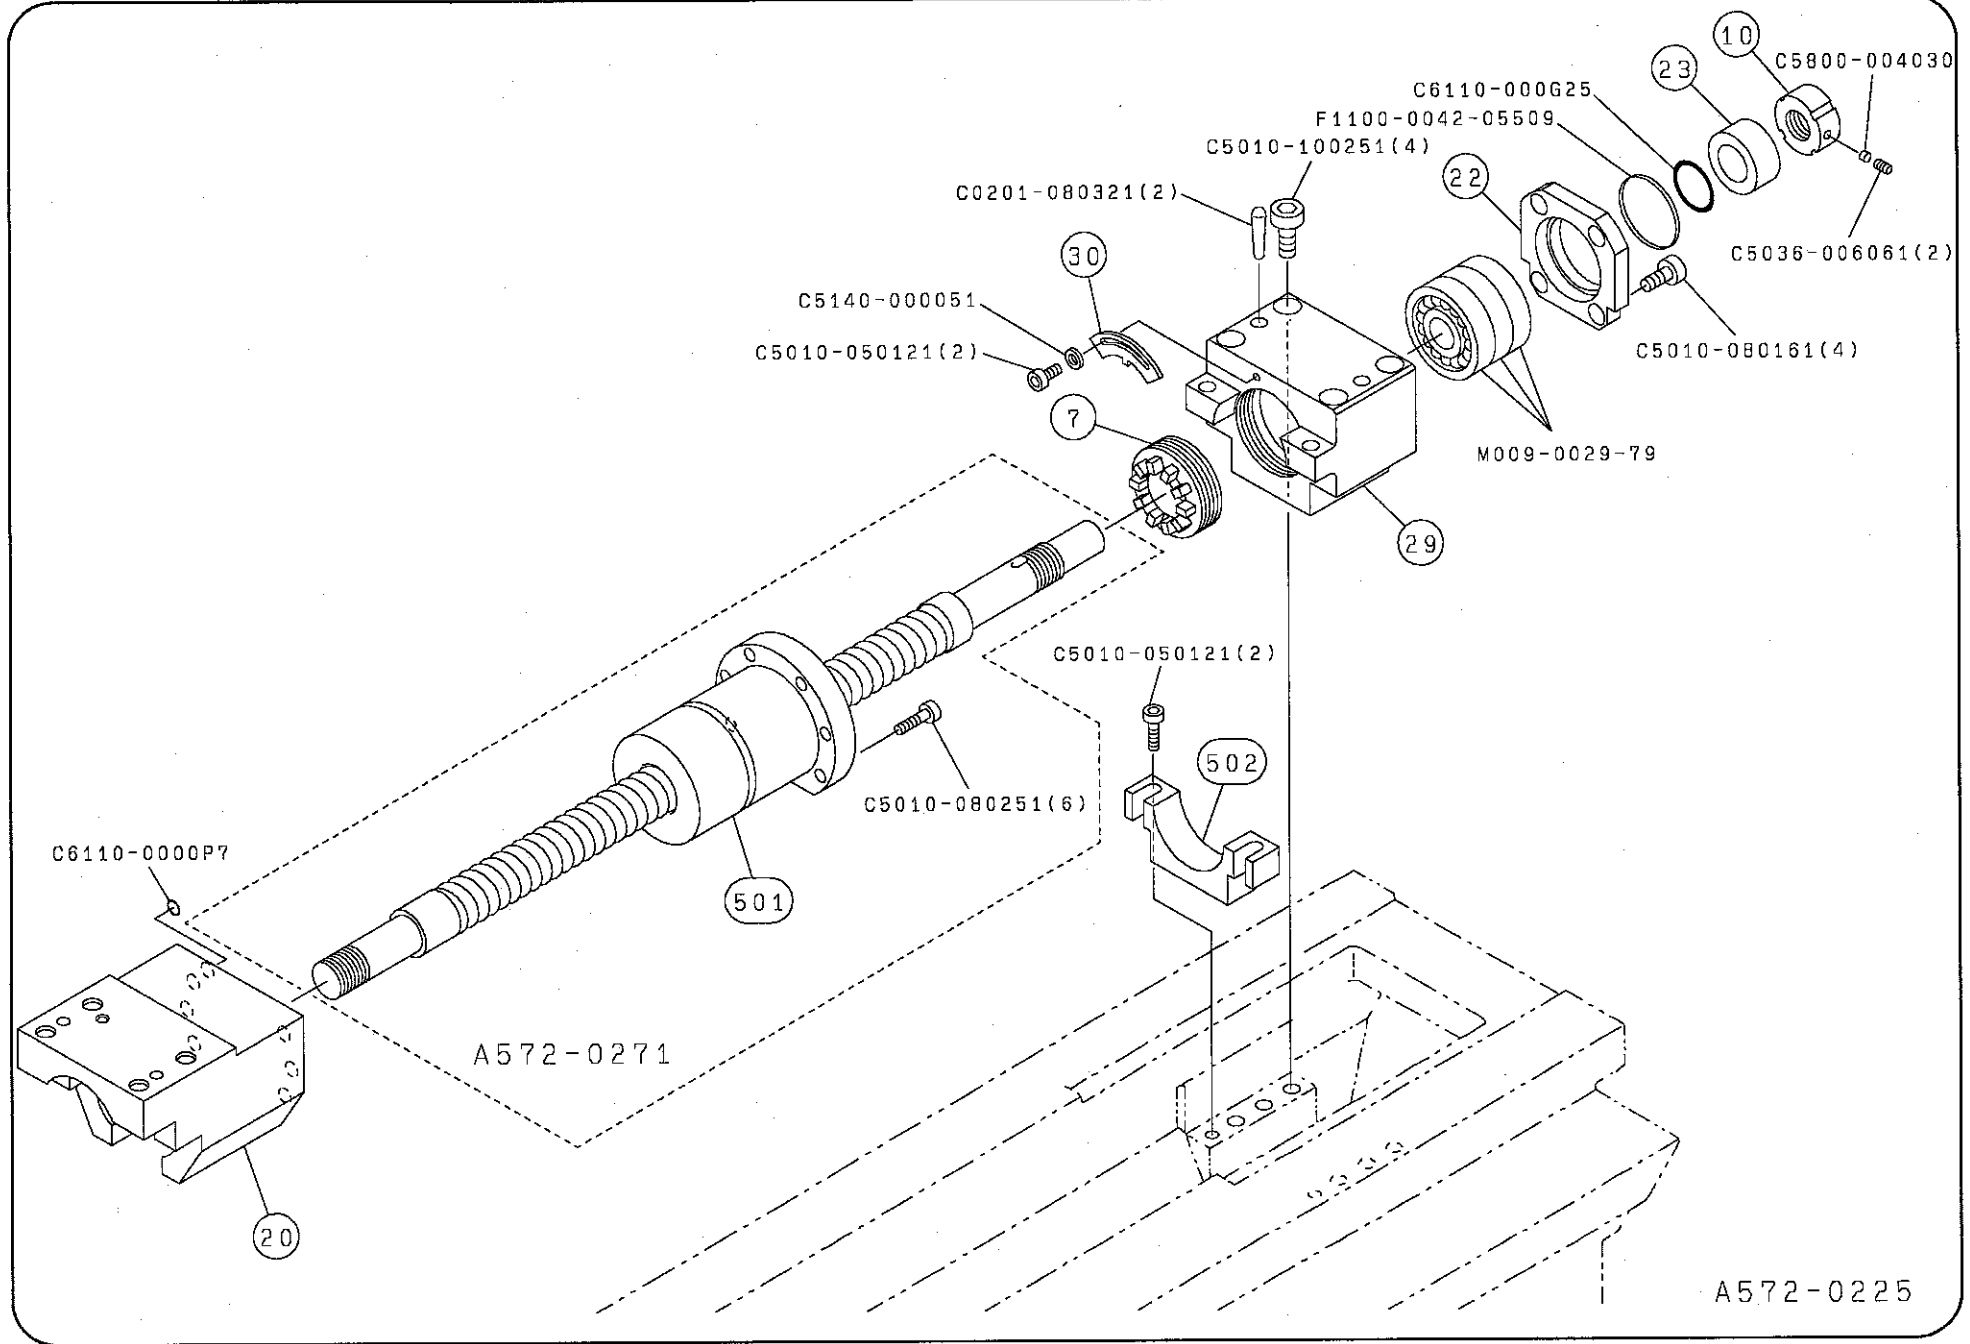

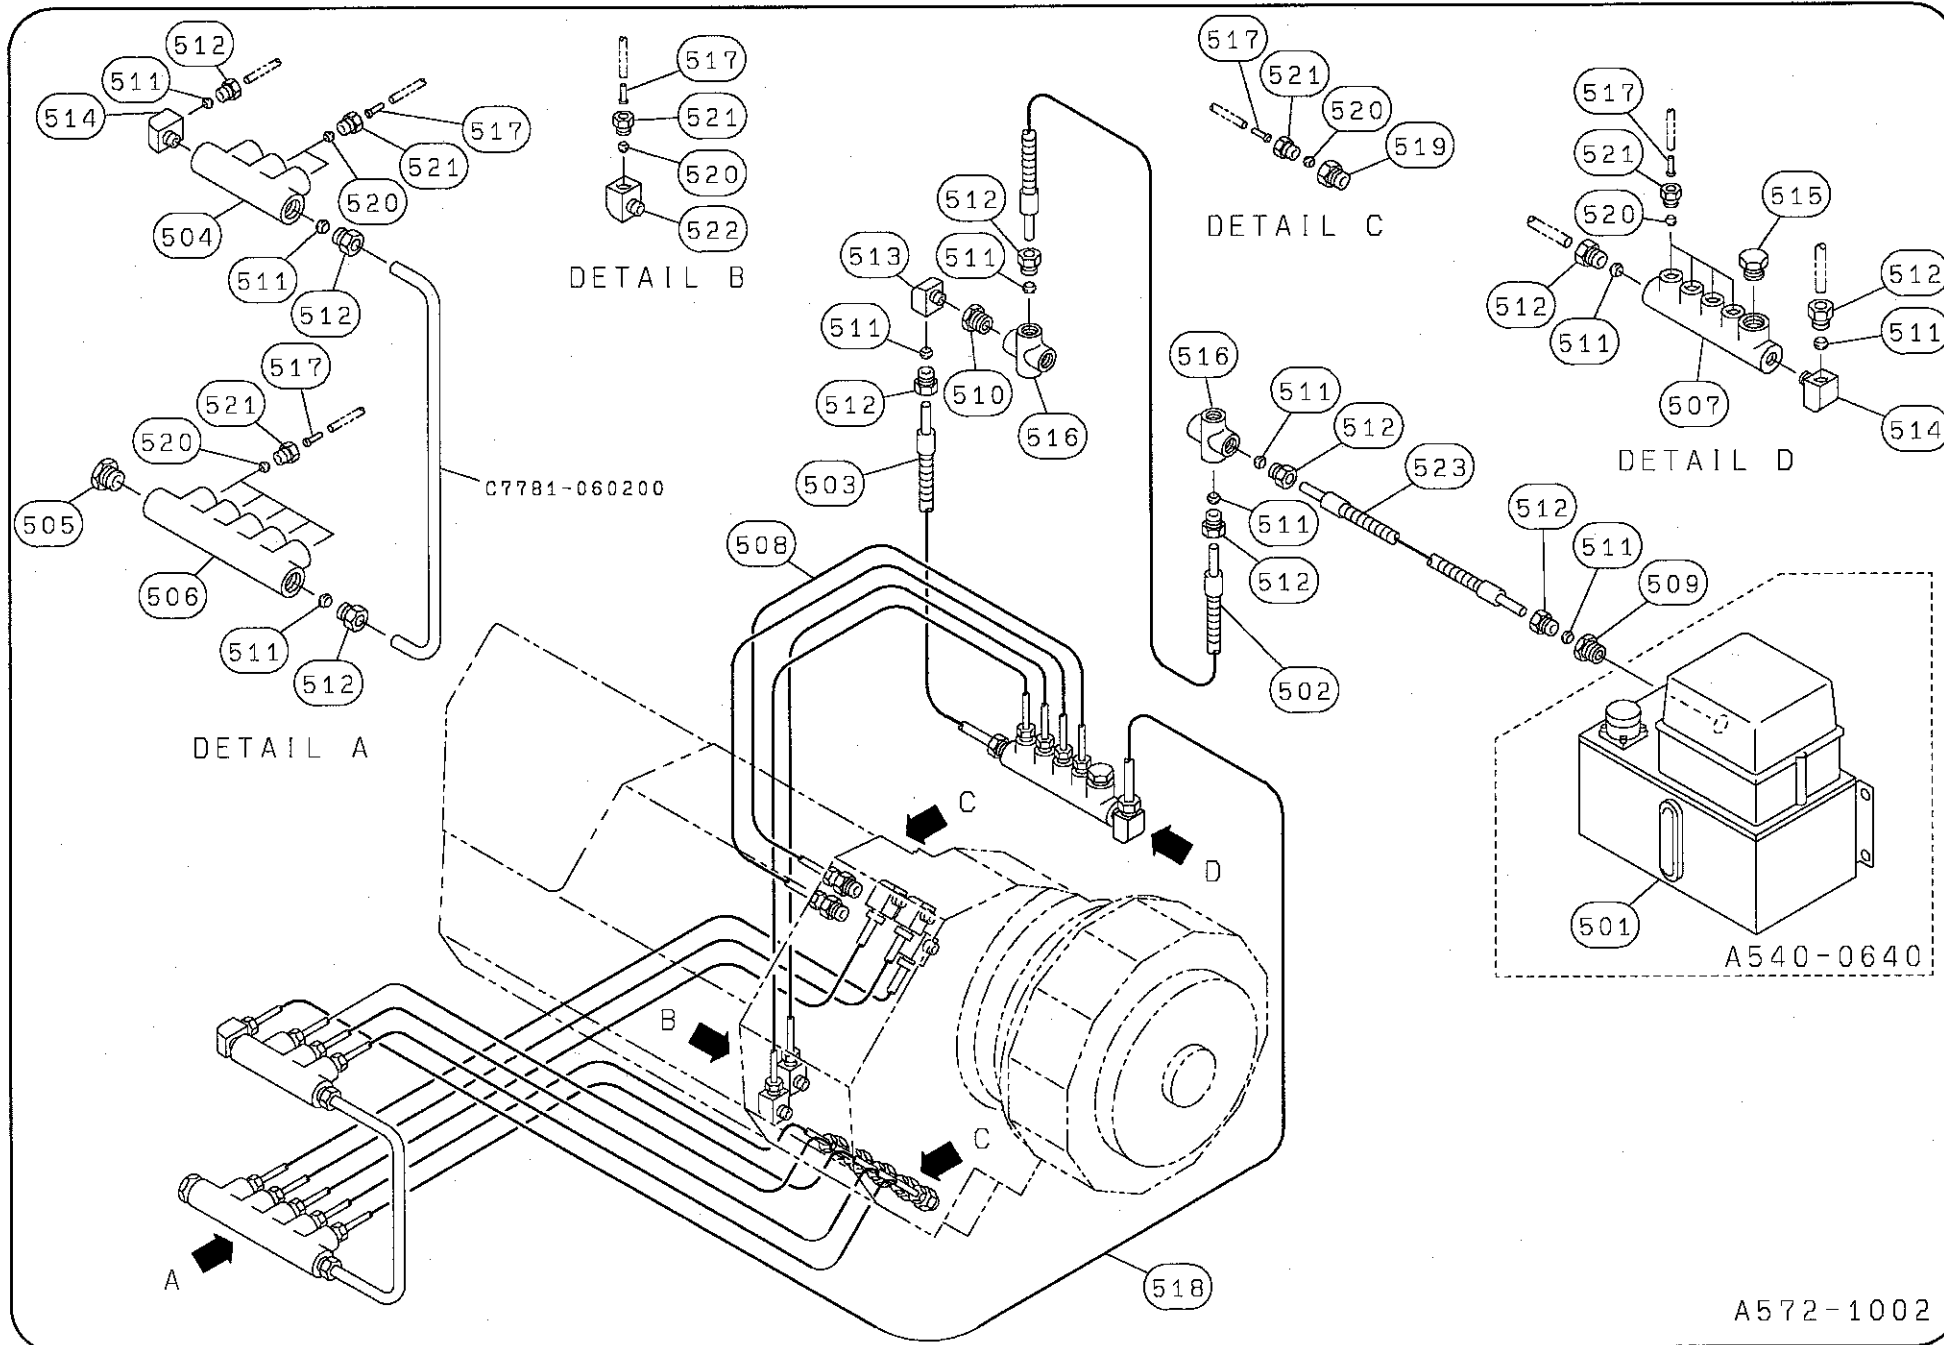


A572-1002


270

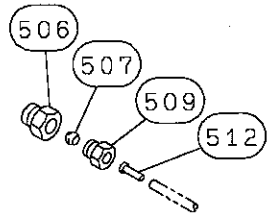

DETAIL A



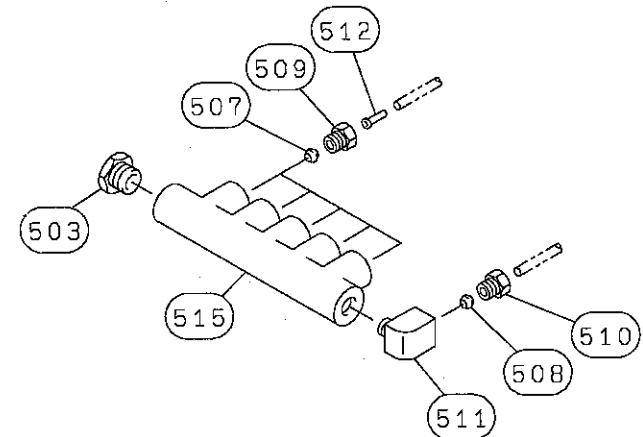


DETAIL B

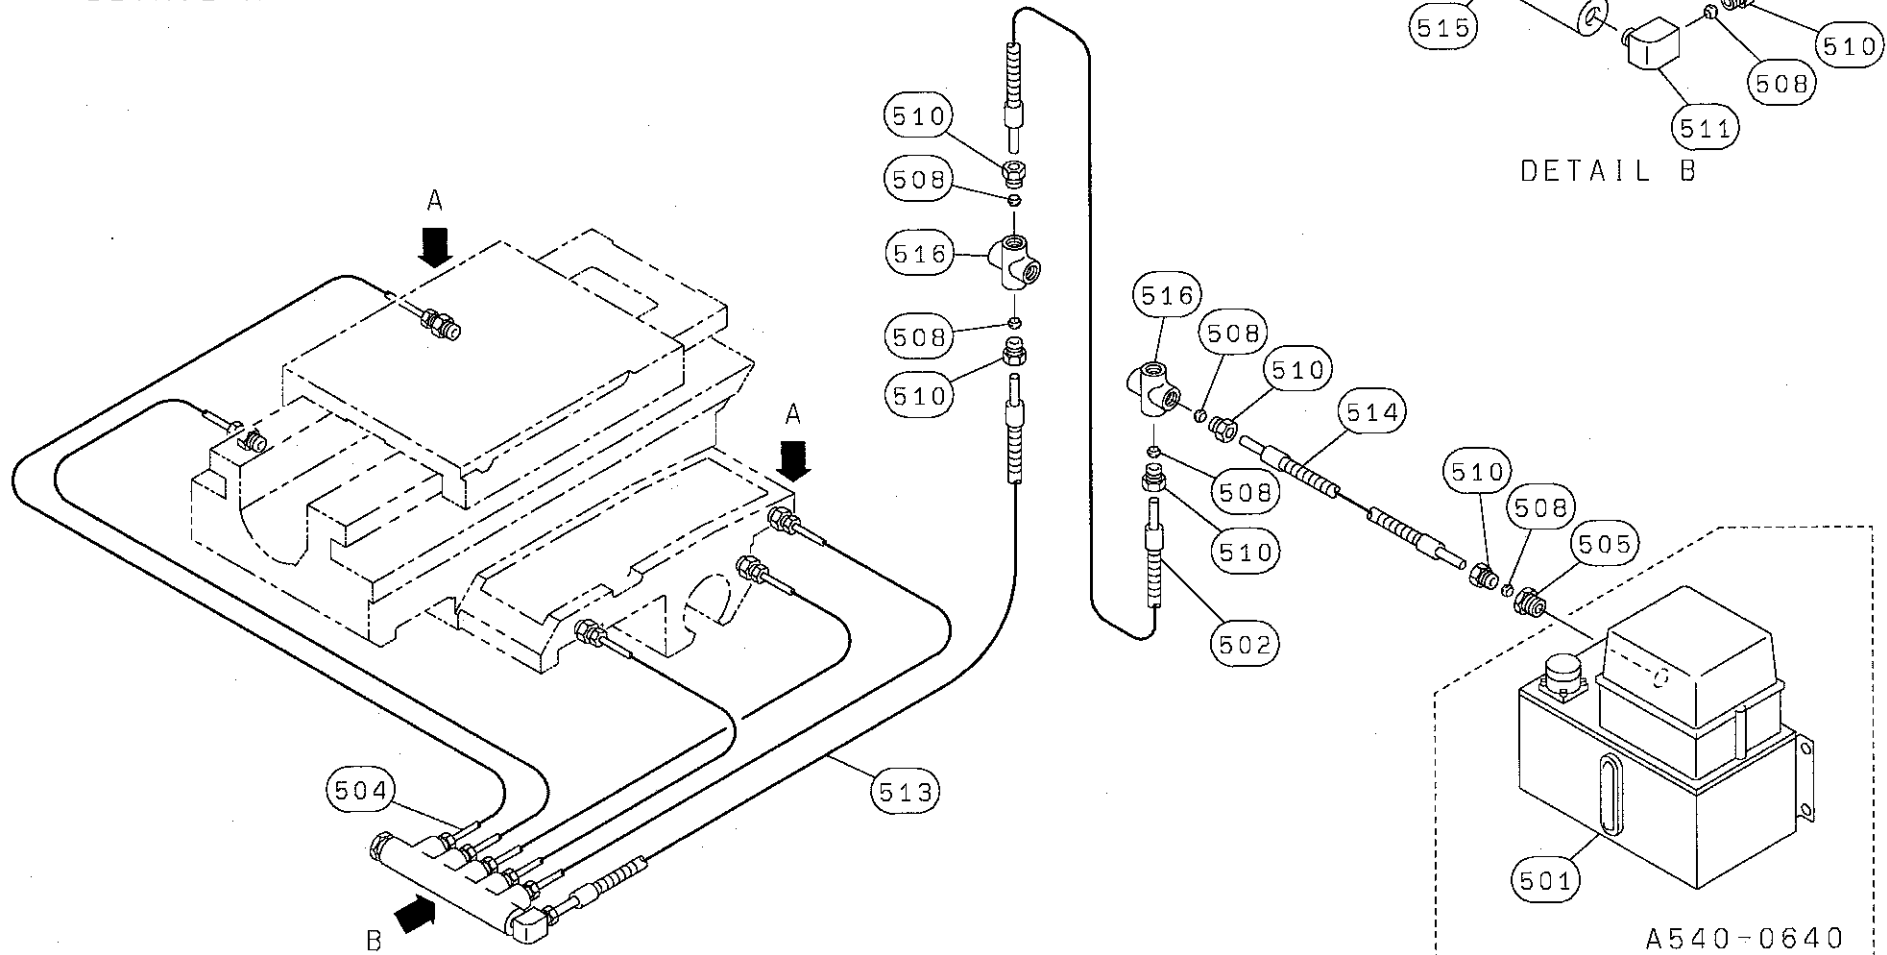


A540-0640


A572-1002

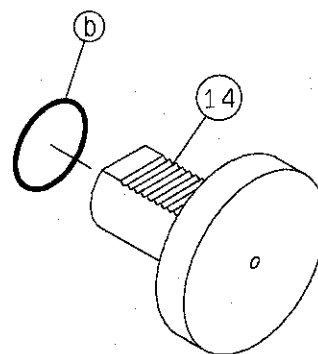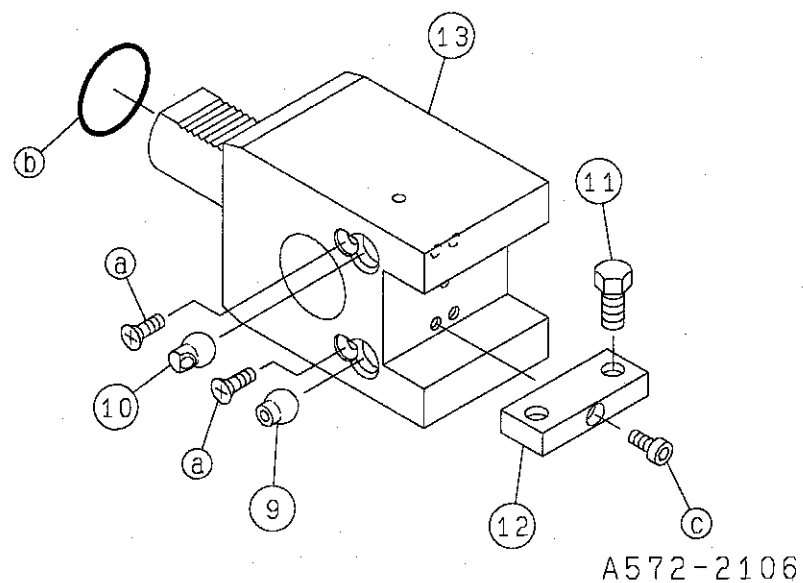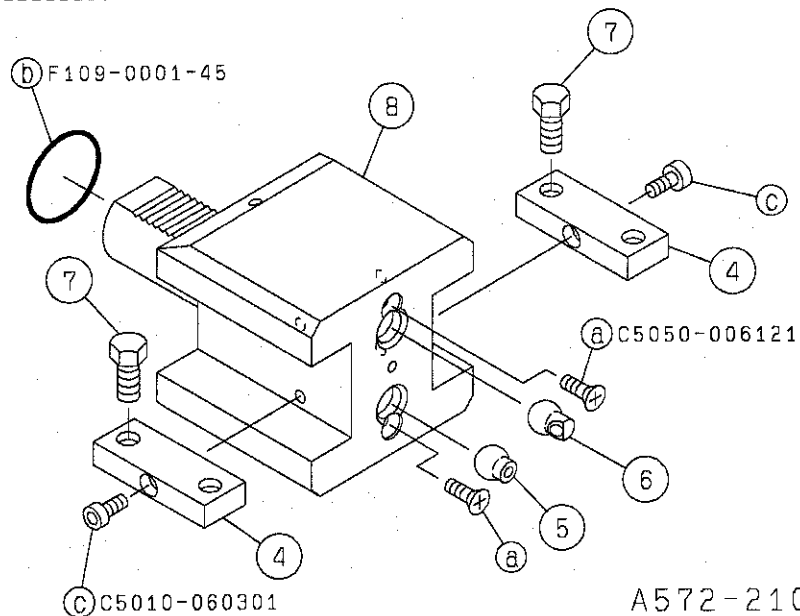

A572-2007

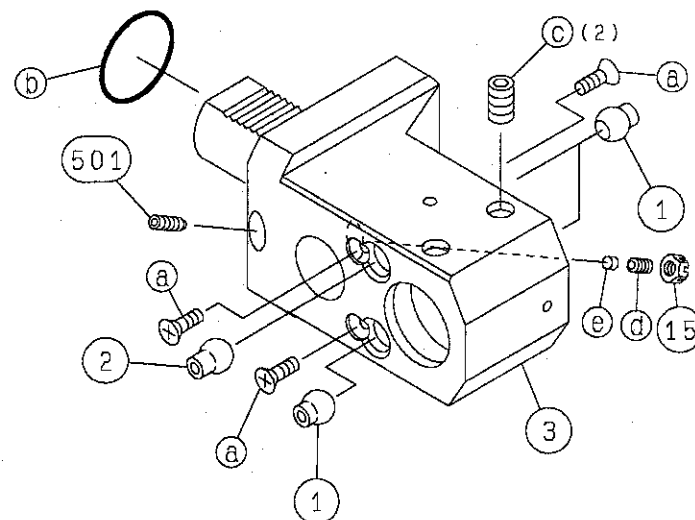


A572-2008

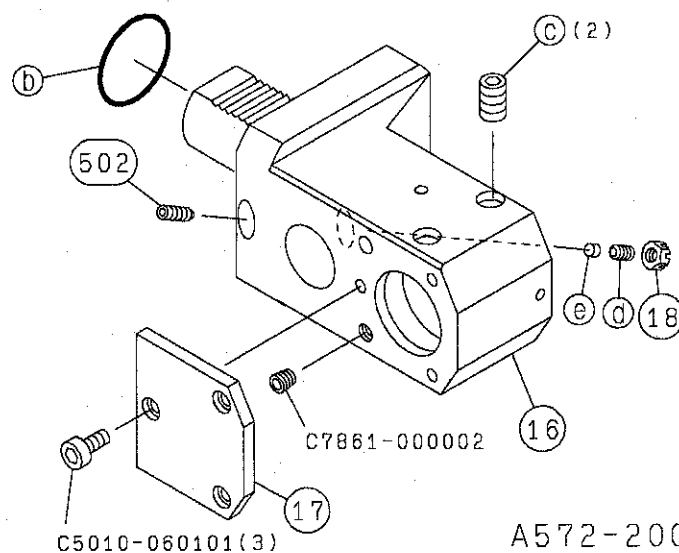

A572-2009

274

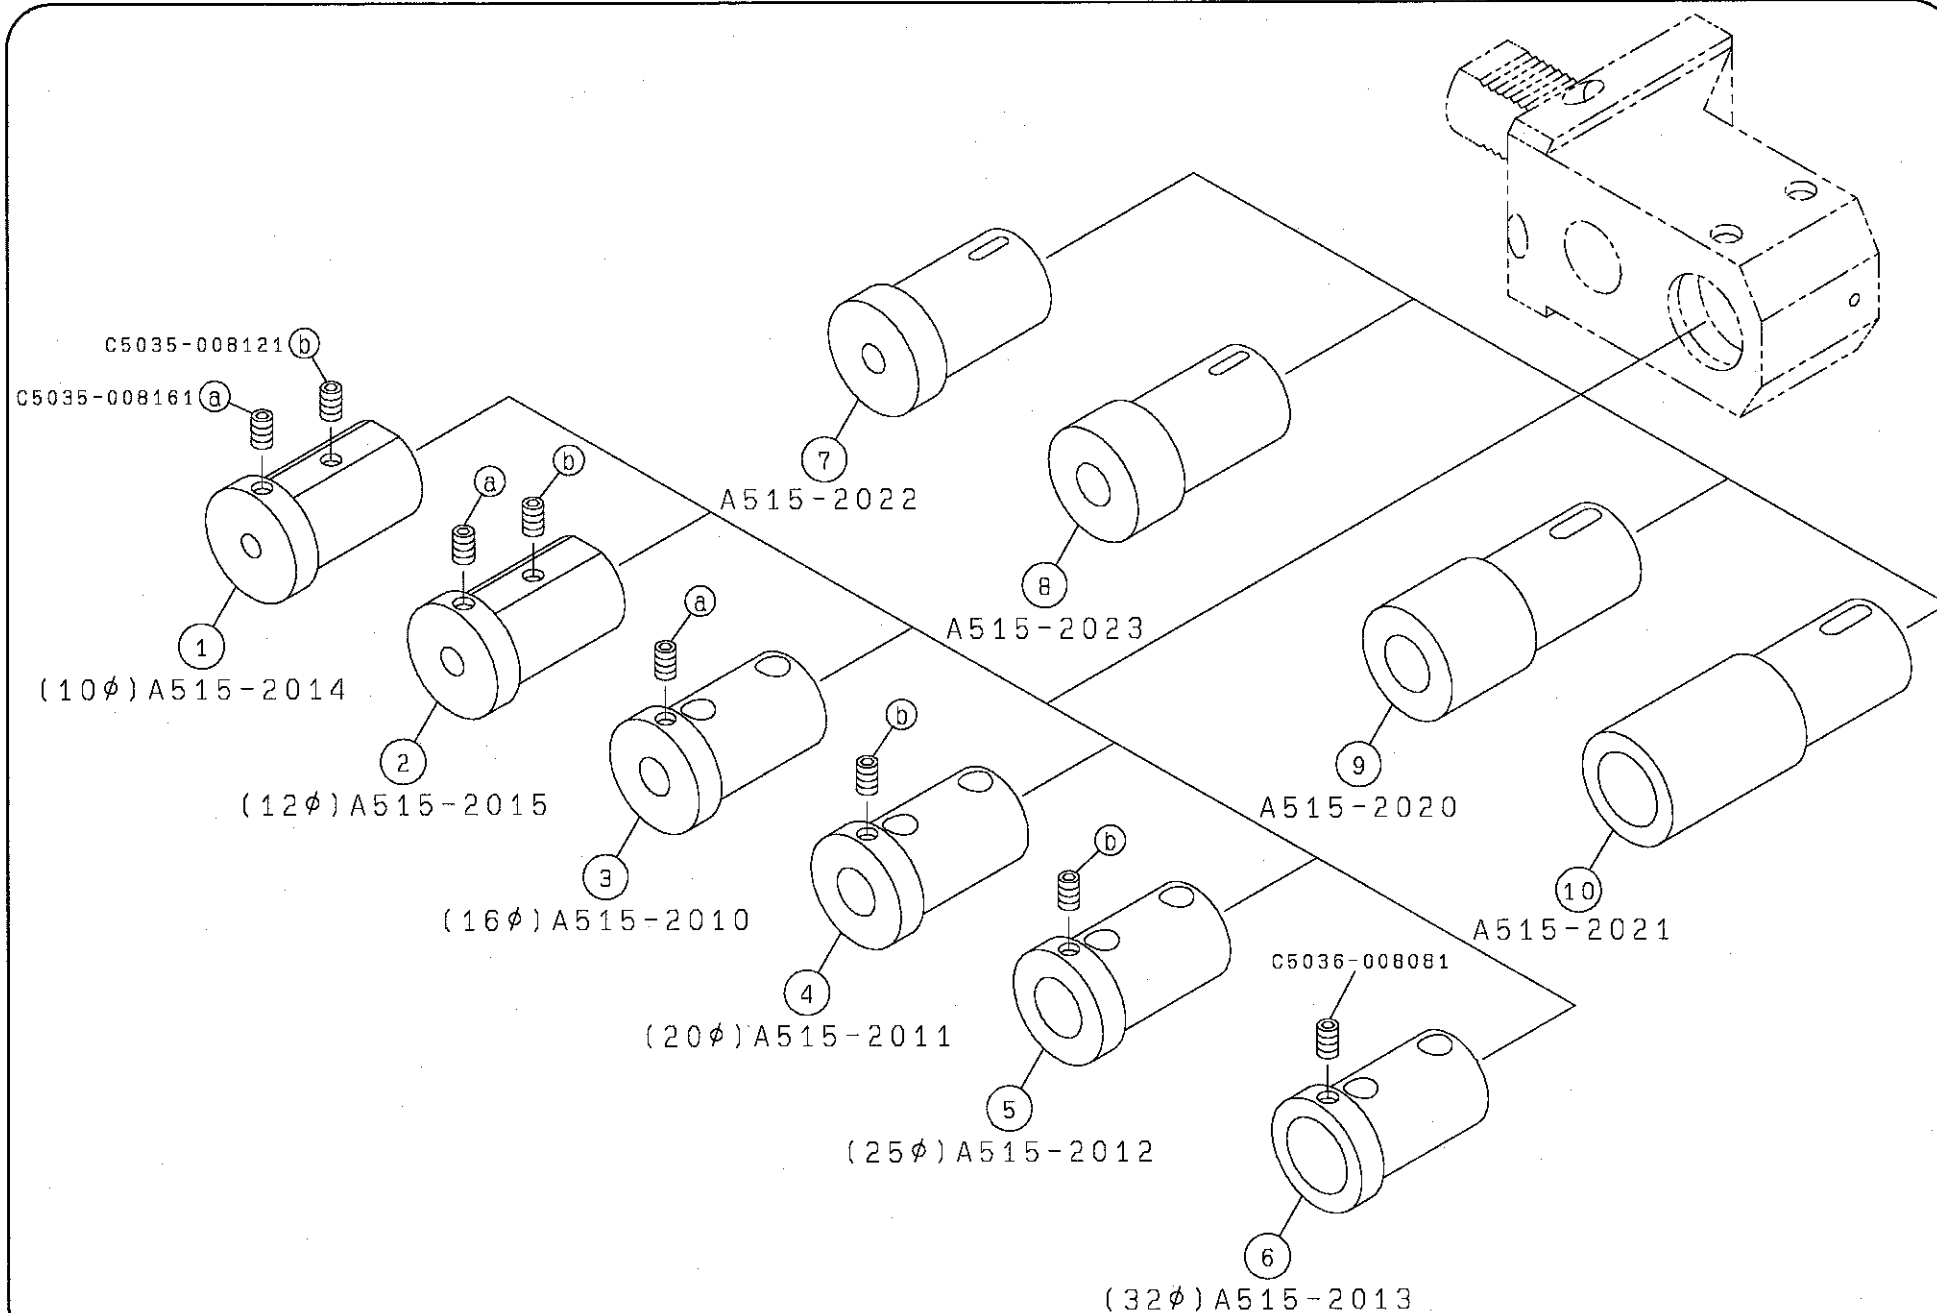

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
251 -046	572-0310-58-05	COVER	A572-1002	1	253 -044	572-0310-31-02	HOUSING	A572-0300	1
251 -047	572-0310-59-03	COVER	A572-1002	1	253 -501	H1040-1045-56-3	NAMEPLATE	A572-0302	1
251 -048	572-0310-62-02	COVER	A572-0307	1	253 -502	H0031-0005-01	X-RING NIHON BARU KA	A572-0300	1
251 -050	572-0310-64-02	COVER	A572-1002	1					
251 -051	572-0310-66-01	HOLDER	A572-1002	1	254 -006	572-0300-07-02	CAP	A572-0300	10
251 -052	572-0310-67-03	PLATE	A572-1002	1	254 -008	572-0300-10-04	SHAFT	A572-0300	1
251 -053	572-0310-68-02	PLATE	A572-1002	1	254 -009	572-0300-42	COLLAR	A572-0305	9
251 -055	572-0310-70	BOLT	A572-1002	1	254 -010	572-0300-43	PIN	A572-0305	9
251 -056	572-0310-71-01	SHAFT	A572-1002	1	254 -011	572-0300-26-04	COLLAR	A572-0300	1
251 -059	572-0310-96	CAP	A572-1002	1	254 -012	572-0360-15-03	DOG	A572-0300	1
251 -060	572-0231-68-01	BLOCK	A572-1002	1	254 -013	572-0360-14-01	DOG	A572-0300	1
251 -061	572-0231-38-03	COVER	A572-1002	1	254 -021	572-0310-17	RING	A572-0305	1
251 -062	572-0231-33-01	CAP	A572-1002	1	254 -023	572-0310-21	SHAFT	A572-0305	9
251 -501	H1023-0017-44-1	WIPER	A572-1002	1	254 -025	572-0360-02-03	CLUTCH	A572-0300	1
251 -502	H1001-0014-76	SCREW, flat-head G OSHO	A572-0307	5	254 -027	572-0310-05-04	CLUTCH	A572-0300	1
251 -503	H1001-0014-76	SCREW, flat-head G OSHO	A572-1002	2	254 -043	572-0310-28-03	FACE PLATE	A572-0300	1
251 -504	H1020-1134-69-1	PACKING	A572-1002	1	254 -057	572-0310-86	BOLT	A572-0300	12
251 -505	H1001-0019-05	SCREW, flat-head G OSHO	A572-1002	2	254 -058	572-0310-87-02	BLOCK	A572-0300	12
251 -505	H1001-0014-76	SCREW, flat-head G OSHO	A572-1002	2	254 -061	572-0320-01-05	TURRET	A572-0300	1
					254 -501	H1002-1000-36	PIN S45C	A572-0300	2
252 -042	572-0311-12	HOLDER	A572-0300	1	254 -502	H1004-0003-17	GT-WASHER GOSHO	A572-0300	6
252 -046	572-0310-35-03	COVER	A572-0300	1					
252 -047	572-0310-36-04	COVER	A572-0300	1	255 -002	555-0320-16	COLLAR	A572-0305	2
252 -048	572-0310-37-02	PLATE	A572-0300	1	255 -003	555-0320-17	SHAFT	A572-0305	2
252 -054	572-0311-13	SHAFT	A572-0300	1	255 -007	572-0300-37-01	CAP	A572-0305	1
252 -059	572-0311-09-03	COVER	A572-0302	1	255 -018	572-0300-70-01	GEAR	A572-0305	1
					255 -020	572-0310-13-01	CLUTCH	A572-0305	1
253 -003	572-0311-22	PIN	A572-0302	12	255 -022	572-0310-20-03	BLOCK	A572-0305	1
253 -004	572-0311-23	BOLT	A572-0302	12	255 -024	572-0310-22	PIN	A572-0305	1
253 -017	572-0300-61-01	CAP	A572-0300	1	255 -031	572-0310-10-03	BOX	A572-0316	1
253 -037	572-0310-18-01	BUSHING	A572-0305	1	255 -045	572-0310-32-06	SHAFT	A572-0316	1


SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
255 -046	572-0311-21-01	COLLAR	A572-0305	1	258 -010	572-0310-24-01	GEAR	A572-0300	1
256 -001	572-0310-53-01	LABYRINTH	A572-0302	1	258 -011	572-0310-16-01	SLEEVE	A572-0300	1
256 -026	572-0360-03-01	CLUTCH	A572-0300	1	258 -012	572-0300-67-01	COLLAR	A572-0300	1
256 -033	572-0310-12-02	PISTON	A572-0300	1	258 -013	572-0360-17-03	COVER	A572-0300	1
256 -049	572-0360-04-02	FLANGE	A572-0300	1	258 -014	572-0360-13-05	SUPPORT	A572-0300	1
256 -501	H0031-0007-76	PACKING SAKAGAMI	A572-0300	1	259 -002	555-0300-21-02	CAP	A572-0300	1
256 -502	H0031-0007-83	PACKING SAKAGAMI	A572-0300	1	259 -004	112-0320-09	NUT	A572-0300	1
257 -001	572-0311-18	CAP	A572-0300	1	259 -005	555-0300-40-01	WASHER	A572-0300	1
257 -002	572-0300-84-05	PIPE	A572-0300	1	259 -014	572-0300-32-02	SLEEVE	A572-0300	1
257 -003	572-0311-19	SUPPORT	A572-0300	1	259 -015	572-0300-33	GEAR	A572-0300	1
257 -004	572-0300-83-04	PIPE	A572-0300	1	259 -016	572-0300-36-02	COLLAR	A572-0300	1
257 -005	572-0300-55-02	GEAR	A572-0305	1	259 -018	572-0300-63-01	GEAR	A572-0300	1
257 -006	572-0300-38-01	COLLAR	A572-0305	1	259 -030	572-0310-08-07	BASE	A572-0300	1
257 -007	572-0300-46	COLLAR	A572-0305	1	259 -034	572-0310-14	GEAR	A572-0300	1
257 -008	572-0300-45	COLLAR	A572-0305	1	259 -039	572-0310-23-01	SLEEVE	A572-0300	1
257 -009	572-0300-34	COLLAR	A572-0305	1	259 -041	572-0310-25	KEY	A572-0300	1
257 -010	572-0300-44-04	SHAFT	A572-0305	1	259 -053	572-0310-75-04	BASE, motor	A572-0300	1
257 -011	572-0310-15-03	HOUSING	A572-0300	1	260 -002	572-0310-60-03	SUPPORT	A572-0302	1
257 -012	572-0300-47-02	COLLAR	A572-0305	1	260 -004	555-0320-38	FLANGE	A572-0305	1
257 -013	572-0310-34-01	HOLDER	A572-0305	1	260 -015	572-0300-48-01	COLLAR	A572-0305	1
258 -001	572-0310-07-04	SHAFT	A572-0300	1	260 -019	572-0300-85	COLLAR	A572-0305	1
258 -002	572-0310-01-11	TOOL POST	A572-0300	1	260 -026	572-0310-74-03	BASE, motor	A572-0305	1
258 -003	572-0310-11-02	SHAFT	A572-0300	1	260 -027	572-0310-76-03	COVER	A572-0305	1
258 -004	572-0300-71-02	KEY	A572-0300	1	260 -028	572-0360-28	BLOCK	A572-0305	1
258 -005	572-0310-06-04	HOUSING	A572-0300	1	260 -029	572-0310-80	FLANGE	A572-0305	1
258 -007	572-0300-28-01	COLLAR	A572-0300	1	260 -030	572-0310-81	COLLAR	A572-0305	1
258 -008	572-0300-27-01	COLLAR	A572-0300	1	260 -031	572-0310-88	BASE	A572-0305	1
258 -009	572-0300-66-01	COLLAR	A572-0300	1	260 -032	572-0310-89-01	COVER	A572-0305	1
					260 -050	572-0310-44-02	CAP	A572-0300	1

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
260 -052	572-0310-73-03	BLOCK	A572-0300	1	272 -001	572-0231-70	WIPER	A572-1002	1
260 -501	H1012-0002-16	POWER LOCK TUBAKI MOTO	A572-0305	2	272 -002	572-0231-72	HOLDER	A572-1002	1
260 -502	H1012-0003-09	POWER LOCK TUBAKI MOTO	A572-0305	2	272 -003	572-0231-74	WIPER	A572-1002	1
260 -503	H1019-0009-17	PULLEY, scynchro B ANDO	A572-0305	1	272 -004	572-0231-78	HOLDER	A572-1002	1
260 -504	H1019-0009-18	PULLEY, scynchro B ANDO	A572-0305	1	272 -005	572-0231-69	WIPER	A572-1002	1
261 -065	572-0610-04-03	MANIFOLD	A572-1002	1	272 -006	572-0231-71	HOLDER	A572-1002	1
261 -501	H0130-0012-10-1	HYDRAULIC UNIT NA CHI	A572-0600	1	272 -007	572-0231-73	WIPER	A572-1002	1
261 -502	H0130-0012-11-1	HYDRAULIC UNIT NA CHI	A572-0601	1	272 -008	572-0231-77	HOLDER	A572-1002	1
271 -011	572-0230-25-02	COVER	A572-1002	1	272 -029	572-0231-66	WIPER	A572-1002	1
271 -012	572-0230-26-04	COVER	A572-1002	1	272 -030	572-0231-67	HOLDER	A572-1002	1
271 -013	572-0230-29-01	PLATE	A572-1002	1	272 -031	572-0231-76	BLOCK	A572-1002	1
271 -016	572-0230-34-01	RAIL	A572-1002	1	272 -039	572-0231-75	COVER	A572-1002	1
271 -017	572-0230-27-03	COVER	A572-0225	1	272 -501	H1023-0016-99-2	WIPER	A572-0225	1
271 -019	572-0230-31	HOLDER	A572-0225	1	272 -505	H1032-1006-70-1	PACKING	A572-1002	1
271 -035	572-0231-35-03	PLATE	A572-1002	1	272 -506	H1020-1131-33-1	PACKING	A572-1002	1
271 -092	572-1005-10-01	SHAFT	A572-1002	1	273 -001	108-0301-17-1	BOLT	A572-0225	3
271 -501	H1001-0014-76	SCREW, flat-head G OSHO	A572-0225	2	273 -002	108-0301-18-2	NUT	A572-0225	3
271 -502	H1023-0017-99	WIPER	A572-1002	1	273 -008	572-0201-08-02	PIN	A572-0225	1
271 -503	H1001-0014-76	SCREW, flat-head G OSHO	A572-1002	3	273 -014	572-0230-51	PLATE	A572-0225	1
271 -504	H1000-0002-91	SNAP-RING IWATA	A572-1002	1	273 -024	572-0231-21-03	GIB	A572-0225	1
271 -505	H1090-0012-95-1	COVER, telesco ENO MOTO	A572-1002	1	273 -026	572-0231-26-02	GIB	A572-0225	1
271A-010	572-0230-15-01	SUPPORT	A572-0225	1	273 -031	572-0231-44-04	CROSS-SLIDE	A572-0225	1
271A-058	572-0230-38-01	COVER	A572-1002	1	273 -032	572-0231-45-02	BACK PLATE	A572-0225	1
271A-059	572-0230-39-01	PLATE	A572-1002	1	273 -033	572-0231-46-03	BACK PLATE	A572-0225	1
271A-061	572-0230-40-01	PLATE	A572-1002	1	273 -034	572-0231-47-02	GIB	A572-0225	1
271A-062	572-0230-41-01	GUIDE	A572-1002	1	273 -035	572-0310-47-01	LINER	A572-0225	1
271A-082	572-0230-37-01	COVER	A572-1002	1	274 -003	118-2100-85	NUT	A572-0225	1
271A-083	572-1014-57	COVER	A572-1002	1	274 -004	118-2100-86-1	WASHER	A572-0225	1

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
274 -010	572-0210-10-01	NUT	A572-0225	1	276 -501	H1014-0009-42-1	BALL-SCREW	A572-0271	1
274 -011	572-0210-11	BUSHING	A572-0225	1	276 -502	H1020-1137-47	STOPPER	A572-0225	1
274 -012	572-0210-12-01	KEY	A572-0225	1	277 -501	H0120-0002-82	TANK, lubrication SHOWA	A540-0640	1
274 -016	572-0230-24-09	BOX	A572-0225	1	277 -502	H0022-0001-27	HOSE SHOWA FSC645	A572-1002	1
274 -018	572-0230-28-02	BASE, motor	A572-0225	1	277 -503	H0022-0004-79	HOSE SHOWA FSC637	A572-1002	1
274 -032	572-0231-30-01	SHAFT	A572-1002	1	277 -504	H0019-0002-80	PLUNGER SHOWA DPB	A572-1002	1
274 -040	572-0231-48	DOG	A572-1002	2	277 -505	H0012-0004-37	13 SEAL PLUG SHOWA P	A572-1002	1
274 -041	572-0231-49	SUPPORT	A572-1002	1	277 -506	H0019-0002-47	G10C PLUNGER SHOWA DPB	A572-1002	1
274 -090	572-1005-06-03	PLATE	A572-1002	2	277 -507	H0019-0002-30	15 PLUNGER SHOWA DPB	A572-1002	1
274 -091	572-1005-07-01	SHAFT	A572-1002	1	277 -508	H0026-0006-72	15 PIPE SHOWA 4X4000	A572-1002	1
274 -097	572-1005-21-01	SHAFT	A572-1002	1	277 -509	H0012-0004-21	0 NIPPLE SHOWA KH2	A572-1002	1
274 -098	572-0231-51	PLATE	A572-1002	1	277 -510	H0012-0006-11	NIPPLE SHOWA KH4	A572-1002	1
274 -099	572-0231-50	SUPPORT	A572-1002	1	277 -511	H0012-0001-11	SLEEVE SHOWA PB6	A572-1002	10
274 -501	H1019-0009-19-1	PULLEY, scynchro B ANDO	A572-0225	1	277 -512	H0012-0001-12	PLUG SHOWA PA6	A572-1002	10
274 -502	H1019-0009-20	PULLEY, scynchro B ANDO	A572-0225	1	277 -513	H0012-0002-44	ELBOW SHOWA PH6	A572-1002	1
275 -006	555-0220-29-01	SPACER	A572-0225	1	277 -514	H0012-0005-94	ELBOW SHOWA PH6-M	A572-1002	2
275 -021	572-0231-56	CAP	A572-0225	1	277 -515	H0012-0008-13	10 SEAL PLUG SHOWA P	A572-1002	1
275 -025	572-0231-25	KEY	A572-0225	1	277 -516	H0015-0002-26	G8C CROSS SHOWA PJD40	A572-1002	2
275 -027	572-0231-40-04	HOUSING	A572-0225	1	277 -517	H0010-0011-04	6 INSERT SHOWA AL4	A572-1002	24
275 -028	572-0231-55	COLLAR	A572-0225	1	277 -518	H0026-0001-80	HOSE SHOWA FSC665	A572-1002	1
275 -029	572-0231-53	COLLAR	A572-0225	1	277 -519	H0012-0002-48	NIPPLE SHOWA PD4	A572-1002	7
275 -501	H1020-1137-28-1	STOPPER	A572-0225	1	277 -520	H0012-0000-89	SLEEVE SHOWA PB4	A572-1002	24
276 -007	555-0230-21-04	NUT	A572-0225	1	277 -521	H0012-0000-88	PLUG SHOWA PA4	A572-1002	24
276 -010	572-0210-10-01	NUT	A572-0225	1	277 -522	H0010-0300-28	ELBOW SHOWA PH4	A572-1002	5
276 -020	572-0231-13-02	HOUSING	A572-0225	1	277 -523	H0022-0004-45	HOSE SHOWA FSC631	A572-1002	1
276 -022	572-0231-18-01	CAP	A572-0225	1	278 -501	H0120-0002-82	TANK, lubrication SHOWA	A540-0640	1
276 -023	572-0231-20	COLLAR	A572-0225	1	278 -502	H0022-0001-27	HOSE SHOWA FSC645	A572-1002	1
276 -029	572-0231-42-02	BRACKET	A572-0225	1	278 -503	H0012-0004-37	SEAL PLUG SHOWA P	A572-1002	1
276 -030	572-0231-43	STOPPER	A572-0225	1	278 -504	H0026-0006-72	G10C PIPE SHOWA 4X4000	A572-1002	1

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
278 -505	H0012-0004-21	NIPPLE SHOWA KH2	A572-1002	1	283 -018	572-2000-11-01	NUT	A572-2009	1
278 -506	H0012-0002-48	NIPPLE SHOWA PD4	A572-1002	5	283 -019	572-2000-18-01	HOLDER (INSIDE I)	A572-2007	1
278 -507	H0012-0000-89	SLEEVE SHOWA PB4	A572-1002	10	283 -020	572-2000-11-01	NUT	A572-2007	1
278 -508	H0012-0001-11	SLEEVE SHOWA PB6	A572-1002	6	283 -021	572-0311-24	NOZZLE	A572-2007	1
278 -509	H0012-0000-88	PLUG SHOWA PA4	A572-1002	10	283 -022	118-8001-30-1	CAP	A572-2007	3
278 -510	H0012-0001-12	PLUG SHOWA PA6	A572-1002	6	283 -501	H1001-1001-06-2	BOLT	A572-2008	2
278 -511	H0012-0005-94	ELBOW SHOWA PH6-M	A572-1002	1	283 -502	H1001-1001-06-2	BOLT	A572-2009	2
278 -512	H0010-0011-04	10 INSERT SHOWA AL4	A572-1002	10	283 -503	H1001-1001-06-2	BOLT	A572-2007	2
278 -513	H0026-0001-80	HOSE SHOWA FSC665	A572-1002	1					
278 -514	H0022-0004-45	HOSE SHOWA FSC631	A572-1002	1	284 -001	515-2000-21-2	SLEEVE	A515-2014	1
278 -515	H0019-0002-35	PLUNGER SHOWA DS5	A572-1002	1	284 -002	515-2000-10-2	SLEEVE	A515-2015	1
278 -516	H0015-0002-26	CROSS SHOWA PJD40 6	A572-1002	2	284 -003	515-2000-04-1	SLEEVE	A515-2010	1
					284 -004	515-2000-05-1	SLEEVE	A515-2011	1
282 -004	572-2100-02	BLOCK	A572-2105	2	284 -005	515-2000-06-1	SLEEVE	A515-2012	1
282 -005	118-8001-30-1	CAP	A572-2105	1	284 -006	515-2000-07-2	SLEEVE	A515-2013	1
282 -006	572-0311-25	NOZZLE	A572-2105	1	284 -007	515-2010-04-3	SLEEVE	A515-2022	1
282 -007	127-3300-26	BOLT	A572-2105	4	284 -008	515-2010-01-3	SLEEVE	A515-2023	1
282 -008	572-2100-20-01	HOLDER (VDI OUT1)	A572-2105	1	284 -009	515-2010-02-4	SLEEVE	A515-2020	1
282 -009	118-8001-30-1	CAP	A572-2106	1	284 -010	515-2010-03-3	SLEEVE	A515-2021	1
282 -010	572-0311-25	NOZZLE	A572-2106	1					
282 -011	127-3300-26	BOLT	A572-2106	2					
282 -012	572-2100-02	BLOCK	A572-2106	1					
282 -013	572-2100-21-01	HOLDER (VDI OUT2)	A572-2106	1					
282 -014	555-2500-08	HOLDER	A555-2290	1					
283 -001	118-8001-30-1	CAP	A572-2008	3					
283 -002	572-0311-24	NOZZLE	A572-2008	1					
283 -003	572-2000-19-01	HOLDER	A572-2008	1					
283 -015	572-2000-11-01	NUT	A572-2008	1					
283 -016	572-2000-20-01	HOLDER (U DRILL)	A572-2009	1					
283 -017	572-2000-03	CAP	A572-2009	1					

279

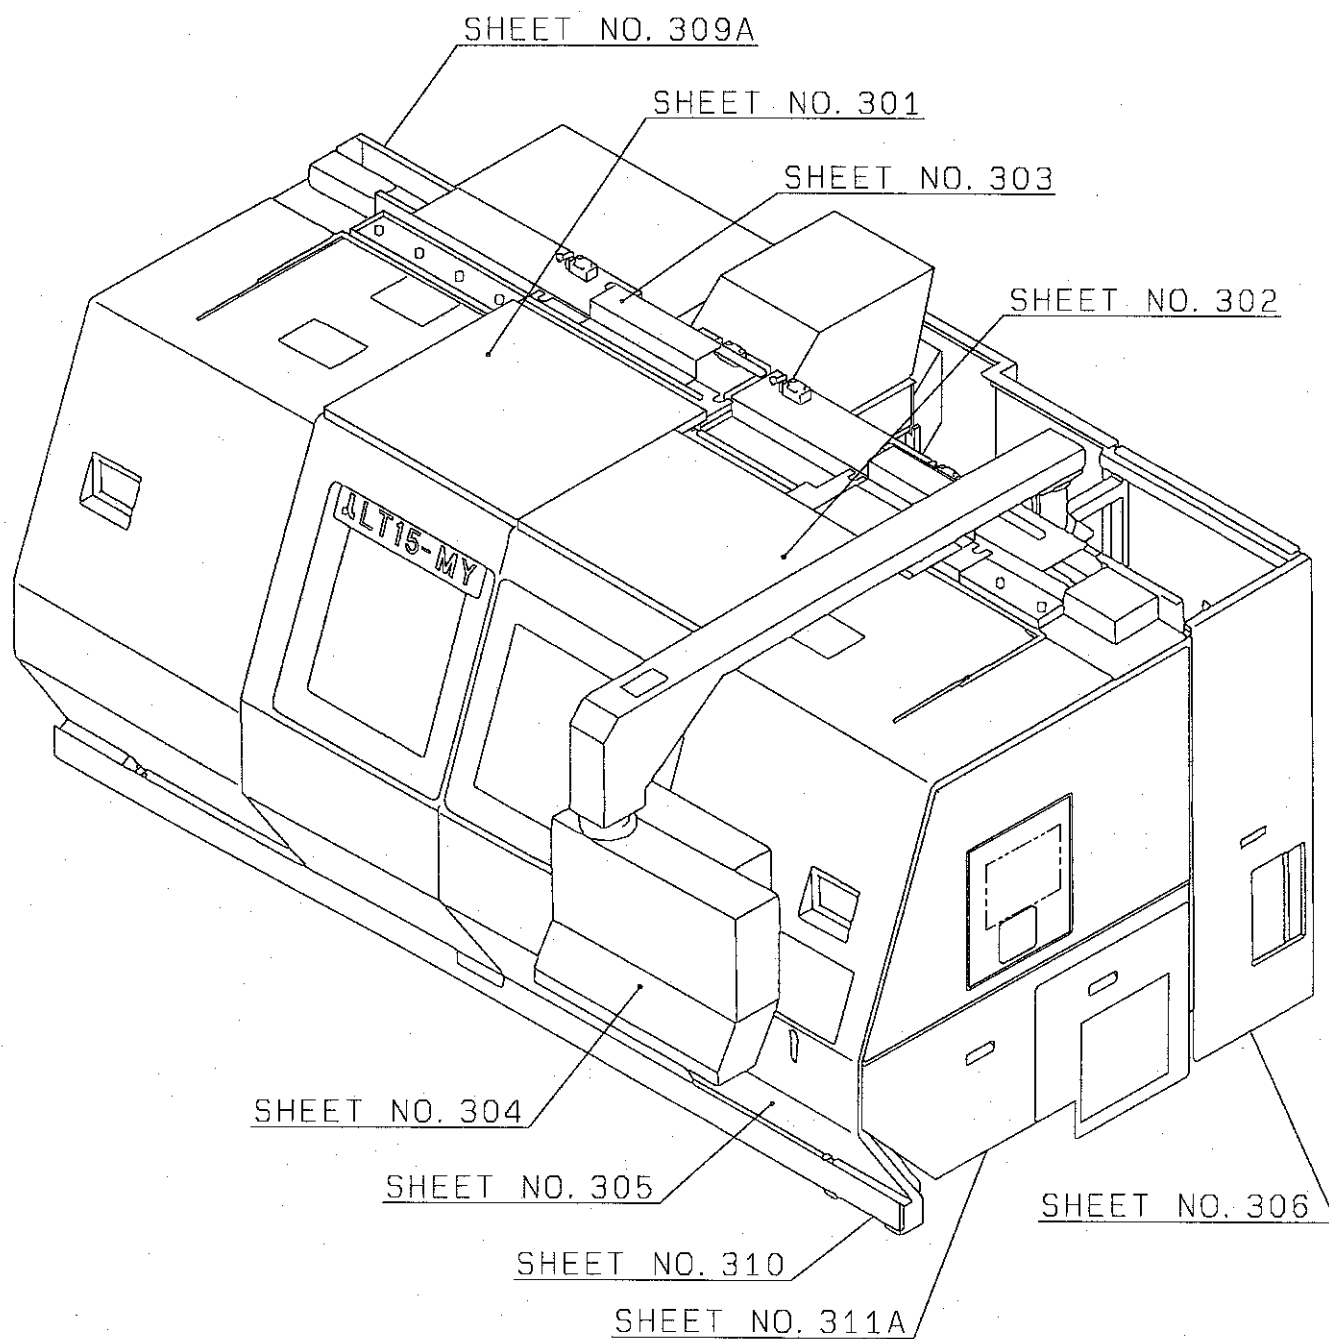


(4) COVER GROUP

~ C O N T E N T S ~


SHEET NO.	ASSEMBLY NAME	PAGE
301	SLIDING DOOR L. H.	302
302	SLIDING DOOR R. H.	303
303	DOOR INTER LOCK (MANUAL)	304
304	PENDANT ARM	305
305	FRONT SIDE COVERS	306
306	BACK COVERS	307
307	HEADSTOCK COVERS L. H.	308
308	HEADSTOCK COVERS R. H.	309
309	STRUCTURE R. H.	310
309A	STRUCTURE L. H.	310A
310	DOOR RAILS	311
311	END COVERS L. H.	312
311A	END COVERS R. H.	312A
312	SIDE COVERS R. H. (1)	313
313	SIDE COVERS R. H. (2)	314
314	SIDE COVERS L. H. (1)	315
315	SIDE COVERS L. H. (2)	316
316	UPPER TELESCOPIC COVERS	317
317	UPPER SADDLE COVERS L. H.	318
318	UPPER SADDLE COVERS R. H.	319
319	YS-AXIS COVERS	320
319A	LOWER INDEX CABLE DUCT	320A
320	LOWER TELESCOPIC COVERS L. H. (1)	321
321	LOWER TELESCOPIC COVERS L. H. (2)	322
322	UPPER TELESCOPIC COVER GUIDE (1)	323

(4) COVER GROUP
~ C O N T E N T S ~

SHEET NO.	ASSEMBLY NAME	PAGE
323	UPPER TELESCOPIC COVER GUIDE (2)	324
324	Z-AXIS OIL PAN	325
325	NC BOX & HYDRAULIC UNIT BASE	326
326	OIL CONTROL SUPPORT	327
327	DOOR RAIL SUPPORT	328
I	INDEX NO. LIST	329

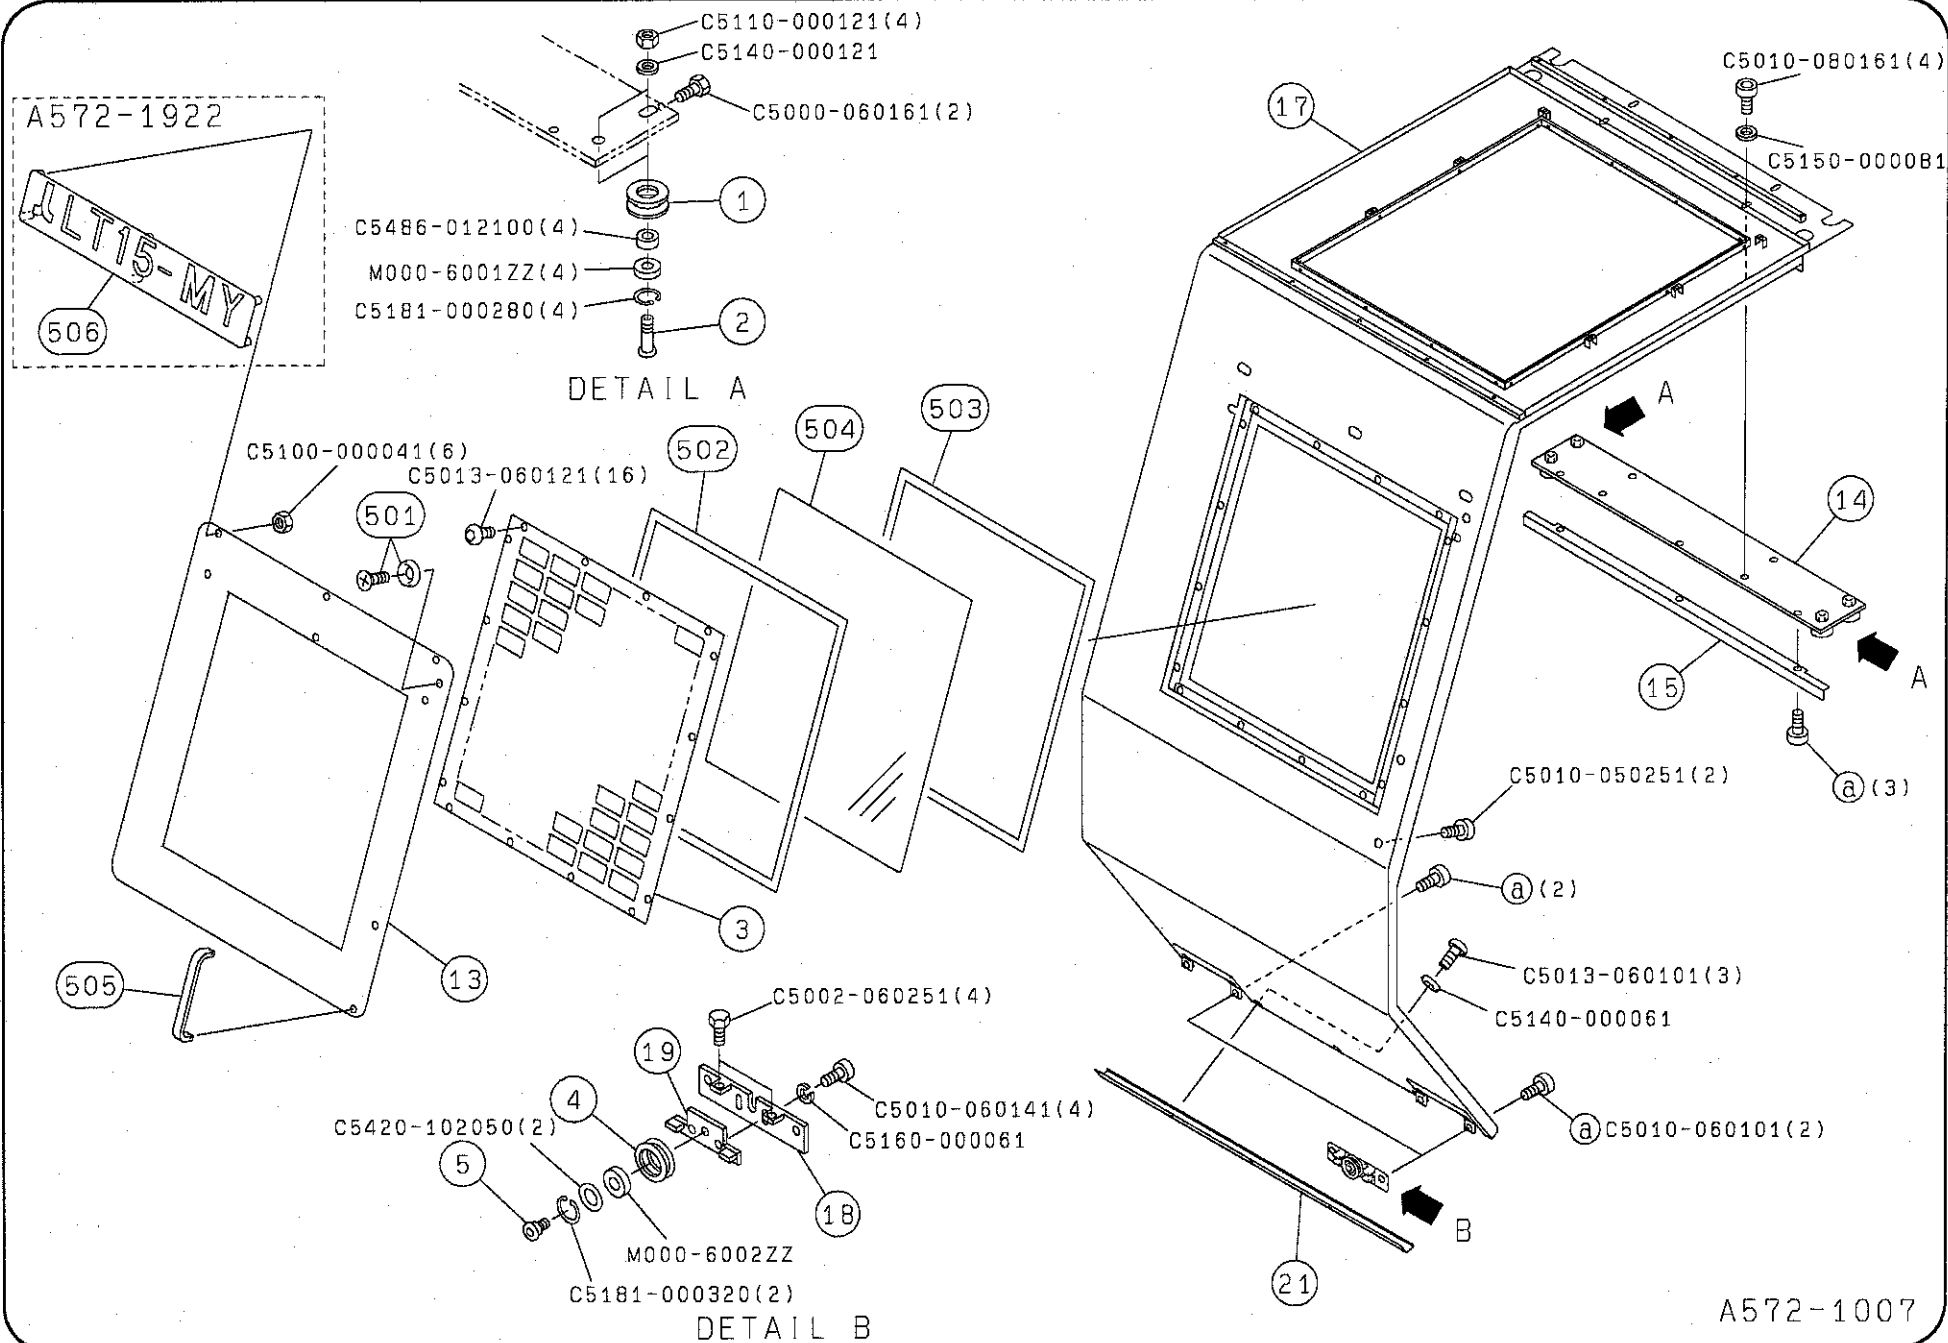


303

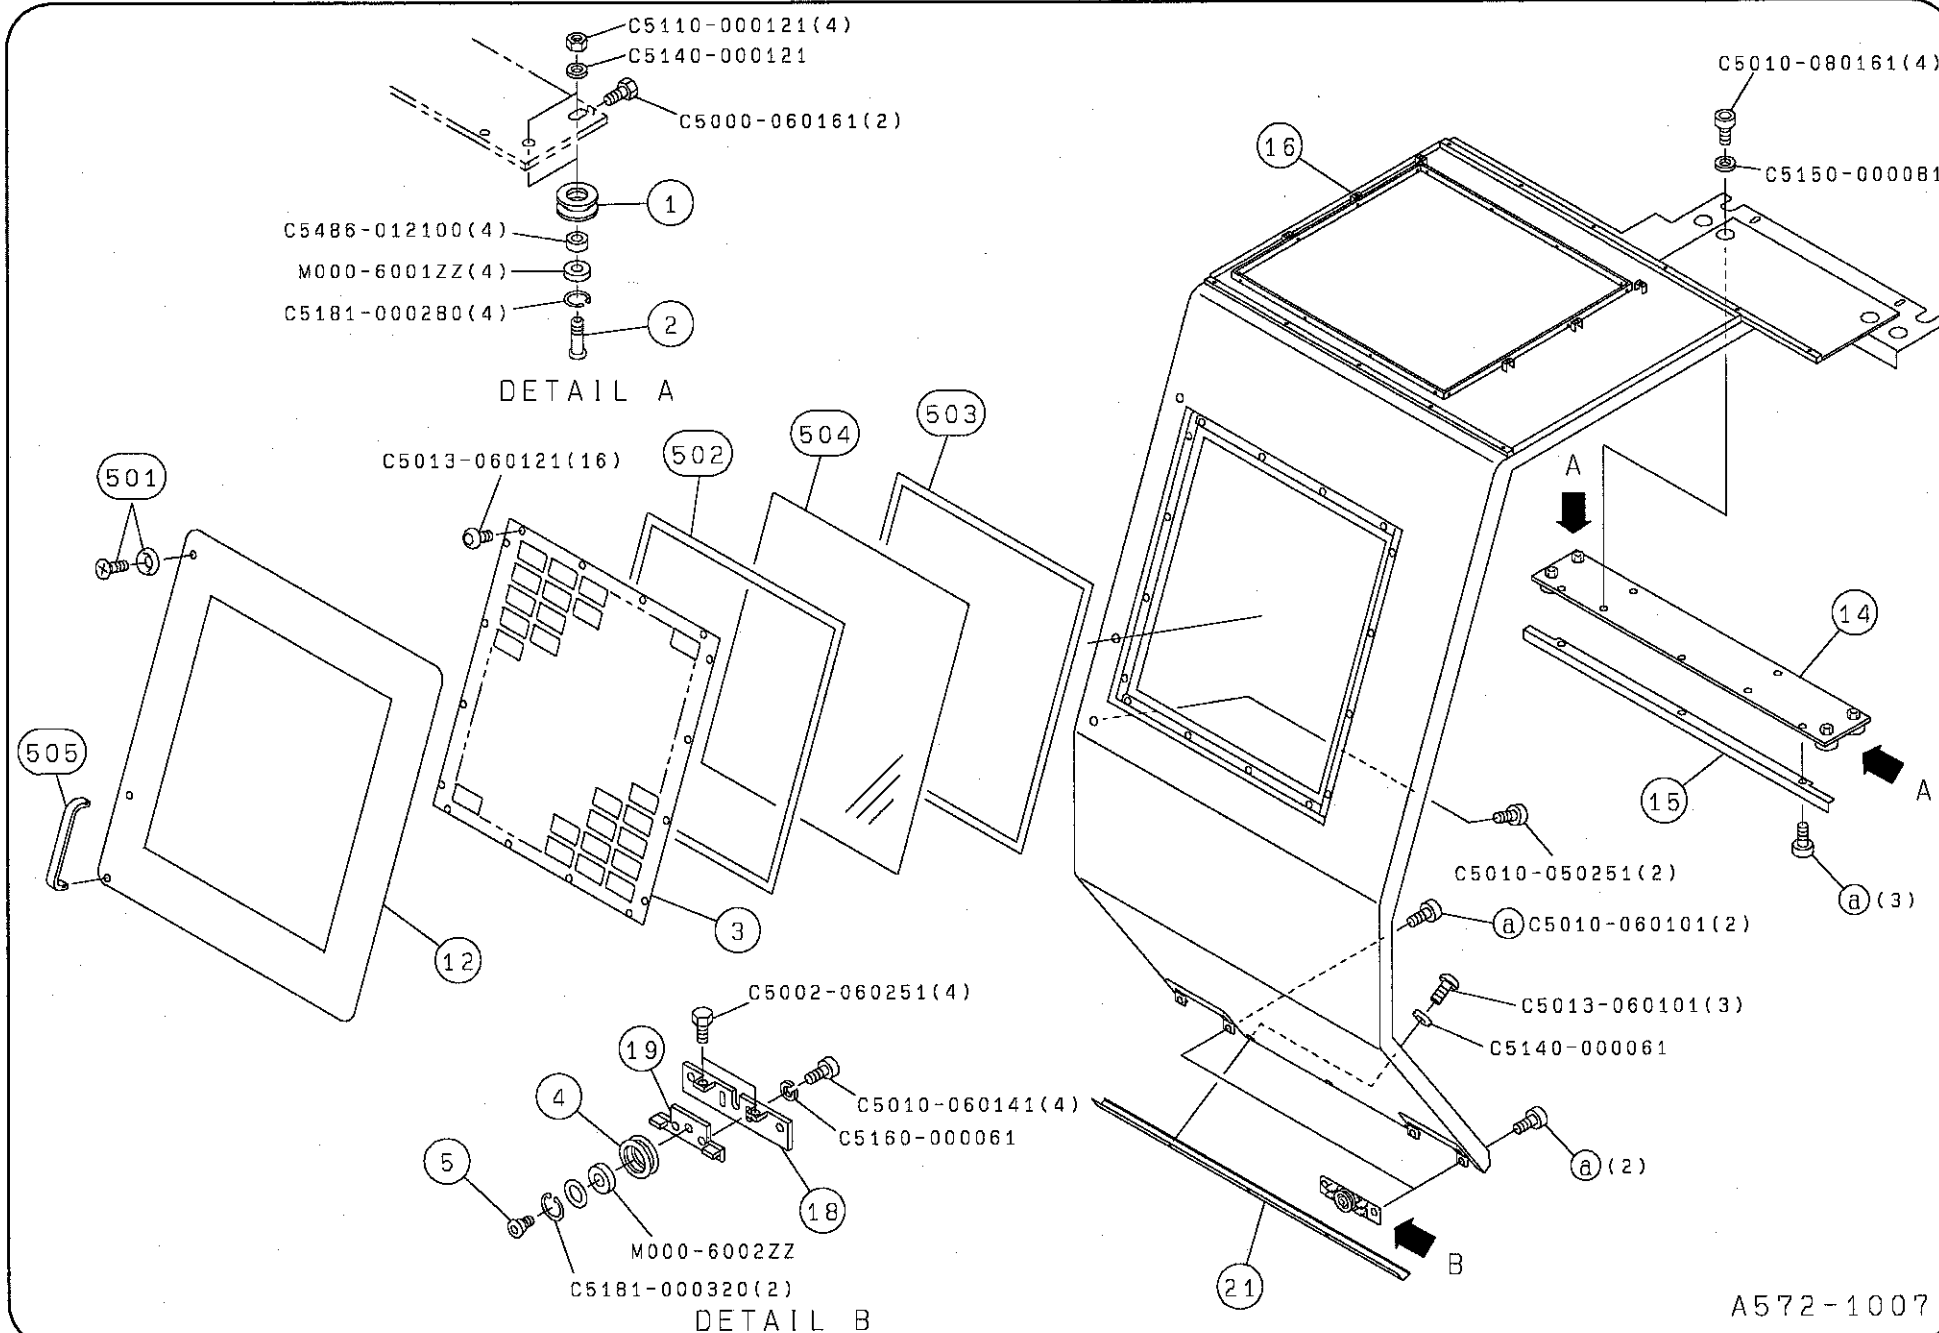


A572-1007

304

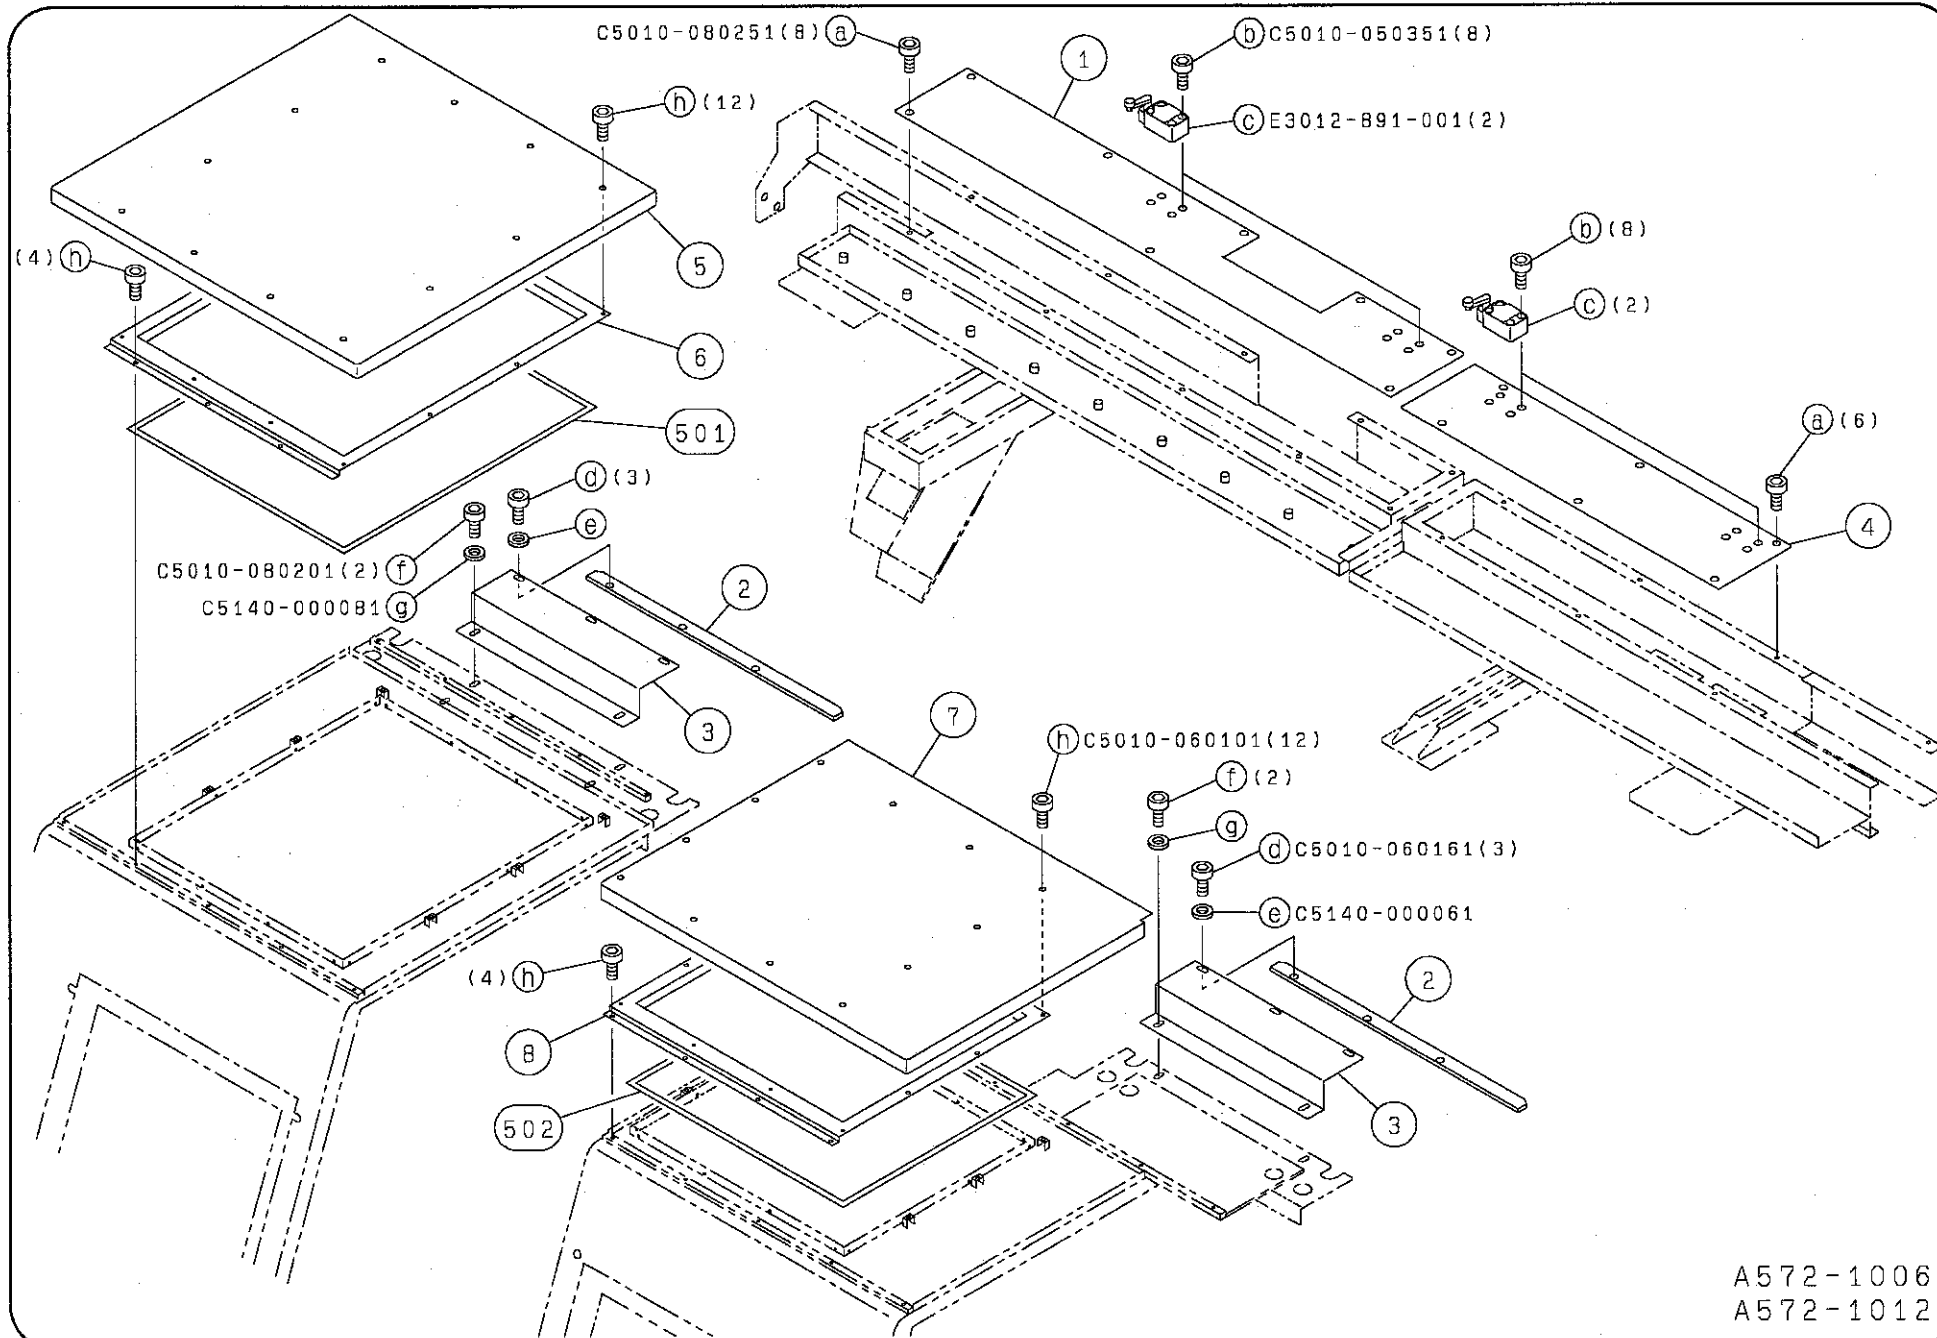


A572-1006
A572-1012

305

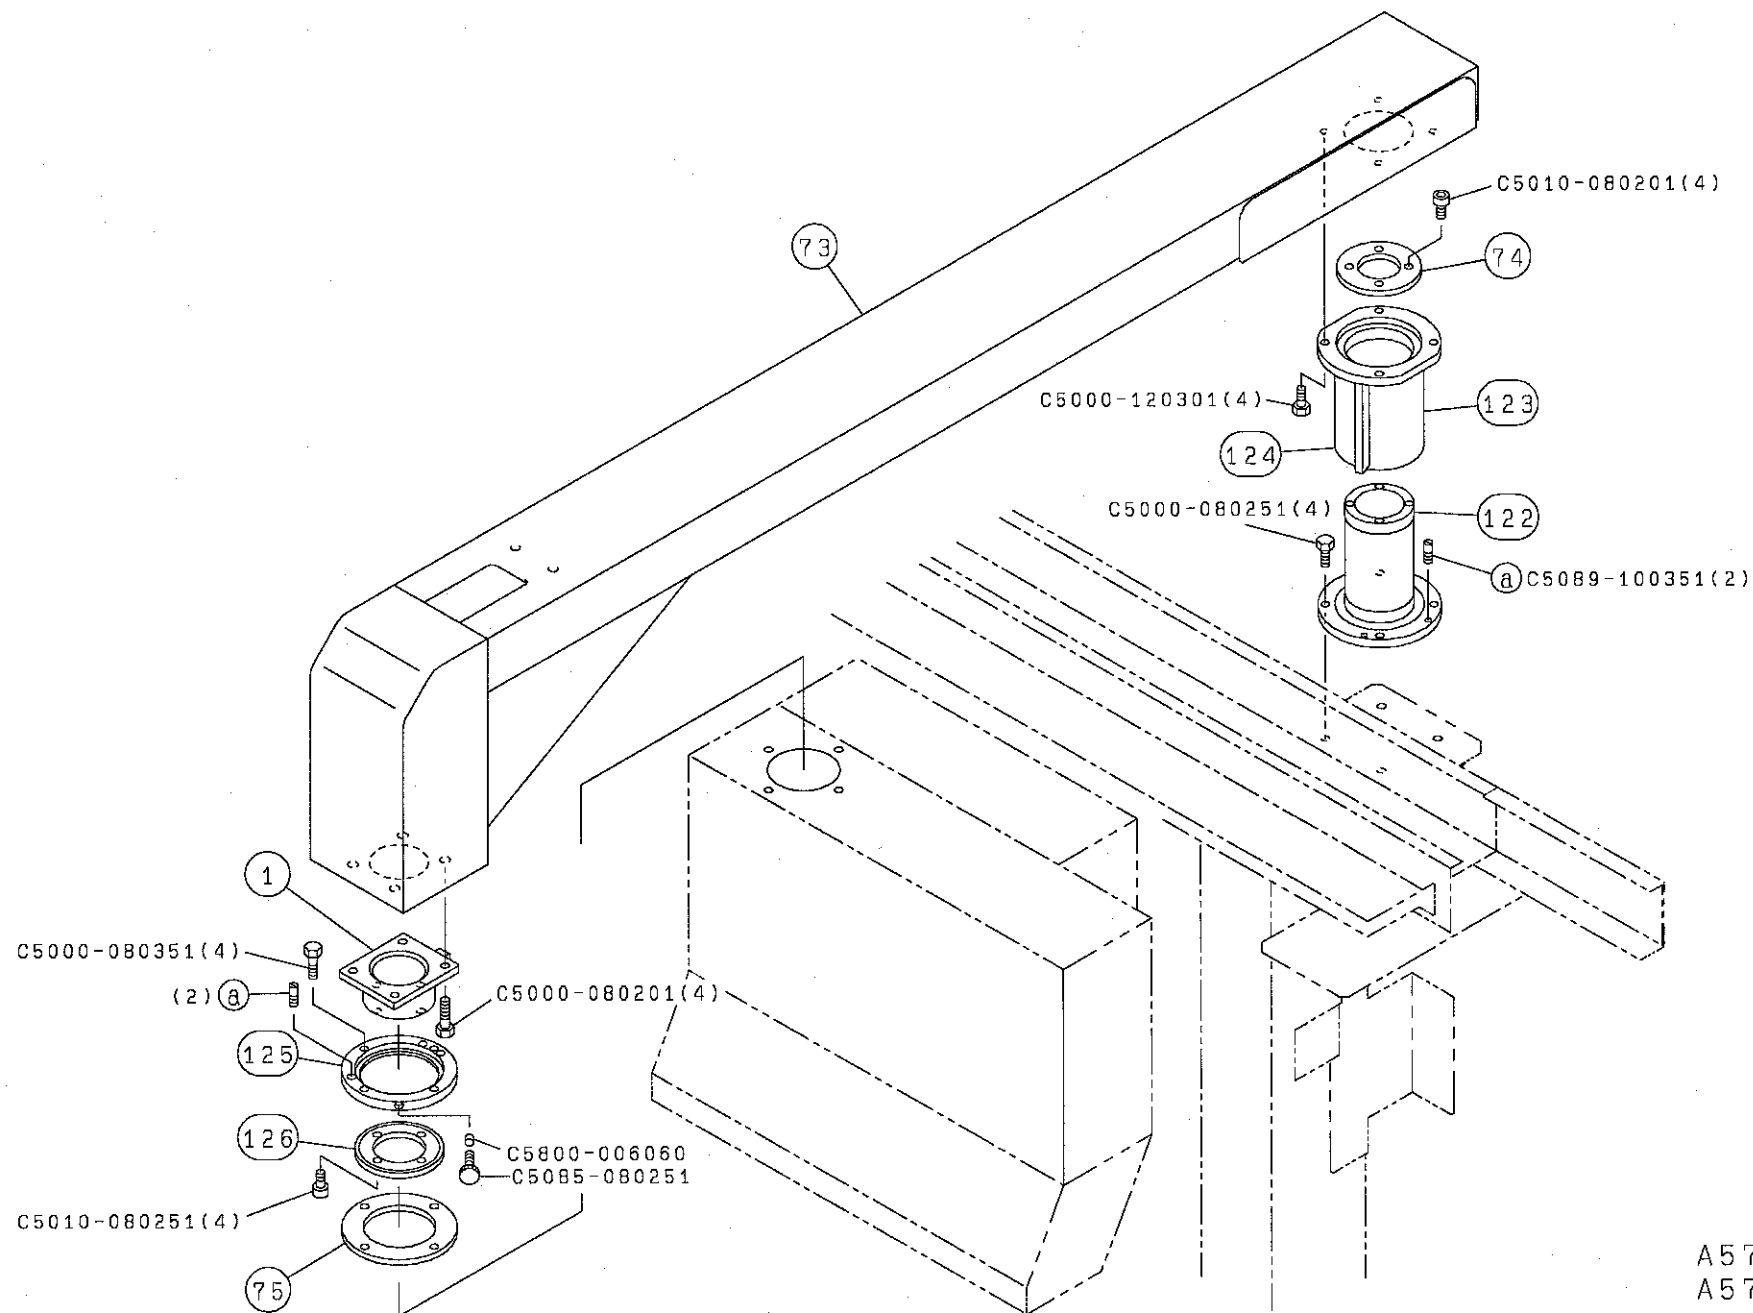


A572-1002
A572-1007

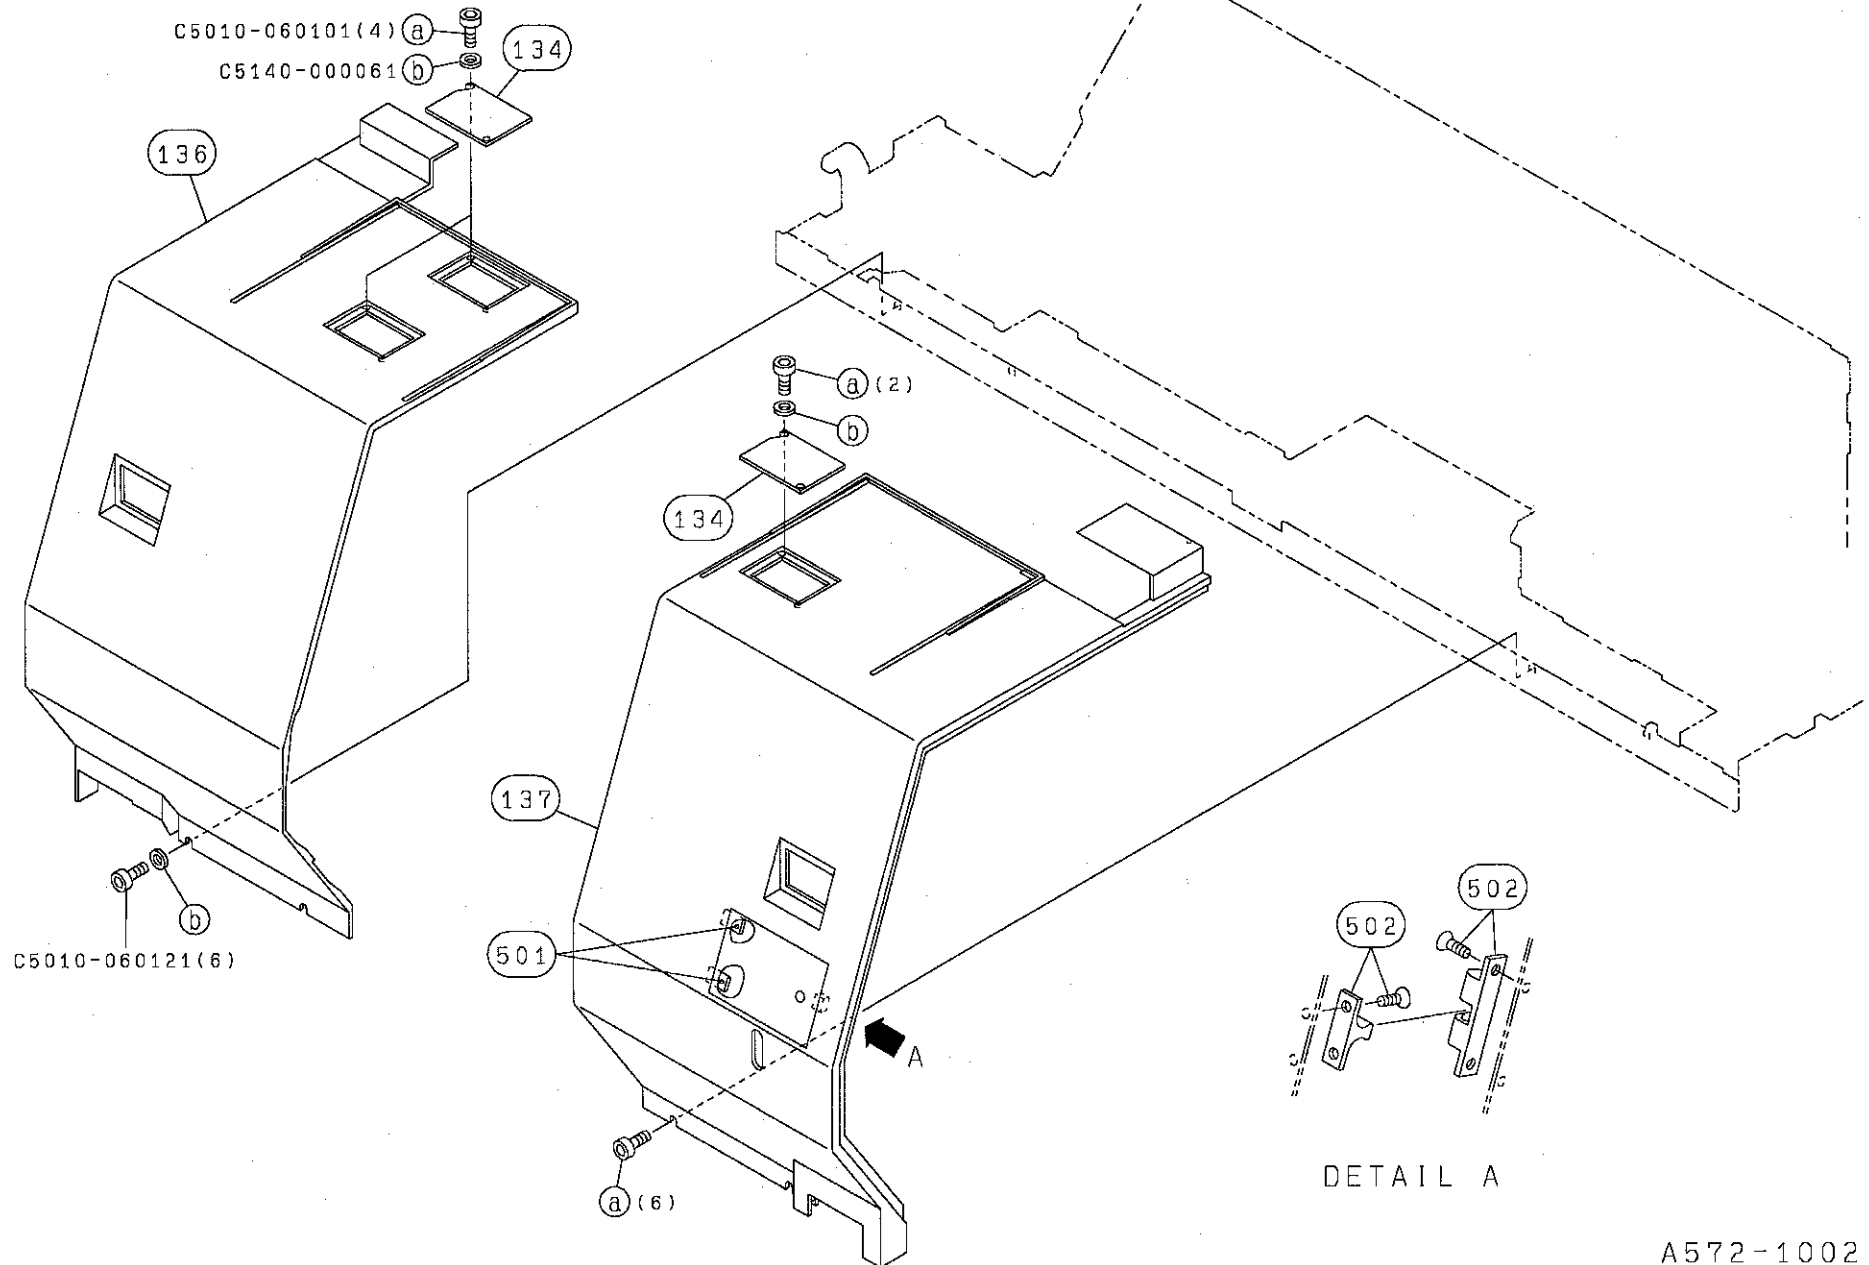


A572-1002


307

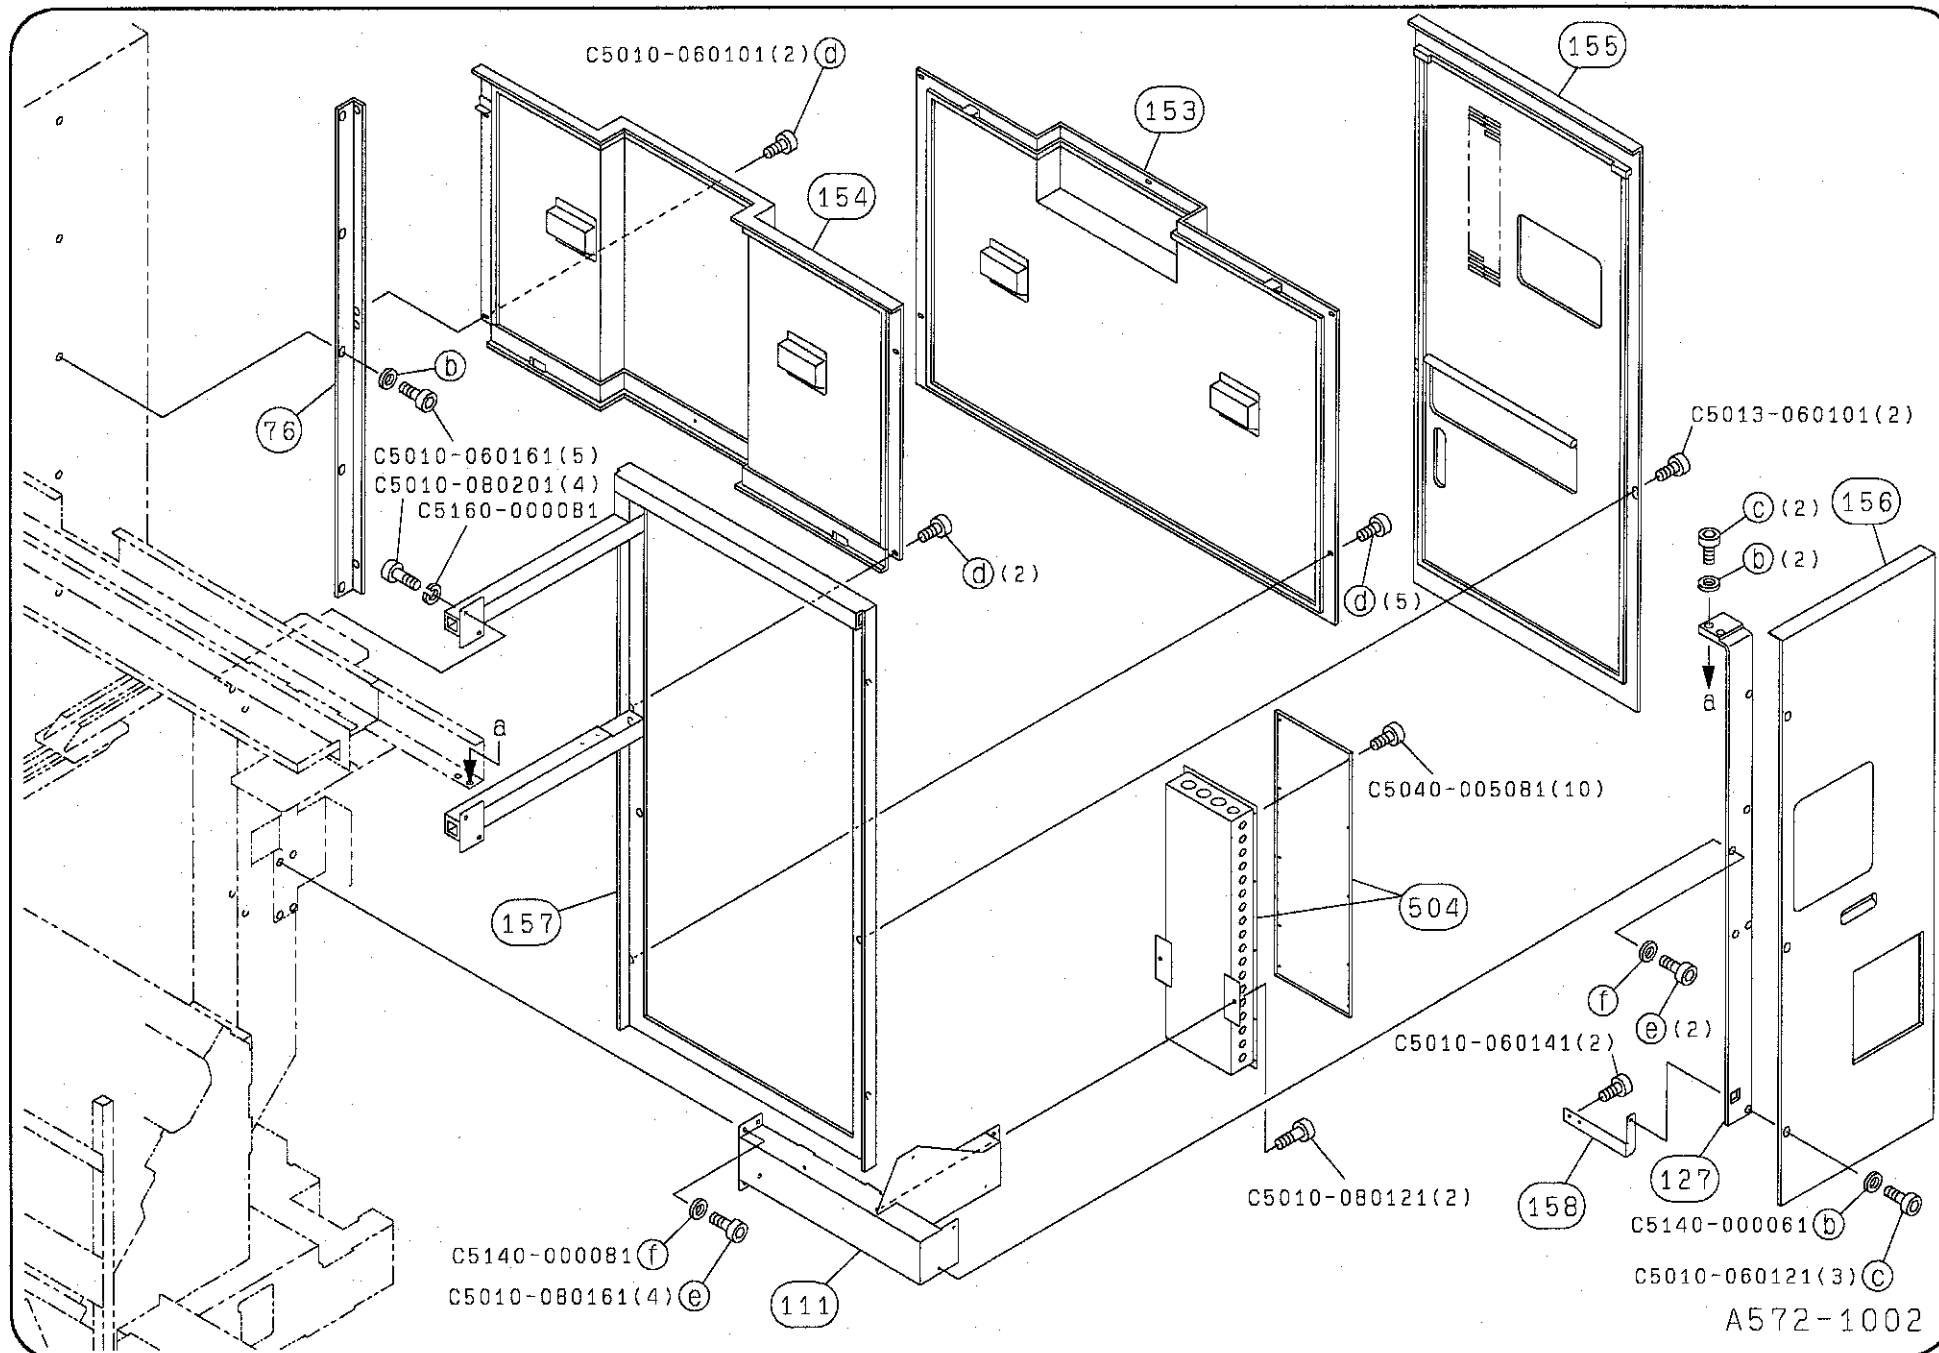


803

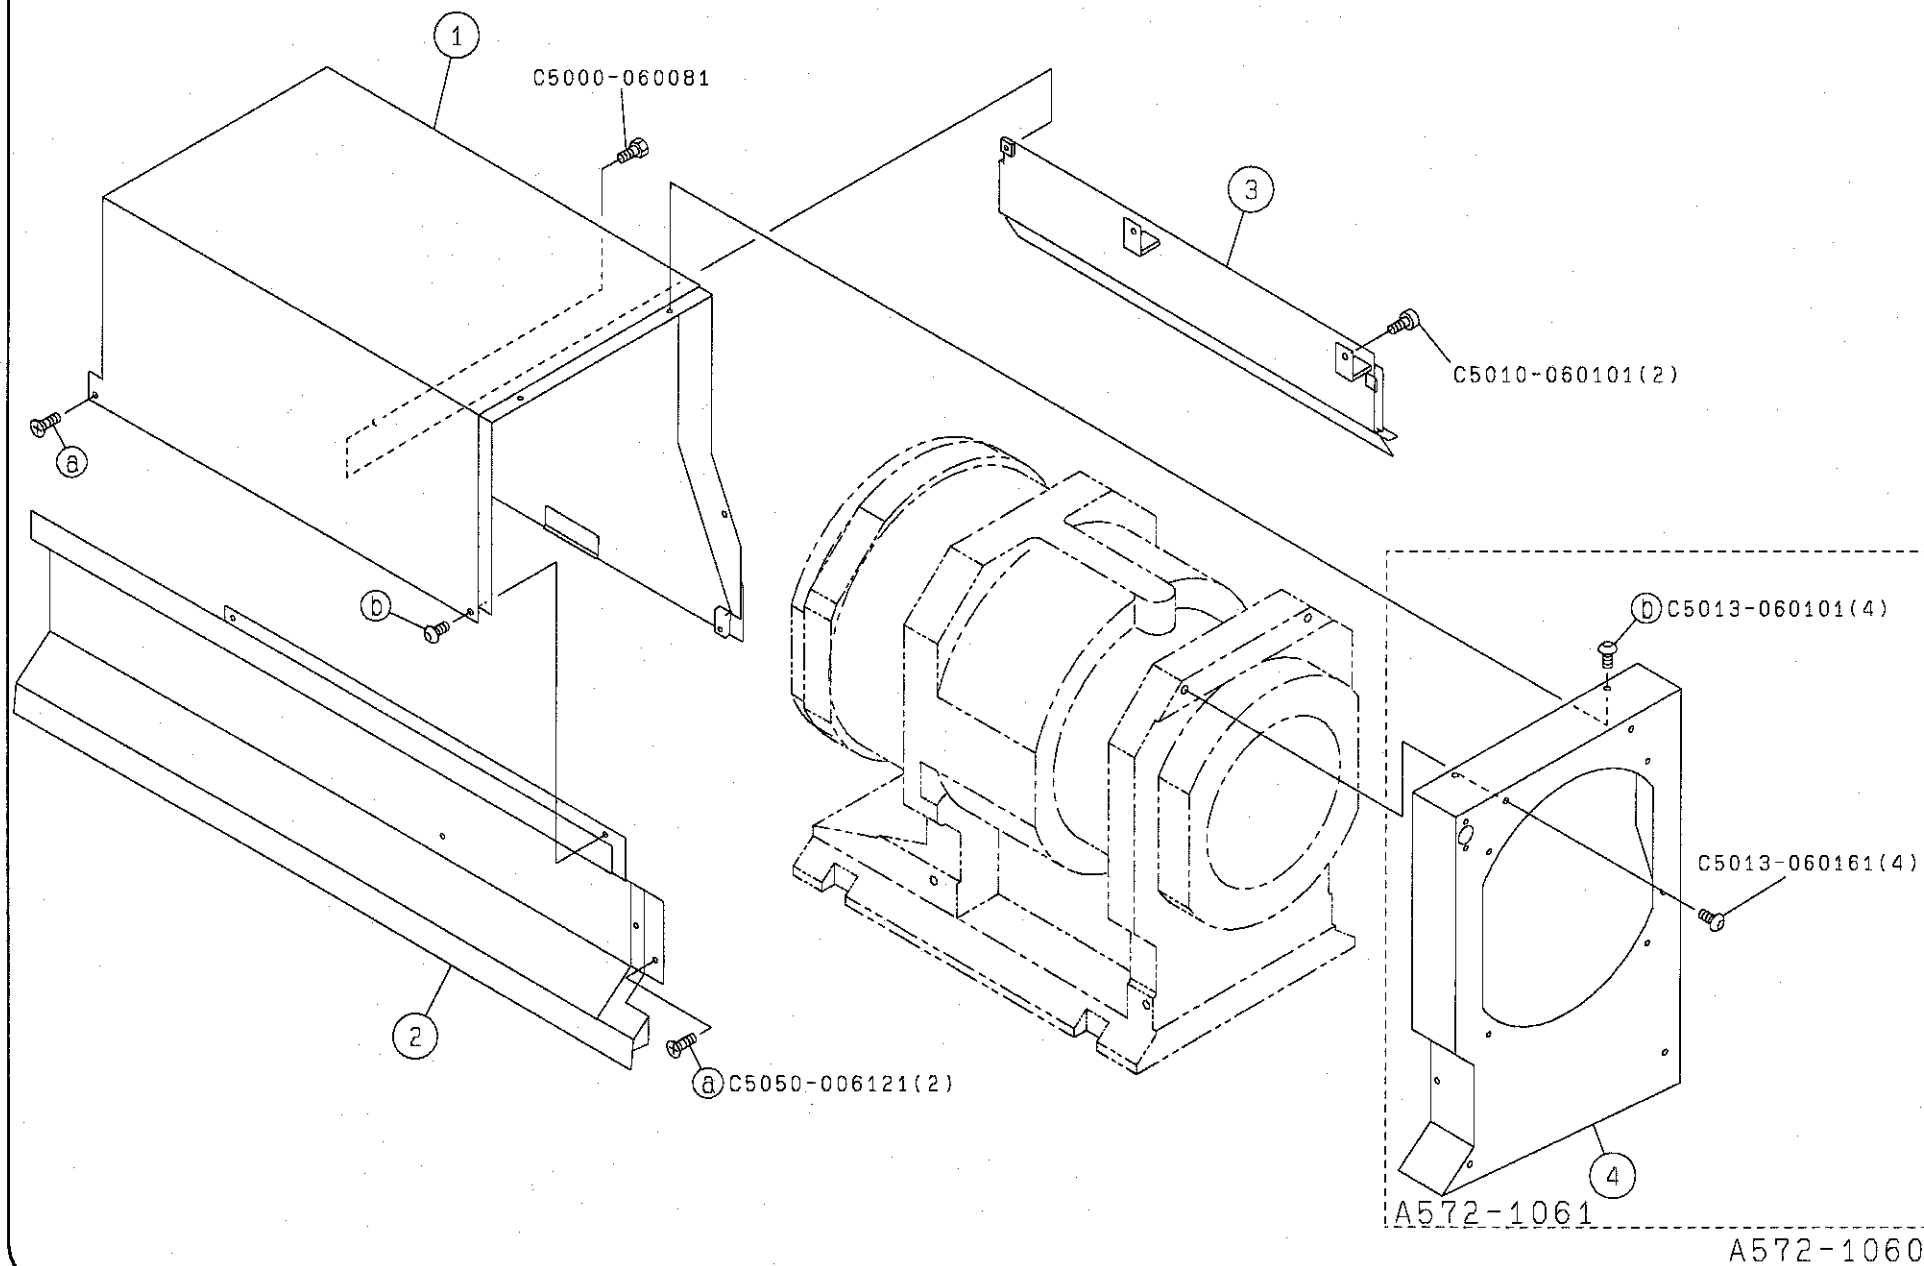

308

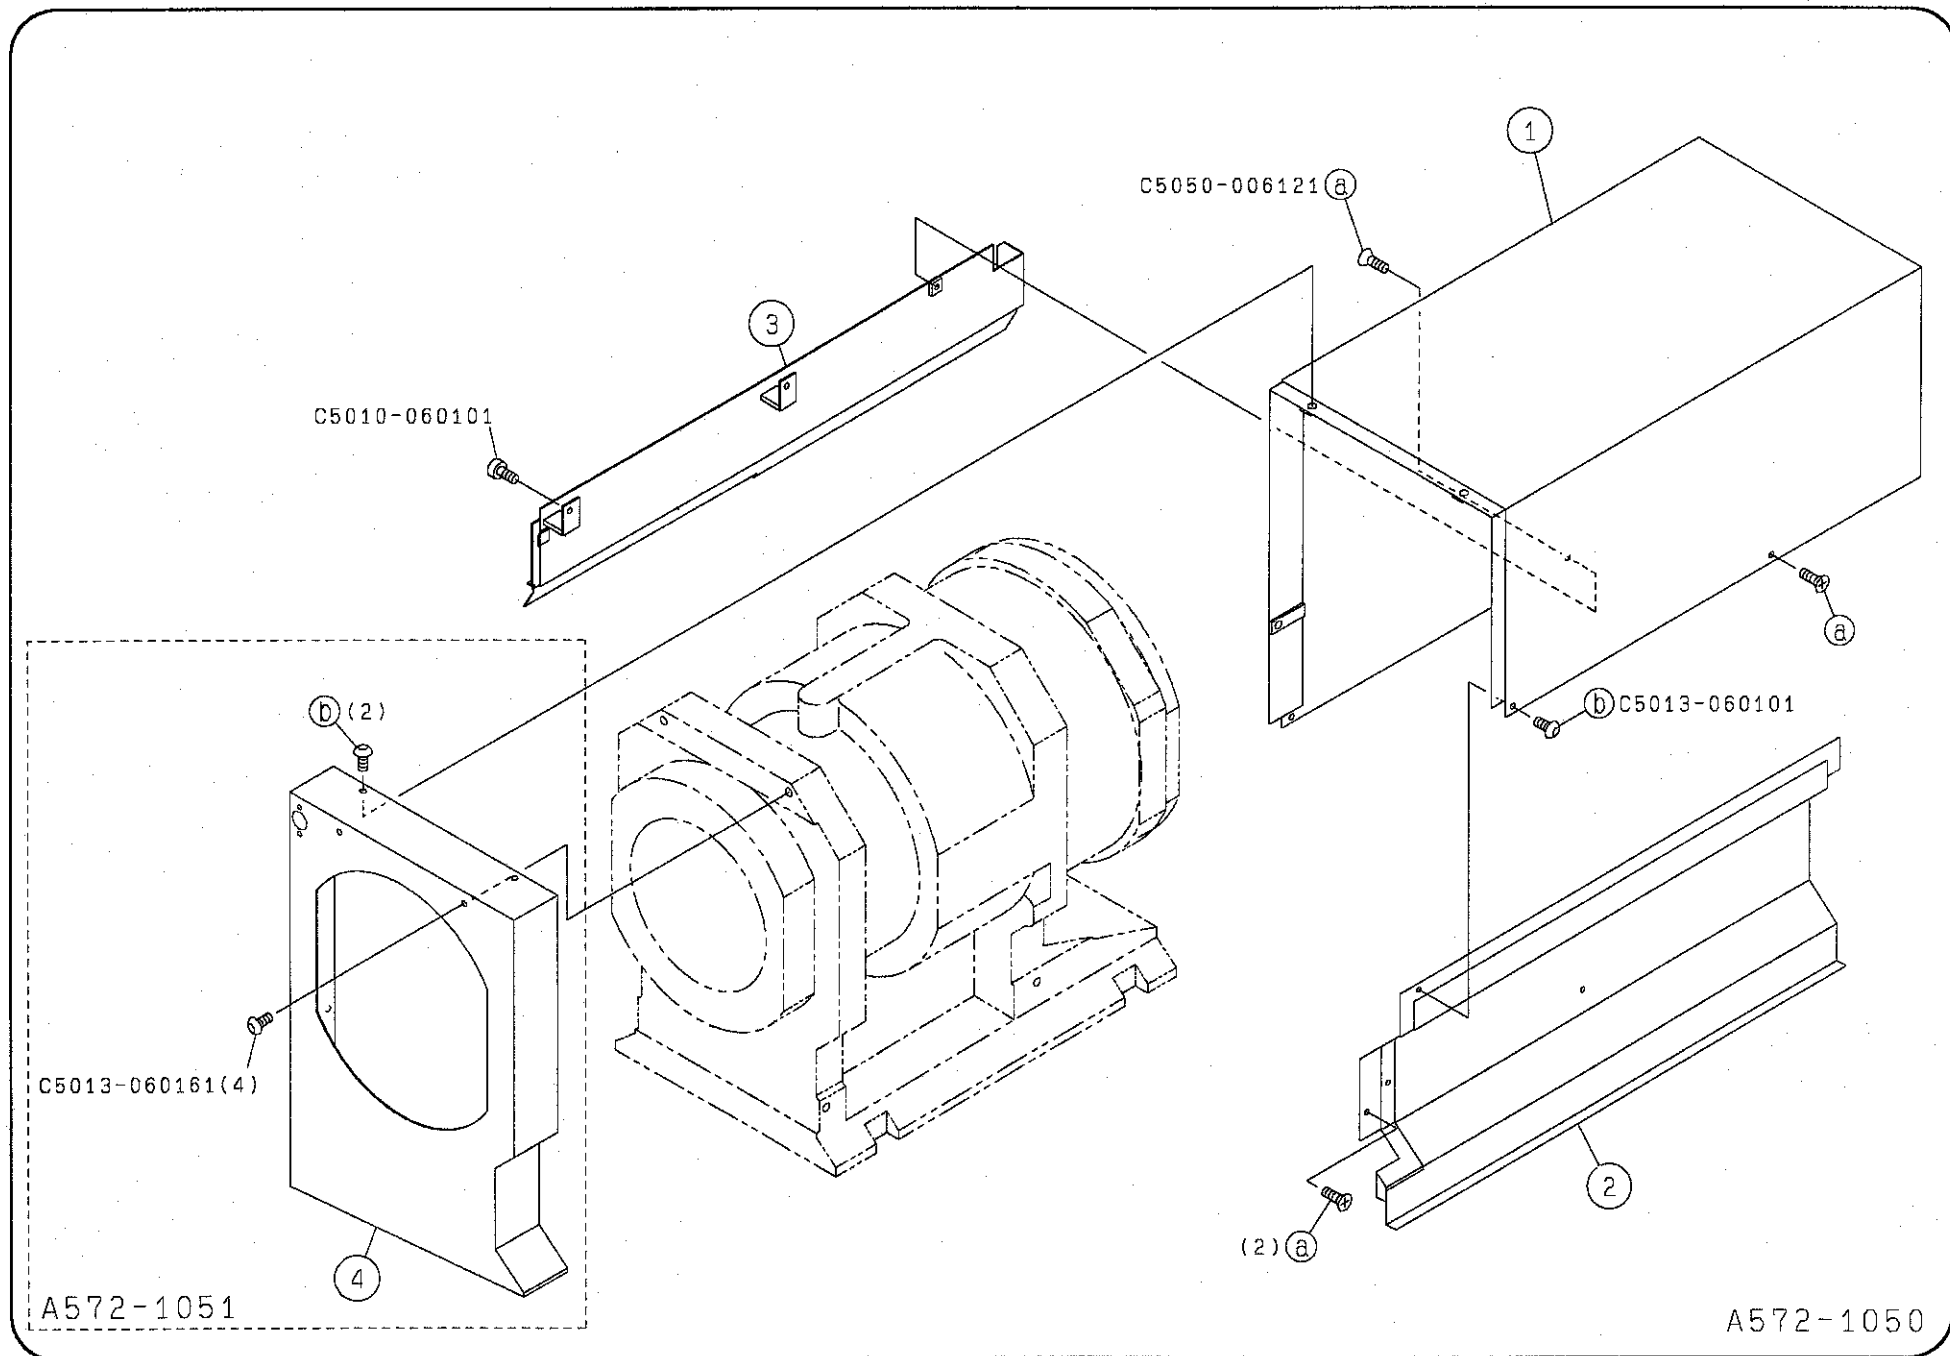


310

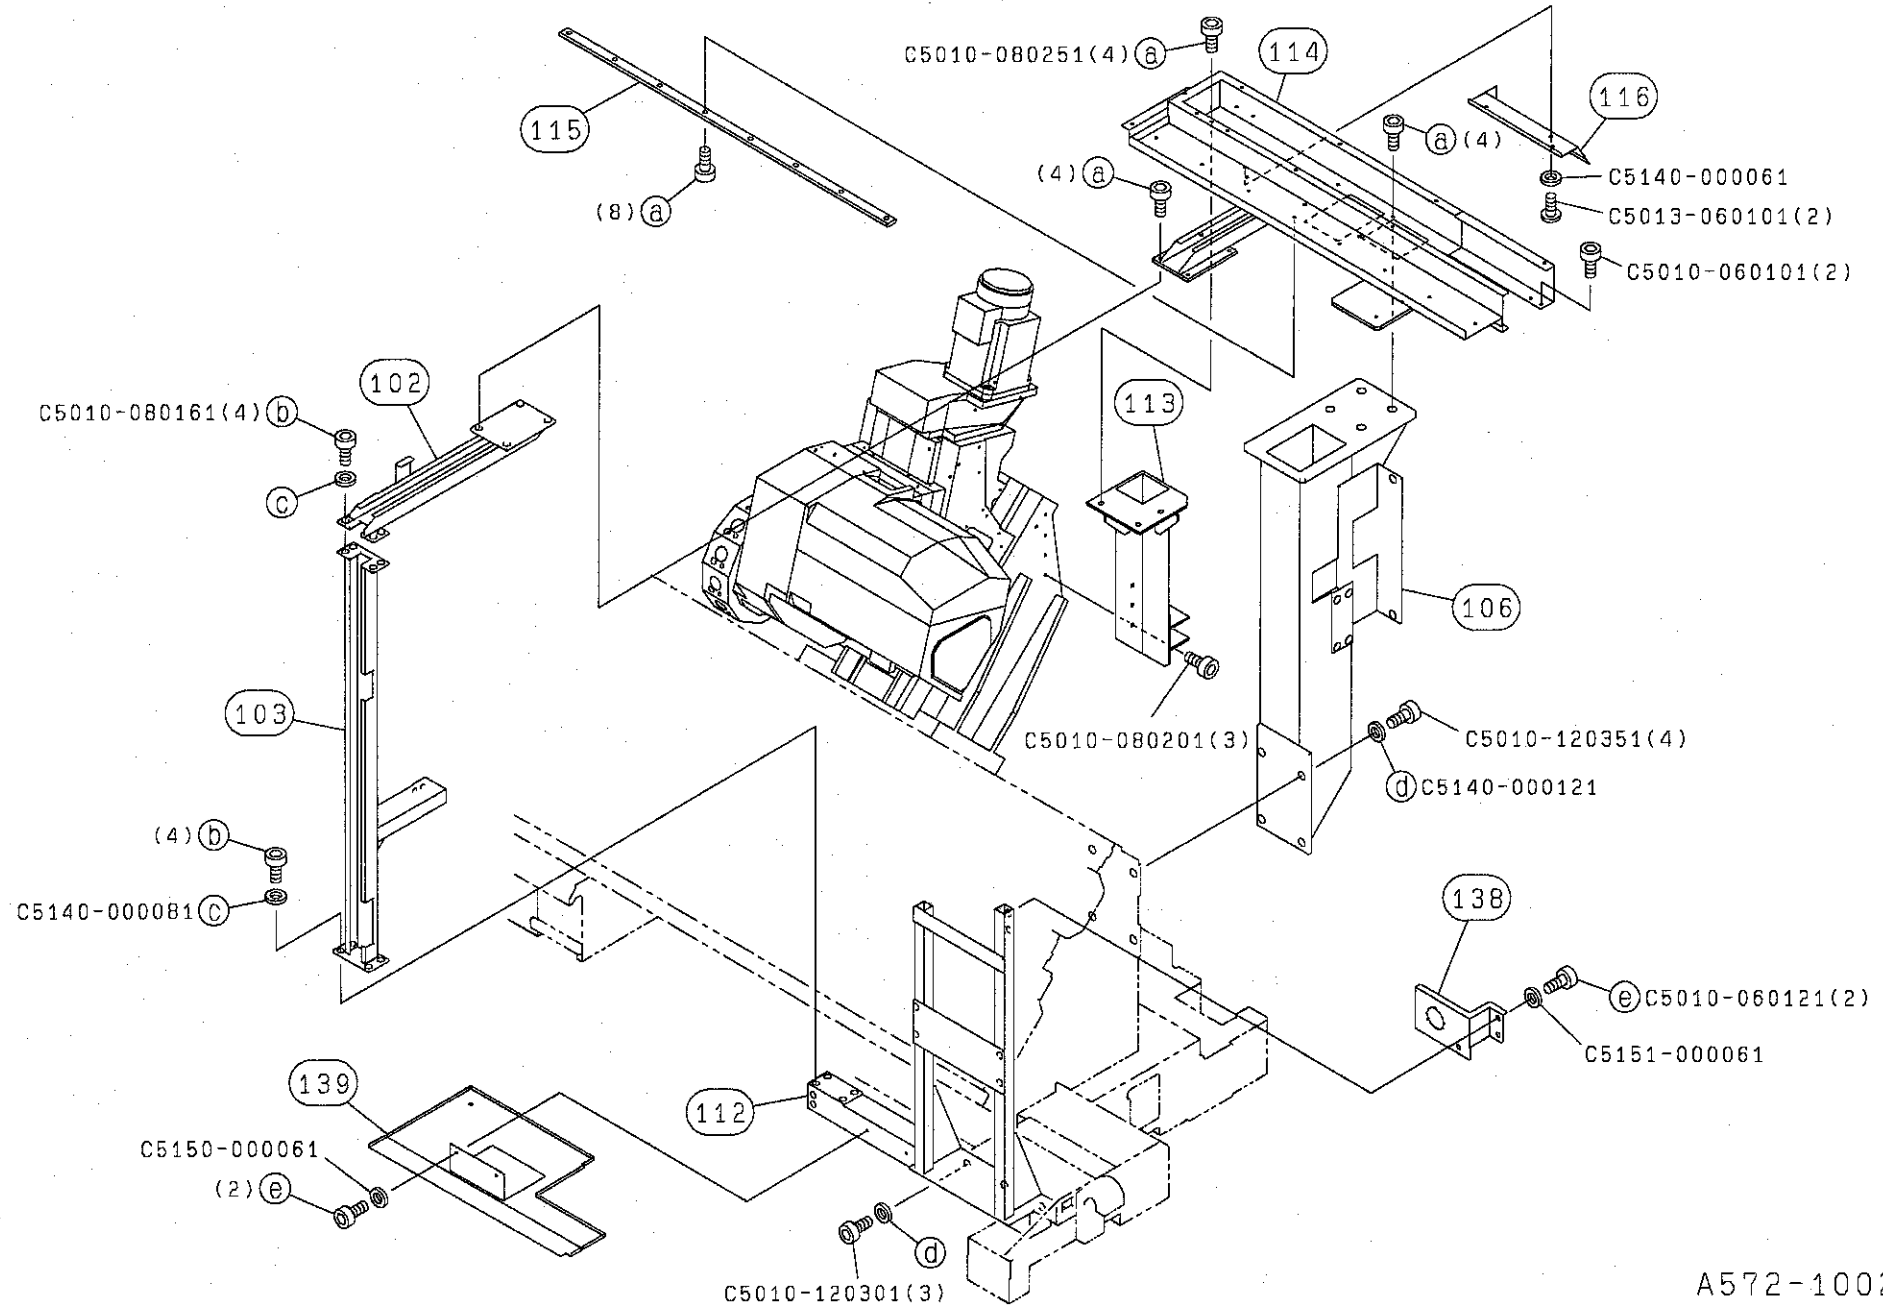


A572-1002

310A

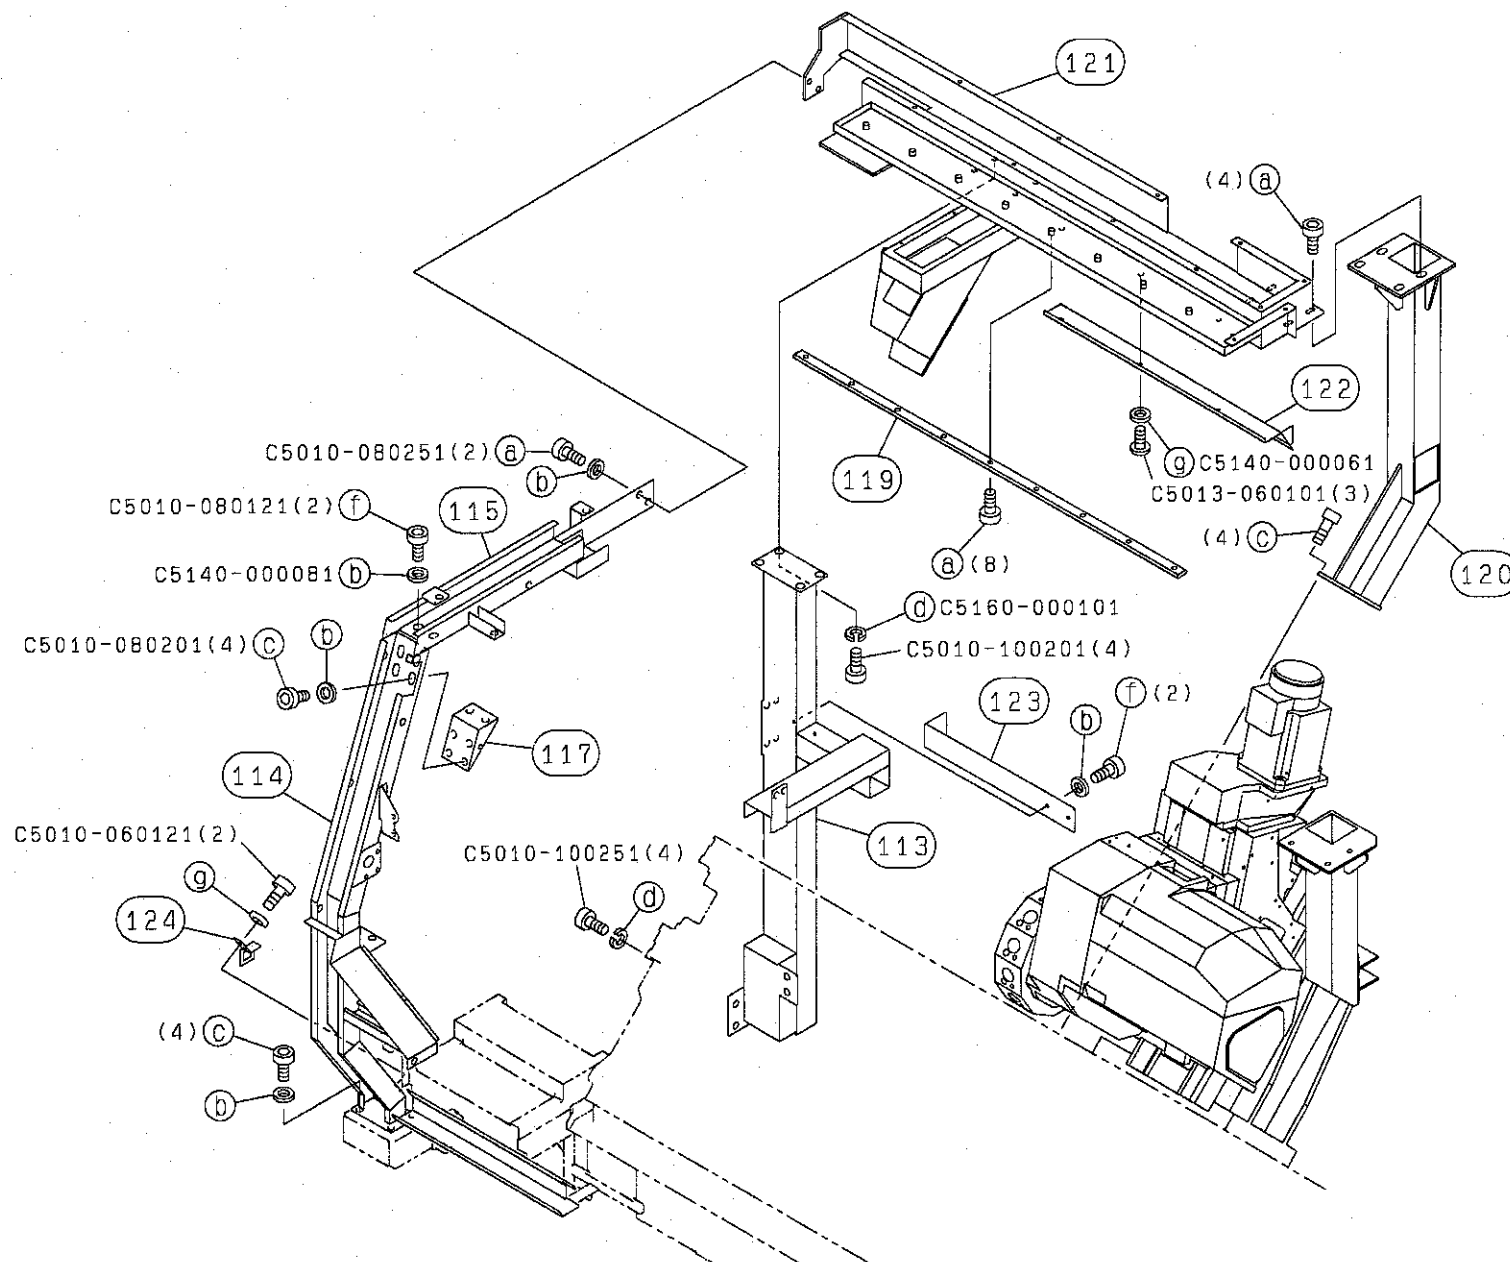


A572-1002



311

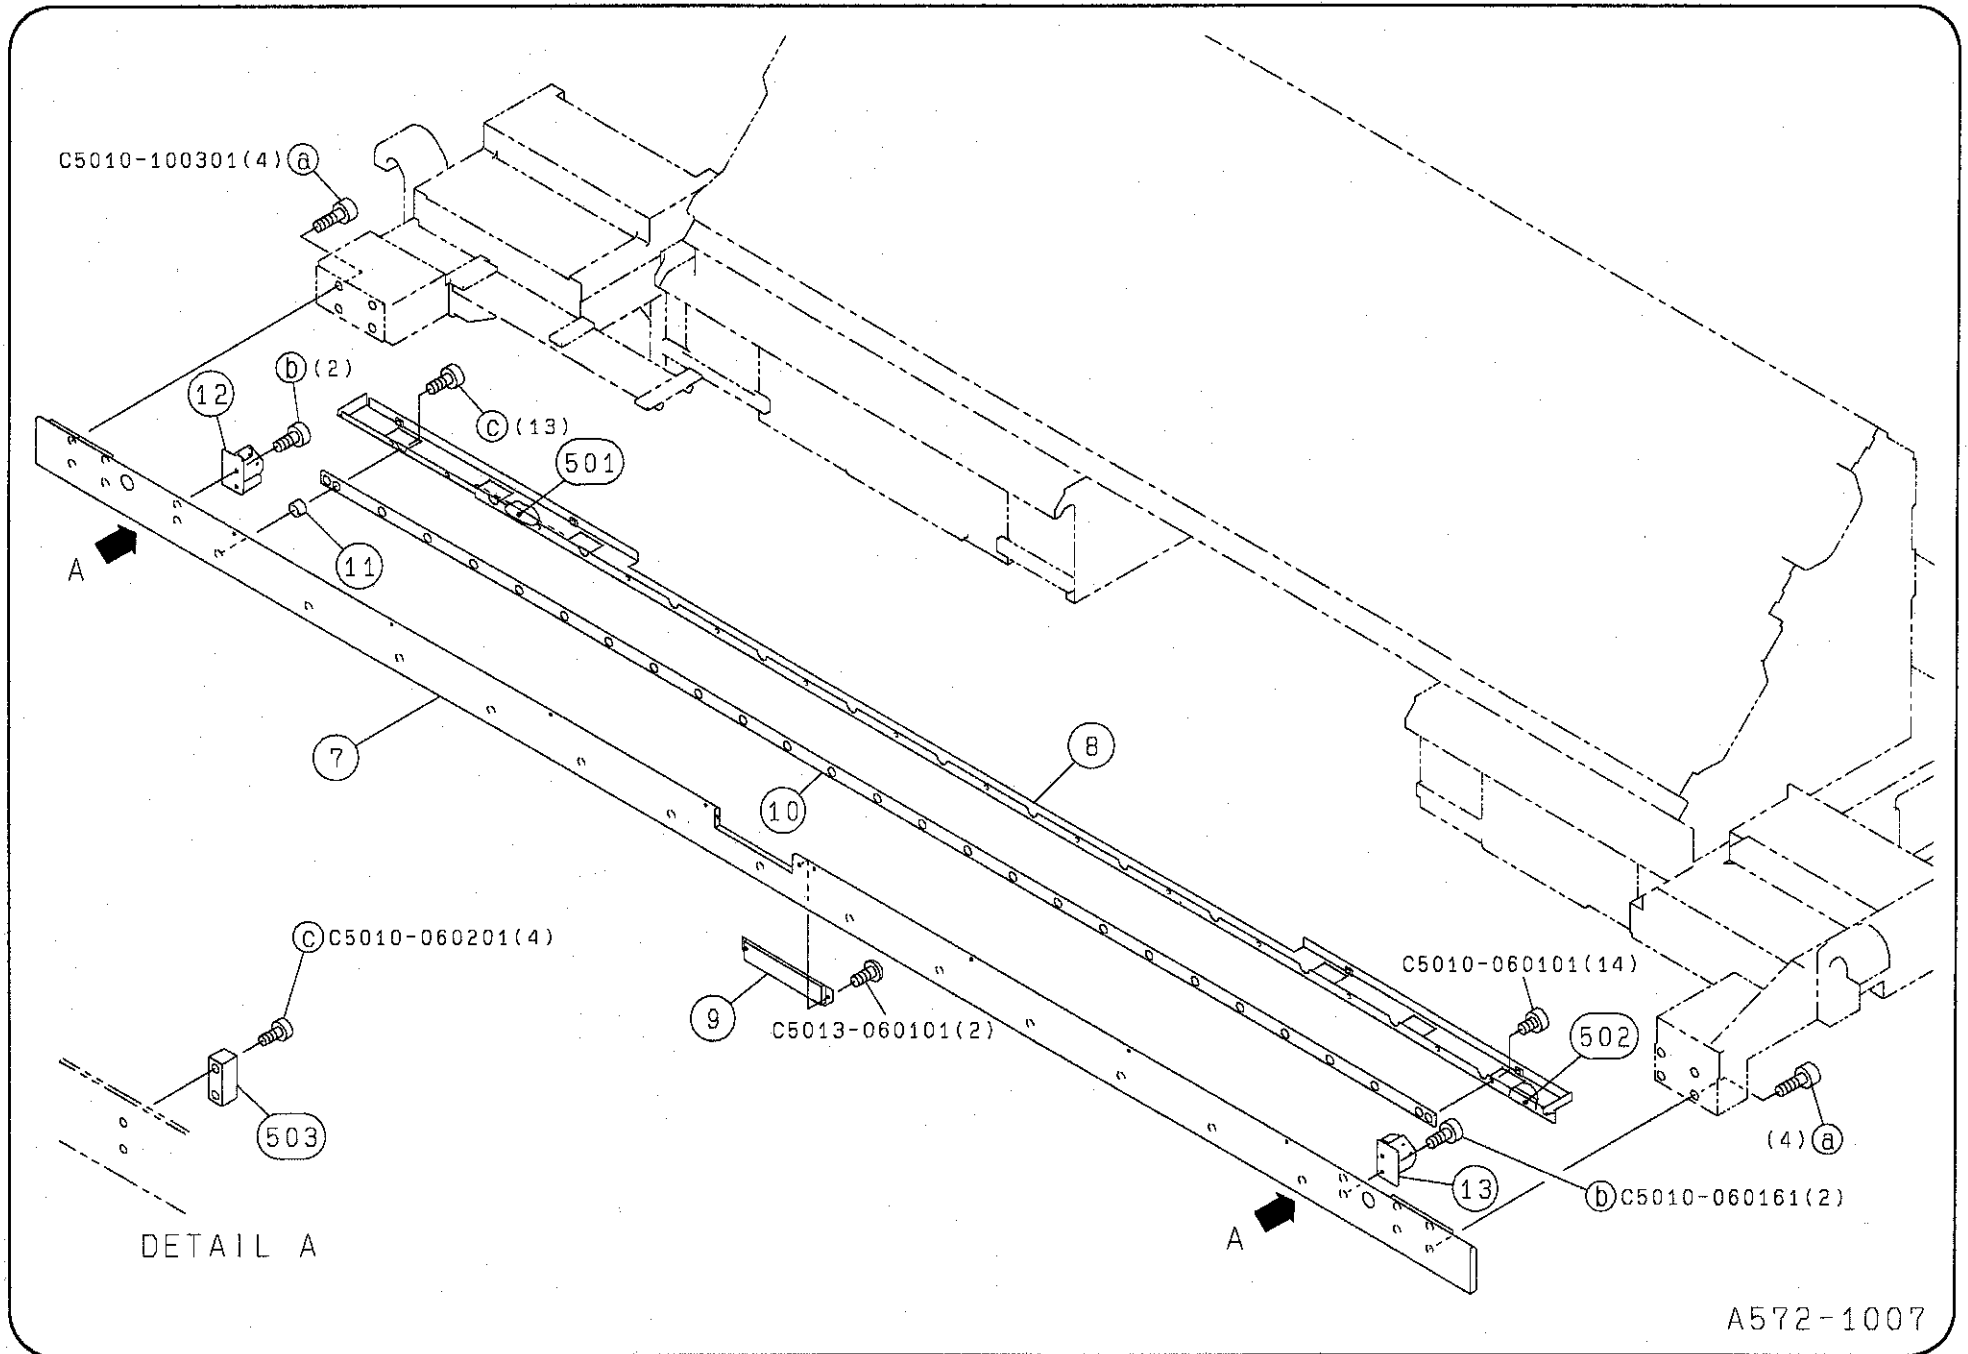

A572-1007

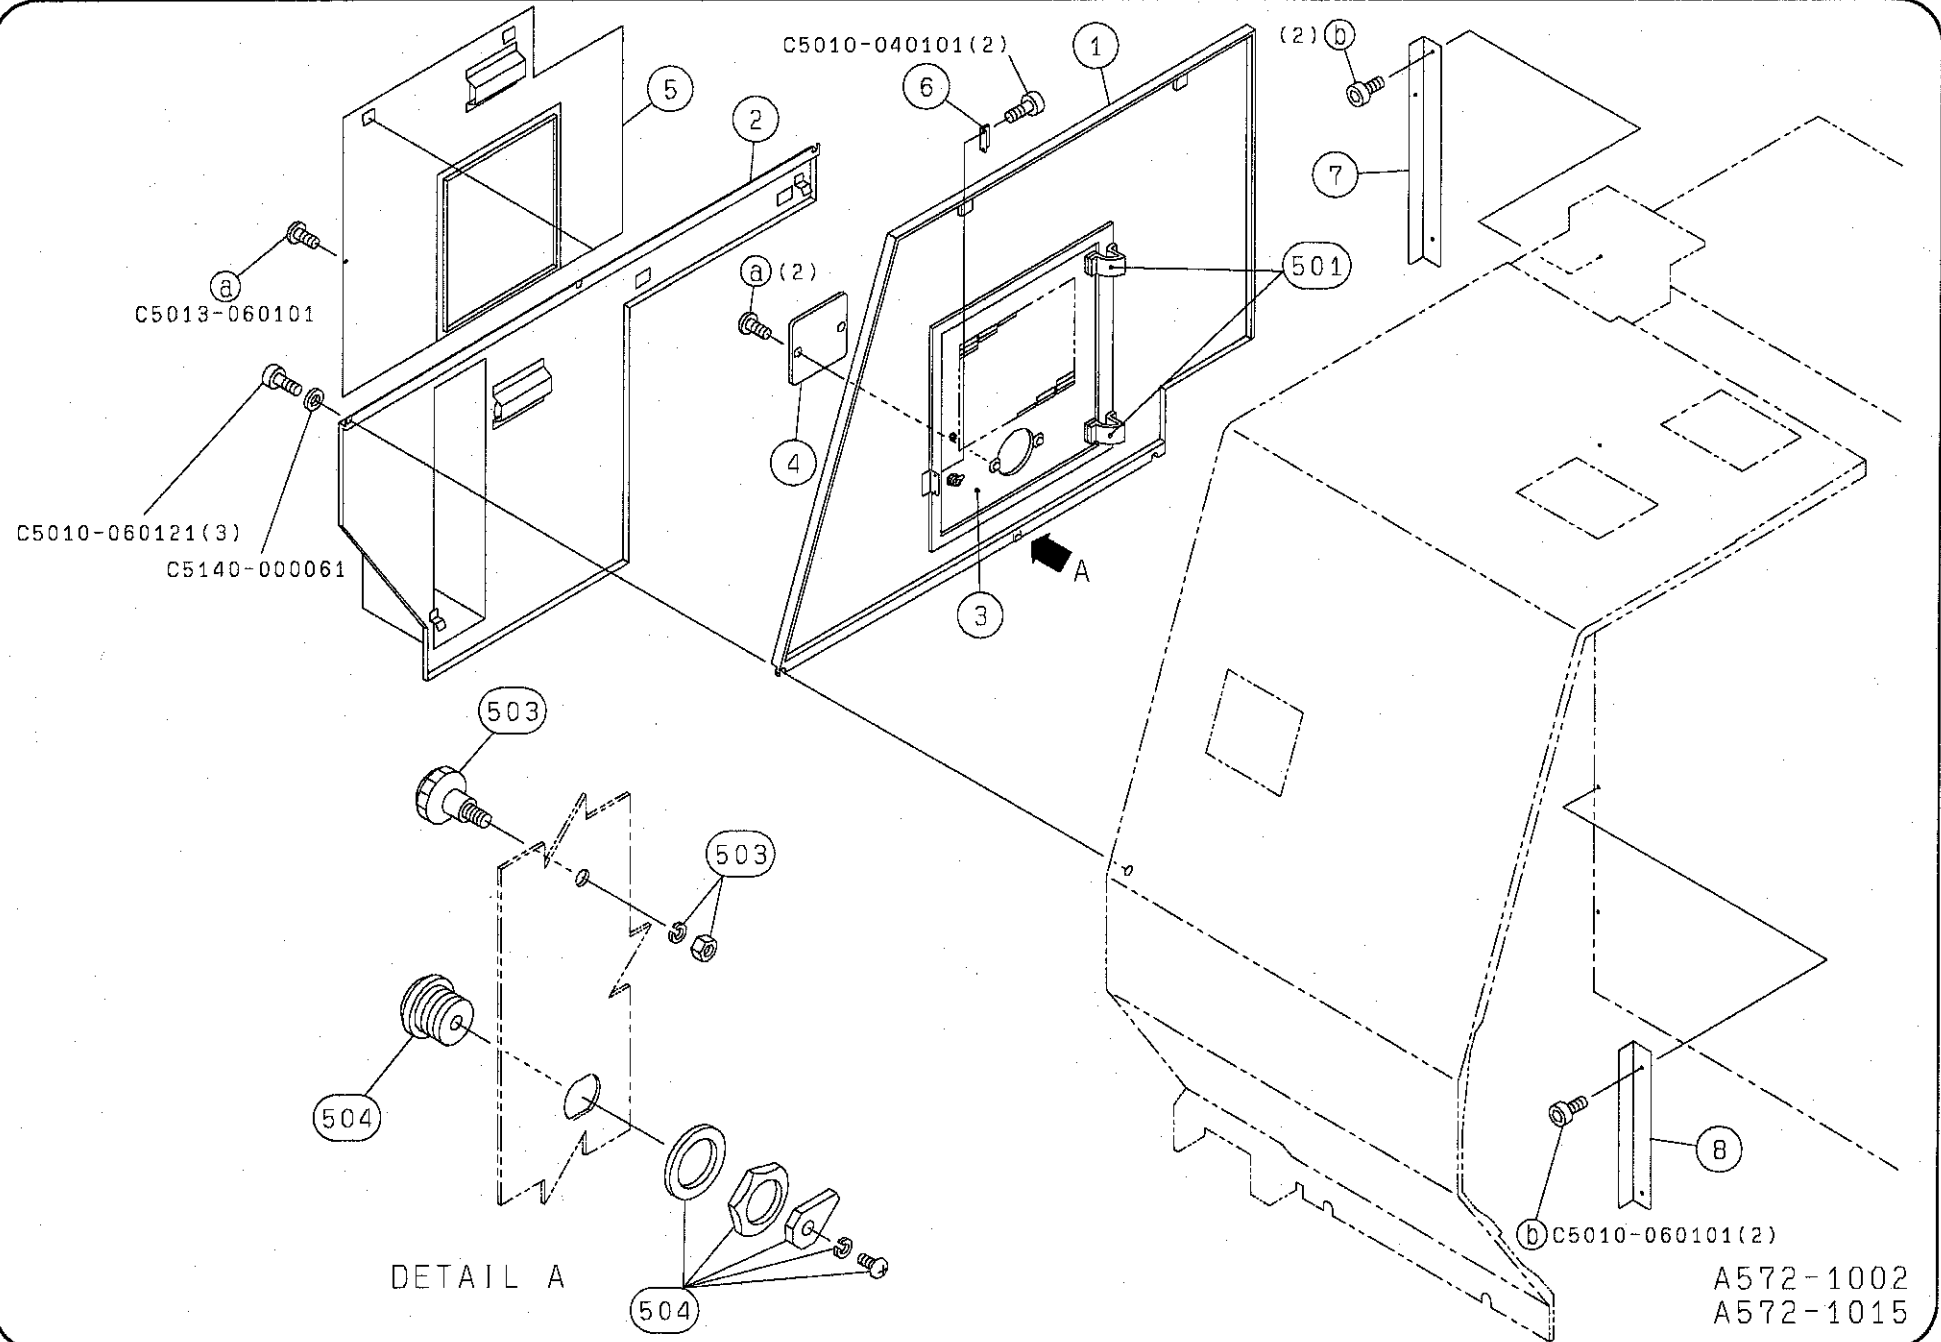


A572-1002
A572-1015

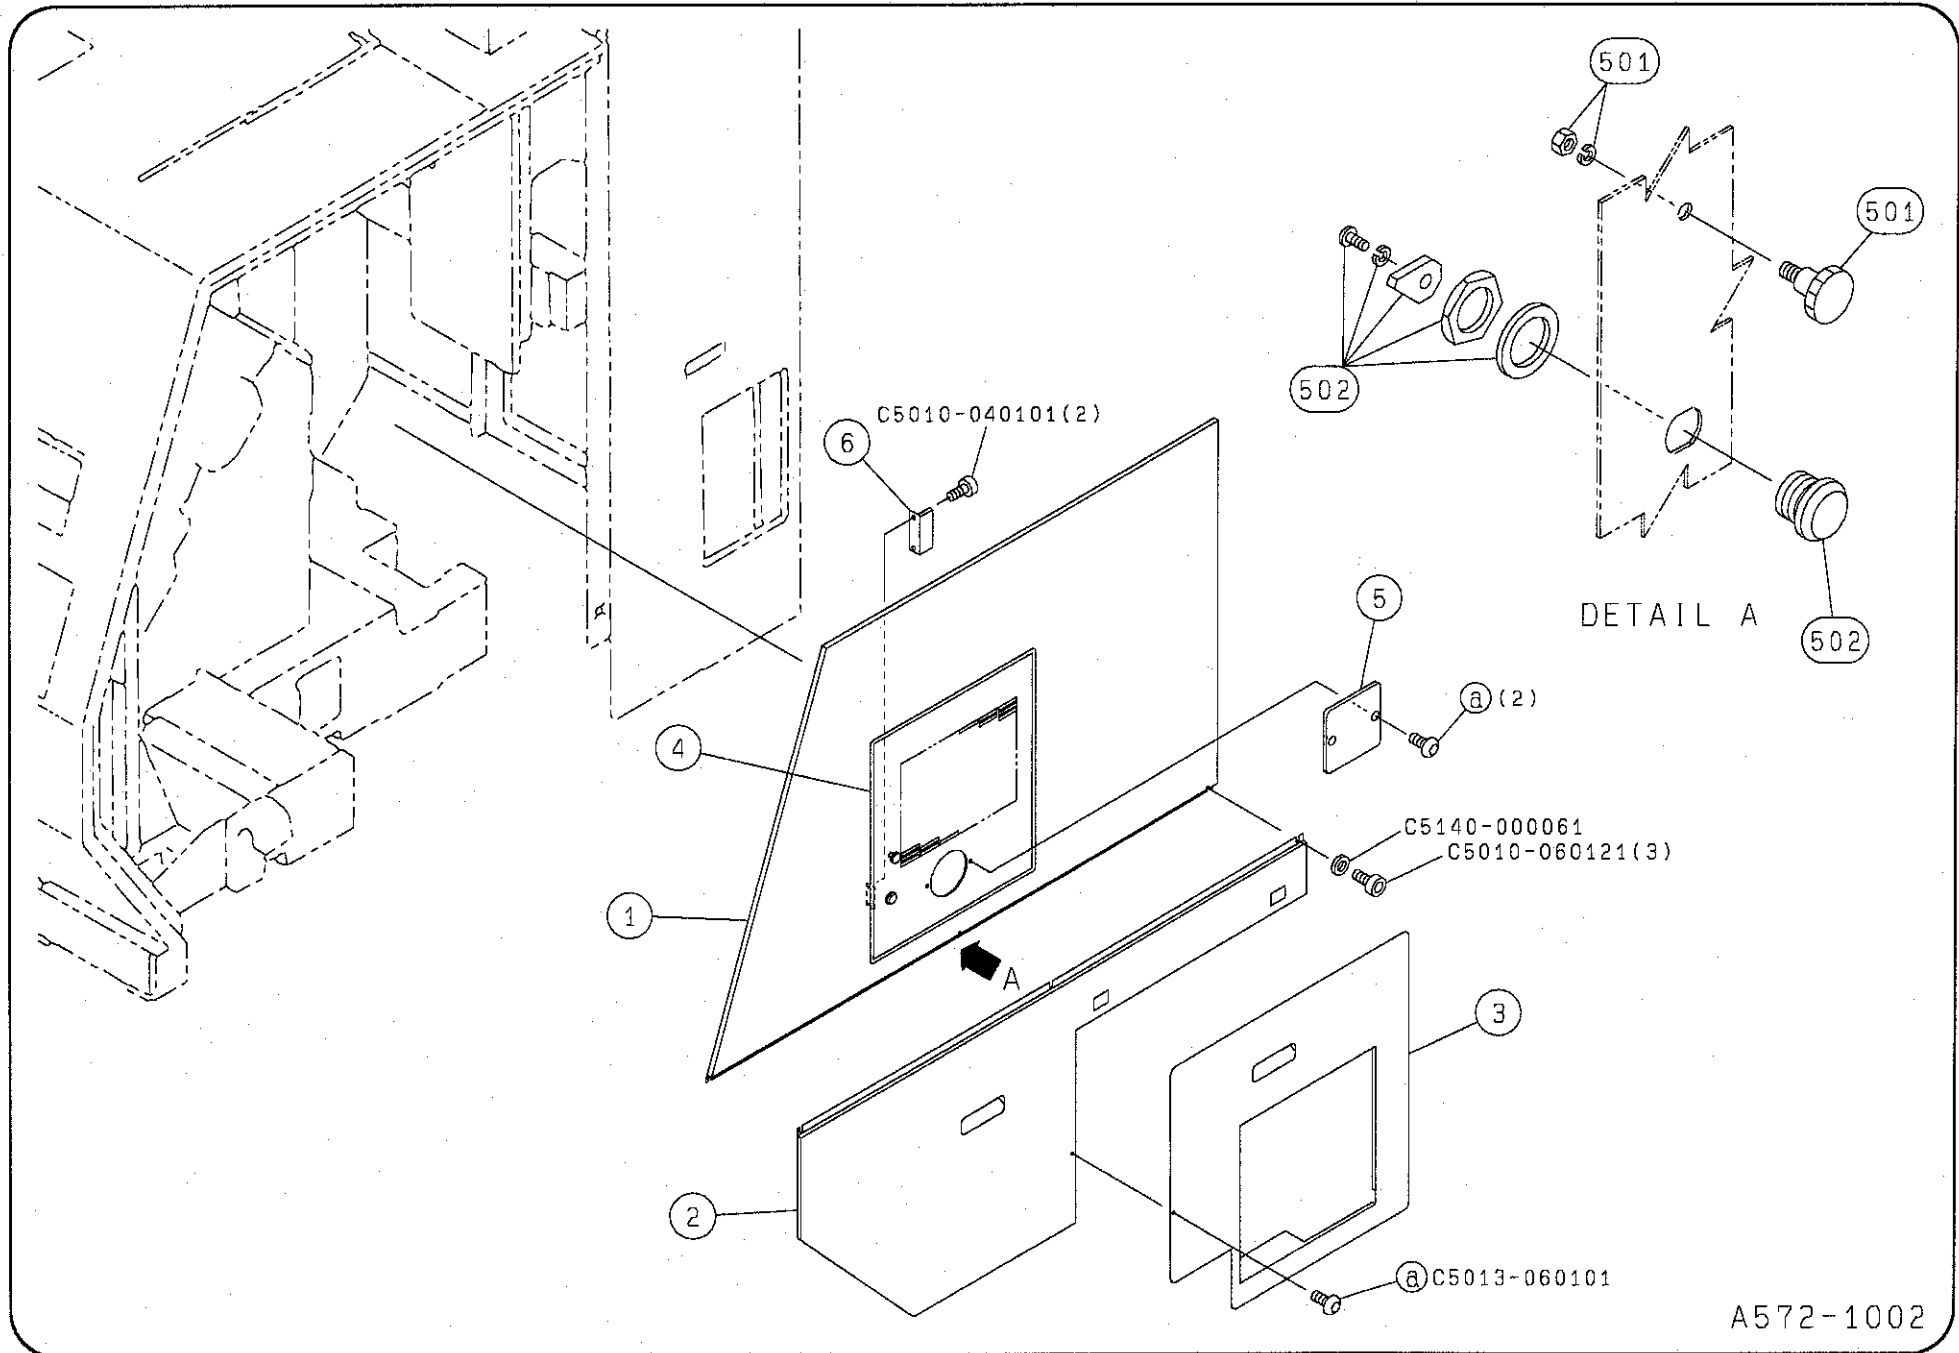




313

314

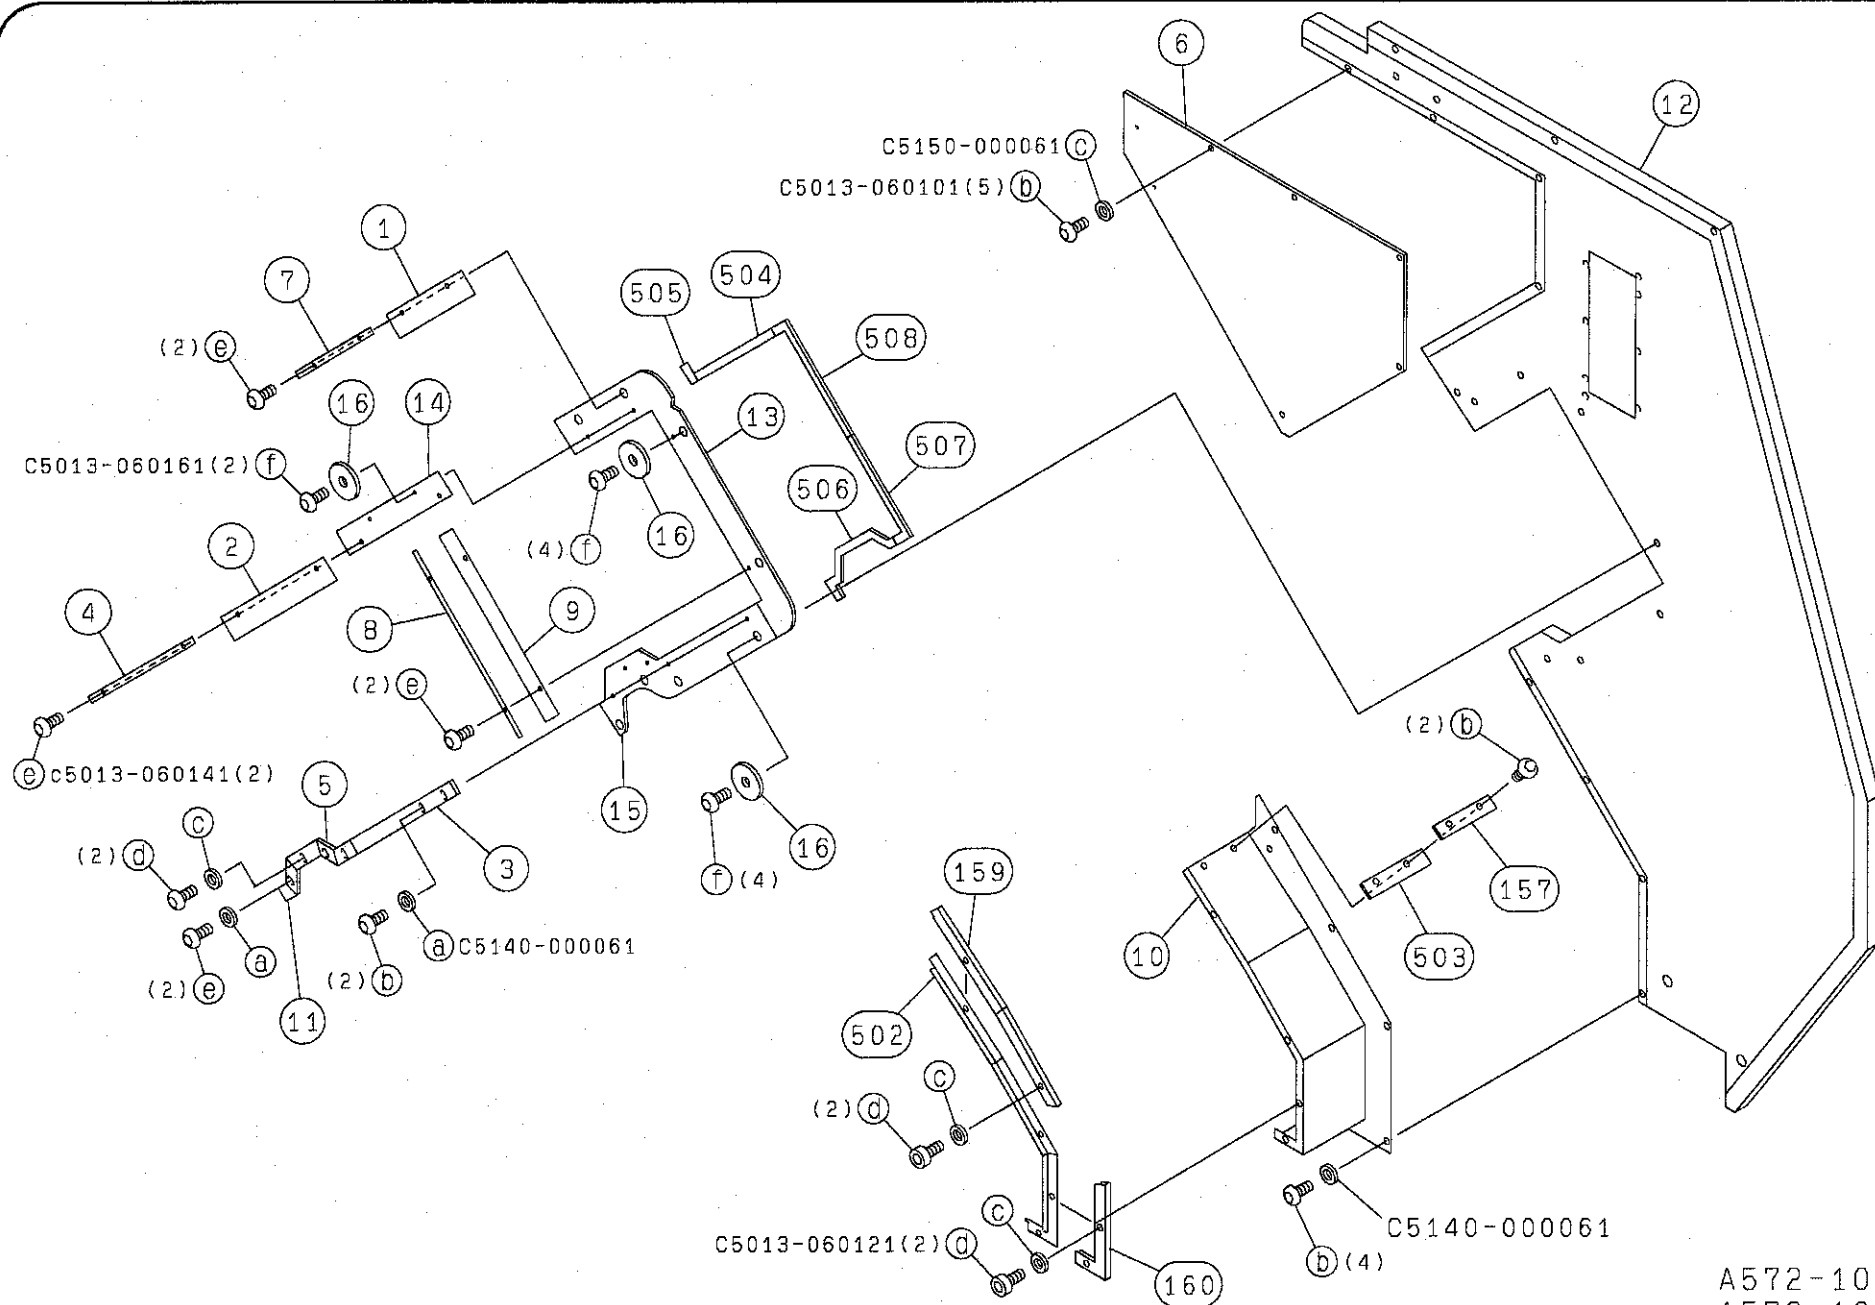


A572-1002
A572-1040

315

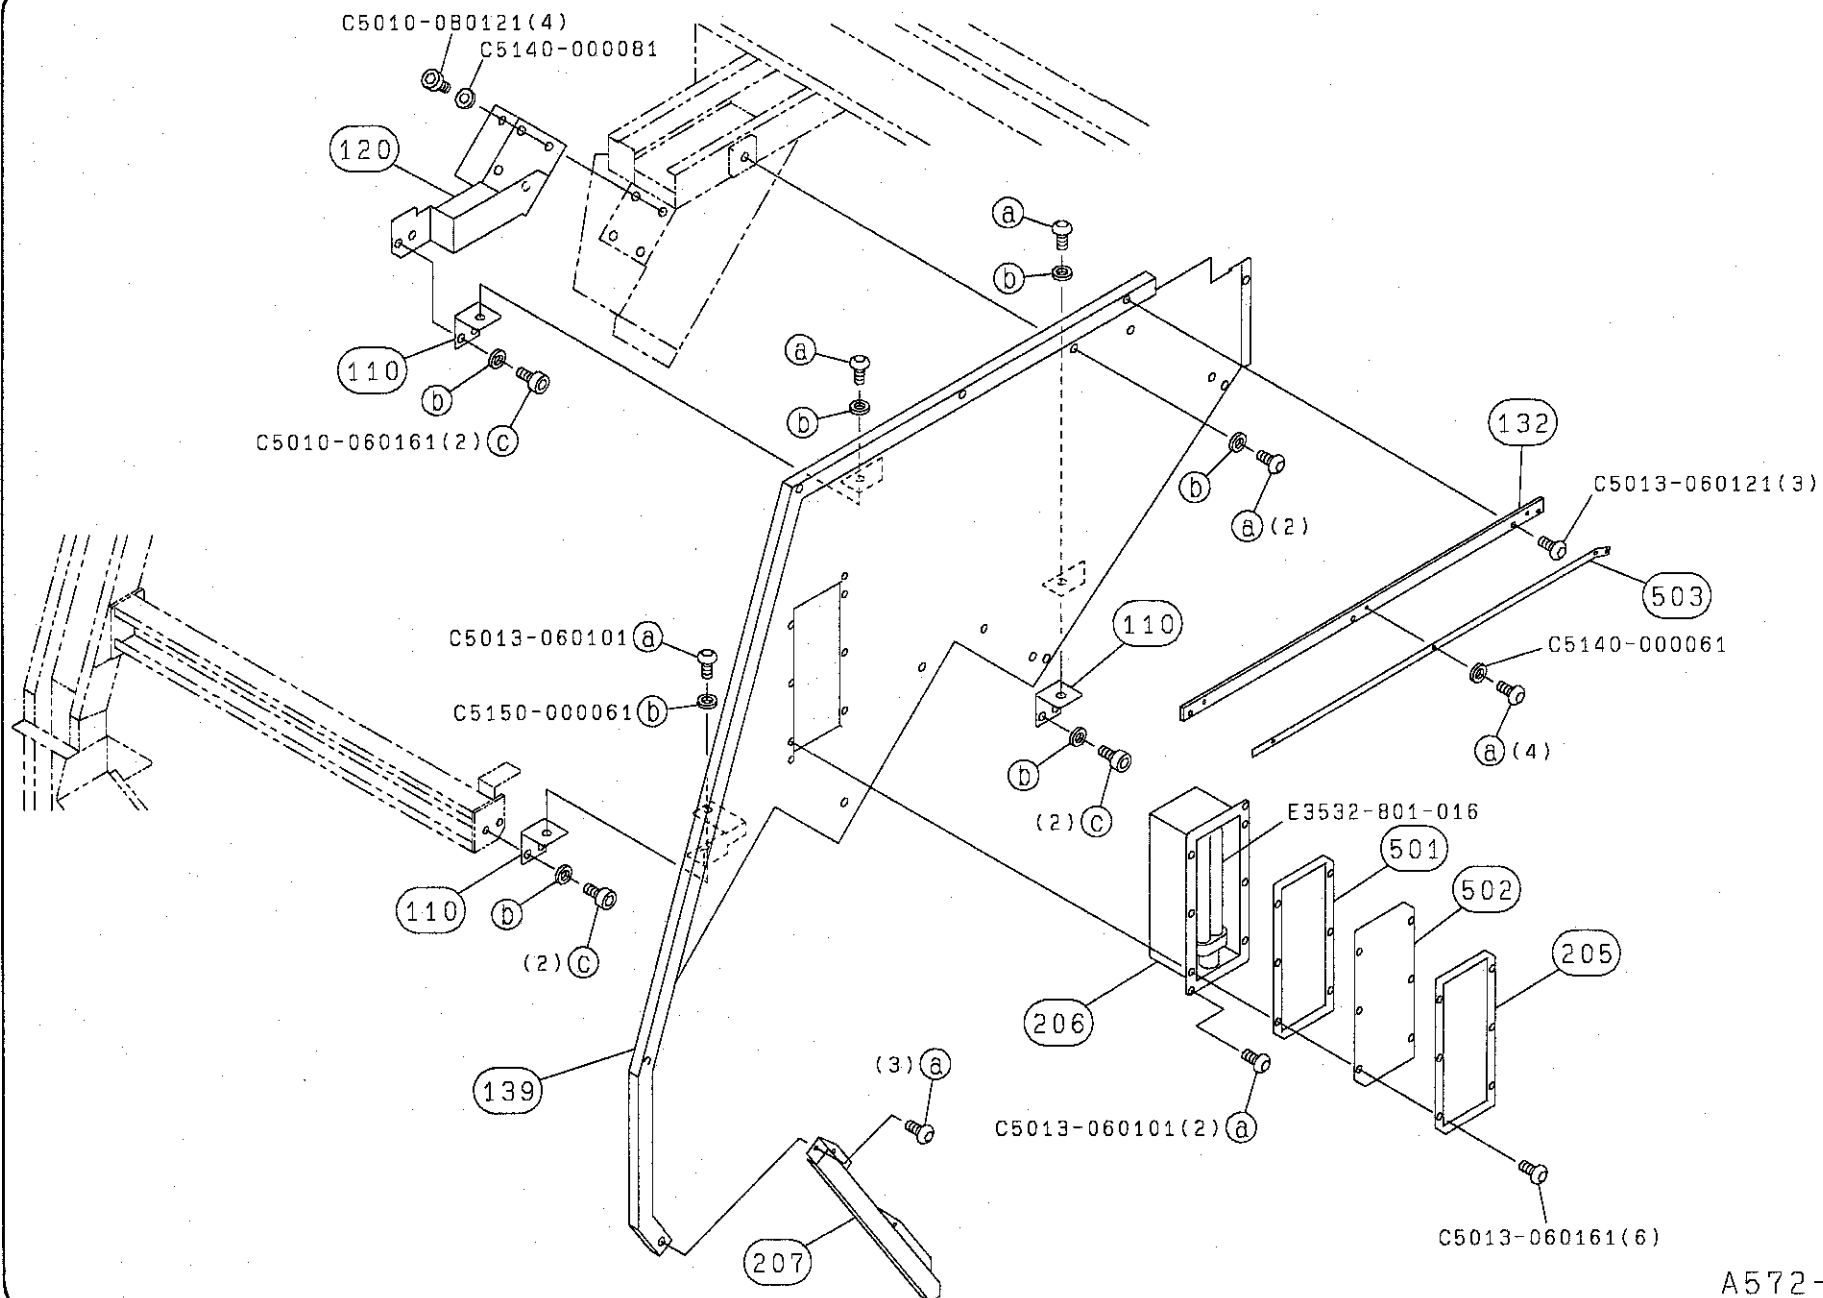


A572-1002


316

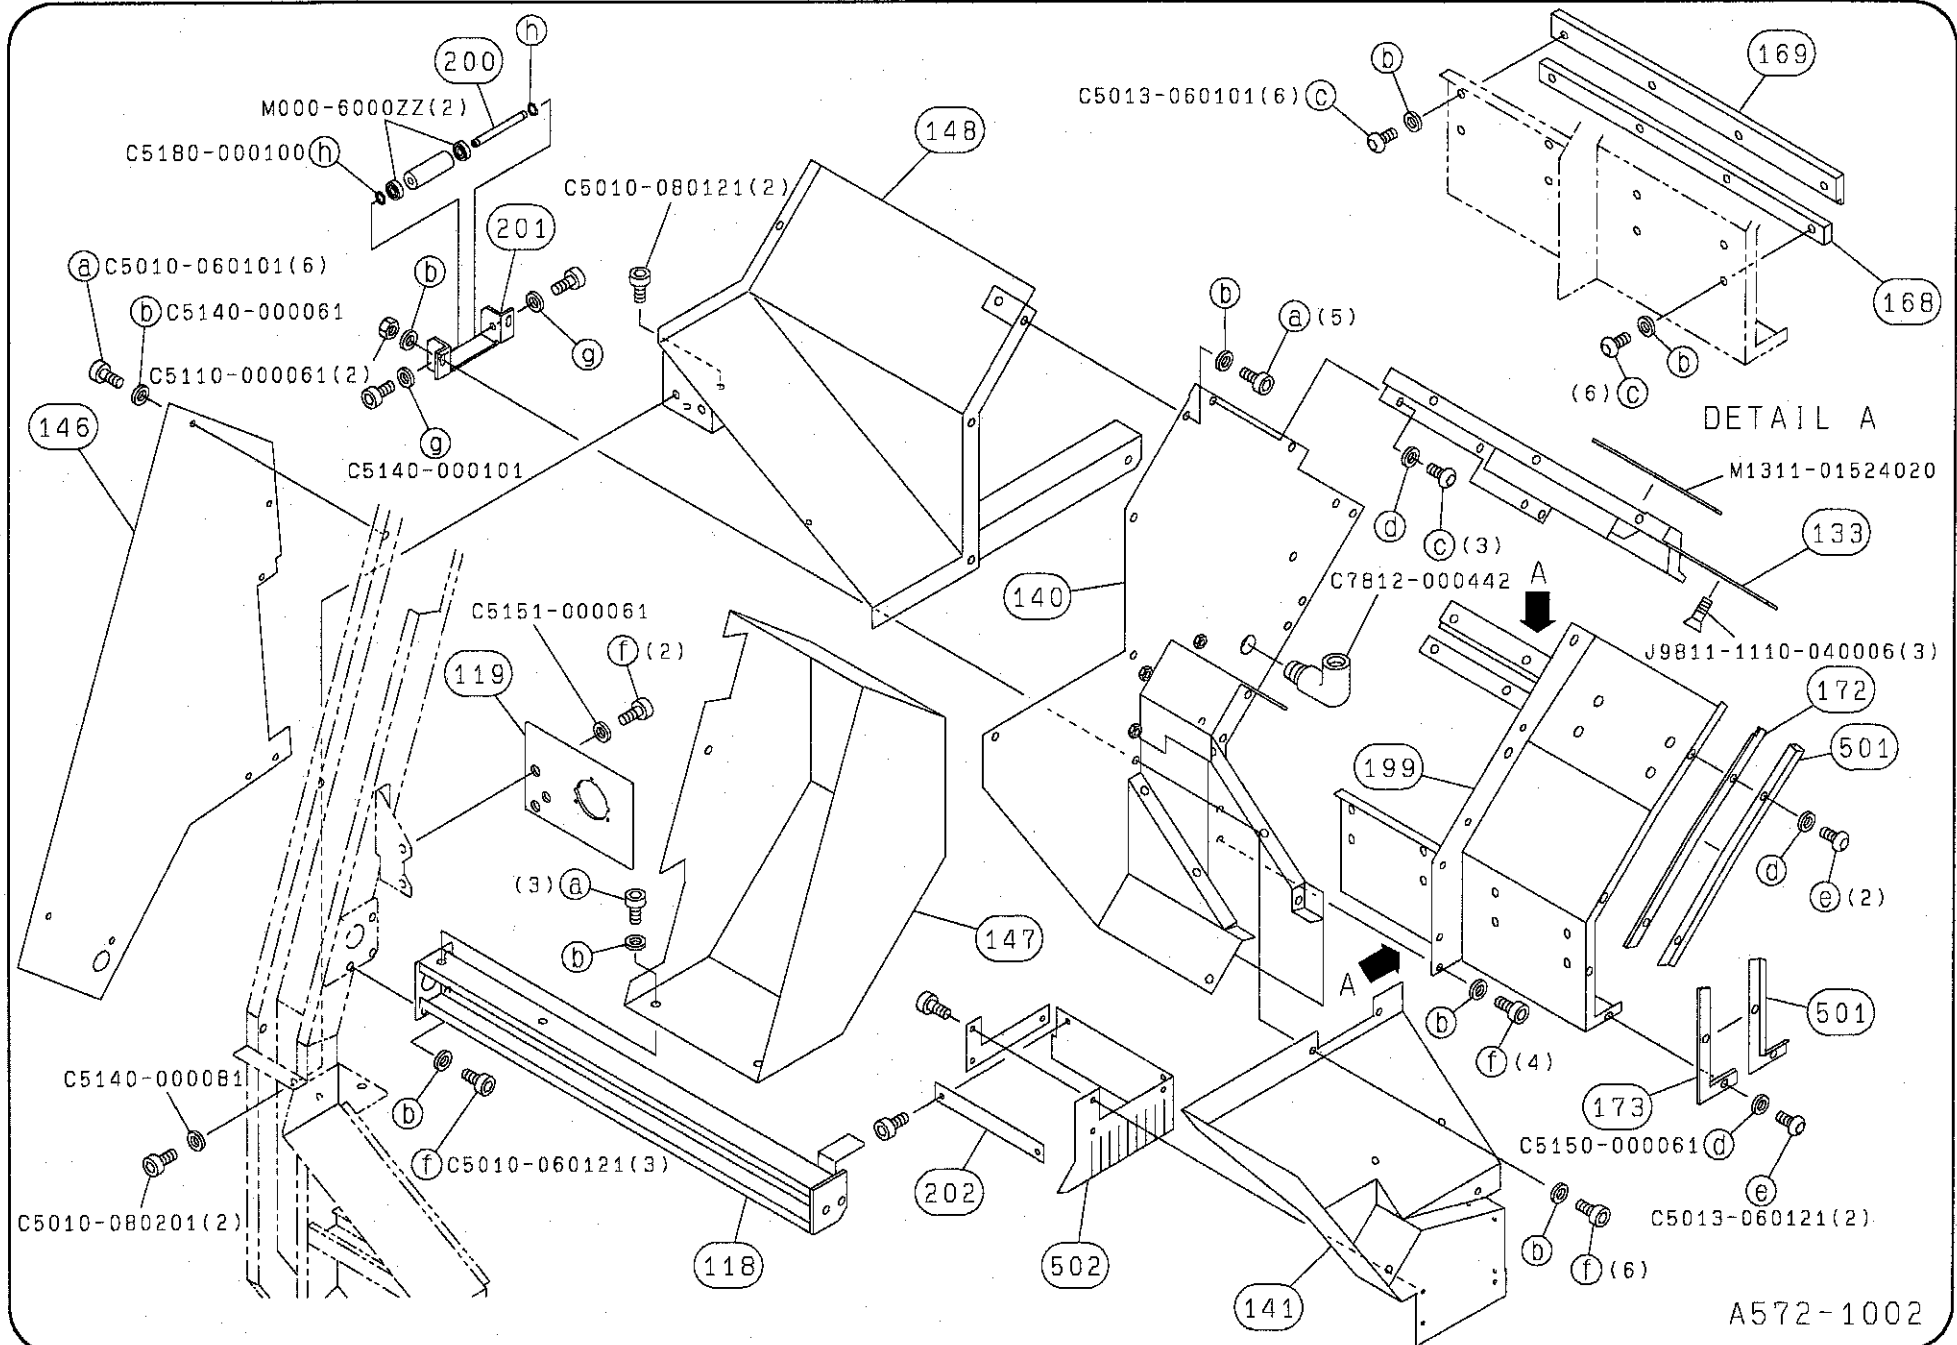


317

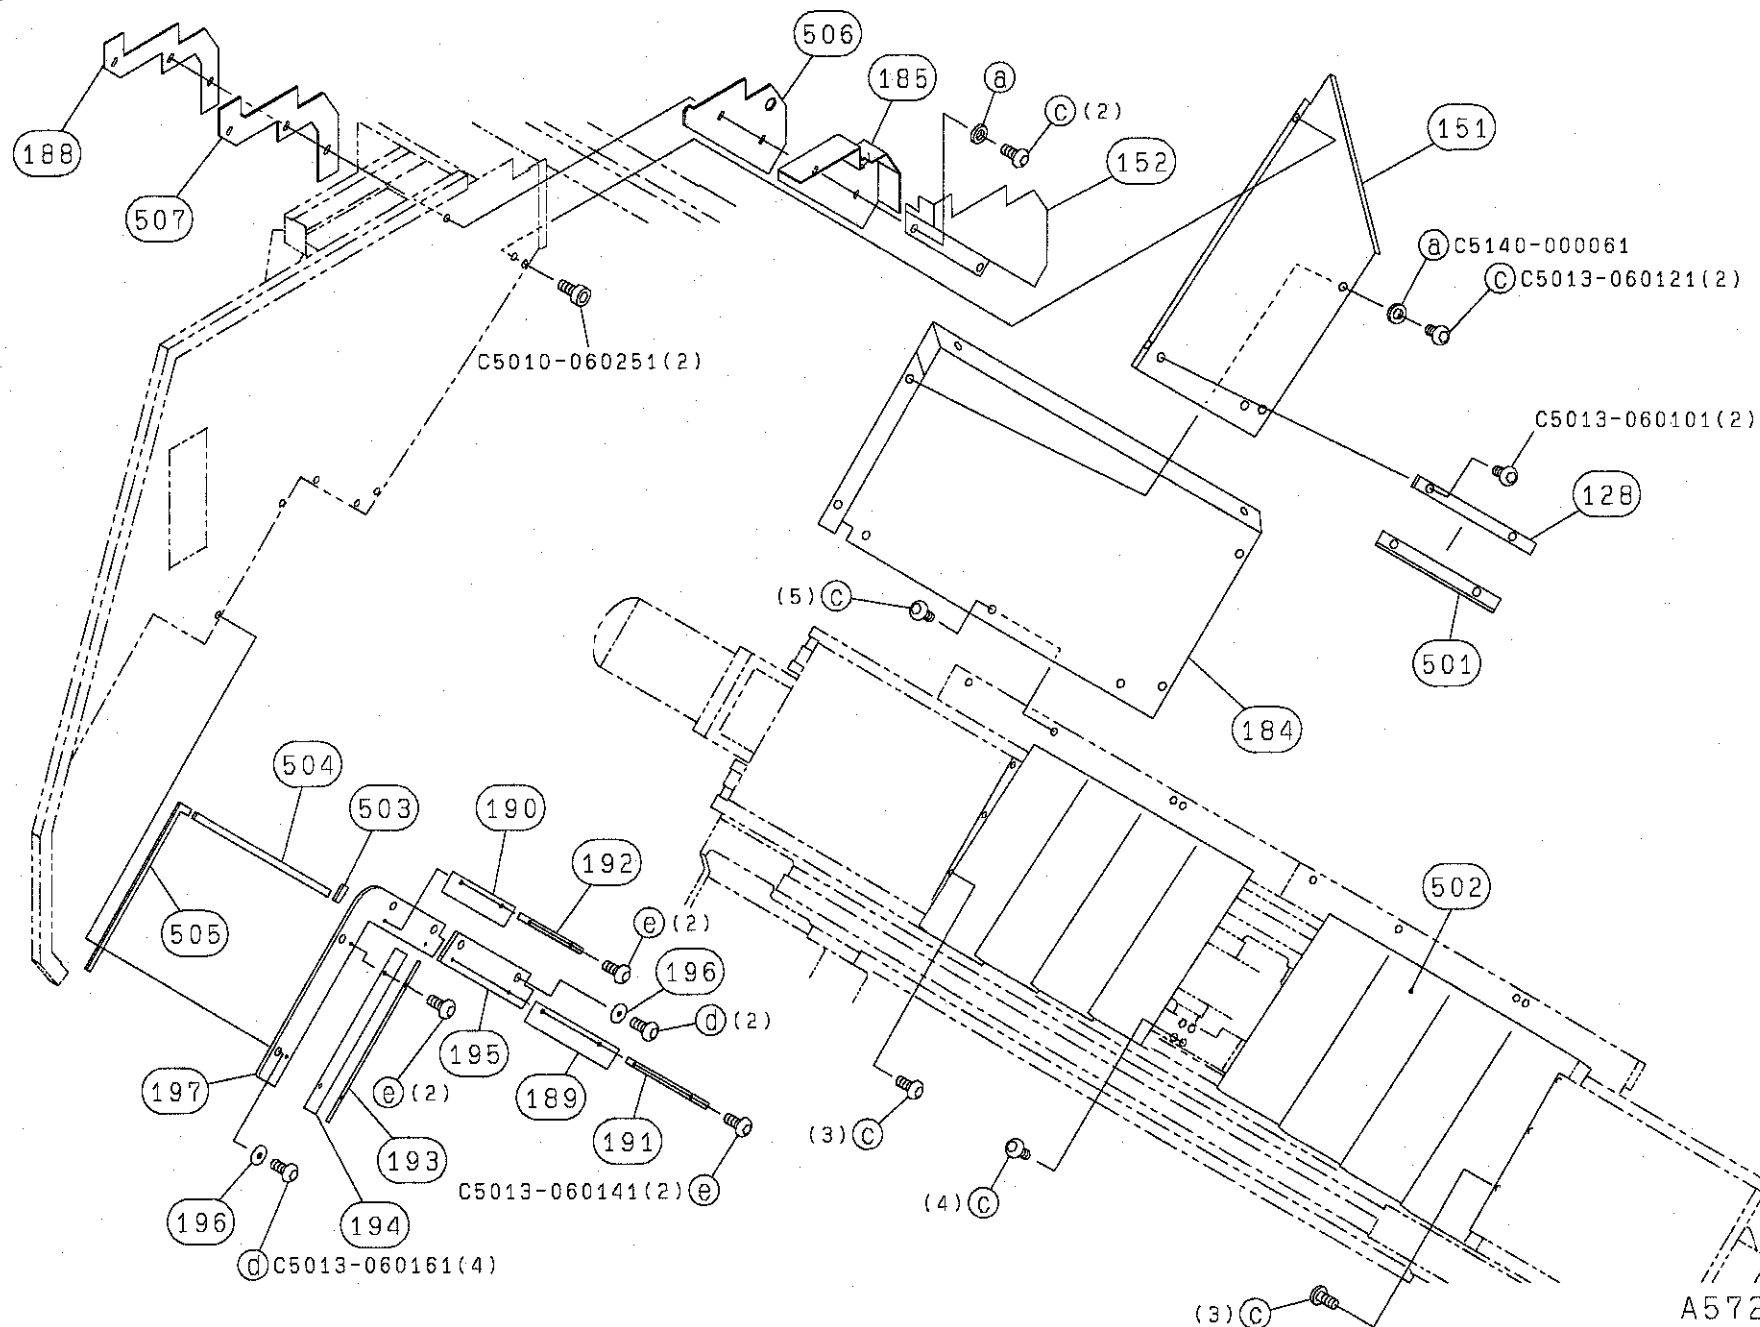

A572-1002

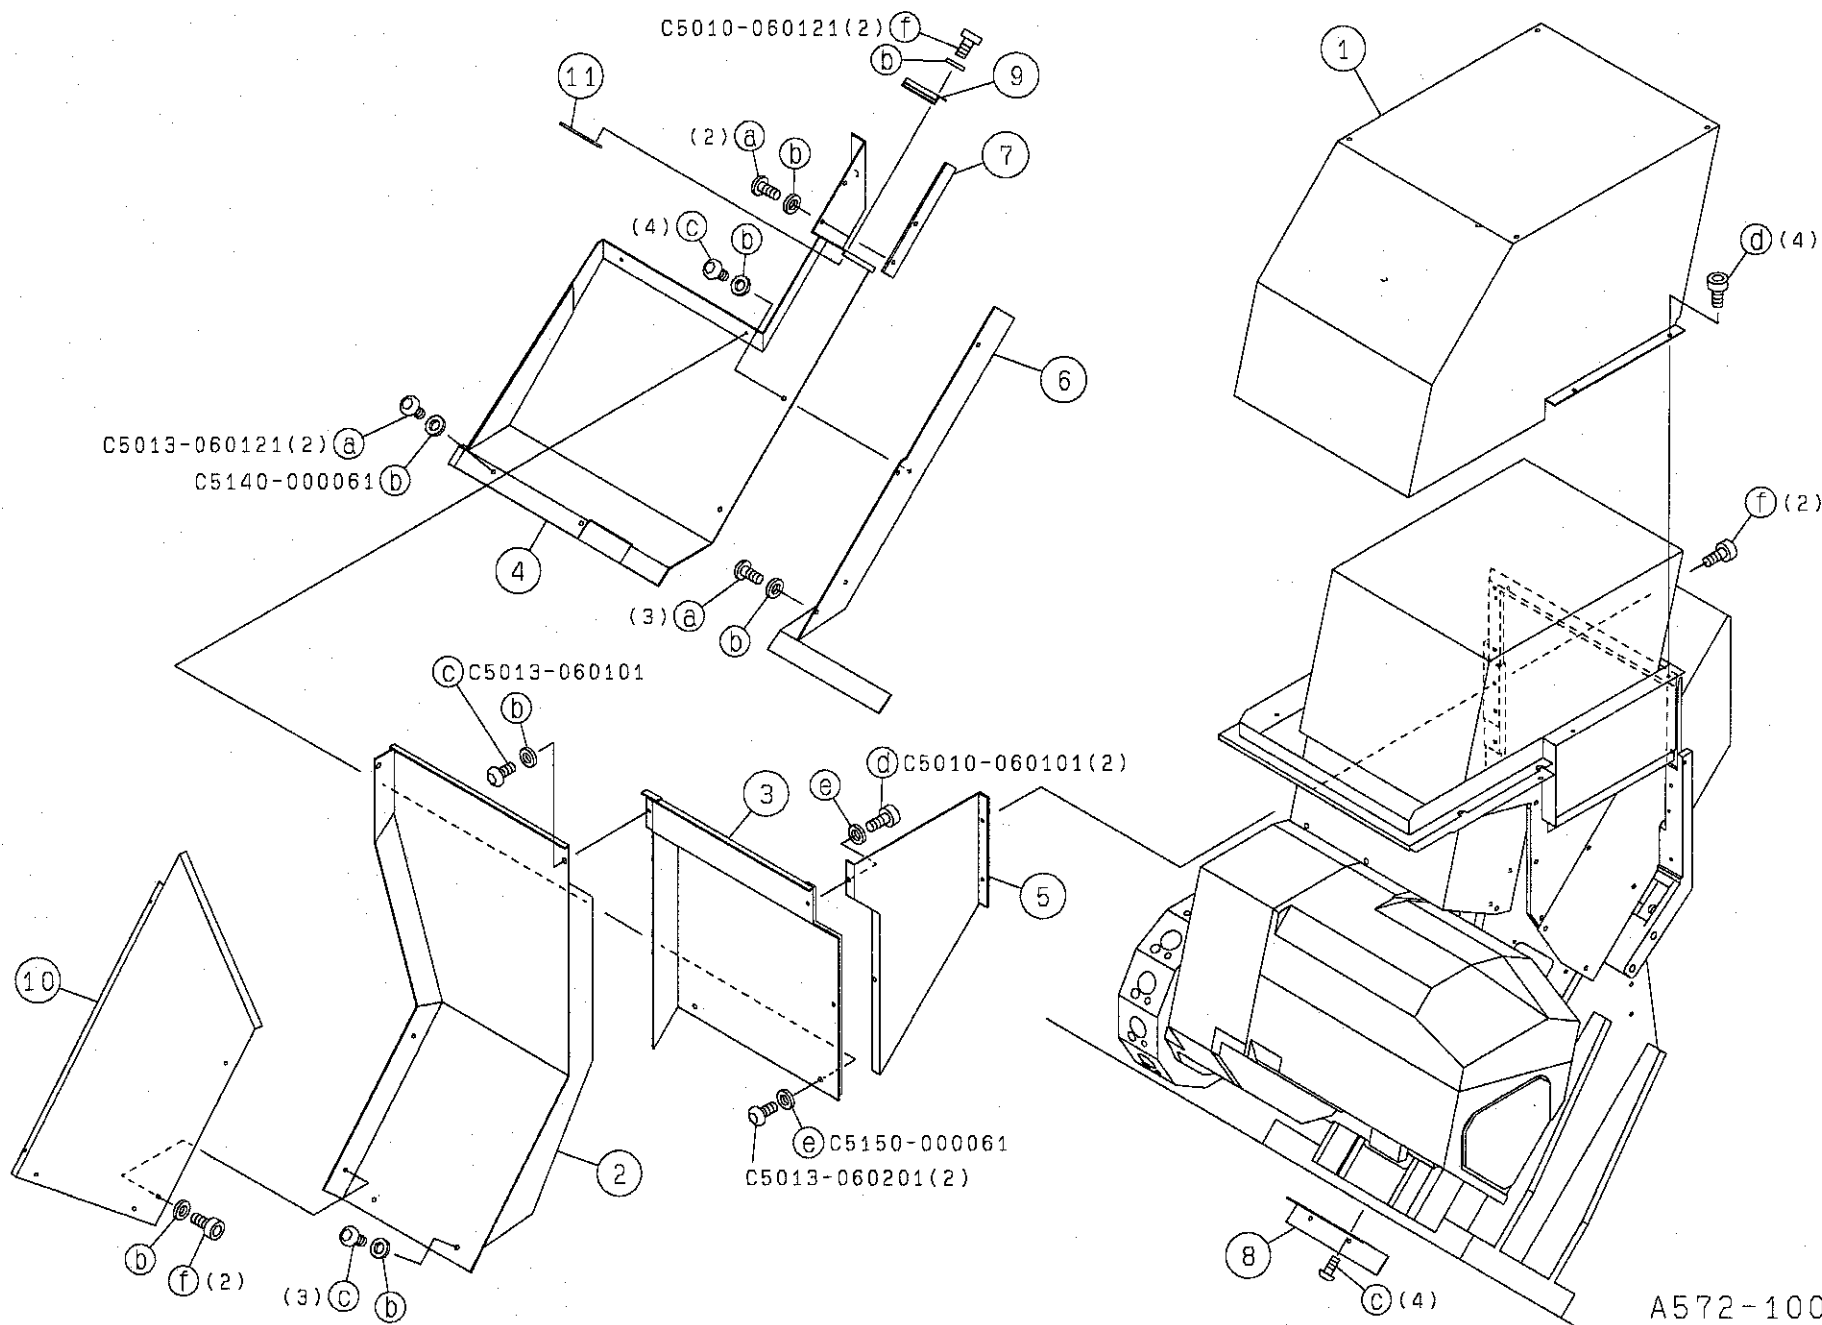


A572-1002

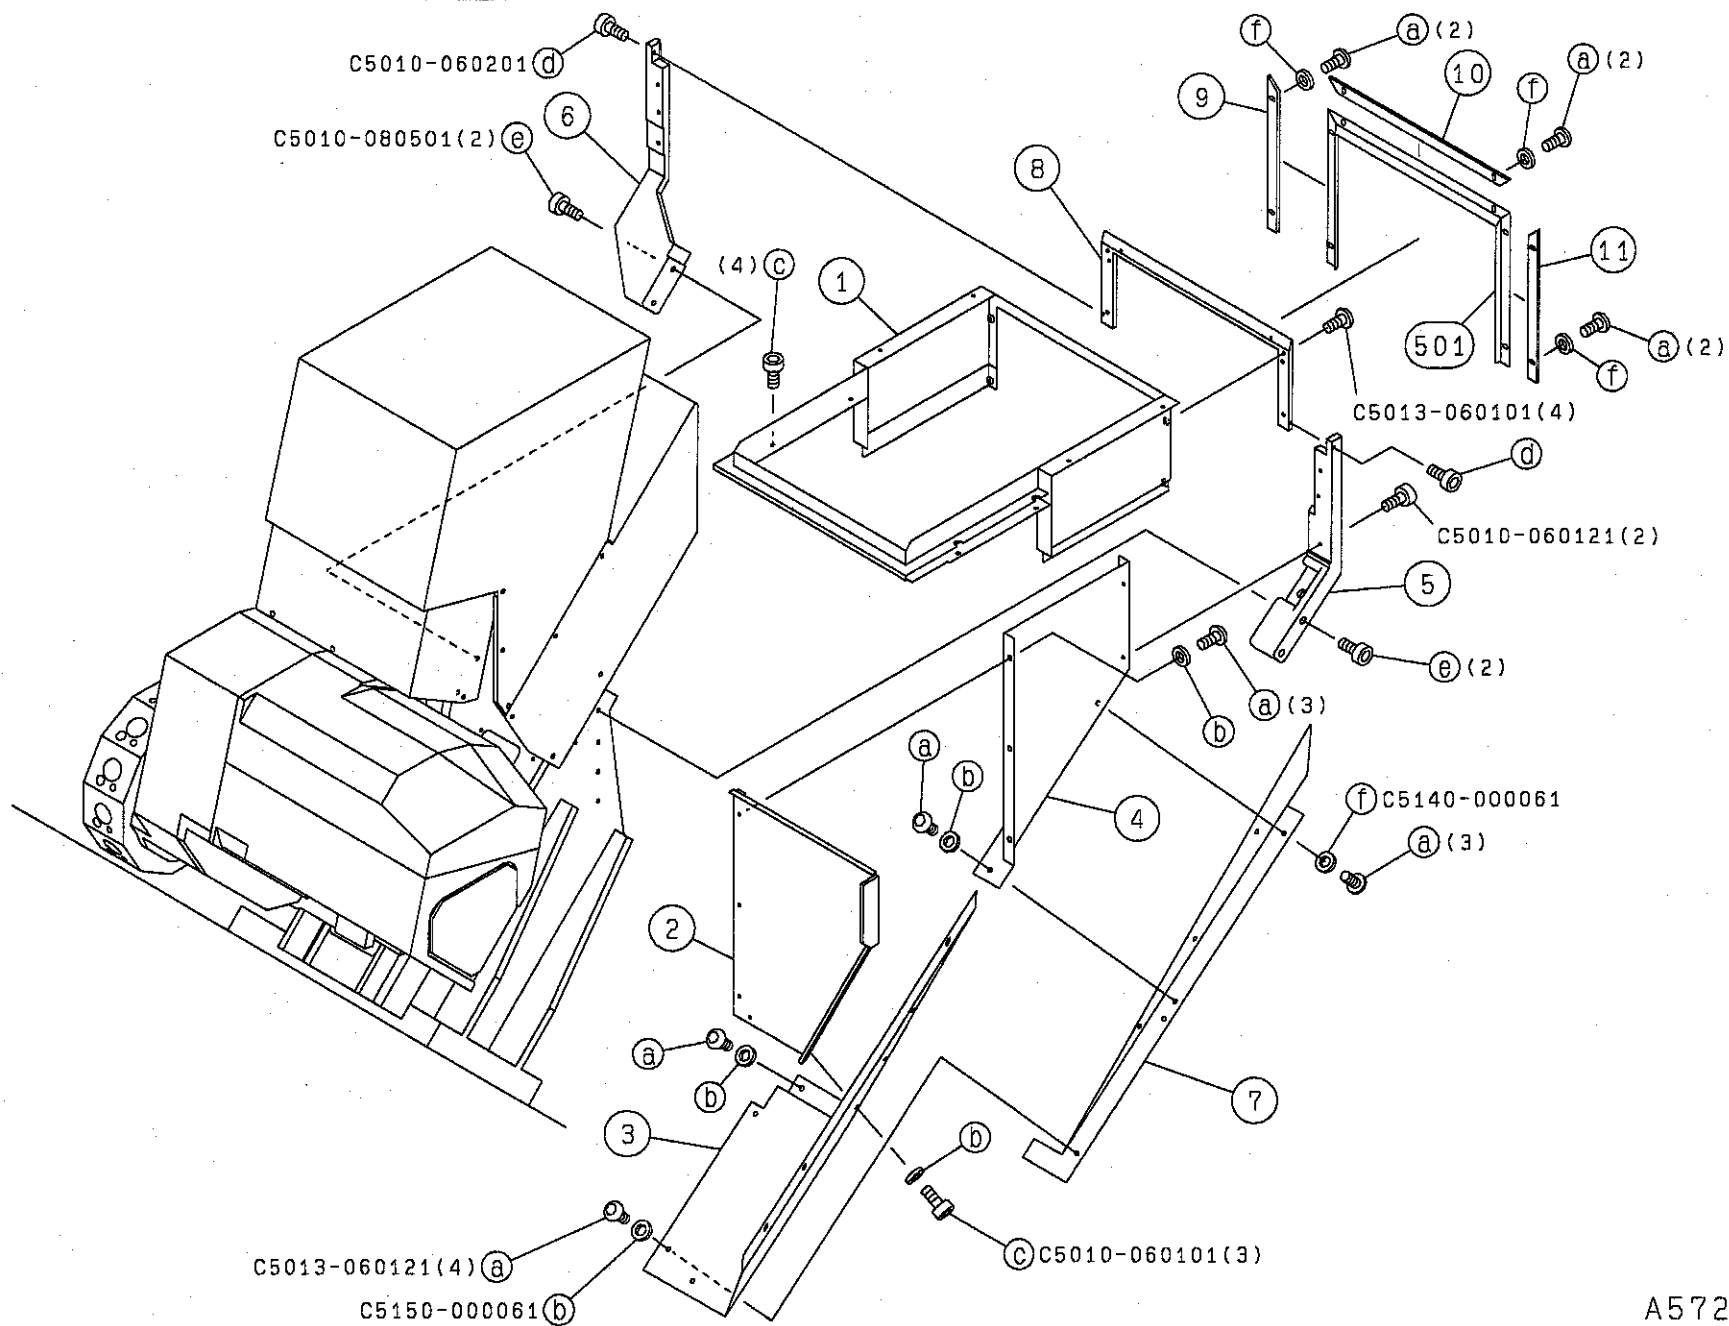


A572-1002

320

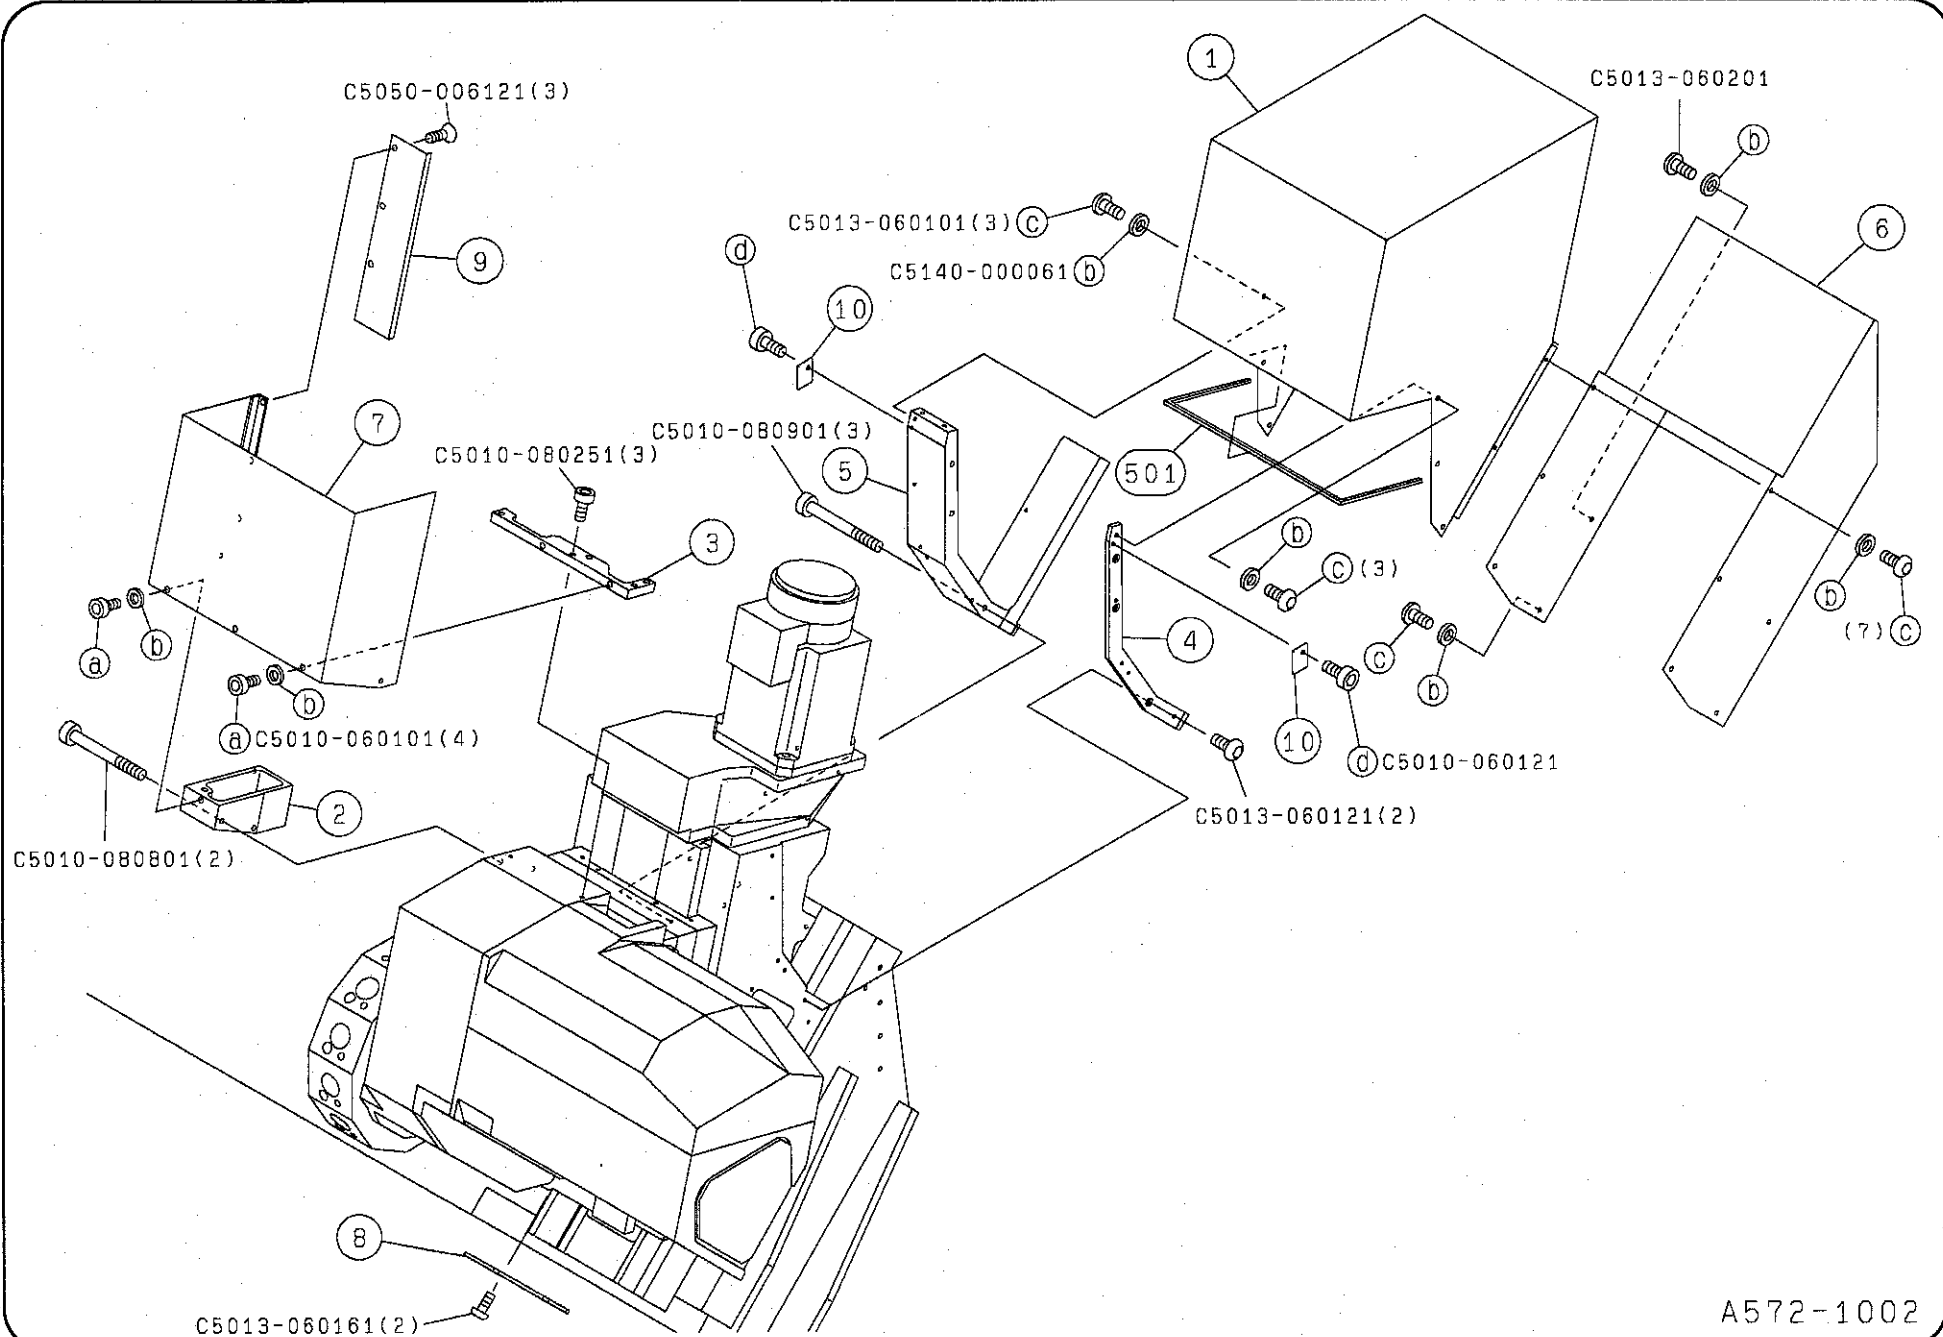


A572-1002

320A

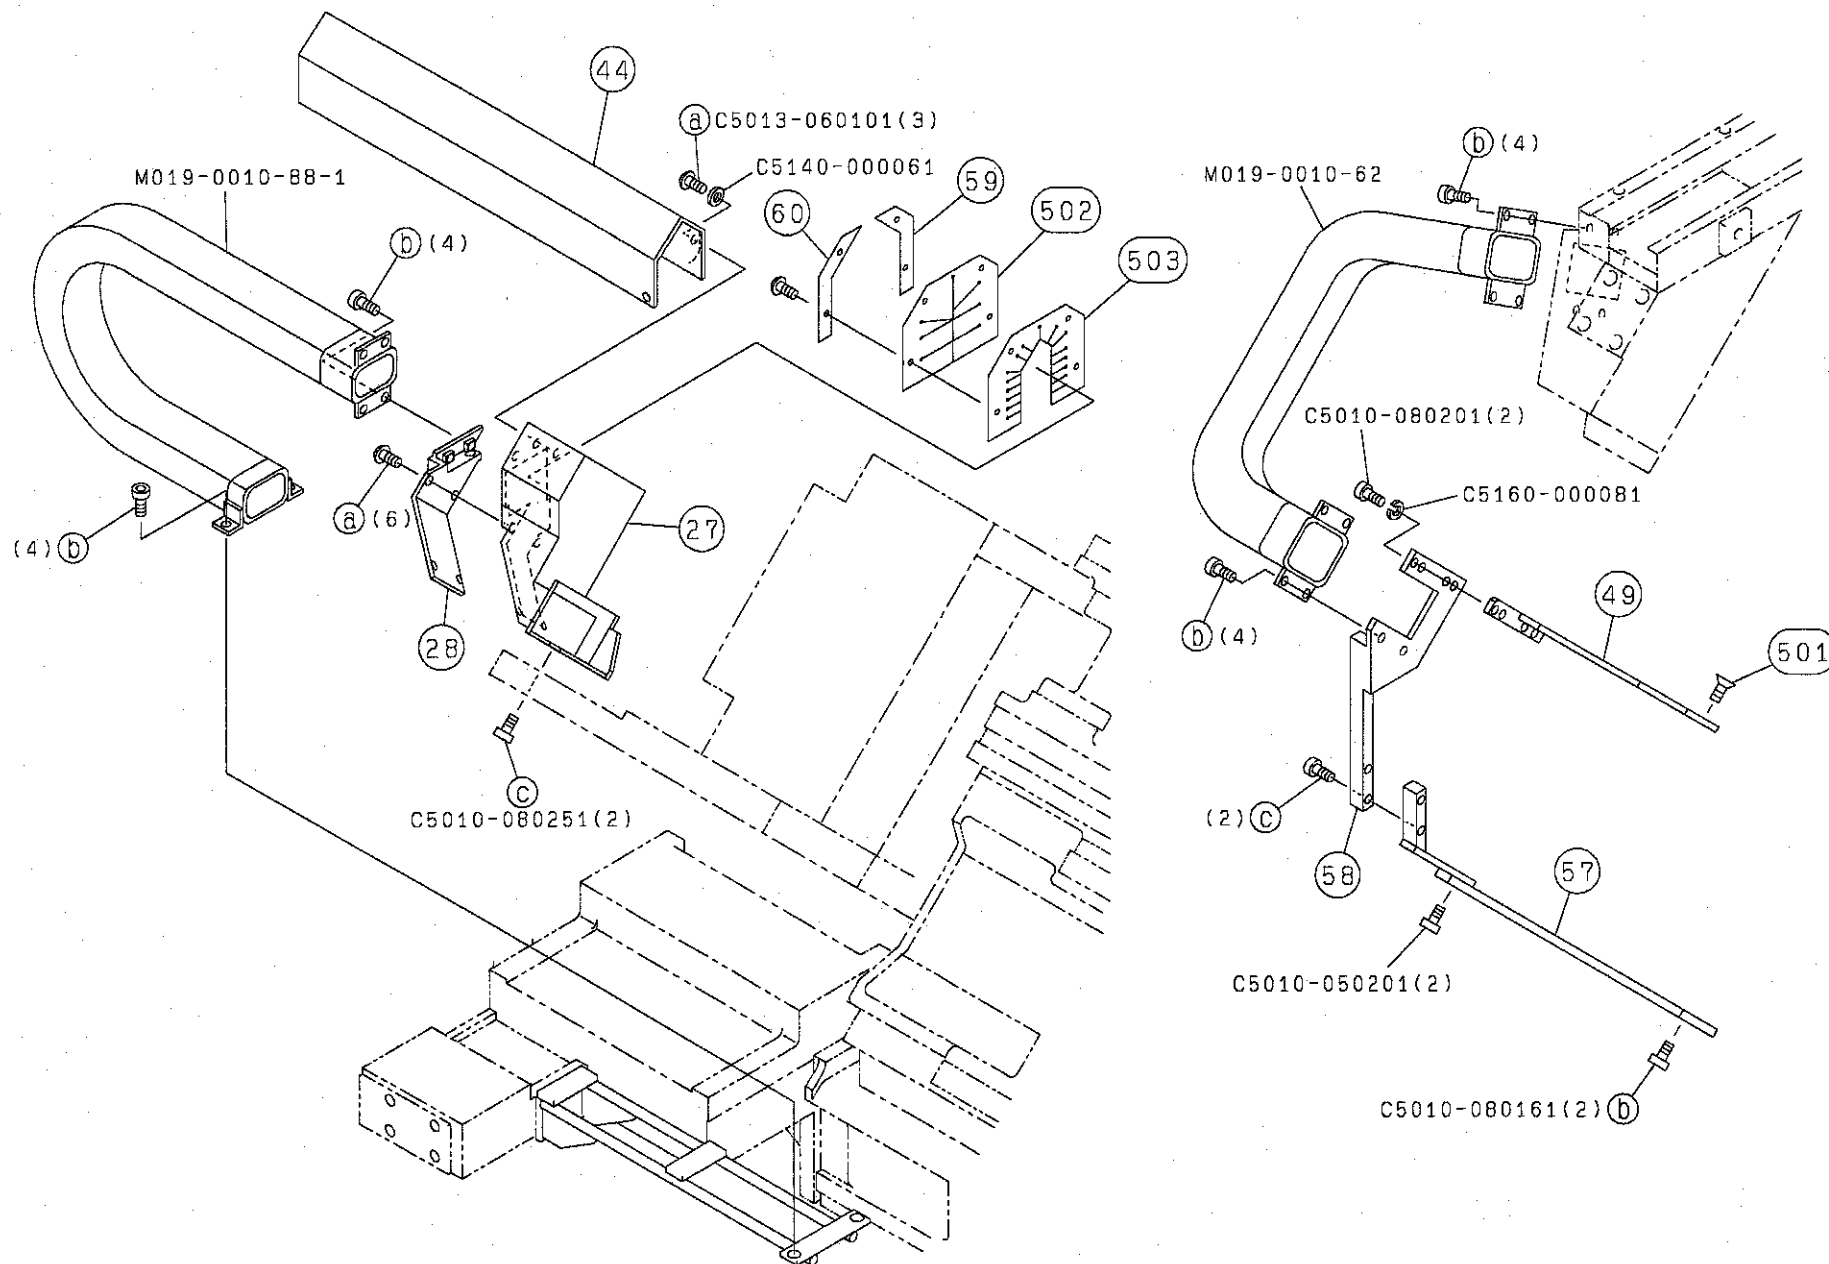


A572-1002


321

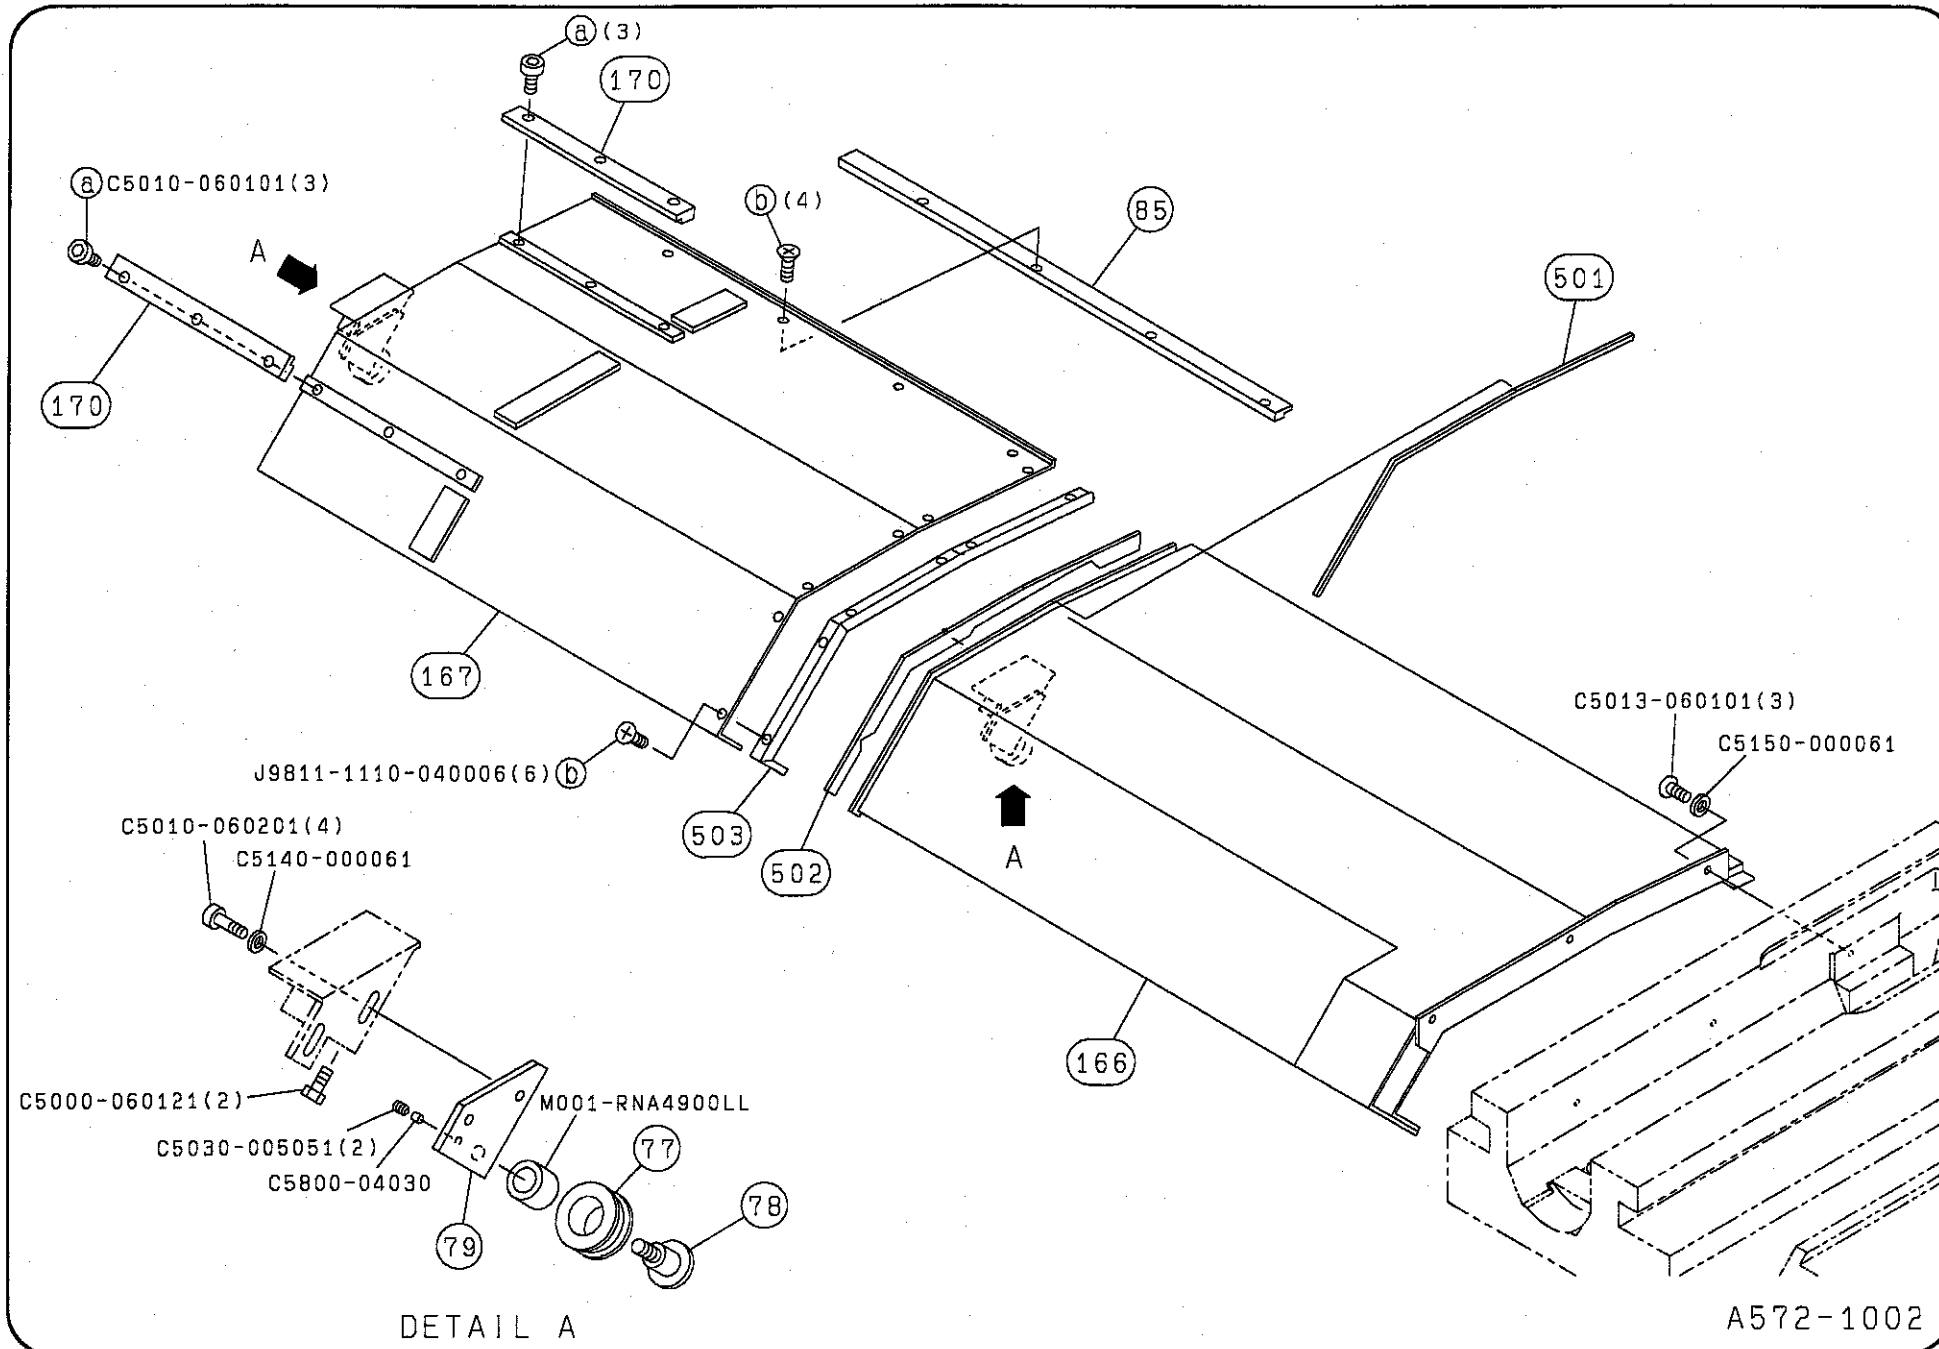

323

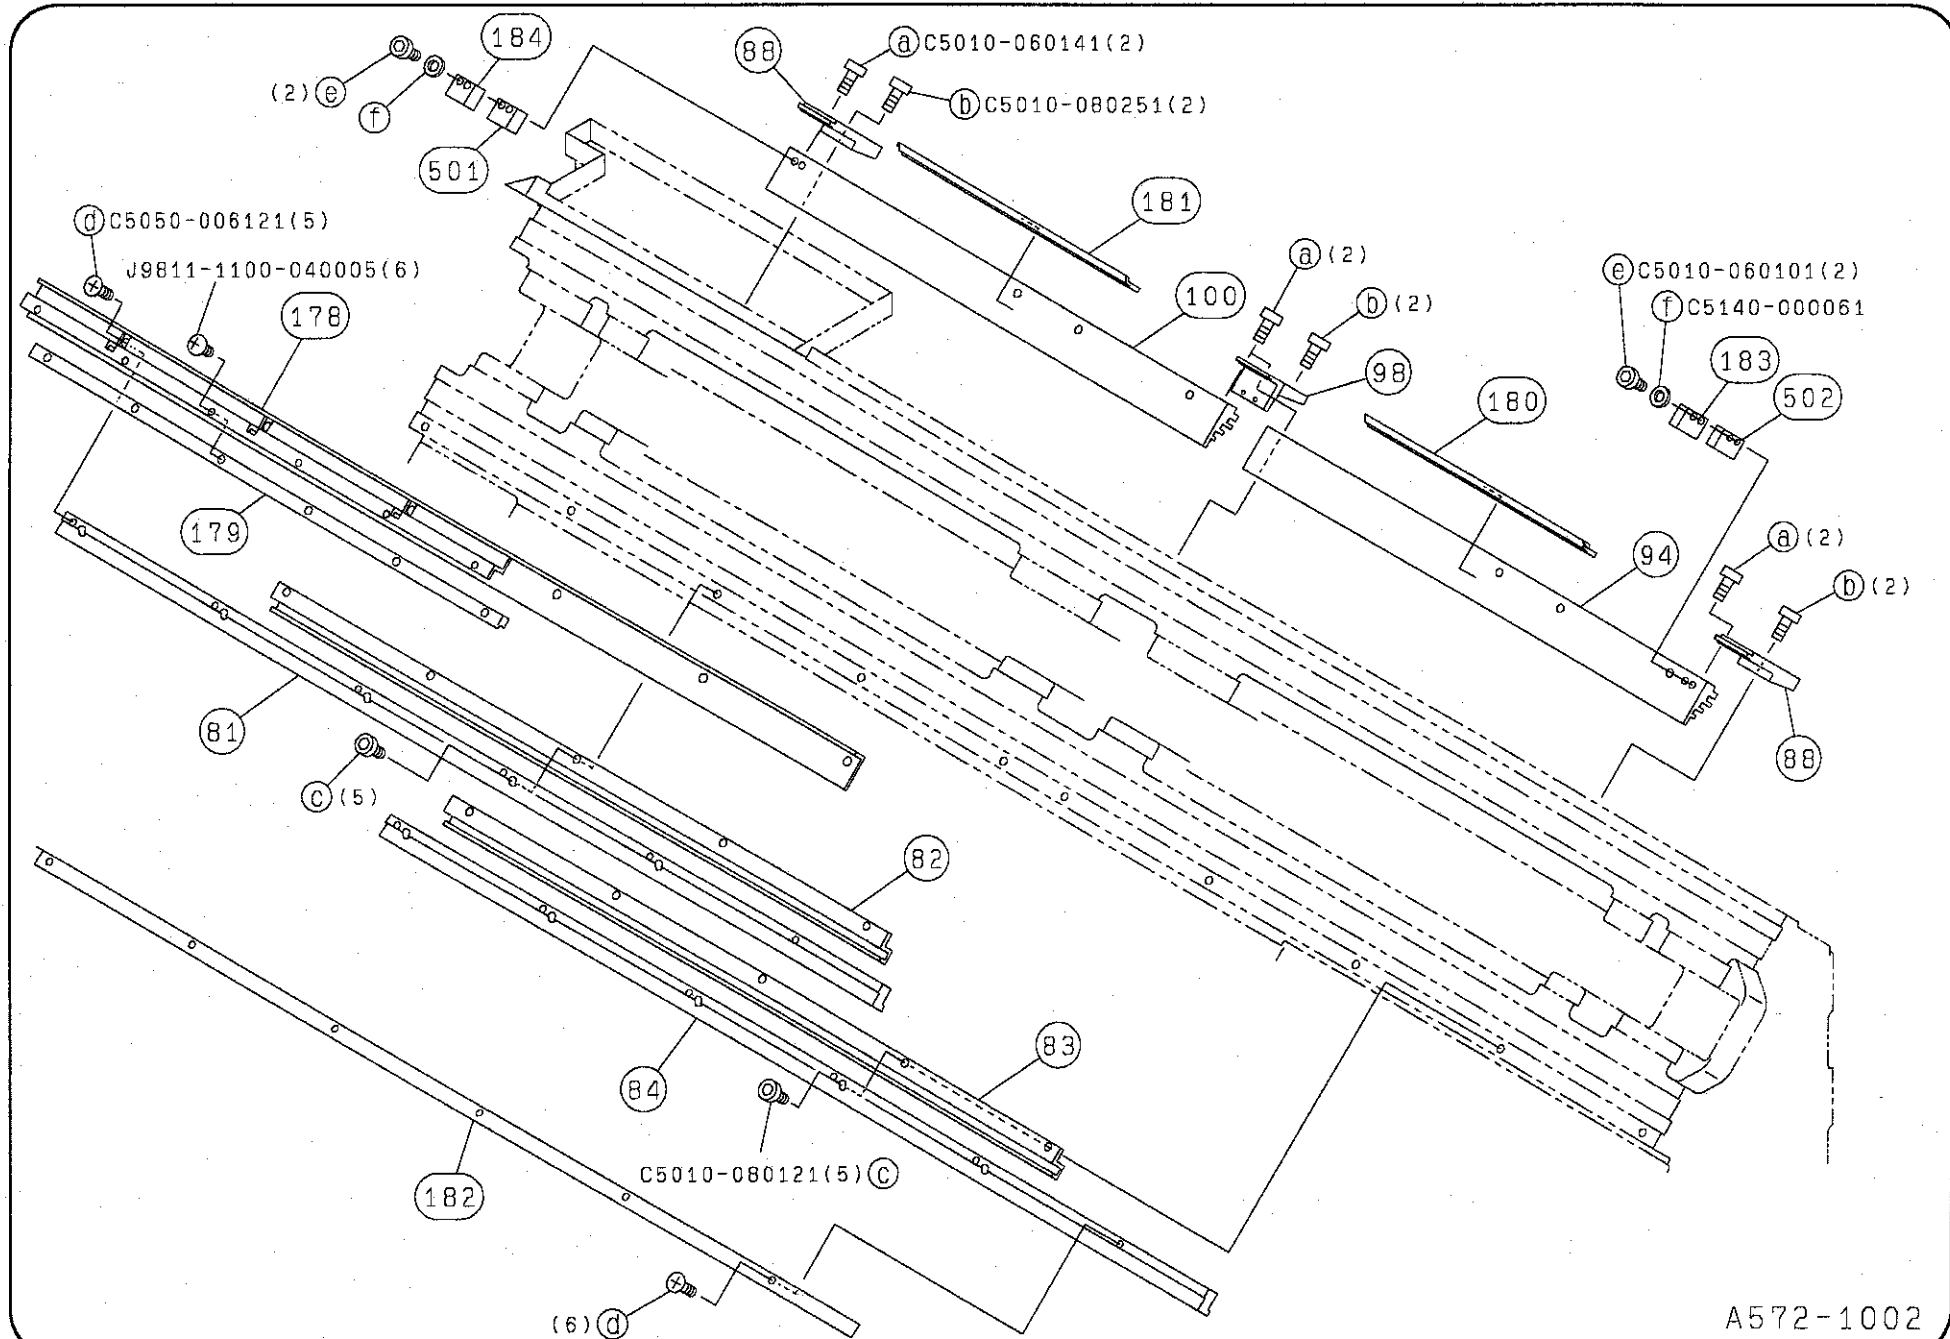


A572-1002

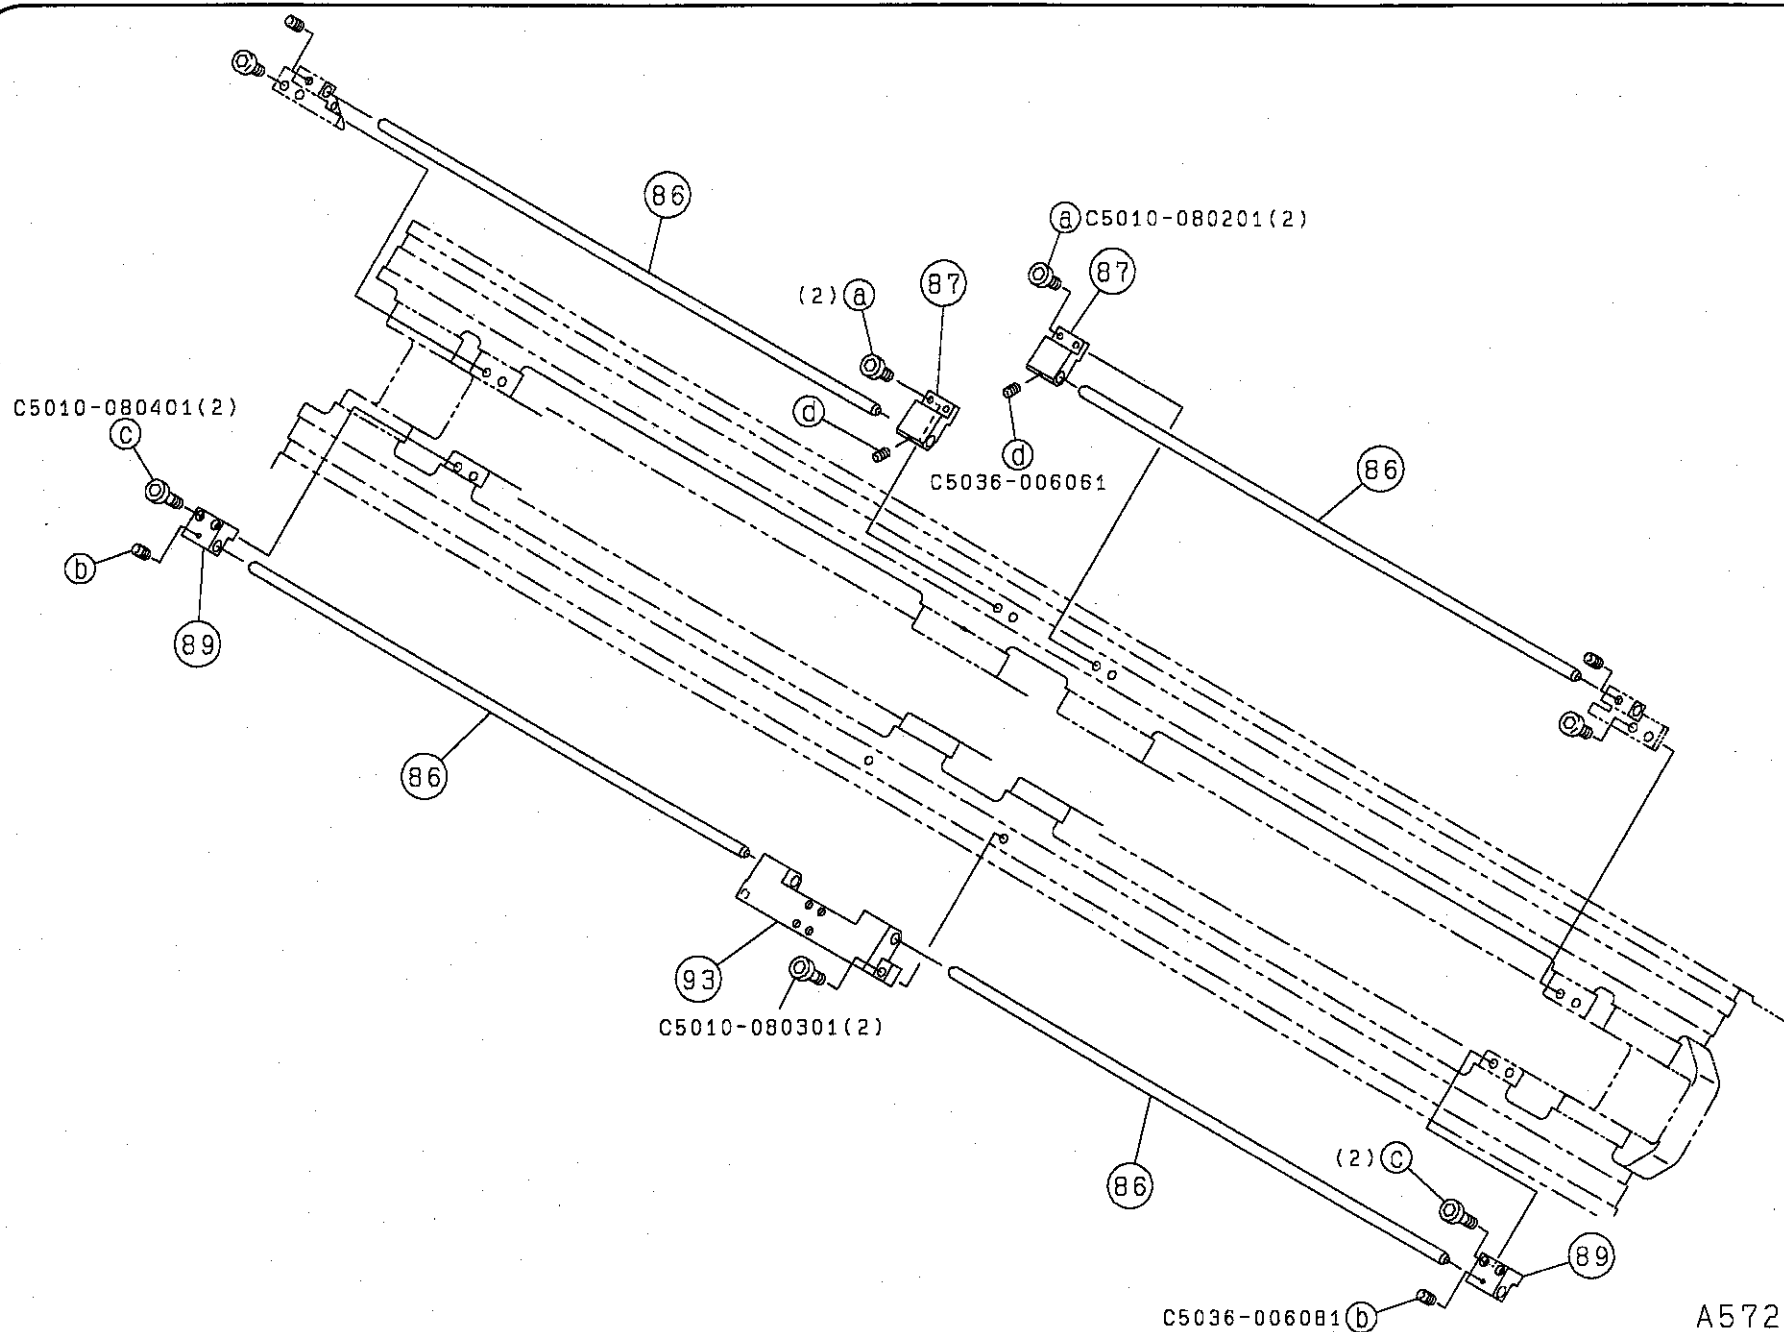


324

326

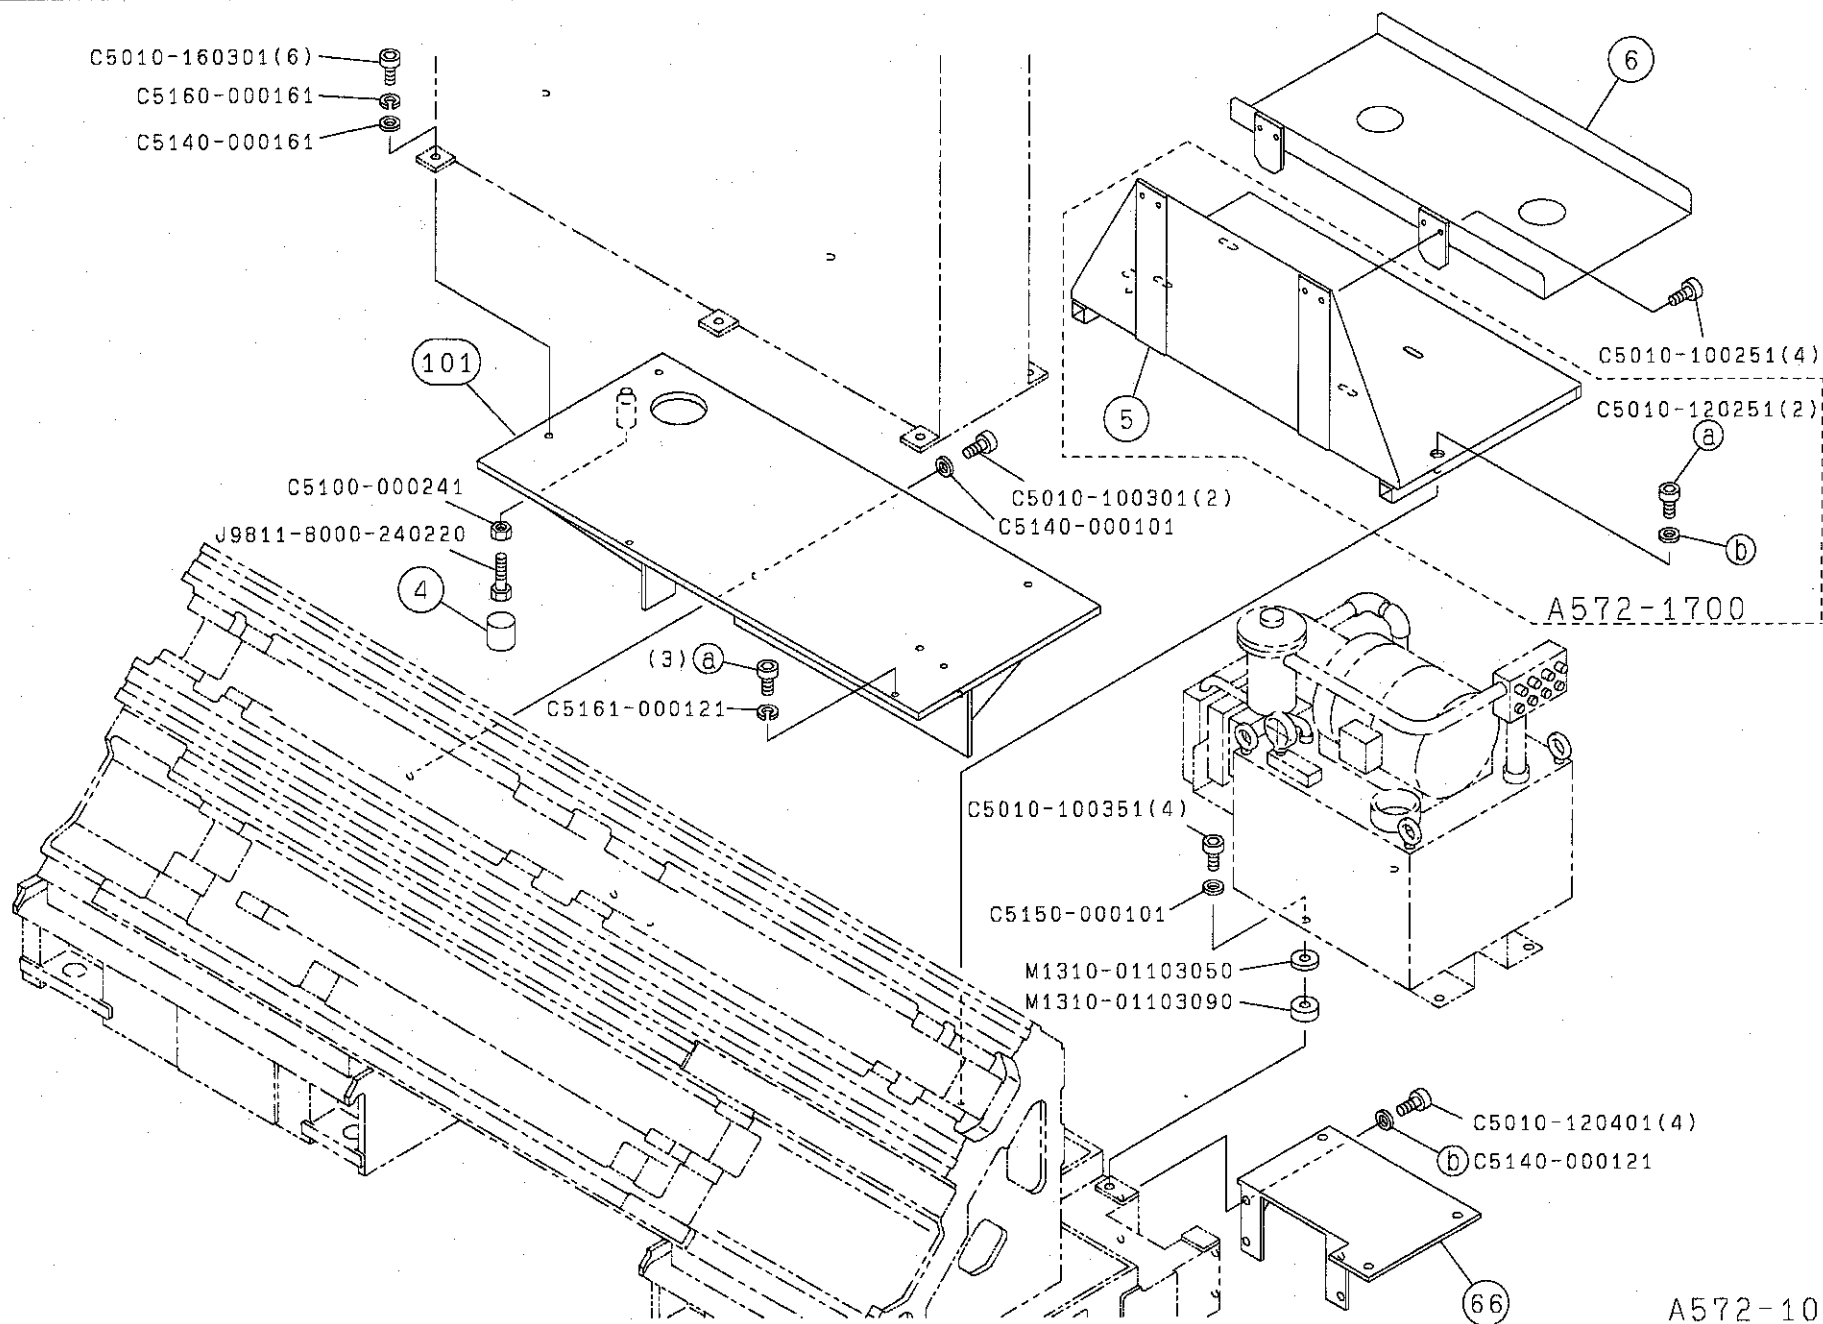

A572-1002

327

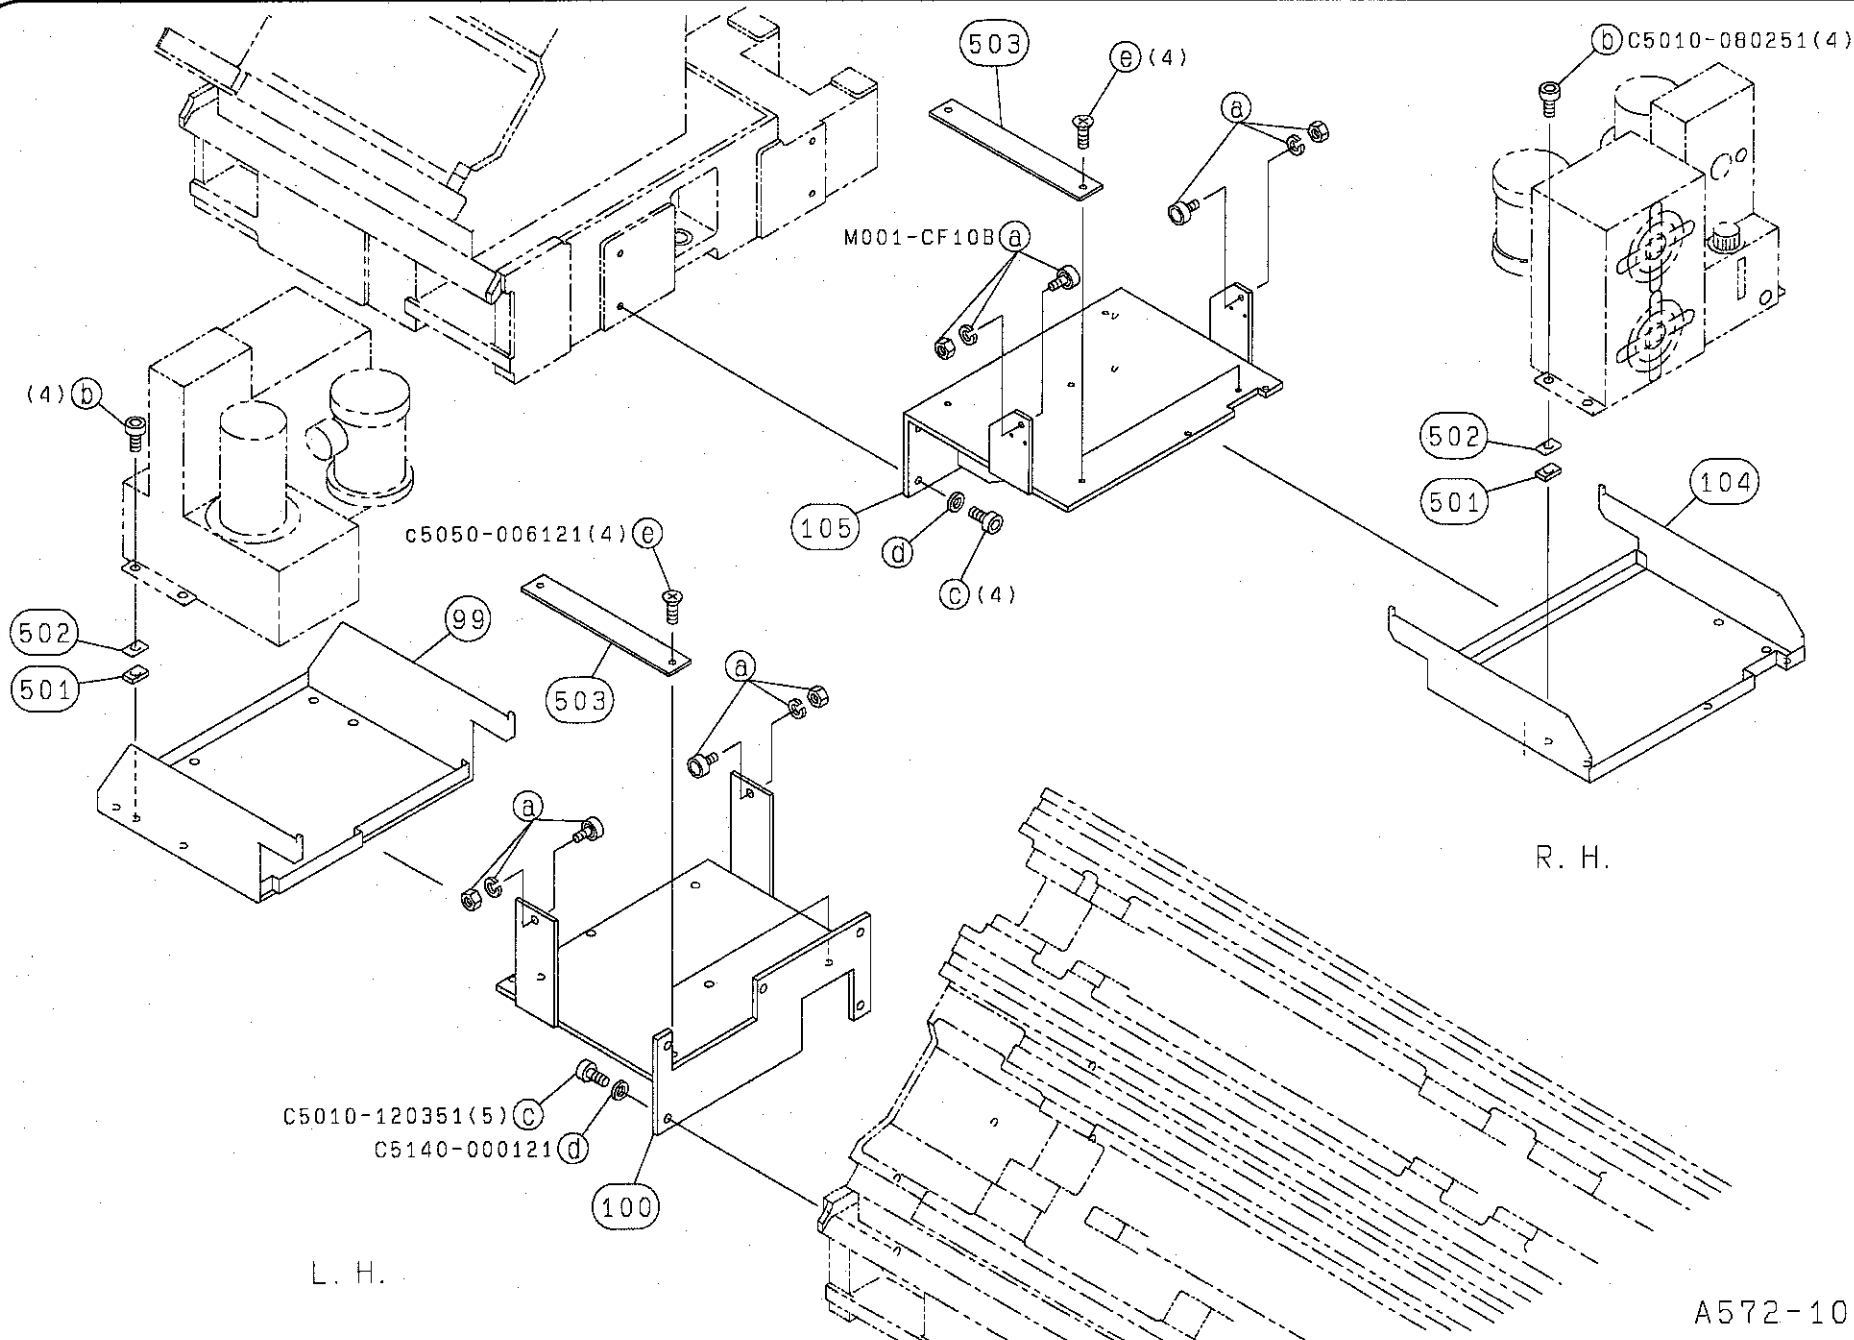

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
301 -001	555-1000-02-02	ROLLER	A572-1007	4	302 -501	H1001-0017-88	BOLT	A572-1007	1
301 -002	555-1000-03	PIN	A572-1007	4	302 -502	H1020-1137-84	PACKING	A572-1007	1
301 -003	572-1000-16	LATTICE	A572-1007	1	302 -503	H1020-1137-85	PACKING	A572-1007	1
301 -004	572-1000-21	ROLLER	A572-1007	2	302 -504	H1022-1063-70	PLATE	A572-1007	1
301 -005	572-1000-25	PIN	A572-1007	2	302 -505	H1062-0001-76	HANDLE	A572-1007	1
301 -013	572-1011-04-01	CAP	A572-1007	1	303 -001	572-1021-06	PLATE	A572-1012	1
301 -014	572-1011-05-02	PLATE	A572-1007	1	303 -002	572-1021-07	DOG	A572-1012	2
301 -015	572-1011-06-02	COVER	A572-1007	1	303 -003	572-1021-08	SUPPORT	A572-1012	2
301 -017	572-1021-02	DOOR	A572-1007	1	303 -004	572-1021-05	PLATE	A572-1012	1
301 -018	572-1011-19-01	SUPPORT	A572-1007	2	303 -005	572-1021-12	COVER	A572-1006	1
301 -019	572-1011-20-01	SUPPORT	A572-1007	2	303 -006	572-1021-10	COVER	A572-1006	1
301 -021	572-1011-62	PLATE	A572-1007	1	303 -007	572-1021-11	COVER	A572-1006	1
301 -501	H1001-0017-88	BOLT	A572-1007	1	303 -008	572-1021-09	COVER	A572-1006	1
301 -502	H1020-1137-84	PACKING	A572-1007	1	303 -501	H1020-1139-78	PLATE	A572-1006	1
301 -503	H1020-1137-85	PACKING	A572-1007	1	303 -502	H1020-1139-79	PLATE	A572-1006	1
301 -504	H1022-1063-70	PLATE	A572-1007	1	304 -001	157-0763-08	SUPPORT	A572-1002	1
301 -505	H1062-0001-76	HANDLE	A572-1007	1	304 -073	572-1000-23-06	ARM	A572-1007	1
301 -506	H1040-1050-12	NAMEPLATE ALP	A572-1922	1	304 -074	572-1000-28	FLANGE	A572-1002	1
302 -001	555-1000-02-02	ROLLER	A572-1007	4	304 -075	572-1000-43-01	COLLAR	A572-1002	1
302 -002	555-1000-03	PIN	A572-1007	4	304 -122	572-1011-11-03	FLANGE	A572-1007	1
302 -003	572-1000-16	LATTICE	A572-1007	1	304 -123	572-1011-12-04	FLANGE	A572-1002	1
302 -004	572-1000-21	ROLLER	A572-1007	2	304 -124	572-1011-13-03	PLATE	A572-1002	1
302 -005	572-1000-25	PIN	A572-1007	2	304 -125	572-1011-14-02	SUPPORT	A572-1002	1
302 -012	572-1011-03-01	CAP	A572-1007	1	304 -126	572-1011-17	FLANGE	A572-1002	1
302 -014	572-1021-03	PLATE	A572-1007	1	305 -134	572-1012-57	CAP	A572-1002	3
302 -015	572-1021-04	COVER	A572-1007	1	305 -136	572-1012-59-05	COVER	A572-1002	1
302 -016	572-1021-01-02	DOOR	A572-1007	1	305 -137	572-1012-60-04	COVER	A572-1002	1
302 -018	572-1011-19-01	SUPPORT	A572-1007	2	305 -501	H1003-0002-03	HINGE	A572-1002	2
302 -019	572-1011-20-01	SUPPORT	A572-1007	2					
302 -021	572-1011-62	PLATE	A572-1007	1					

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
305 -502	H1069-0000-26	BALL CATCH	A572-1002	1	309 -138	572-1012-61-03	SUPPORT	A572-1002	1
					309 -139	572-1012-84 02	COVER	A572-1002	1
306 -076	572-1003-07	SUPPORT	A572-1002	1					
306 -111	572-1010-34-01	SUPPORT	A572-1002	1	309A-113	572-1010-37-06	SUPPORT	A572-1002	1
306 -127	572-1012-07-03	SUPPORT	A572-1002	1	309A-114	572-1010-38-03	SUPPORT	A572-1002	1
306 -153	572-1021-15-01	COVER	A572-1002	1	309A-115	572-1010-39-02	SUPPORT	A572-1002	1
306 -154	572-1021-14-01	COVER	A572-1002	1	309A-117	572-1010-41-01	SUPPORT	A572-1002	1
306 -155	572-1013-05-03	COVER	A572-1002	1	309A-119	572-1000-11-02	RAIL	A572-1002	1
306 -156	572-1013-06-05	COVER	A572-1002	1	309A-120	572-1020-12-01	SUPPORT	A572-1002	1
306 -157	572-1013-07-03	SUPPORT	A572-1002	1	309A-121	572-1020-10-02	DUCT	A572-1002	1
306 -158	572-1017-75	SUPPOT	A572-1002	1	309A-122	572-1024-04	COVER	A572-1002	1
306 -504	H9022-6200-13-2	TERMINAL BOX	A572-1002	1	309A-123	572-1010-40	SUPPORT	A572-1002	1
					309A-124	572-1012-92	SUPPORT	A572-1002	1
307 -001	572-1014-26-03	COVER	A572-1060	1					
307 -002	572-1014-27-04	COVER	A572-1060	1	310 -007	572-1010-19-06	RAIL	A572-1007	1
307 -003	572-1014-28-07	COVER	A572-1060	1	310 -008	572-1010-20-03	PAN	A572-1007	1
307 -004	572-1014-25-06	COVER	A572-1061	1	310 -009	572-1010-21-04	CAP	A572-1007	1
					310 -010	572-1010-22-01	RAIL	A572-1007	1
308 -001	572-1014-30-04	COVER	A572-1050	1	310 -011	572-1010-23	SPACER	A572-1007	13
308 -002	572-1014-31-04	COVER	A572-1050	1	310 -012	572-1011-39	SUPPORT	A572-1007	1
308 -003	572-1014-32-08	COVER	A572-1050	1	310 -013	572-1011-40	SUPPORT	A572-1007	1
308 -004	572-1014-29-07	COVER	A572-1051	1	310 -501	H1003-0002-79	HINGE	A572-1007	1
					310 -502	H1003-0002-80	HINGE	A572-1007	1
309 -102	572-1010-10-01	SUPPORT	A572-1002	1	310 -503	H1020-1156-96	PLATE	A572-1007	2
309 -103	572-1010-11-01	SUPPORT	A572-1002	1					
309 -106	572-1010-14-04	SUPPORT	A572-1002	1	311 -001	572-1017-82	COVER	A572-1015	1
309 -112	572-1010-36-04	SUPPORT	A572-1002	1	311 -002	572-1017-84	COVER	A572-1015	1
309 -113	572-1020-11-01	SUPPORT	A572-1002	1	311 -003	572-1012-14-03	CAP	A572-1015	1
309 -114	572-1020-09-01	DUCT	A572-1002	1	311 -004	572-1012-58	CAP	A572-1015	1
309 -115	572-1020-06	RAIL	A572-1002	1	311 -005	572-1017-83	COVER	A572-1015	1
309 -116	572-1024-05	COVER	A572-1002	1	311 -006	572-1017-59	SUPPORT	A572-1002	1


SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
311 -007	572-1017-85	SUPPORT	A572-1002	1	313 -002	572-1017-13-01	WIPER	A572-1040	1
311 -008	572-1017-86	SUPPORT	A572-1002	1	313 -003	572-1012-21-06	HOLDER	A572-1040	1
311 -501	H1003-0002-03	HINGE	A572-1015	2	313 -004	572-1017-17-01	HOLDER	A572-1040	1
311 -503	H1062-0000-36	KNOB	A572-1015	1	313 -005	572-1012-23-05	HOLDER	A572-1040	1
311 -504	H1069-0000-86	KEY, lock	A572-1015	1	313 -006	572-1012-31-02	COVER	A572-1040	1
311A-001	572-1012-11-02	COVER	A572-1002	1	313 -007	572-1017-35	HOLDER	A572-1040	1
311A-002	572-1017-71-01	COVER	A572-1002	1	313 -008	572-1017-37	HOLDER	A572-1040	1
311A-003	572-1017-72-01	COVER	A572-1002	1	313 -009	572-1017-38	WIPER	A572-1040	1
311A-004	572-1012-10-03	CAP	A572-1002	1	313 -010	572-1012-64-01	COVER	A572-1040	1
311A-005	572-1012-58	CAP	A572-1015	1	313 -011	572-1012-65-05	HOLDER	A572-1040	1
311A-006	572-1017-59	SUPPORT	A572-1002	1	313 -012	572-1012-66-04	COVER	A572-1040	1
311A-501	H1062-0000-36	KNOB	A572-1015	1	313 -013	572-1017-50	HOLDER	A572-1040	1
311A-502	H1069-0000-86	KEY, LOCK	A572-1015	1	313 -014	572-1017-51	HOLDER	A572-1040	1
312 -007	572-1017-61	PLATE	A572-1040	1	313 -015	572-1017-55	HOLDER	A572-1040	1
312 -008	572-1012-62	SUPPORT	A572-1040	1	313 -016	572-1017-57	WASHER	A572-1002	8
312 -009	572-1012-63-01	SUPPORT	A572-1040	2	313 -157	572-1014-01-02	PLATE	A572-1040	1
312 -013	572-1012-79	SUPPORT	A572-1040	1	313 -159	572-1014-03	HOLDER	A572-1002	1
312 -014	572-1012-80-03	COVER	A572-1040	1	313 -160	572-1014-04	HOLDER	A572-1002	1
312 -015	572-1017-19	PLATE	A572-1040	1	313 -502	H1023-0017-41	WIPER	A572-1002	1
312 -016	572-1017-21	PLATE	A572-1040	1	313 -503	H1020-1134-49-2	PLATE	A572-1040	1
312 -205	592-1000-09	PLATE	A572-1002	1	313 -504	H1032-1006-95	WIPER	A572-1040	1
312 -206	592-1000-17	WORK LIGHT	A572-1002	1	313 -505	H1032-1006-96	WIPER	A572-1040	1
312 -501	H1023-0017-53-2	WIPER	A572-1040	1	313 -506	H1032-1006-97	WIPER	A572-1040	1
312 -502	H1020-1101-71	PLATE	A572-1002	1	313 -507	H1032-1006-98	WIPER	A572-1040	1
312 -503	H1022-1047-05	PLATE	A572-1002	1	313 -508	H1032-1006-99	WIPER	A572-1040	1
312 -504	H1020-1142-89	PLATE	A572-1040	1	314 -110	572-1010-28-01	SUPPORT	A572-1002	3
312 -505	H1020-1142-88	PLATE	A572-1040	1	314 -120	572-1010-44	SUPPORT	A572-1002	1
313 -001	572-1017-12-01	WIPER	A572-1040	1	314 -132	572-1017-61	PLATE	A572-1002	1
					314 -139	572-1012-67-03	COVER	A572-1002	1
					314 -205	592-1000-09	PLATE	A572-1002	1

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
314 -206	592-1000-17	WORK LIGHT	A572-1002	1	316 -189	572-1017-01-01	WIPER	A572-1002	1
314 -207	572-1012-28-02	COVER	A572-1002	1	316 -190	572-1017-02-01	WIPER	A572-1002	1
314 -501	H1020-1101-71	PLATE	A572-1002	1	316 -191	572-1017-15-01	HOLDER	A572-1002	1
314 -502	H1022-1047-05	PLATE	A572-1002	1	316 -192	572-1017-36	HOLDER	A572-1002	1
314 -503	H1023-0017-54-2	WIPER	A572-1002	1	316 -193	572-1017-37	HOLDER	A572-1002	1
315 -118	572-1010-42-01	SUPPORT	A572-1002	1	316 -194	572-1017-38	WIPER	A572-1002	1
315 -119	572-1010-43-03	SUPPORT	A572-1002	1	316 -195	572-1017-53	HOLDER	A572-1002	1
315 -133	572-1012-34-03	COVER	A572-1002	1	316 -196	572-1017-57	WASHER	A572-1002	6
315 -140	572-1012-68-03	COVER	A572-1002	1	316 -197	572-1017-54	HOLDER	A572-1002	1
315 -141	572-1012-98-01	COVER	A572-1002	1	316 -501	H1023-0017-51-3	WIPER	A572-1002	1
315 -146	572-1012-74-01	PLATE	A572-1002	1	316 -502	H1090-0012-25-2	COVER	A572-1002	1
315 -147	572-1012-75-01	COVER	A572-1002	1	316 -503	H1032-1006-92	WIPER	A572-1002	1
315 -148	572-1012-76-01	SUPPORT	A572-1002	1	316 -504	H1032-1006-93	WIPER	A572-1002	1
315 -168	572-1014-13	GUIDE	A572-1002	2	316 -505	H1032-1006-94	WIPER	A572-1002	1
315 -169	572-1014-14	GUIDE	A572-1002	2	316 -506	H1020-1142-87	PLATE	A572-1002	1
315 -172	572-1014-17-01	HOLDER	A572-1002	1	316 -507	H1020-1142-86	PLATE	A572-1002	1
315 -173	572-1014-18	HOLDER	A572-1002	1	317 -001	572-1020-13	COVER	A572-1002	1
315 -199	572-1014-66-04	COVER	A572-1002	1	317 -002	572-1024-02-02	COVER	A572-1002	1
315 -200	572-0251-02	SHAFT	A572-1002	1	317 -003	572-1024-03-01	COVER	A572-1002	1
315 -201	572-1017-46	SUPPORT	A572-1002	1	317 -004	572-1024-11-01	COVER	A572-1002	1
315 -202	572-1017-48	PLATE	A572-1002	1	317 -005	572-1024-25-01	COVER	A572-1002	1
315 -501	H1023-0017-42-1	WIPER	A572-1002	1	317 -006	572-1024-26-01	COVER	A572-1002	1
315 -502	H1020-1151-30	PLATE	A572-1002	1	317 -007	572-1024-29	PLATE	A572-1002	1
316 -128	572-1012-24-05	HOLDER	A572-1002	1	317 -008	572-1024-31	SUPPORT	A572-1002	1
316 -151	572-1012-81-02	COVER	A572-1002	1	317 -009	572-0263-20	SUPPORT	A572-1002	1
316 -152	572-1012-82-03	COVER	A572-1002	1	317 -010	572-1012-81-02	COVER	A572-1002	1
316 -184	572-1014-39-02	COVER	A572-1002	1	317 -011	572-1024-06	PLATE	A572-1002	1
316 -185	572-1017-20	PLATE	A572-1002	1	318 -001	572-1020-07-02	SUPPORT	A572-1002	1
316 -188	572-1017-22	PLATE	A572-1002	1	318 -002	572-1024-18-02	COVER	A572-1002	1

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
318 -003	572-1024-19-03	COVER	A572-1002	1	319A-501	H1001-0008-05	BOLT, flat-head	A572-1002	2
318 -004	572-1024-20-02	COVER	A572-1002	1	319A-502	H1020-1145-68-1	PLATE	A572-1002	1
318 -005	572-1024-21-01	SUPPORT	A572-1002	1	319A-503	H1020-1145-67-1	PLATE	A572-1002	1
318 -006	572-1024-24	SUPPORT	A572-1002	1					
318 -007	572-1024-27	SUPPORT	A572-1002	1	320 -077	572-1004-01	ROLLER	A572-1002	2
318 -008	572-1024-28	SUPPORT	A572-1002	1	320 -078	572-1004-02	SHAFT	A572-1002	2
318 -009	572-1024-14	HOLDER	A572-1002	1	320 -079	572-1004-04-02	SUPPORT	A572-1002	2
318 -010	572-1024-15-01	HOLDER	A572-1002	1	320 -085	572-1004-41-02	PLATE	A572-1002	1
318 -011	572-1024-16	HOLDER	A572-1002	1	320 -166	572-1014-11-05	COVER	A572-1002	1
318 -501	H1023-0018-34-1	WIPER	A572-1002	1	320 -167	572-1014-12-03	COVER	A572-1002	1
					320 -170	572-1014-15	GUIDE	A572-1002	2
319 -001	572-0263-55	COVER	A572-1002	1	320 -501	H1020-1134-50	PLATE	A572-1002	1
319 -002	572-0263-58	BLOCK	A572-1002	1	320 -502	H1020-1134-51	PLATE	A572-1002	1
319 -003	572-0263-59	PLATE	A572-1002	1	320 -503	H1023-0017-43-1	WIPER	A572-1002	1
319 -004	572-0263-61	PLATE	A572-1002	1					
319 -005	572-0263-62	FLANGE	A572-1002	1	321 -009	572-0210-02-02	HOLDER	A572-0225	1
319 -006	572-0263-63	COVER	A572-1002	1	321 -077	572-1004-01	ROLLER	A572-1002	1
319 -007	572-0263-64-01	COVER	A572-1002	1	321 -078	572-1004-02	SHAFT	A572-1002	1
319 -008	572-0263-56	PLATE	A572-1002	1	321 -080	572-1004-05-02	SUPPORT	A572-1002	1
319 -009	572-0263-17	COVER	A572-1002	1	321 -158	572-1014-02-08	COVER	A572-1002	1
319 -010	572-0263-24	PLATE	A572-1002	2	321 -165	572-1015-45-02	COVER	A572-1002	1
319 -501	H1022-1070-40-1	WIPER	A572-1002	1	321 -166	572-1014-50-01	COVER	A572-1002	1
319A-027	572-0230-45-01	DUCT	A572-1002	1	322 -081	572-1014-62-02	RAIL	A572-1002	1
319A-028	572-0230-46	COVER	A572-1002	1	322 -082	572-1014-61-01	GUTTER	A572-1002	1
319A-044	572-0231-65	COVER	A572-1002	1	322 -083	572-1014-63-01	GUTTER	A572-1002	1
319A-049	572-0310-63-01	SUPPORT	A572-1002	1	322 -084	572-1014-64-02	RAIL	A572-1002	1
319A-057	572-0310-94-01	SUPPORT	A572-1002	1	322 -088	572-1015-31	HOLDER	A572-1002	2
319A-058	572-0310-95	SUPPORT	A572-1002	1	322 -094	572-1005-15-04	GUIDE	A572-1002	1
319A-059	572-1017-23-02	PLATE	A572-1002	1	322 -098	572-1015-30	BLOCK	A572-1002	1
319A-060	572-1017-24-02	PLATE	A572-1002	1	322 -100	572-1005-37-01	GUIDE	A572-1002	1

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
322 -178	572-1014-23-03	GUTTER	A572-1002	1	324 -211	572-1015-25	CAP	A572-1002	1
322 -179	572-1014-24-01	RAIL	A572-1002	1					
322 -180	572-1022-04	WIPER	A572-1002	1	325 -004	572-0010-07	MOUNT	A572-1002	1
322 -181	572-1022-03	WIPER	A572-1002	1	325 -005	572-1110-16-02	SUPPORT	A572-1700	1
322 -182	572-1004-12	GUTTER	A572-1002	1	325 -006	572-1010-35-01	SUPPORT	A572-1002	1
322 -183	572-1017-34	PLATE	A572-1002	1	325 -066	572-0610-05-01	SUPPORT	A572-1002	1
322 -184	572-1017-33	PLATE	A572-1002	1	325 -101	572-1010-08-05	SUPPORT	A572-1002	1
322 -501	H1020-1146-30	PLATE	A572-1002	1					
322 -502	H1020-1146-31	PLATE	A572-1002	1	326 -099	572-1010-06-03	SUPPORT	A572-1002	1
					326 -100	572-1010-07-05	SUPPORT	A572-1002	1
323 -086	572-1005-01	SHAFT	A572-1002	4	326 -104	572-1010-12-03	SUPPORT	A572-1002	1
323 -087	572-1005-03-02	HOLDER	A572-1002	2	326 -105	572-1010-13	SUPPORT	A572-1002	1
323 -089	572-1005-05-01	HOLDER	A572-1002	2	326 -501	H1020-1137-86	PLATE	A572-1002	8
323 -093	572-1005-14-01	HOLDER	A572-1002	1	326 -502	H1020-1137-87	PLATE	A572-1002	8
					326 -503	H1022-1069-35-2	SHEET	A572-1002	4
324 -025	572-0230-43-02	SUPPORT	A572-1002	1					
324 -095	572-1015-29	GUTTER	A572-1002	1	327 -005	174-0010-01-2	HOOK	A572-0000	2
324 -163	572-1014-07	GUIDE	A572-1002	1	327 -107	572-1010-15-06	SUPPORT	A572-1002	1
324 -164	572-1014-08-03	GUIDE	A572-1002	1	327 -109	572-1010-18-06	SUPPORT	A572-1002	1
324 -176	572-1014-21	RAIL	A572-1002	1	327 -149	572-1012-77-01	SUPPORT	A572-1002	1
324 -177	572-1014-22-03	GUIDE	A572-1002	1	327 -150	572-1014-84	SUPPORT	A572-1002	1
324 -196	572-1015-32	GUTTER	A572-1002	1	327 -151	572-1014-85	PLATE	A572-1002	1
324 -200	572-1014-67-02	GUTTER	A572-1002	1	327 -152	572-1012-86	HOLDER	A572-1002	2
324 -201	572-1015-53	GUTTER	A572-1002	1	327 -501	H1020-1138-93-1	PLATE	A572-1002	1
324 -204	572-1014-72-01	GUTTER	A572-1002	1					
324 -205	572-1014-89	GUTTER	A572-1002	1					
324 -206	572-1014-97	GUTTER	A572-1002	1					
324 -207	572-1014-99	GUTTER	A572-1002	1					
324 -208	572-1014-98	GUTTER	A572-1002	1					
324 -209	572-1014-60	COVER	A572-1002	1					
324 -210	572-1015-23	CAP	A572-1002	1					

334

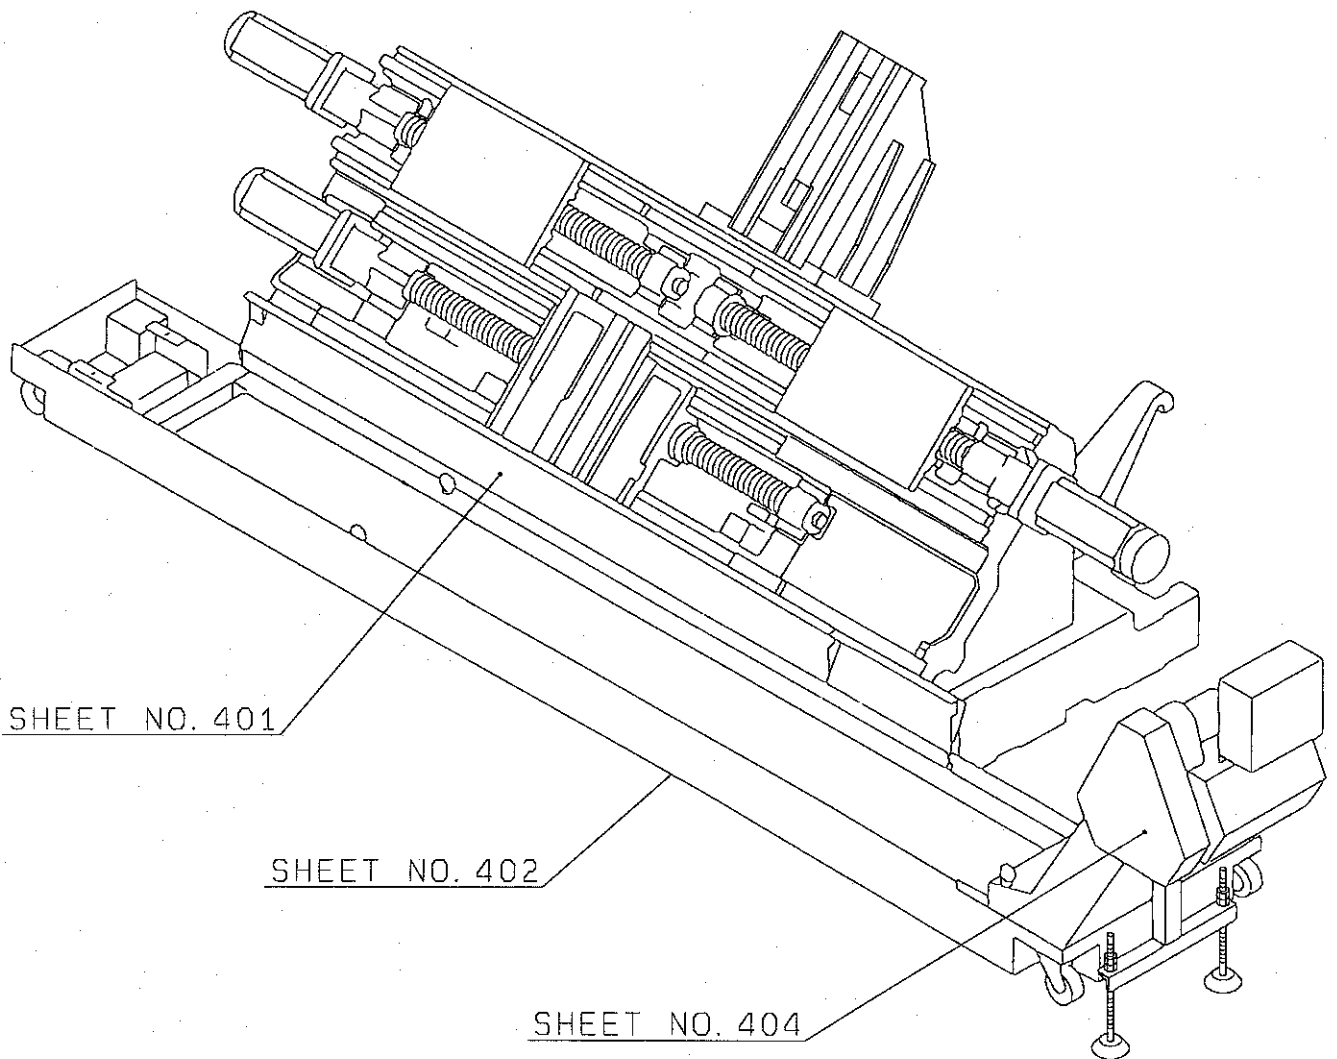


(5) COOLANT SYSTEM GROUP

~ C O N T E N T S ~


SHEET NO.	ASSEMBLY NAME	PAGE
401	CHIP SHOOTER	402
402	CHIP TANK	403
403	COOLANT PUMP	404
404	CHIP CONVEYOR & BUCKET	405
405	COOLANT PIPING	406
I	INDEX NO. LIST	407

402

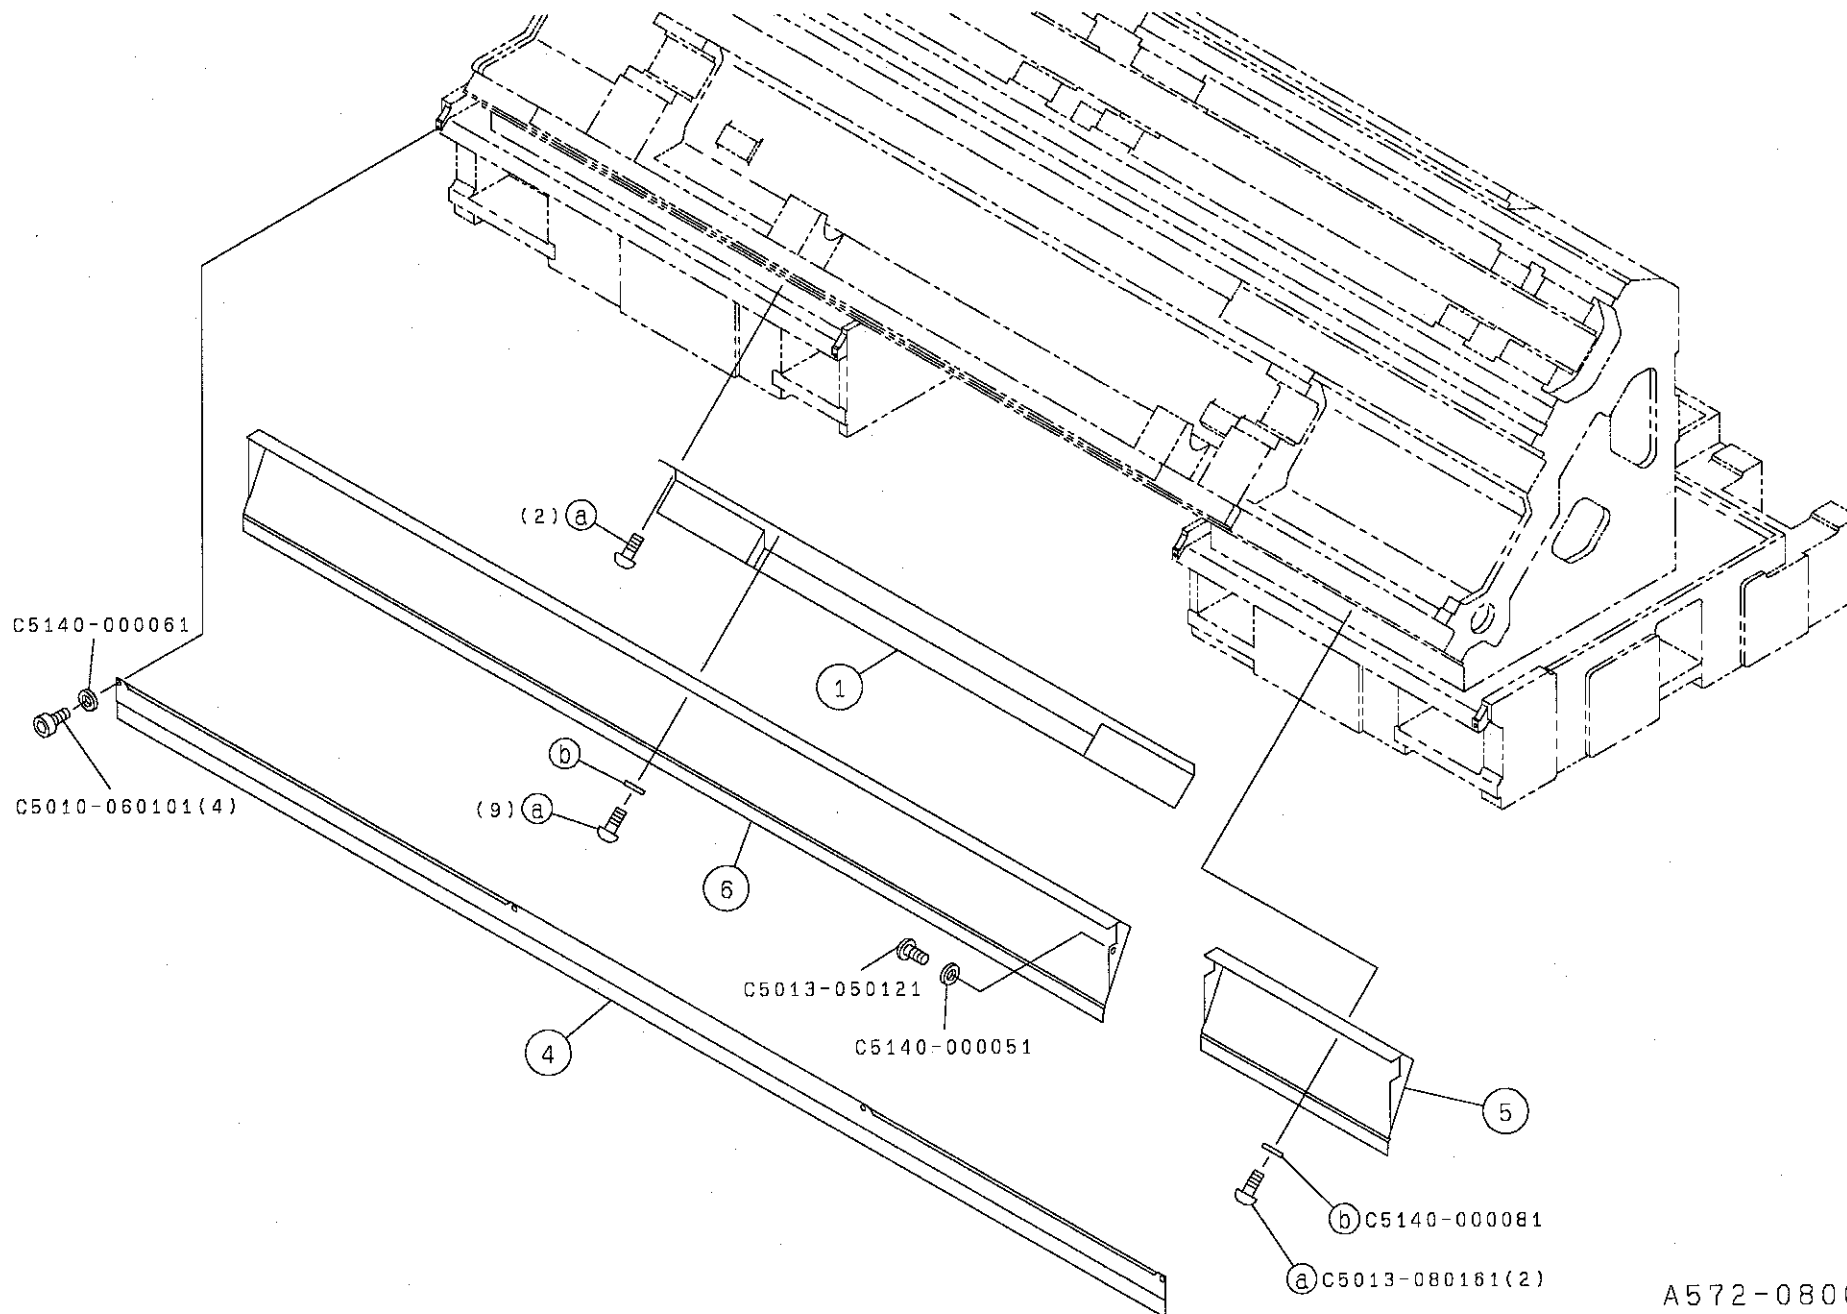


A572-0800

403

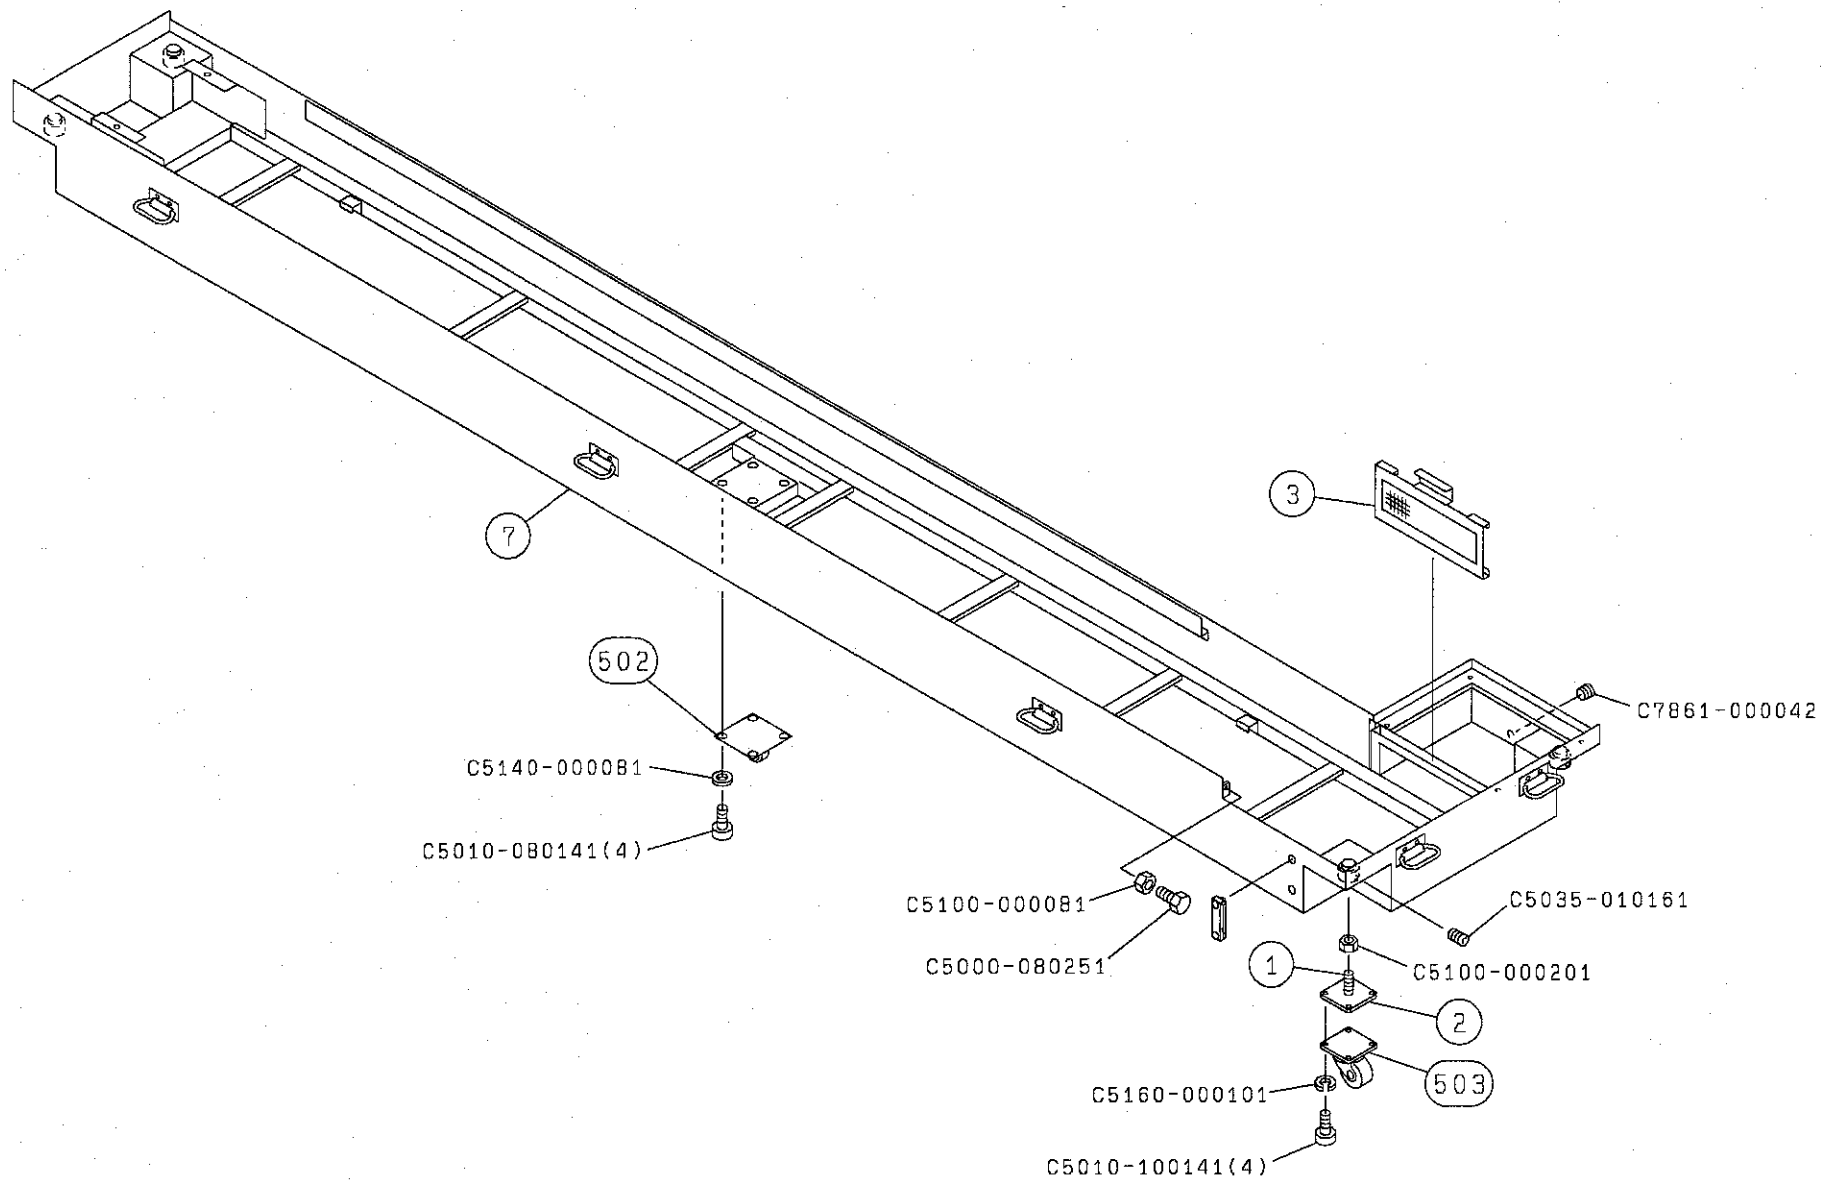


A572-0800

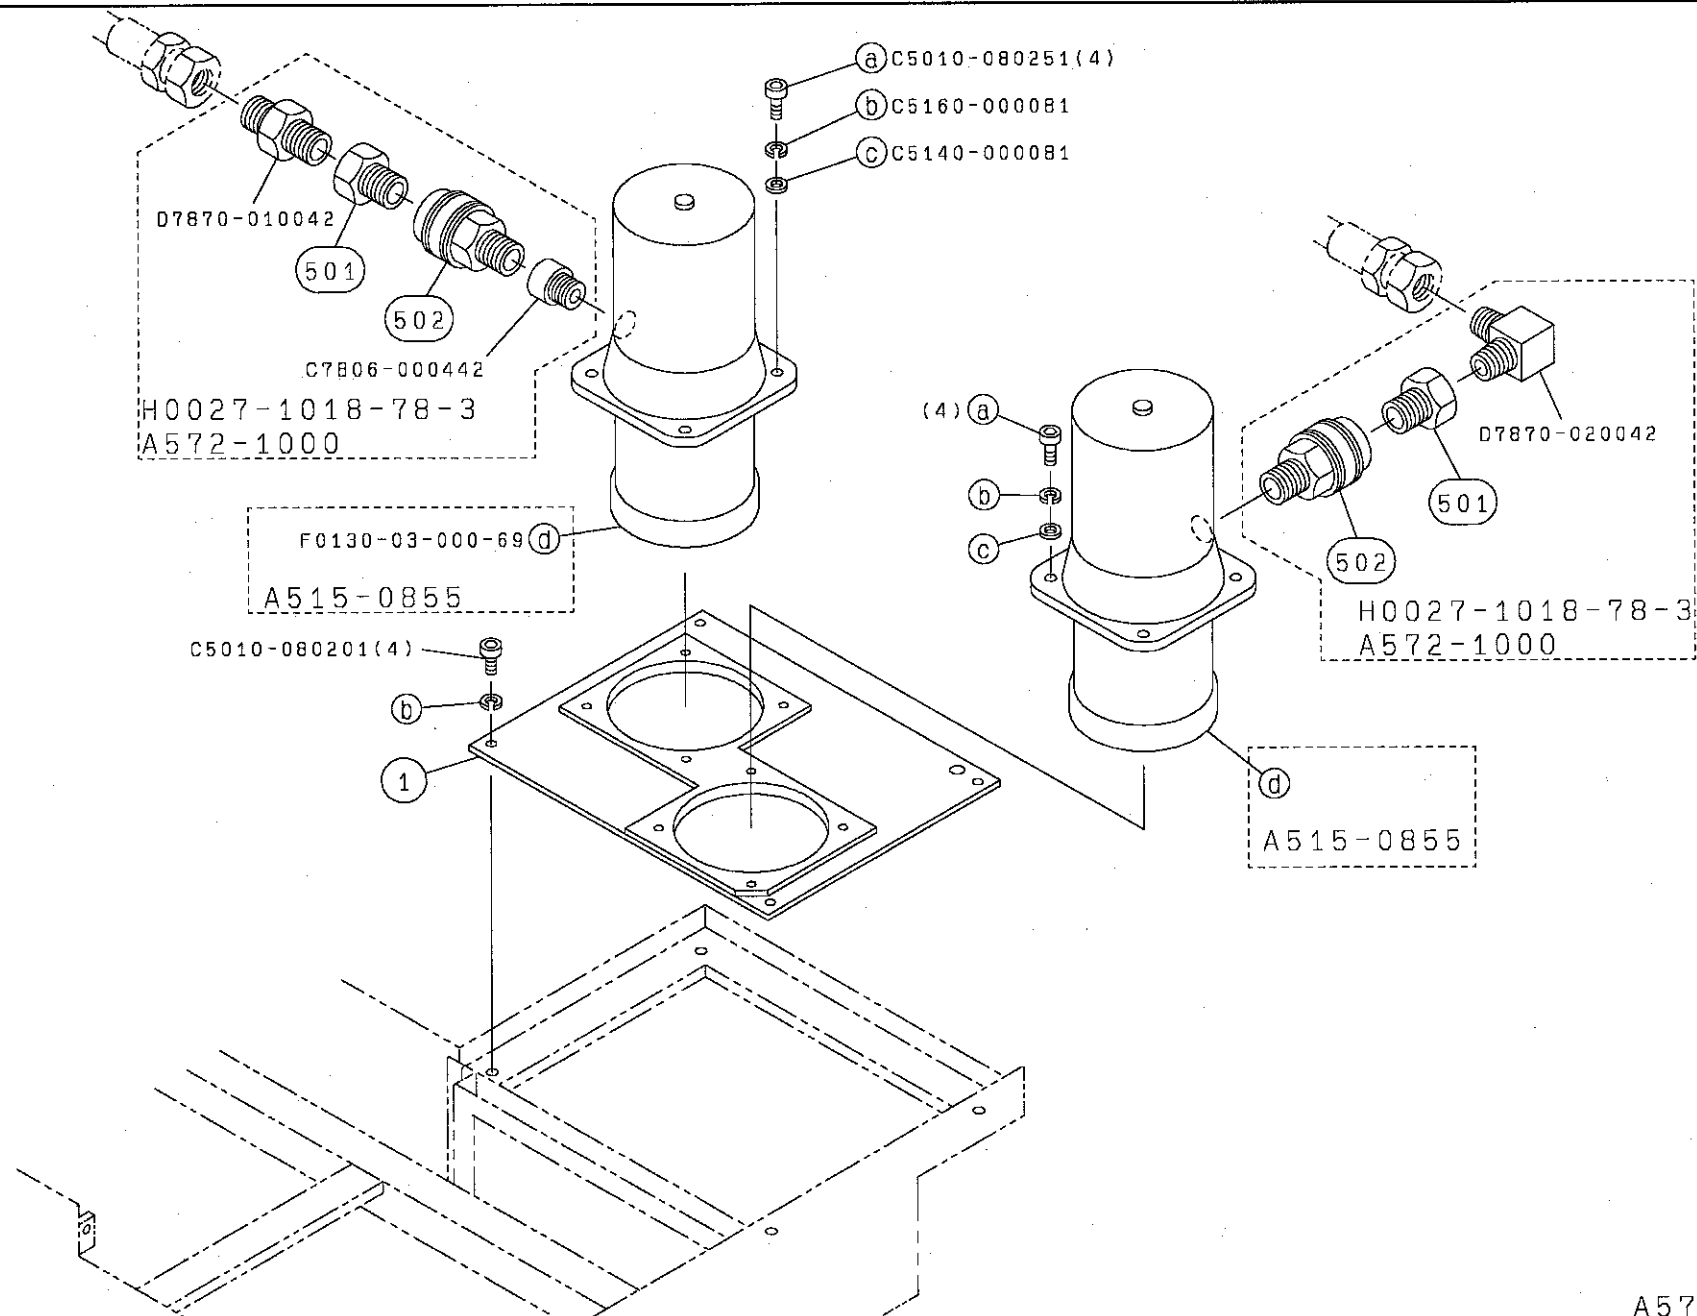


404

A572-0860

405

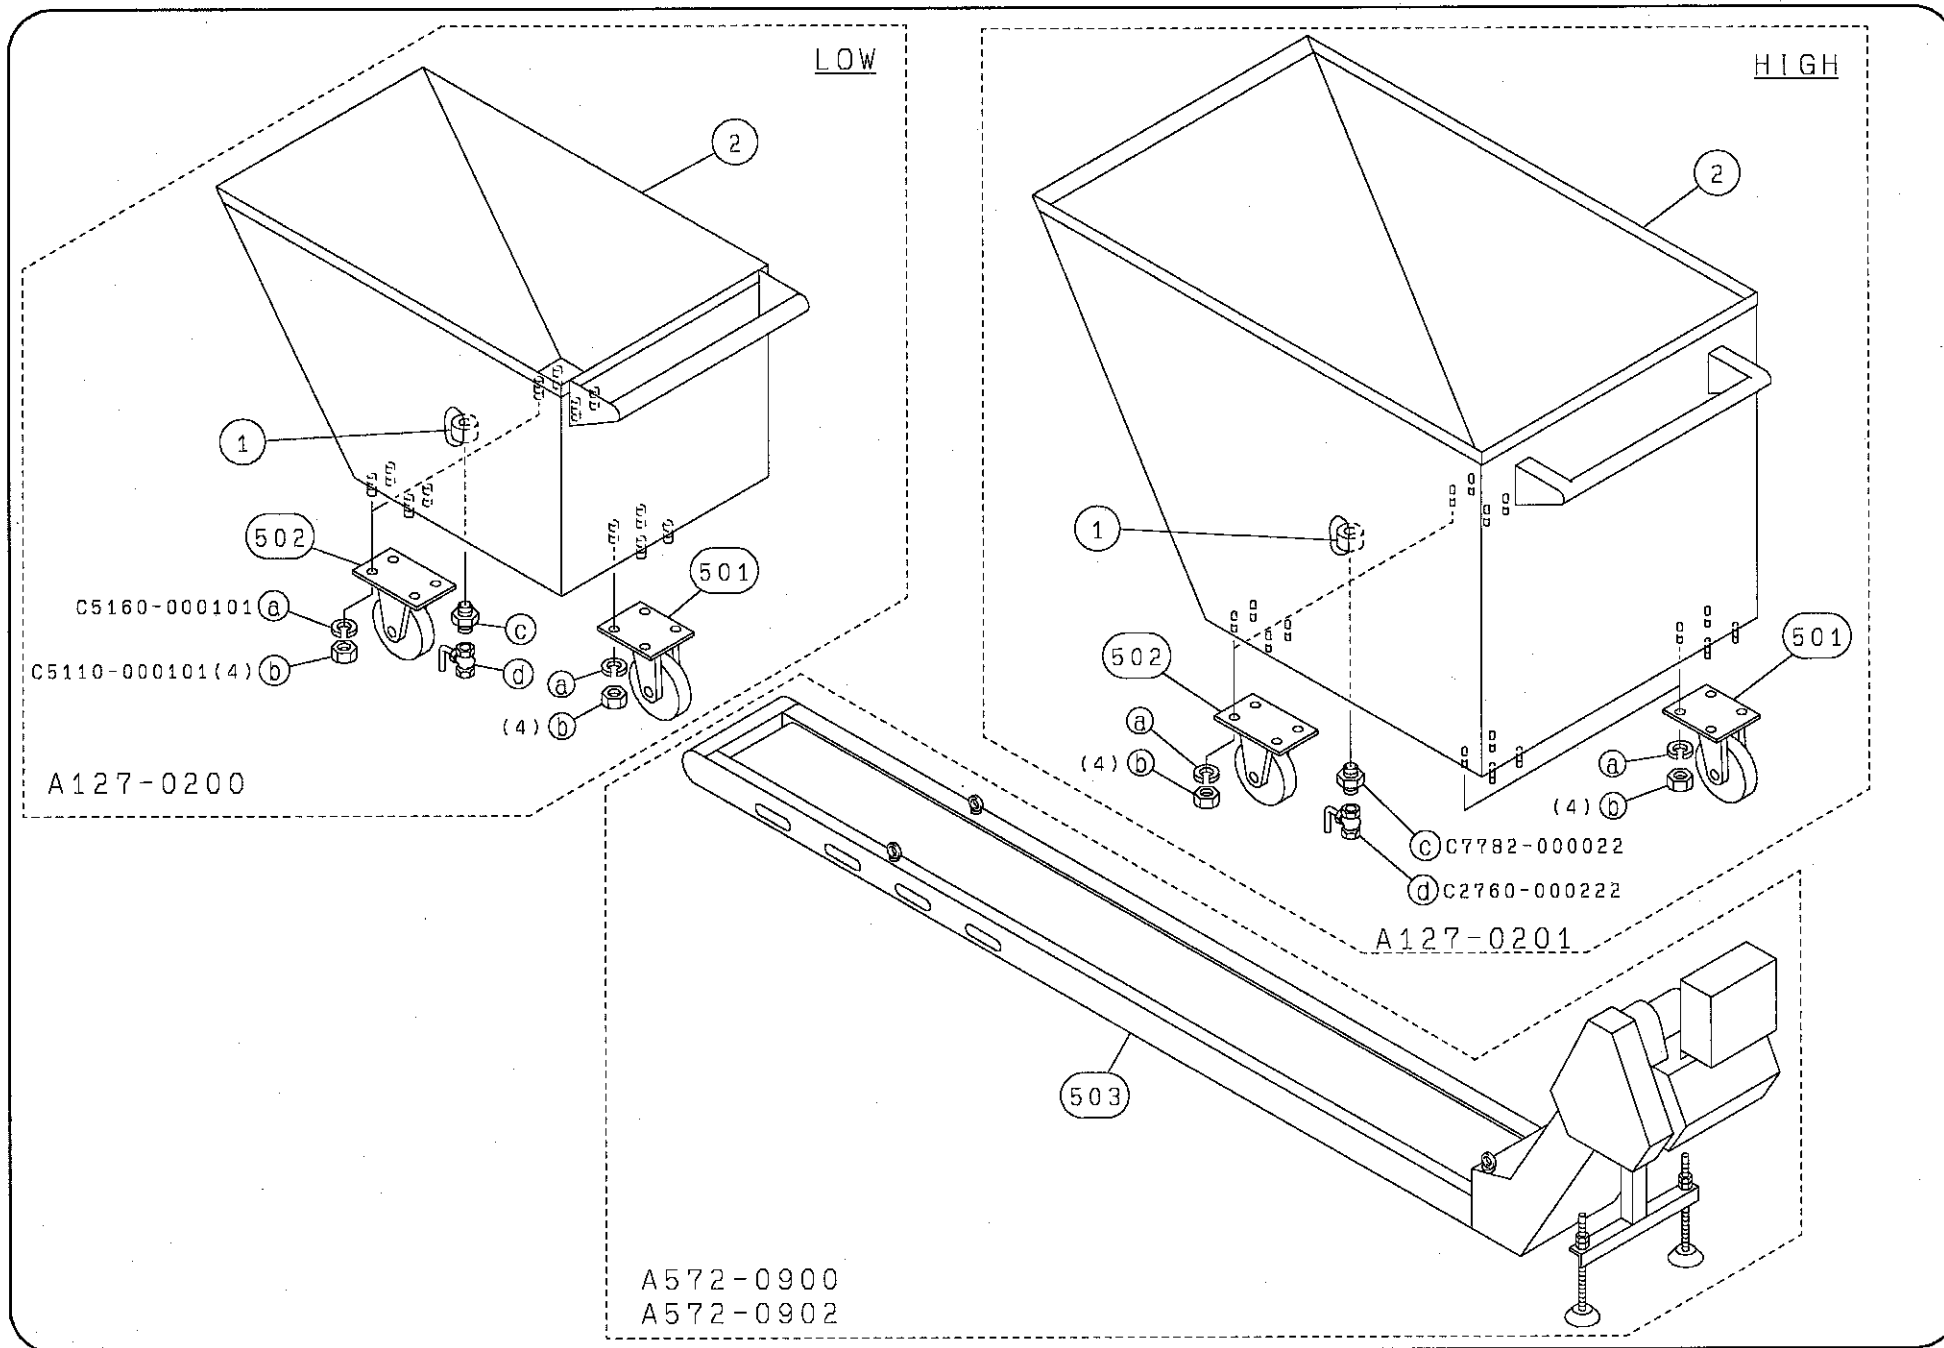


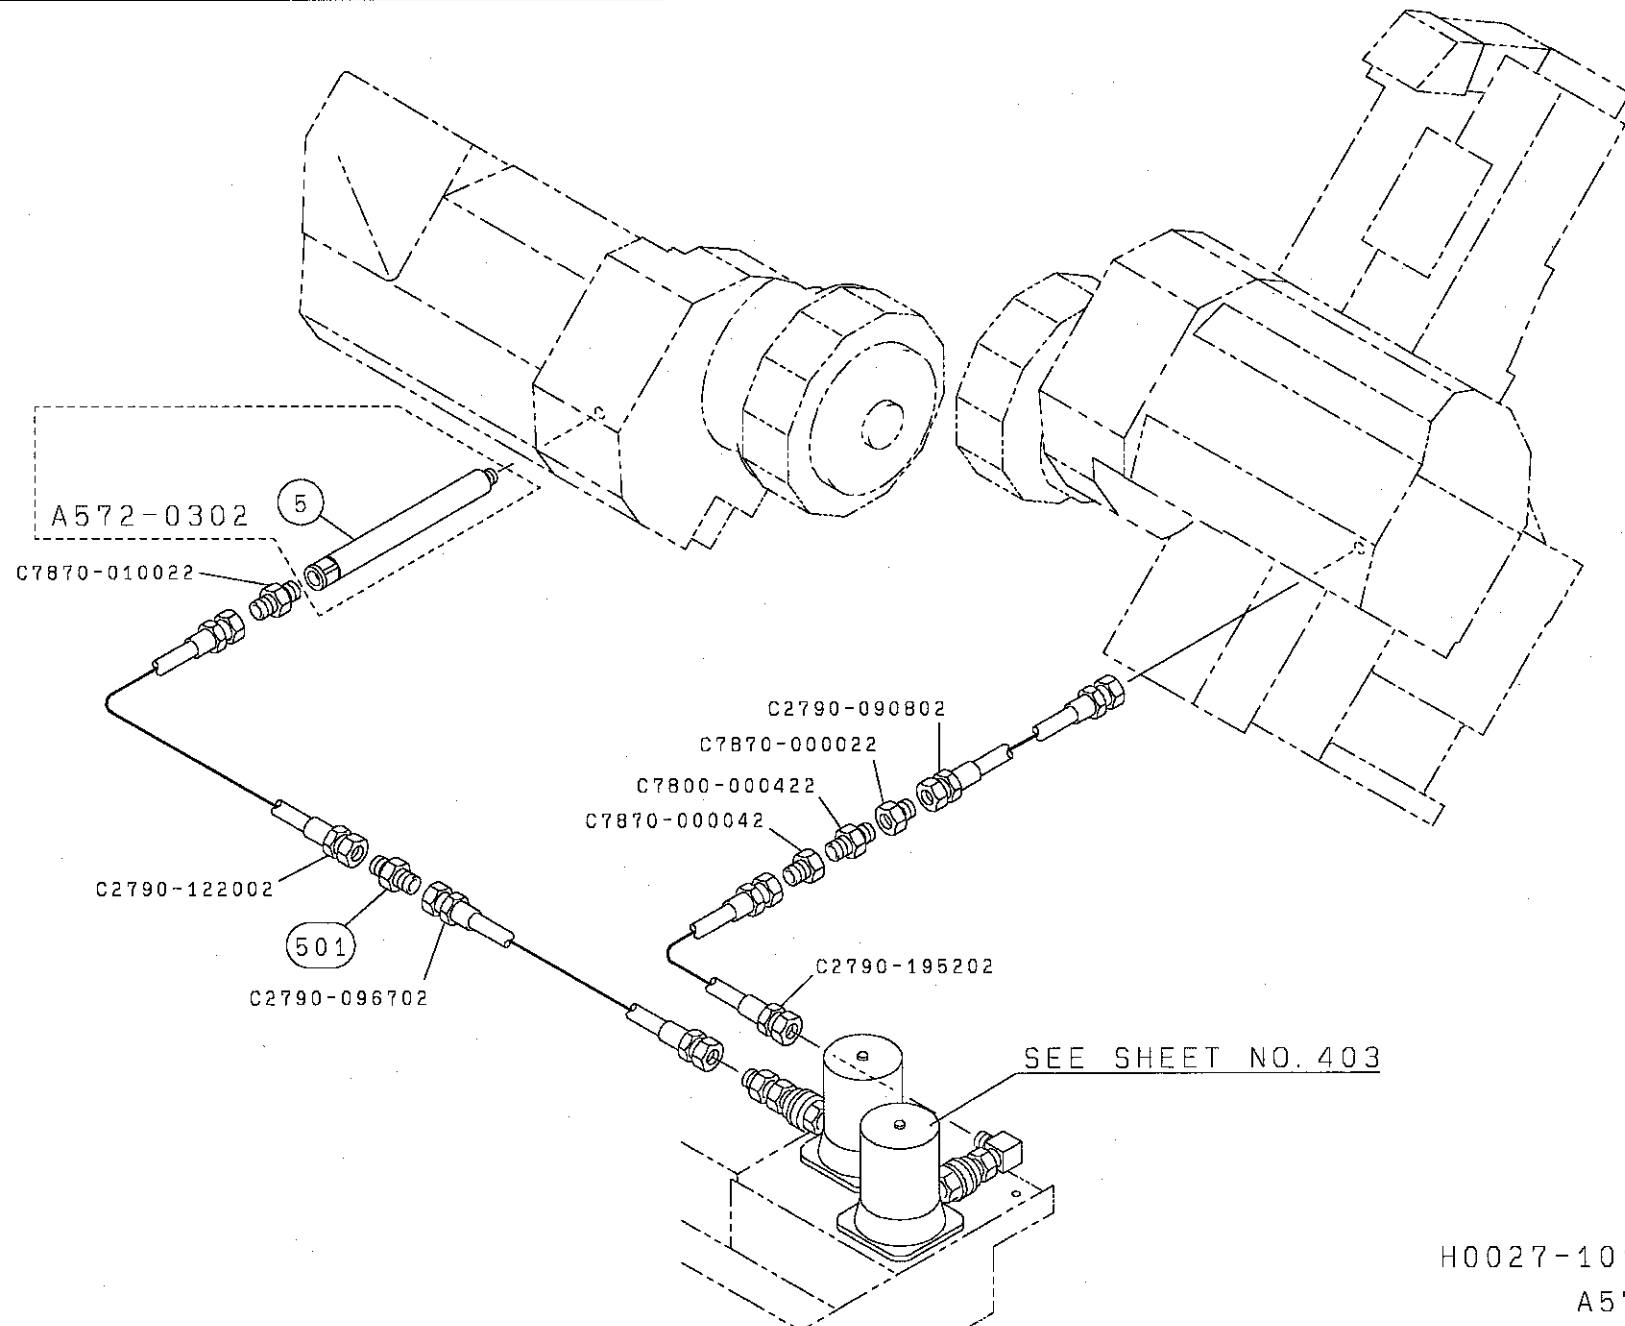

SEE SHEET NO. 403

H0027-1018-78-3
A572-1002

SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY	SHEET -ITEM	PART NO.	DESCRIPTION	UNIT NO.	QTY
401 -001	572-0800-08	SUPPORT	A572-0800	1					
401 -004	572-0801-04-02	PLATE	A572-0800	1					
401 -005	572-0801-06-02	SUPPORT	A572-0800	1					
401 -006	572-0801-07-03	SUPPORT	A572-0800	1					
402 -001	572-0801-48	BOLT	A572-0800	4					
402 -002	572-0801-49	FLANGE	A572-0800	4					
402 -003	572-0801-03-03	FILTER	A572-0800	1					
402 -007	572-0801-46-02	TANK	A572-0800	1					
402 -502	H1080-0002-67	WHEEL TAKIGEN	A572-0800	1					
402 -503	H1080-0002-75	CASTER TAKIGEN	A572-0800	4					
403 -001	572-0801-01-04	CAP	A572-0860	1					
403 -501	H0010-0021-73	PLUG	A572-1000	2					
403 -502	H0015-0001-80	SOCKET	A572-1000	2					
404 -001	127-6751-03	BOSS	A127-0200	1					
404 -001	127-6751-03	BOSS	A127-0201	1					
404 -002	191-6714-17-3	CHIP BUCKET (L)	A127-0200	1					
404 -002	127-6751-04	CHIP BUCKET (H)	A127-0201	1					
404 -501	H1080-0002-70	CASTER KOBAYASHI	A127-0200	1					
404 -501	H1080-0002-70	CASTER	A127-0201	2					
404 -502	H1080-0002-71	CASTER KOBAYASHI	A127-0200	2					
404 -502	H1080-0002-71	CASTER	A127-0201	2					
404 -503	H0162-0000-46-1	CHIP CONVEYOR (L)	A572-0900	1					
404 -503	H1080-0002-71	CHIP CONVEYOR (H)	A572-0902	2					
405 -005	572-0610-28	JOINT	A572-0302	1					
405 -501	H0014-0005-39	NIPPLE 1/2X3/4	A572-1002	1					

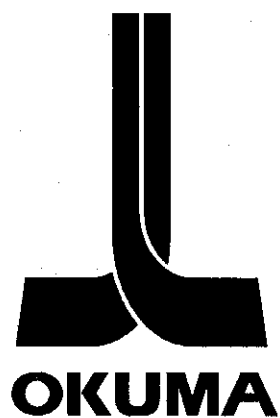

PART NO. LIST

POOL

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
101-0300-13-1	222 -004	BOLT	A572-0260	3	127-6751-04	404 -002	CHIP BACKET (H)	A127-0201	1
101-0300-14	222 -003	NUT	A572-0260	3	157-0763-08	304 -001	SUPPORT	A572-1002	1
108-0301-17-1	225 -006	BOLT	A572-0260	3	174-0010-01-2	327 -005	HOOK	A572-0000	2
108-0301-17-1	273 -001	BOLT	A572-0225	3	191-6714-17-3	404 -002	CHIP BACKET (L)	A127-0200	1
108-0301-18-2	225 -005	NUT	A572-0260	3	515-0100-23-7	104 -001	LABYRINTH	A572-0102	1
108-0301-18-2	273 -002	NUT	A572-0225	3	515-0100-23-7	154 -001	LABYRINTH	A572-0102	1
112-0140-10	102 -031	JOINT	A572-0135	2	515-0100-36-1	104 -036	BOLT	A555-0116	1
112-0140-10	152 -031	JOINT	A572-0135	2	515-0100-36-1	154 -036	BOLT	A555-0116	1
112-0320-09	208 -004	NUT	A572-0360	1	515-0120-52	109 -003	PIN	A572-1020	1
112-0320-09	259 -004	NUT	A572-0300	1	515-0120-52	159 -003	PIN	A572-1020	1
118-2100-85	223 -012	NUT	A572-0260	1	515-0200-17-01	223 -003	KEY	A572-0260	1
118-2100-85	274 -003	NUT	A572-0225	1	515-0395-10-01	224 -008	NUT	A572-0260	2
118-2100-86-1	223 -005	WASHER	A572-0260	1	515-0395-11-01	224 -007	SUPPORT	A572-0260	1
118-2100-86-1	274 -004	WASHER	A572-0225	1	515-2000-04-1	234 -003	SLEEVE	A515-2010	1
118-8001-30-1	232 -005	CAP	A572-2105	1	515-2000-04-1	284 -003	SLEEVE	A515-2010	1
118-8001-30-1	232 -009	CAP	A572-2106	1	515-2000-05-1	234 -004	SLEEVE	A515-2011	1
118-8001-30-1	233 -001	CAP	A572-2008	3	515-2000-05-1	284 -004	SLEEVE	A515-2011	1
118-8001-30-1	233 -022	CAP	A572-2007	3	515-2000-06-1	234 -005	SLEEVE	A515-2012	1
118-8001-30-1	282 -005	CAP	A572-2105	1	515-2000-06-1	284 -005	SLEEVE	A515-2012	1
118-8001-30-1	282 -009	CAP	A572-2106	1	515-2000-07-1	234 -006	SLEEVE	A515-2013	1
118-8001-30-1	283 -001	CAP	A572-2008	3	515-2000-07-2	284 -006	SLEEVE	A515-2013	1
118-8001-30-1	283 -022	CAP	A572-2007	3	515-2000-10-2	234 -002	SLEEVE	A515-2015	1
123-3000-30-1	154 -035	BLOCK	A555-0116	1	515-2000-10-2	284 -002	SLEEVE	A515-2015	1
123-3111-30-1	104 -035	BLOCK	A555-0116	1	515-2000-21-2	234 -001	SLEEVE	A515-2014	1
127-0000-59-01	10 -003	MOUNT	A572-0000	10	515-2000-21-2	284 -001	SLEEVE	A515-2014	1
127-3300-26	232 -007	BOLT	A572-2105	4	515-2010-01-3	234 -008	SLEEVE	A515-2023	1
127-3300-26	232 -011	BOLT	A572-2106	2	515-2010-01-3	284 -008	SLEEVE	A515-2023	1
127-3300-26	282 -007	BOLT	A572-2105	4	515-2010-02-4	234 -009	SLEEVE	A515-2020	1
127-3300-26	282 -011	BOLT	A572-2106	2	515-2010-02-4	284 -009	SLEEVE	A515-2020	1
127-6751-03	404 -001	BOSS	A127-0201	1	515-2010-03-3	234 -010	SLEEVE	A515-2021	1
127-6751-03	404 -001	BOSS	A127-0200	1	515-2010-03-3	284 -010	SLEEVE	A515-2021	1

P002

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
515-2010-04-3	234 -007	SLEEVE	A515-2022	1	555-0110-10	102 -033	HOLDER	A572-0135	4
515-2010-04-3	284 -007	SLEEVE	A515-2022	1	555-0110-10	152 -033	HOLDER	A572-0135	4
522-0220-22-03	223 -010	BUSHING	A572-0260	1	555-0220-29-01	275 -006	SPACER	A572-0225	1
522-0221-31-4	225 -010	NUT	A572-0260	2	555-0230-10	224 -006	COLLAR	A572-0260	1
522-0250-24	222 -015	PISTON	A572-0260	4	555-0230-11-01	223 -011	NUT	A572-0260	1
522-0250-39	225 -003	BOLT	A572-0260	2	555-0230-11-01	226 -007	NUT	A572-0260	1
555-0100-14-01	103 -002	COLLAR	A572-0102	1	555-0230-11-01	227 -003	NUT	A572-0260	1
555-0100-14-01	153 -002	COLLAR	A572-0102	1	555-0230-11-02	2 -001	NUT	A572-0200	1
555-0101-29-05	153 -005	BLOCK	A572-0102	1	555-0230-11-02	3 -001	NUT	A572-0200	1
555-0105-02-03	104 -006	HOUSING	A572-0102	1	555-0230-11-02	5 -001	NUT	A572-0200	1
555-0105-02-03	154 -006	HOUSING	A572-0102	1	555-0230-11-02	6 -001	NUT	A572-0200	1
555-0105-03-01	104 -007	LABYRINTH	A572-0102	1	555-0230-11-02	8 -001	NUT	A572-0205	1
555-0105-03-01	154 -007	LABYRINTH	A572-0102	1	555-0230-11-02	9 -001	NUT	A572-0205	1
555-0105-06-03	103 -003	FLANGE	A572-0102	1	555-0230-12-02	224 -003	NUT	A572-0260	1
555-0105-06-03	153 -003	FLANGE	A572-0102	1	555-0230-19-02	224 -004	CAP	A572-0260	1
555-0105-13-01	103 -037	NUT	A572-0116	1	555-0230-21-04	223 -007	NUT	A572-0260	1
555-0105-13-01	153 -037	NUT	A555-0116	1	555-0230-21-04	226 -006	NUT	A572-0260	1
555-0105-23	104 -038	BUSH	A555-0116	1	555-0230-21-04	276 -007	NUT	A572-0225	1
555-0105-23	154 -038	BUSH	A555-0116	1	555-0230-22	223 -006	STOPPER	A572-0260	1
555-0106-01-04	104 -039	SPINDLE	A555-0116	1	555-0300-21-02	208 -002	CAP	A572-0360	1
555-0106-01-04	154 -039	SPINDLE	A555-0116	1	555-0300-21-02	259 -002	CAP	A572-0300	1
555-0106-02-01	104 -040	COLLAR	A555-0116	1	555-0300-40-01	208 -005	WASHER	A572-0360	1
555-0106-02-01	154 -040	COLLAR	A555-0116	1	555-0300-40-01	259 -005	WASHER	A572-0300	1
555-0106-03-01	104 -041	COLLAR	A555-0116	1	555-0320-16	204 -002	COLLAR	A572-0360	2
555-0106-03-01	154 -041	COLLAR	A555-0116	1	555-0320-16	255 -002	COLLAR	A572-0305	2
555-0106-04-01	104 -042	COLLAR	A555-0116	1	555-0320-17	204 -003	SHAFT	A572-0360	2
555-0106-04-01	154 -042	COLLAR	A555-0106	1	555-0320-17	255 -003	SHAFT	A572-0305	2
555-0106-05-02	104 -008	COLLAR	A572-0102	1	555-0320-38	209 -004	FLANGE	A572-0360	1
555-0106-05-02	154 -008	COLLAR	A572-0102	1	555-0320-38	260 -004	FLANGE	A572-0305	1
555-0106-06-02	102 -032	PLATE	A572-0135	1	555-1000-02-02	301 -001	ROLLER	A572-1007	4
555-0106-06-02	152 -032	PLATE	A572-0135	1	555-1000-02-02	302 -001	ROLLER	A572-1007	4

P003

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
555-1000-03	301 -002	PIN	A572-1007	4	555-3005-28	156 -008	BOX	A572-3051	1
555-1000-03	302 -002	PIN	A572-1007	4	555-3005-31	156 -007	BOX	A500-3081	1
555-2500-08	232 -014	HOLDER	A555-2290	1	555-3005-57	106 -007	BOX	A500-3081	1
555-2500-08	282 -014	HOLDER	A555-2290	1	555-3007-02	107 -004	ADAPTER	A500-3100	1
555-3005-12	106 -001	BOLT	A572-3050	2	555-3007-02	157 -004	ADAPTER	A500-3100	1
555-3005-12	156 -001	BOLT	A572-3050	2	555-3007-03-01	107 -002	ADPTER	A572-3101	1
555-3005-13-01	106 -002	PLATE	A572-3050	2	555-3007-03-01	157 -002	ADAPTER	A572-3101	1
555-3005-13-01	156 -002	PLATE	A572-3050	2	572-0000-01-14	10 -010	BED	A572-0260	1
555-3005-14-02	106 -003	ADPTER	A572-3050	1	572-0010-06-02	10 -011	HOOK	A572-0000	1
555-3005-14-02	106 -003	ADPTER	A572-3051	1	572-0010-07	325 -004	MOUNT	A572-1002	1
555-3005-14-02	156 -003	ADAPTER	A572-3050	1	572-0010-08-02	10 -012	HOOK	A572-0000	1
555-3005-14-02	156 -003	ADAPTER	A572-3051	1	572-0010-09-03	10 -013	BLOCK	A572-0000	3
555-3005-17-03	107 -003	PIPE	A500-3150	1	572-0010-10-02	10 -014	BLOCK	A572-0000	1
555-3005-17-03	157 -003	PIPE	A500-3150	1	572-0100-06-03	103 -009	CAP	A555-0102	1
555-3005-19-02	107 -001	COLLAR	A572-3100	1	572-0100-06-03	153 -009	CAP	A572-0102	1
555-3005-19-02	107 -001	COLLAR	A572-3101	1	572-0100-07-08	103 -010	HOUSING	A572-0102	1
555-3005-19-02	157 -001	COLLAR	A572-3100	1	572-0100-07-08	153 -010	HOUSING	A572-0102	1
555-3005-19-02	157 -001	COLLAR	A572-3101	1	572-0101-29-05	103 -005	BLOCK	A572-0102	1
555-3005-24	106 -004	CAP	A572-3051	1	572-0110-01-03	102 -034	SUPPORT	A572-0135	1
555-3005-24	106 -004	CAP	A572-3050	1	572-0110-01-03	152 -034	SUPPORT	A572-0135	1
555-3005-24	156 -004	CAP	A572-3051	1	572-0110-02-03	102 -011	COVER	A572-0102	1
555-3005-24	156 -004	CAP	A572-3050	1	572-0110-02-03	152 -011	COVER	A572-0102	1
555-3005-25	106 -005	PLATE	A572-3051	1	572-0110-03-05	102 -012	COVER	A572-0102	1
555-3005-25	106 -005	PLATE	A572-3050	1	572-0110-03-05	152 -012	COVER	A572-0102	1
555-3005-25	156 -005	PLATE	A572-3051	1	572-0111-05-01	1 -002	SUPPORT	A572-0200	1
555-3005-25	156 -005	PLATE	A572-3050	1	572-0111-06-01	105 -001	SUPPORT	A572-3070	1
555-3005-26-01	106 -006	PLATE	A572-3050	1	572-0111-08-02	101 -043	SUPPORT	A572-0200	1
555-3005-26-01	106 -006	PLATE	A572-3051	1	572-0112-04-01	4 -003	SUPPORT	A572-0200	1
555-3005-26-01	156 -006	PLATE	A572-3050	1	572-0112-05-01	155 -002	SUPPORT	A572-9019	1
555-3005-26-01	156 -006	PLATE	A572-3051	1	572-0112-10-01	151 -044	SUPPORT	A572-0200	1
555-3005-28	106 -008	BOX	A572-3051	1	572-0120-01-01	103 -013	HEADSTOCK	A572-0102	1

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-0120-01-01	153 -013	HEADSTOCK	A572-0102	1	572-0220-14	223 -004	SPASER	A572-0260	1
572-0120-02-01	103 -014	CAP	A572-0102	1	572-0220-14	226 -004	SPACER	A572-0260	1
572-0120-02-01	153 -014	CAP	A572-0102	1	572-0230-01-10	7 -016	SADDLE	A572-0225	1
572-0120-03-01	103 -004	LABYRINTH	A572-0102	1	572-0230-15-01	271A-010	SUPPORT	A572-0225	1
572-0120-03-01	153 -004	LABYRINTH	A572-0102	1	572-0230-24-09	274 -016	BOX	A572-0225	1
572-0125-08-02	101 -022	SUPPORT	A572-0121	1	572-0230-25-02	271 -011	COVER	A572-1002	1
572-0125-11	151 -015	DOG	A572-0120	1	572-0230-26-04	271 -012	COVER	A572-1002	1
572-0125-12	101 -023	DOG	A572-0121	1	572-0230-27-03	271 -017	COVER	A572-0225	1
572-0125-13	151 -016	DOG	A572-0120	1	572-0230-28-02	274 -018	BASE, motor	A572-0225	1
572-0125-14	101 -024	DOG	A572-0121	1	572-0230-29-01	271 -013	PLATE	A572-1002	1
572-0125-17-02	151 -017	SUPPORT	A572-0120	1	572-0230-31	271 -019	HOLDER	A572-0225	1
572-0150-01-07	1 -004	SADDLE	A572-0200	1	572-0230-34-01	271 -016	RAIL	A572-1002	1
572-0150-02-07	4 -004	SADDLE	A572-0200	1	572-0230-37-01	271A-082	COVER	A572-1002	1
572-0150-03-01	1 -006	PLATE	A572-0200	1	572-0230-38-01	271A-058	COVER	A572-1002	1
572-0150-03-01	4 -006	PLATE	A572-0200	1	572-0230-39-01	271A-059	PLATE	A572-1002	1
572-0150-07-01	1 -007	PLATE	A572-0200	1	572-0230-40-01	271A-061	PLATE	A572-1002	1
572-0150-07-01	4 -007	PLATE	A572-0200	1	572-0230-41-01	271A-062	GUIDE	A572-1002	1
572-0150-08-01	1 -008	PLATE	A572-0200	1	572-0230-43-02	324 -025	SUPPORT	A572-1002	1
572-0150-08-01	4 -008	PLATE	A572-0200	1	572-0230-45-01	319A-027	DUCT	A572-1002	1
572-0200-12	227 -005	COLLAR	A572-0260	1	572-0230-46	319A-028	COVER	A572-1002	1
572-0201-08-02	222 -016	PIN	A572-0260	1	572-0230-51	273 -014	PLATE	A572-0225	1
572-0201-08-02	273 -008	PIN	A572-0225	1	572-0231-13-02	276 -020	HOUSING	A572-0225	1
572-0210-02-02	321 -009	HOLDER	A572-0225	1	572-0231-18-01	276 -022	CAP	A572-0225	1
572-0210-10-01	274 -010	NUT	A572-0225	1	572-0231-20	276 -023	COLLAR	A572-0225	1
572-0210-10-01	276 -010	NUT	A572-0225	1	572-0231-21-03	273 -024	GIB	A572-0225	1
572-0210-11	274 -011	BUSHING	A572-0225	1	572-0231-25	275 -025	KEY	A572-0225	1
572-0210-12-01	274 -012	KEY	A572-0225	1	572-0231-26-02	273 -026	GIB	A572-0225	1
572-0210-22-03	7 -002	SUPPORT	A572-0205	1	572-0231-30-01	274 -032	SHAFT	A572-1002	1
572-0220-05-01	227 -004	CAP	A572-0260	1	572-0231-33-01	251 -062	CAP	A572-1002	1
572-0220-09-01	227 -001	BRACKET	A572-0260	1	572-0231-35-03	271 -035	PLATE	A572-1002	1
572-0220-10	10 -016	LINER	A572-0260	1	572-0231-38-03	251 -061	COVER	A572-1002	1

P004

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-0231-40-04	275 -027	HOUSING	A572-0225	1	572-0250-06-02	6 -010	COLLAR	A572-0200	1
572-0231-42-02	276 -029	BRACKET	A572-0225	1	572-0250-06-02	9 -003	COLLAR	A572-0205	1
572-0231-43	226 -005	STOPPER	A572-0260	1	572-0250-10	10 -015	RAIL	A572-0000	2
572-0231-43	276 -030	STOPPER	A572-0225	1	572-0250-14-01	1 -011	SUPPORT	A572-0200	1
572-0231-44-04	273 -031	CROSS-SLIDE	A572-0225	1	572-0250-14-01	4 -011	SUPPORT	A257-0200	1
572-0231-45-02	273 -032	BACK PLATE	A572-0225	1	572-0250-16	7 -004	DOG	A572-0205	1
572-0231-46-03	273 -033	BACK PLATE	A572-0225	1	572-0250-17	7 -005	DOG	A572-0205	1
572-0231-47-02	273 -034	GIB	A572-0225	1	572-0250-18	7 -006	SUPPORT	A572-0205	1
572-0231-48	274 -040	DOG	A572-1002	2	572-0250-24-01	8 -007	NUT	A572-0205	1
572-0231-49	274 -041	SUPPORT	A572-1002	1	572-0250-26-01	2 -012	CAP	A572-0200	1
572-0231-50	274 -099	SUPPORT	A572-1002	1	572-0250-26-01	5 -012	CAP	A572-0200	1
572-0231-51	274 -098	PLATE	A572-1002	1	572-0250-28-01	2 -013	COLLAR	A572-0200	1
572-0231-53	275 -029	COLLAR	A572-0225	1	572-0250-28-01	5 -013	COLLAR	A572-0200	1
572-0231-55	275 -028	COLLAR	A572-0225	1	572-0250-29-04	9 -008	BRACKET	A572-0205	1
572-0231-56	275 -021	CAP	A572-0225	1	572-0250-30-03	8 -009	BRACKET	A572-0205	1
572-0231-65	319A-044	COVER	A572-1002	1	572-0250-31-02	9 -010	CAP	A572-0205	1
572-0231-66	272 -029	WIPER	A572-1002	1	572-0250-32-01	8 -011	CAP	A572-0205	1
572-0231-67	272 -030	HOLDER	A572-1002	1	572-0250-33-03	3 -014	BRACKET	A572-0200	1
572-0231-68-01	251 -060	BLOCK	A572-1002	1	572-0250-34-03	6 -015	BRACKET	A572-0200	1
572-0231-69	272 -005	WIPER	A572-1002	1	572-0250-35-02	5 -016	BRACKET	A572-0200	1
572-0231-70	272 -001	WIPER	A572-1002	1	572-0250-36	8 -012	COLLAR	A572-0205	1
572-0231-71	272 -006	HOLDER	A572-1002	1	572-0250-37	2 -017	STOPPER	A572-0200	1
572-0231-72	272 -002	HOLDER	A572-1002	1	572-0250-38	5 -018	STOPPER	A572-0200	1
572-0231-73	272 -007	WIPER	A572-1002	1	572-0250-39-01	3 -019	STOPPER	A572-0200	1
572-0231-74	272 -003	WIPER	A572-1002	1	572-0250-40-01	6 -020	STOPPER	A572-0200	1
572-0231-75	272 -039	COVER	A572-1002	1	572-0250-41	8 -013	STOPPER	A572-0205	1
572-0231-76	272 -031	BLOCK	A572-1002	1	572-0250-42	9 -014	STOPPER	A572-0205	1
572-0231-77	272 -008	HOLDER	A572-1002	1	572-0250-43	8 -015	STOPPER	A572-0205	1
572-0231-78	272 -004	HOLDER	A572-1002	1	572-0251-02	315 -200	SHAFT	A572-1002	1
572-0250-02-04	2 -009	BRACKET	A572-0200	1	572-0262-06-01	225 -009	PLATE	A572-0260	1
572-0250-06-02	3 -010	COLLAR	A572-0200	1	572-0262-08	10 -001	LINER	A572-0260	1

POOR

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-0262-11	221 -005	SUPPORT	A572-1002	1	572-0263-37	225 -002	BOLT	A572-0260	2
572-0262-14-02	221 -001	SUPPORT	A572-1002	1	572-0263-38	222 -012	CAP	A572-0260	1
572-0262-17	225 -013	PLATE	A572-0260	1	572-0263-39	222 -014	CAP	A572-0260	4
572-0262-18	223 -009	COLLAR	A572-0260	1	572-0263-40-01	222 -009	CROSS-SLIDE	A572-0260	1
572-0262-18	226 -008	COLLAR	A572-0260	1	572-0263-41-02	222 -013	BACK PLATE	A572-0260	1
572-0262-20	10 -009	SADDLE	A572-0260	1	572-0263-42-02	222 -002	BACK PLATE	A572-0260	1
572-0262-21	226 -002	BRACKET	A572-0260	1	572-0263-43	222 -001	GIB	A572-0260	2
572-0262-22	227 -002	BRACKET	A572-0260	1	572-0263-44	222 -017	GIB	A572-0260	1
572-0262-23	226 -001	CAP	A572-0260	1	572-0263-45-01	222 -007	NUT	A572-0260	1
572-0262-24	226 -003	CAP	A572-0260	1	572-0263-46-01	222 -010	NUT	A572-0260	1
572-0262-25	221 -002	SUPPORT	A572-1002	1	572-0263-47-01	222 -006	NUT	A572-0260	1
572-0262-26	221 -003	SUPPORT	A572-1002	1	572-0263-48-01	222 -008	NUT	A572-0260	1
572-0263-04	224 -009	PLATE	A572-0260	1	572-0263-49-01	222 -011	PISTON	A572-0260	1
572-0263-06	223 -013	BASE	A572-0260	1	572-0263-50-02	225 -001	SADDLE	A572-0260	1
572-0263-08	224 -001	BRACKET	A572-0260	1	572-0263-52	223 -001	COVER	A572-0260	1
572-0263-10	221A-006	SUPPORT	A572-1002	1	572-0263-53	225 -011	COVER	A572-0260	1
572-0263-11	221A-008	PLATE	A572-1002	1	572-0263-54	222 -005	SUPPORT	A572-0260	1
572-0263-12	221 -004	DOG	A572-1002	2	572-0263-55	319 -001	COVER	A572-1002	1
572-0263-12	221A-007	DOG	A572-1002	2	572-0263-56	319 -008	PLATE	A572-1002	1
572-0263-15	221A-005	BOLT	A572-1002	1	572-0263-57	221A-001	BOLT	A572-1002	4
572-0263-17	319 -009	COVER	A572-1002	1	572-0263-58	319 -002	BLOCK	A572-1002	1
572-0263-20	317 -009	SUPPORT	A572-1002	1	572-0263-59	319 -003	PLATE	A572-1002	1
572-0263-24	319 -010	PLATE	A572-1002	2	572-0263-60	221A-002	SUPPORT	A572-1002	1
572-0263-28-02	224 -002	HOUSING	A572-0260	1	572-0263-61	319 -004	PLATE	A572-1002	1
572-0263-29	224 -010	PLATE	A572-0260	1	572-0263-62	319 -005	FLANGE	A572-1002	1
572-0263-30	223 -008	COVER	A572-0260	1	572-0263-63	319 -006	COVER	A572-1002	1
572-0263-32-01	225 -012	BACK PLATE	A572-0260	1	572-0263-64-01	319 -007	COVER	A572-1002	1
572-0263-33-01	225 -004	BACK PLATE	A572-0260	1	572-0300-07-02	203 -006	CAP	A572-0360	10
572-0263-34	225 -007	GIB	A572-0260	2	572-0300-07-02	254 -006	CAP	A572-0300	10
572-0263-35	225 -008	GIB	A572-0260	1	572-0300-10-04	203 -008	SHAFT	A572-0360	1
572-0263-36-01	223 -002	BRACKET	A572-0260	1	572-0300-10-04	254 -008	SHAFT	A572-0300	1

P006

P007

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-0300-26-04	203 -011	COLLAR	A572-0360	1	572-0300-48-01	260 -015	COLLAR	A572-0305	1
572-0300-26-04	254 -011	COLLAR	A572-0300	1	572-0300-55-02	206 -005	GEAR	A572-0360	1
572-0300-27-01	207 -008	COLLAR	A572-0360	1	572-0300-55-02	257 -005	GEAR	A572-0305	1
572-0300-27-01	258 -008	COLLAR	A572-0300	1	572-0300-61-01	202 -017	CAP	A572-0360	1
572-0300-28-01	207 -007	COLLAR	A572-0360	1	572-0300-61-01	253 -017	CAP	A572-0300	1
572-0300-28-01	258 -007	COLLAR	A572-0300	1	572-0300-63-01	208 -018	GEAR	A572-0360	1
572-0300-32-02	208 -014	SLEEVE	A572-0360	1	572-0300-63-01	259 -018	GEAR	A572-0300	1
572-0300-32-02	259 -014	SLEEVE	A572-0300	1	572-0300-66-01	207 -009	COLLAR	A572-0360	1
572-0300-33	208 -015	GEAR	A572-0360	1	572-0300-66-01	258 -009	COLLAR	A572-0300	1
572-0300-33	259 -015	GEAR	A572-0300	1	572-0300-67-01	207 -012	COLLAR	A572-0360	1
572-0300-34	206 -009	COLLAR	A572-0360	1	572-0300-67-01	258 -012	COLLAR	A572-0300	1
572-0300-34	257 -009	COLLAR	A572-0305	1	572-0300-70-01	255 -018	GEAR	A572-0305	1
572-0300-36-02	208 -016	COLLAR	A572-0360	1	572-0300-70-02	204 -018	GEAR	A572-0360	1
572-0300-36-02	259 -016	COLLAR	A572-0300	1	572-0300-71-02	207 -004	KEY	A572-0360	1
572-0300-37-01	204 -007	CAP	A572-0360	1	572-0300-71-02	258 -004	KEY	A572-0300	1
572-0300-37-01	255 -007	CAP	A572-0305	1	572-0300-83-04	206 -004	PIPE	A572-0360	1
572-0300-38-01	206 -006	COLLAR	A572-0360	1	572-0300-83-04	257 -004	PIPE	A572-0300	1
572-0300-38-01	257 -006	COLLAR	A572-0305	1	572-0300-84-05	206 -002	PIPE	A572-0360	1
572-0300-42	203 -009	COLLAR	A572-0360	9	572-0300-84-05	257 -002	PIPE	A572-0300	1
572-0300-42	254 -009	COLLAR	A572-0305	9	572-0300-85	209 -019	COLLAR	A572-0360	1
572-0300-43	203 -010	PIN	A572-0360	9	572-0300-85	260 -019	COLLAR	A572-0305	1
572-0300-43	254 -010	PIN	A572-0305	9	572-0310-01-11	258 -002	TOOL POST	A572-0300	1
572-0300-44-04	257 -010	SHAFT	A572-0305	1	572-0310-05-04	203 -027	CLUTCH	A572-0360	1
572-0300-44-05	206 -010	SHAFT	A572-0360	1	572-0310-05-04	254 -027	CLUTCH	A572-0300	1
572-0300-45	206 -008	COLLAR	A572-0360	1	572-0310-06-04	258 -005	HOUSING	A572-0300	1
572-0300-45	257 -008	COLLAR	A572-0305	1	572-0310-07-04	207 -001	SHAFT	A572-0360	1
572-0300-46	206 -007	COLLAR	A572-0360	1	572-0310-07-04	258 -001	SHAFT	A572-0300	1
572-0300-46	257 -007	COLLAR	A572-0305	1	572-0310-08-07	259 -030	BASE	A572-0300	1
572-0300-47-02	206 -012	COLLAR	A572-0360	1	572-0310-10-03	204 -031	BOX	A572-0360	1
572-0300-47-02	257 -012	COLLAR	A572-0305	1	572-0310-10-03	255 -031	BOX	A572-0316	1
572-0300-48-01	209 -015	COLLAR	A572-0360	1	572-0310-11-02	207 -003	SHAFT	A572-0360	1

P008

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-0310-11-02	258 -003	SHAFT	A572-0300	1	572-0310-32-06	204 -045	SHAFT	A572-0360	1
572-0310-12-02	205 -033	PISTON	A572-0360	1	572-0310-32-06	255 -045	SHAFT	A572-0316	1
572-0310-12-02	256 -033	PISTON	A572-0300	1	572-0310-34-01	206 -013	HOLDER	A572-0360	1
572-0310-13-01	255 -020	CLUTCH	A572-0305	1	572-0310-34-01	257 -013	HOLDER	A572-0305	1
572-0310-13-03	204 -020	CLUTCH	A572-0360	1	572-0310-35-03	252 -046	COVER	A572-0300	1
572-0310-14	208 -034	GEAR	A572-0360	1	572-0310-36-04	252 -047	COVER	A572-0300	1
572-0310-14	259 -034	GEAR	A572-0300	1	572-0310-37-02	201 -048	PLATE	A572-0360	1
572-0310-15-03	206 -011	HOUSING	A572-0360	1	572-0310-37-02	252 -048	PLATE	A572-0300	1
572-0310-15-03	257 -011	HOUSING	A572-0300	1	572-0310-42-02	209 -001	BLOCK	A572-0360	1
572-0310-16-01	207 -011	SLEEVE	A572-0360	1	572-0310-44-02	209 -050	CAP	A572-0360	1
572-0310-16-01	258 -011	SLEEVE	A572-0300	1	572-0310-44-02	260 -050	CAP	A572-0300	1
572-0310-17	203 -021	RING	A572-0360	1	572-0310-47-01	273 -035	LINER	A572-0225	1
572-0310-17	254 -021	RING	A572-0305	1	572-0310-52-01	205 -002	LABYRINTH	A572-0360	1
572-0310-18-01	202 -037	BUSHING	A572-0360	1	572-0310-53-01	256 -001	LABYRINTH	A572-0302	1
572-0310-18-01	253 -037	BUSHING	A572-0305	1	572-0310-58-05	251 -046	COVER	A572-1002	1
572-0310-20-03	255 -022	BLOCK	A572-0305	1	572-0310-59-03	251 -047	COVER	A572-1002	1
572-0310-20-04	204 -022	BLOCK	A572-0360	1	572-0310-60-03	260 -002	SUPPORT	A572-0302	1
572-0310-21	203 -023	SHAFT	A572-0360	9	572-0310-62-02	251 -048	COVER	A572-0307	1
572-0310-21	254 -023	SHAFT	A572-0305	9	572-0310-63-01	319A-049	SUPPORT	A572-1002	1
572-0310-22	204 -024	PIN	A572-0360	1	572-0310-64-02	251 -050	COVER	A572-1002	1
572-0310-22	255 -024	PIN	A572-0305	1	572-0310-66-01	251 -051	HOLDER	A572-1002	1
572-0310-23	208 -039	SLEEVE	A572-0360	1	572-0310-67-03	251 -052	PLATE	A572-1002	1
572-0310-23-01	259 -039	SLEEVE	A572-0300	1	572-0310-68-02	251 -053	PLATE	A572-1002	1
572-0310-24-01	207 -010	GEAR	A572-0360	1	572-0310-70	251 -055	BOLT	A572-1002	1
572-0310-24-01	258 -010	GEAR	A572-0300	1	572-0310-71-01	251 -056	SHAFT	A572-1002	1
572-0310-25	208 -041	KEY	A572-0360	1	572-0310-73-03	209 -052	BLOCK	A572-0360	1
572-0310-25	259 -041	KEY	A572-0300	1	572-0310-73-03	260 -052	BLOCK	A572-0300	1
572-0310-28-03	203 -043	FACE PLATE	A572-0360	1	572-0310-74-03	260 -026	BASE, motor	A572-0305	1
572-0310-28-03	254 -043	FACE PLATE	A572-0300	1	572-0310-75-04	259 -053	BASE, motor	A572-0300	1
572-0310-31-02	202 -044	HOUSING	A572-0360	1	572-0310-76-03	209 -027	COVER	A572-0360	1
572-0310-31-02	253 -044	HOUSING	A572-0300	1	572-0310-76-03	260 -027	COVER	A572-0305	1

P009

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-0310-77-02	209 -028	BLOCK	A572-0360	1	572-0311-23	253 -004	BOLT	A572-0302	12
572-0310-80	209 -029	FLANGE	A572-0360	1	572-0311-24	233 -002	NOZZLE	A572-2008	1
572-0310-80	260 -029	FLANGE	A572-0305	1	572-0311-24	233 -021	NOZZLE	A572-2007	1
572-0310-81	209 -030	COLLAR	A572-0360	1	572-0311-24	283 -002	NOZZLE	A572-2008	1
572-0310-81	260 -030	COLLAR	A572-0305	1	572-0311-24	283 -021	NOZZLE	A572-2007	1
572-0310-86	203 -057	BOLT	A572-0360	12	572-0311-25	232 -006	NOZZLE	A572-2105	1
572-0310-86	254 -057	BOLT	A572-0300	12	572-0311-25	232 -010	NOZZLE	A572-2106	1
572-0310-87-02	203 -058	BLOCK	A572-0360	12	572-0311-25	282 -006	NOZZLE	A572-2105	1
572-0310-87-02	254 -058	BLOCK	A572-0300	12	572-0311-25	282 -010	NOZZLE	A572-2106	1
572-0310-88	209 -031	BASE	A572-0360	1	572-0320-01-05	203 -061	TURRET	A572-0360	1
572-0310-88	260 -031	BASE	A572-0305	1	572-0320-01-05	254 -061	TURRET	A572-0300	1
572-0310-89-01	209 -032	COVER	A572-0360	1	572-0360-02-03	254 -025	CLUTCH	A572-0300	1
572-0310-89-01	260 -032	COVER	A572-0305	1	572-0360-02-04	203 -025	CLUTCH	A572-0360	1
572-0310-94-01	319A-057	SUPPORT	A572-1002	1	572-0360-03-01	205 -026	CLUTCH	A572-0360	1
572-0310-95	319A-058	SUPPORT	A572-1002	1	572-0360-03-01	256 -026	CLUTCH	A572-0300	1
572-0310-96	251 -059	CAP	A572-1002	1	572-0360-04-02	205 -049	FLANGE	A572-0360	1
572-0311-03	201 -064	CAP	A572-1002	1	572-0360-04-02	256 -049	FLANGE	A572-0300	1
572-0311-09-03	252 -059	COVER	A572-0302	1	572-0360-12-02	201 -063	CAP	A572-1002	1
572-0311-12	201 -042	HOLDER	A572-0360	1	572-0360-13-05	207 -014	SUPPORT	A572-0360	1
572-0311-12	252 -042	HOLDER	A572-0300	1	572-0360-13-05	258 -014	SUPPORT	A572-0300	1
572-0311-13	201 -054	SHAFT	A572-0360	1	572-0360-14-01	203 -013	DOG	A572-0360	1
572-0311-13	252 -054	SHAFT	A572-0300	1	572-0360-14-01	254 -013	DOG	A572-0300	1
572-0311-18	206 -001	CAP	A572-0360	1	572-0360-15-03	203 -012	DOG	A572-0360	1
572-0311-18	257 -001	CAP	A572-0300	1	572-0360-15-03	254 -012	DOG	A572-0300	1
572-0311-19	206 -003	SUPPORT	A572-0360	1	572-0360-17-03	207 -013	COVER	A572-0360	1
572-0311-19	257 -003	SUPPORT	A572-0300	1	572-0360-17-03	258 -013	COVER	A572-0300	1
572-0311-21-01	204 -046	COLLAR	A572-0360	1	572-0360-18-03	201 -059	COVER	A572-0360	1
572-0311-21-01	255 -046	COLLAR	A572-0305	1	572-0360-22-01	207 -005	HOUSING	A572-0360	1
572-0311-22	202 -004	PIN	A572-0360	12	572-0360-23-01	201 -046	COVER	A572-0360	1
572-0311-22	253 -003	PIN	A572-0302	12	572-0360-24-02	209 -026	BASE, motor	A572-0360	1
572-0311-23	202 -005	BOLT	A572-0360	12	572-0360-26-02	208 -030	BASE	A572-0360	1

P010

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-0360-28	260 -028	BLOCK	A572-0305	1	572-0801-04-02	401 -004	PLATE	A572-0800	1
572-0360-29-01	208 -053	BASE, motor	A572-0360	1	572-0801-06-02	401 -005	SUPPORT	A572-0800	1
572-0360-34-02	207 -002	TOOL POST	A572-0360	1	572-0801-07-03	401 -006	SUPPORT	A572-0800	1
572-0360-35	207 -015	BLOCK	A572-0360	1	572-0801-10-01	110 -001	SUPPORT	A572-3080	1
572-0360-36	201 -045	COVER	A572-1002	1	572-0801-10-01	160 -001	SUPPORT	A572-3080	1
572-0360-37-01	201 -062	COVER	A572-1002	1	572-0801-27-01	110 -002	SUPPORT	A572-3081	1
572-0600-07-03	105 -003	BLOCK	A572-3070	1	572-0801-27-01	160 -002	SUPPORT	A572-3081	1
572-0600-09-03	105 -004	DUCT	A572-3070	1	572-0801-29-01	110 -003	SUPPORT	A572-3082	1
572-0600-13-03	155 -005	DUCT	A572-3070	1	572-0801-29-01	160 -003	SUPPORT	A572-3082	1
572-0600-14-03	155 -006	BLOCK	A572-3070	1	572-0801-46-02	402 -007	TANK	A572-0800	1
572-0600-15	105 -007	SUPPORT	A572-3070	1	572-0801-48	402 -001	BOLT	A572-0800	4
572-0600-15	155 -007	SUPPORT	A572-3070	1	572-0801-49	402 -002	FLANGE	A572-0800	4
572-0600-20	155 -008	PIPE, gas	A572-3070	1	572-1000-11-02	309A-119	RAIL	A572-1002	1
572-0600-34	105 -009	BLOCK	A572-3070	1	572-1000-16	301 -003	LATTICE	A572-1007	1
572-0600-35	105 -010	PIPE, gas	A572-3070	1	572-1000-16	302 -003	LATTICE	A572-1007	1
572-0600-37	105 -011	SUPPORT	A572-9019	1	572-1000-21	301 -004	ROLLER	A572-1007	2
572-0610-04-03	109 -001	MANIFOLD	A572-1002	1	572-1000-21	302 -004	ROLLER	A572-1007	2
572-0610-04-03	159 -001	MANIFOLD	A572-1002	1	572-1000-23-06	304 -073	ARM	A572-1007	1
572-0610-04-03	210 -065	MANIFOLD	A572-1002	1	572-1000-25	301 -005	PIN	A572-1007	2
572-0610-04-03	261 -065	MANIFOLD	A572-1002	1	572-1000-25	302 -005	PIN	A572-1007	2
572-0610-05-01	325 -066	SUPPORT	A572-1002	1	572-1000-28	304 -074	FLANGE	A572-1002	1
572-0610-15-01	109 -002	MANIFOLD	A572-1020	1	572-1000-43-01	304 -075	COLLAR	A572-1002	1
572-0610-15-01	159 -002	MANIFOLD	A572-1020	1	572-1003-07	306 -076	SUPPORT	A572-1002	1
572-0610-16	155 -012	BLOCK	A572-3070	1	572-1004-01	320 -077	ROLLER	A572-1002	2
572-0610-17-01	155 -013	SUPPORT	A572-3070	1	572-1004-01	321 -077	ROLLER	A572-1002	1
572-0610-28	405 -005	JOINT	A572-0302	1	572-1004-02	320 -078	SHAFT	A572-1002	2
572-0700-01	111 -001	FLANGE	A572-0701	1	572-1004-02	321 -078	SHAFT	A572-1002	1
572-0700-01	161 -001	FLANGE	A572-0700	1	572-1004-04-02	320 -079	SUPPORT	A572-1002	2
572-0800-08	401 -001	SUPPORT	A572-0800	1	572-1004-05-02	321 -080	SUPPORT	A572-1002	1
572-0801-01-04	403 -001	CAP	A572-0860	1	572-1004-12	322 -182	GUTTER	A572-1002	1
572-0801-03-03	402 -003	FILTER	A572-0800	1	572-1004-41-02	320 -085	PLATE	A572-1002	1

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-1005-01	323 -086	SHAFT	A572-1002	4	572-1010-33	151 -021	PLATE	A572-0120	1
572-1005-03-02	323 -087	HOLDER	A572-1002	2	572-1010-34-01	306 -111	SUPPORT	A572-1002	1
572-1005-05-01	323 -089	HOLDER	A572-1002	2	572-1010-35-01	325 -006	SUPPORT	A572-1002	1
572-1005-06-03	274 -090	PLATE	A572-1002	2	572-1010-36-04	309 -112	SUPPORT	A572-1002	1
572-1005-07-01	274 -091	SHAFT	A572-1002	1	572-1010-37-06	309A-113	SUPPORT	A572-1002	1
572-1005-10-01	271 -092	SHAFT	A572-1002	1	572-1010-38-03	309A-114	SUPPORT	A572-1002	1
572-1005-14-01	323 -093	HOLDER	A572-1002	1	572-1010-39-02	309A-115	SUPPORT	A572-1002	1
572-1005-15-04	322 -094	GUIDE	A572-1002	1	572-1010-40	309A-123	SUPPORT	A572-1002	1
572-1005-21-01	274 -097	SHAFT	A572-1002	1	572-1010-41-01	309A-117	SUPPORT	A572-1002	1
572-1005-37-01	322 -100	GUIDE	A572-1002	1	572-1010-42-01	315 -118	SUPPORT	A572-1002	1
572-1010-03-02	101 -026	SUPPORT	A572-0121	1	572-1010-43-03	315 -119	SUPPORT	A572-1002	1
572-1010-04-02	151 -019	SUPPORT	A572-0120	1	572-1010-44	314 -120	SUPPORT	A572-1002	1
572-1010-05	101 -027	RETAINER	A572-0121	1	572-1011-03-01	302 -012	CAP	A572-1007	1
572-1010-05	151 -020	RETAINER	A572-0120	1	572-1011-04-01	301 -013	CAP	A572-1007	1
572-1010-06-03	326 -099	SUPPORT	A572-1002	1	572-1011-05-02	301 -014	PLATE	A572-1007	1
572-1010-07-05	326 -100	SUPPORT	A572-1002	1	572-1011-06-02	301 -015	COVER	A572-1007	1
572-1010-08-05	325 -101	SUPPORT	A572-1002	1	572-1011-11-03	304 -122	FLANGE	A572-1007	1
572-1010-10-01	309 -102	SUPPORT	A572-1002	1	572-1011-12-04	304 -123	FLANGE	A572-1002	1
572-1010-11-01	309 -103	SUPPORT	A572-1002	1	572-1011-13-03	304 -124	PLATE	A572-1002	1
572-1010-12-03	326 -104	SUPPORT	A572-1002	1	572-1011-14-02	304 -125	SUPPORT	A572-1002	1
572-1010-13	326 -105	SUPPORT	A572-1002	1	572-1011-17	304 -126	FLANGE	A572-1002	1
572-1010-14-04	309 -106	SUPPORT	A572-1002	1	572-1011-19-01	301 -018	SUPPORT	A572-1007	2
572-1010-15-06	327 -107	SUPPORT	A572-1002	1	572-1011-19-01	302 -018	SUPPORT	A572-1007	2
572-1010-18-06	327 -109	SUPPORT	A572-1002	1	572-1011-20-01	301 -019	SUPPORT	A572-1007	2
572-1010-19-06	310 -007	RAIL	A572-1007	1	572-1011-20-01	302 -019	SUPPORT	A572-1007	2
572-1010-20-03	310 -008	PAN	A572-1007	1	572-1011-39	310 -012	SUPPORT	A572-1007	1
572-1010-21-04	310 -009	CAP	A572-1007	1	572-1011-40	310 -013	SUPPORT	A572-1007	1
572-1010-22-01	310 -010	RAIL	A572-1007	1	572-1011-62	301 -021	PLATE	A572-1007	1
572-1010-23	310 -011	SPACER	A572-1007	13	572-1011-62	302 -021	PLATE	A572-1007	1
572-1010-28-01	314 -110	SUPPORT	A572-1002	3	572-1012-07-03	306 -127	SUPPORT	A572-1002	1
572-1010-33	101 -028	PLATE	A572-0121	1	572-1012-10-03	311A-004	CAP	A572-1002	1

P011

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-1012-11-02	311A-001	COVER	A572-1002	1	572-1012-86	327 -152	HOLDER	A572-1002	2
572-1012-14-03	311 -003	CAP	A572-1015	1	572-1012-92	309A-124	SUPPORT	A572-1002	1
572-1012-21-06	313 -003	HOLDER	A572-1040	1	572-1012-98-01	315 -141	COVER	A572-1002	1
572-1012-23-05	313 -005	HOLDER	A572-1040	1	572-1013-05-03	306 -155	COVER	A572-1002	1
572-1012-24-05	316 -128	HOLDER	A572-1002	1	572-1013-06-05	306 -156	COVER	A572-1002	1
572-1012-28-02	314 -207	COVER	A572-1002	1	572-1013-07-03	306 -157	SUPPORT	A572-1002	1
572-1012-31-02	313 -006	COVER	A572-1040	1	572-1014-01-02	313 -157	PLATE	A572-1040	1
572-1012-34-03	315 -133	COVER	A572-1002	1	572-1014-02-08	321 -158	COVER	A572-1002	1
572-1012-57	305 -134	CAP	A572-1002	3	572-1014-03	313 -159	HOLDER	A572-1002	1
572-1012-58	311 -004	CAP	A572-1015	1	572-1014-04	313 -160	HOLDER	A572-1002	1
572-1012-58	311A-005	CAP	A572-1015	1	572-1014-05-01	4 -012	SUPPORT	A572-1002	1
572-1012-59-05	305 -136	COVER	A572-1002	1	572-1014-07	324 -163	GUIDE	A572-1002	1
572-1012-60-04	305 -137	COVER	A572-1002	1	572-1014-08-03	324 -164	GUIDE	A572-1002	1
572-1012-61-03	309 -138	SUPPORT	A572-1002	1	572-1014-11-05	320 -166	COVER	A572-1002	1
572-1012-62	312 -008	SUPPORT	A572-1040	1	572-1014-12-03	320 -167	COVER	A572-1002	1
572-1012-63-01	312 -009	SUPPORT	A572-1040	2	572-1014-13	315 -168	GUIDE	A572-1002	2
572-1012-64-01	313 -010	COVER	A572-1040	1	572-1014-14	315 -169	GUIDE	A572-1002	2
572-1012-65-05	313 -011	HOLDER	A572-1040	1	572-1014-15	320 -170	GUIDE	A572-1002	2
572-1012-66-04	313 -012	COVER	A572-1040	1	572-1014-17-01	315 -172	HOLDER	A572-1002	1
572-1012-67-03	314 -139	COVER	A572-1002	1	572-1014-18	315 -173	HOLDER	A572-1002	1
572-1012-68-03	315 -140	COVER	A572-1002	1	572-1014-19-02	1 -012	SUPPORT	A572-1002	1
572-1012-74-01	315 -146	PLATE	A572-1002	1	572-1014-21	324 -176	RAIL	A572-1002	1
572-1012-75-01	315 -147	COVER	A572-1002	1	572-1014-22-03	324 -177	GUIDE	A572-1002	1
572-1012-76-01	315 -148	SUPPORT	A572-1002	1	572-1014-23-03	322 -178	GUTTER	A572-1002	1
572-1012-77-01	327 -149	SUPPORT	A572-1002	1	572-1014-24-01	322 -179	RAIL	A572-1002	1
572-1012-79	312 -013	SUPPORT	A572-1040	1	572-1014-25-06	307 -004	COVER	A572-1061	1
572-1012-80-03	312 -014	COVER	A572-1040	1	572-1014-26-03	307 -001	COVER	A572-1060	1
572-1012-81-02	316 -151	COVER	A572-1002	1	572-1014-27-04	307 -002	COVER	A572-1060	1
572-1012-81-02	317 -010	COVER	A572-1002	1	572-1014-28-07	307 -003	COVER	A572-1060	1
572-1012-82-03	316 -152	COVER	A572-1002	1	572-1014-29-07	308 -004	COVER	A572-1051	1
572-1012-84 02	309 -139	COVER	A572-1002	1	572-1014-30-04	308 -001	COVER	A572-1050	1

P012

P013

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-1014-31-04	308 -002	COVER	A572-1050	1	572-1017-15-01	316 -191	HOLDER	A572-1002	1
572-1014-32-08	308 -003	COVER	A572-1050	1	572-1017-17-01	313 -004	HOLDER	A572-1040	1
572-1014-39-02	316 -184	COVER	A572-1002	1	572-1017-19	312 -015	PLATE	A572-1040	1
572-1014-50-01	321 -166	COVER	A572-1002	1	572-1017-20	316 -185	PLATE	A572-1002	1
572-1014-57	271A-083	COVER	A572-1002	1	572-1017-21	312 -016	PLATE	A572-1040	1
572-1014-60	324 -209	COVER	A572-1002	1	572-1017-22	316 -188	PLATE	A572-1002	1
572-1014-61-01	322 -082	GUTTER	A572-1002	1	572-1017-23-02	319A-059	PLATE	A572-1002	1
572-1014-62-02	322 -081	RAIL	A572-1002	1	572-1017-24-02	319A-060	PLATE	A572-1002	1
572-1014-63-01	322 -083	GUTTER	A572-1002	1	572-1017-33	322 -184	PLATE	A572-1002	1
572-1014-64-02	322 -084	RAIL	A572-1002	1	572-1017-34	322 -183	PLATE	A572-1002	1
572-1014-66-04	315 -199	COVER	A572-1002	1	572-1017-35	313 -007	HOLDER	A572-1040	1
572-1014-67-02	324 -200	GUTTER	A572-1002	1	572-1017-36	316 -192	HOLDER	A572-1002	1
572-1014-72-01	324 -204	GUTTER	A572-1002	1	572-1017-37	313 -008	HOLDER	A572-1040	1
572-1014-84	327 -150	SUPPORT	A572-1002	1	572-1017-37	316 -193	HOLDER	A572-1002	1
572-1014-85	327 -151	PLATE	A572-1002	1	572-1017-38	313 -009	WIPER	A572-1040	1
572-1014-89	324 -205	GUTTER	A572-1002	1	572-1017-38	316 -194	WIPER	A572-1002	1
572-1014-97	324 -206	GUTTER	A572-1002	1	572-1017-46	315 -201	SUPPORT	A572-1002	1
572-1014-98	324 -208	GUTTER	A572-1002	1	572-1017-48	315 -202	PLATE	A572-1002	1
572-1014-99	324 -207	GUTTER	A572-1002	1	572-1017-50	313 -013	HOLDER	A572-1040	1
572-1015-23	324 -210	CAP	A572-1002	1	572-1017-51	313 -014	HOLDER	A572-1040	1
572-1015-25	324 -211	CAP	A572-1002	1	572-1017-53	316 -195	HOLDER	A572-1002	1
572-1015-29	324 -095	GUTTER	A572-1002	1	572-1017-54	316 -197	HOLDER	A572-1002	1
572-1015-30	322 -098	BLOCK	A572-1002	1	572-1017-55	313 -015	HOLDER	A572-1040	1
572-1015-31	322 -088	HOLDER	A572-1002	2	572-1017-57	313 -016	WASHER	A572-1002	8
572-1015-32	324 -196	GUTTER	A572-1002	1	572-1017-57	316 -196	WASHER	A572-1002	6
572-1015-45-02	321 -165	COVER	A572-1002	1	572-1017-59	311 -006	SUPPORT	A572-1002	1
572-1015-53	324 -201	GUTTER	A572-1002	1	572-1017-59	311A-006	SUPPORT	A572-1002	1
572-1017-01-01	316 -189	WIPER	A572-1002	1	572-1017-61	312 -007	PLATE	A572-1040	1
572-1017-02-01	316 -190	WIPER	A572-1002	1	572-1017-61	314 -132	PLATE	A572-1002	1
572-1017-12-01	313 -001	WIPER	A572-1040	1	572-1017-71-01	311A-002	COVER	A572-1002	1
572-1017-13-01	313 -002	WIPER	A572-1040	1	572-1017-72-01	311A-003	COVER	A572-1002	1

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-1017-75	306 -158	SUPPOT	A572-1002	1	572-1024-04	309A-122	COVER	A572-1002	1
572-1017-82	311 -001	COVER	A572-1015	1	572-1024-05	309 -116	COVER	A572-1002	1
572-1017-83	311 -005	COVER	A572-1015	1	572-1024-06	317 -011	PLATE	A572-1002	1
572-1017-84	311 -002	COVER	A572-1015	1	572-1024-11-01	317 -004	COVER	A572-1002	1
572-1017-85	311 -007	SUPPORT	A572-1002	1	572-1024-14	318 -009	HOLDER	A572-1002	1
572-1017-86	311 -008	SUPPORT	A572-1002	1	572-1024-15-01	318 -010	HOLDER	A572-1002	1
572-1020-06	309 -115	RAIL	A572-1002	1	572-1024-16	318 -011	HOLDER	A572-1002	1
572-1020-07-02	318 -001	SUPPORT	A572-1002	1	572-1024-18-02	318 -002	COVER	A572-1002	1
572-1020-09-01	309 -114	DUCT	A572-1002	1	572-1024-19-03	318 -003	COVER	A572-1002	1
572-1020-10-02	309A-121	DUCT	A572-1002	1	572-1024-20-02	318 -004	COVER	A572-1002	1
572-1020-11-01	309 -113	SUPPORT	A572-1002	1	572-1024-21-01	318 -005	SUPPORT	A572-1002	1
572-1020-12-01	309A-120	SUPPORT	A572-1002	1	572-1024-24	318 -006	SUPPORT	A572-1002	1
572-1020-13	317 -001	COVER	A572-1002	1	572-1024-25-01	317 -005	COVER	A572-1002	1
572-1021-01-02	302 -016	DOOR	A572-1007	1	572-1024-26-01	317 -006	COVER	A572-1002	1
572-1021-02	301 -017	DOOR	A572-1007	1	572-1024-27	318 -007	SUPPORT	A572-1002	1
572-1021-03	302 -014	PLATE	A572-1007	1	572-1024-28	318 -008	SUPPORT	A572-1002	1
572-1021-04	302 -015	COVER	A572-1007	1	572-1024-29	317 -007	PLATE	A572-1002	1
572-1021-05	303 -004	PLATE	A572-1012	1	572-1024-31	317 -008	SUPPORT	A572-1002	1
572-1021-06	303 -001	PLATE	A572-1012	1	572-1110-16-02	325 -005	SUPPORT	A572-1700	1
572-1021-07	303 -002	DOG	A572-1012	2	572-2000-03	233 -017	CAP	A572-2009	1
572-1021-08	303 -003	SUPPORT	A572-1012	2	572-2000-03	283 -017	CAP	A572-2009	1
572-1021-09	303 -008	COVER	A572-1006	1	572-2000-11-01	233 -015	NUT	A572-2008	1
572-1021-10	303 -006	COVER	A572-1006	1	572-2000-11-01	233 -018	NUT	A572-2009	1
572-1021-11	303 -007	COVER	A572-1006	1	572-2000-11-01	233 -020	NUT	A572-2007	1
572-1021-12	303 -005	COVER	A572-1006	1	572-2000-11-01	283 -015	NUT	A572-2008	1
572-1021-14-01	306 -154	COVER	A572-1002	1	572-2000-11-01	283 -018	NUT	A572-2009	1
572-1021-15-01	306 -153	COVER	A572-1002	1	572-2000-11-01	283 -020	NUT	A572-2007	1
572-1022-03	322 -181	WIPER	A572-1002	1	572-2000-18-01	233 -019	HOLDER (INSIDE I)	A572-2007	1
572-1022-04	322 -180	WIPER	A572-1002	1	572-2000-18-01	283 -019	HOLDER (INSIDE I)	A572-2007	1
572-1024-02-02	317 -002	COVER	A572-1002	1	572-2000-19-01	233 -003	HOLDER	A572-2008	1
572-1024-03-01	317 -003	COVER	A572-1002	1	572-2000-19-01	283 -003	HOLDER	A572-2008	1

P014

P015

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
572-2000-20-01	233 -016	HOLDER (U DRILL)	A572-2009	1	H0012-0001-11	277 -511	SLEEVE SHOWA PB6	A572-1002	10
572-2000-20-01	283 -016	HOLDER (U DRILL)	A572-2009	1	H0012-0001-11	278 -508	SLEEVE SHOWA PB6	A572-1002	6
572-2100-02	232 -004	BLOCK	A572-2105	2	H0012-0001-12	228 -504	PLUG PA6 SHOWA	A572-1002	10
572-2100-02	232 -012	BLOCK	A572-2106	1	H0012-0001-12	277 -512	PLUG SHOWA PA6	A572-1002	10
572-2100-02	282 -004	BLOCK	A572-2105	2	H0012-0001-12	278 -510	PLUG SHOWA PA6	A572-1002	6
572-2100-02	282 -012	BLOCK	A572-2106	1	H0012-0002-44	277 -513	ELBOW SHOWA PH6	A572-1002	1
572-2100-20-01	232 -008	HOLDER (VDI OUT1)	A572-2105	1	H0012-0002-48	228 -519	NIPPLE PD4 SHOWA	A572-1002	8
572-2100-20-01	282 -008	HOLDER (VDI OUT1)	A572-2105	1	H0012-0002-48	277 -519	NIPPLE SHOWA PD4	A572-1002	7
572-2100-21-01	232 -013	HOLDER (VDI OUT2)	A572-2106	1	H0012-0002-48	278 -506	NIPPLE SHOWA PD4	A572-1002	5
572-2100-21-01	282 -013	HOLDER (VDI OUT2)	A572-2106	1	H0012-0004-21	228 -508	NIPPLE KH2 SHOWA	A572-1002	1
592-0244-01	221A-003	NUT	A572-1002	4	H0012-0004-21	277 -509	NIPPLE SHOWA KH2	A572-1002	1
592-0263-13	221A-004	PLATE	A572-1002	4	H0012-0004-21	278 -505	NIPPLE SHOWA KH2	A572-1002	1
592-1000-09	312 -205	PLATE	A572-1002	1	H0012-0004-22	228 -518	TEE PKD6 SHOWA	A572-1002	1
592-1000-09	314 -205	PLATE	A572-1002	1	H0012-0004-37	228 -516	SEAL PLUG PG10C S	A572-1002	2
592-1000-17	312 -206	WORK LIGHT	A572-1002	1	H0012-0004-37	277 -505	HOWA SEAL PLUG SHOWA P	A572-1002	1
592-1000-17	314 -206	WORK LIGHT	A572-1002	1	H0012-0004-37	278 -503	G10C SEAL PLUG SHOWA P	A572-1002	1
H0001-0004-74-01	157 -501	CYLINDER, hydraulic	A572-3020	1	H0012-0005-94	228 -511	G10C ELBOW PH6-M10 SHO	A572-1002	3
H0001-0004-74-1	107 -501	CYLINDER, hydraulic	A555-3020	1	H0012-0005-94	277 -514	WA ELBOW SHOWA PH6-M	A572-1002	2
H0010-0011-04	228 -512	INSERT AL4 SHOWA	A572-1002	32	H0012-0005-94	278 -511	10 ELBOW SHOWA PH6-M	A572-1002	1
H0010-0011-04	277 -517	INSERT SHOWA AL4	A572-1002	24	H0012-0006-11	277 -510	10 NIPPLE SHOWA KH4	A572-1002	1
H0010-0011-04	278 -512	INSERT SHOWA AL4	A572-1002	10	H0012-0008-13	228 -510	SEAL PLUG PG8C SH	A572-1002	5
H0010-0021-73	403 -501	PLUG	A572-1000	2	H0012-0008-13	277 -515	OWA SEAL PLUG SHOWA P	A572-1002	1
H0010-0300-28	228 -521	ELBOW PH4 SHOWA	A572-1002	8	H0014-0004-78	105 -501	G8C JOINT, swivel	A572-3070	1
H0010-0300-28	277 -522	ELBOW SHOWA PH4	A572-1002	5	H0014-0004-78	155 -501	JOINT, swivel	A572-3070	1
H0012-0000-88	228 -514	PLUG PA4 SHOWA	A572-1002	32	H0014-0005-39	405 -501	NIPPLE 1/2X3/4	A572-1002	1
H0012-0000-88	277 -521	PLUG SHOWA PA4	A572-1002	24	H0015-0001-80	403 -502	SOCKET	A572-1000	2
H0012-0000-88	278 -509	PLUG SHOWA PA4	A572-1002	10	H0015-0002-26	228 -506	CROSS PJD406 SHOW	A572-1002	1
H0012-0000-89	228 -513	SLEEVE PB4 SHOWA	A572-1002	32	H0015-0002-26	277 -516	A CROSS SHOWA PJD40	A572-1002	2
H0012-0000-89	277 -520	SLEEVE SHOWA PB4	A572-1002	24	H0015-0002-26	278 -516	6 CROSS SHOWA PJD40	A572-1002	2
H0012-0000-89	278 -507	SLEEVE SHOWA PB4	A572-1002	10	H0019-0002-30	277 -507	6 PLUNGER SHOWA DPB	A572-1002	1
H0012-0001-11	228 -505	SLEEVE PB6 SHOWA	A572-1002	10	H0019-0002-35	278 -515	15 PLUNGER SHOWA DS5	A572-1002	1

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
H0019-0002-40	228 -520	DISTRIBUTOR DS8 S HOWA	A572-1002	1	H0031-0015-54	9 -501	Z-RING NOK	A572-0205	1
H0019-0002-41	228 -515	DISTRIBUTOR DS5 S HOWA	A572-1002	1	H0031-0017-36	222 -502	PACKING	A572-0260	5
H0019-0002-47	277 -506	PLUNGER SHOWA DPB 15	A572-1002	1	H0039-0000-67	159 -503	PLATE	A572-1002	4
H0019-0002-80	277 -504	PLUNGER SHOWA DPB 13	A572-1002	1	H0110-0002-31-1	108 -501	OIL CONTROLLER	A555-0105	1
H0019-0002-88	228 -522	DISTRIBUTOR DS8 S HOWA	A572-1002	1	H0110-0002-31-1	158 -501	OIL CONTROLLER	A555-0105	1
H0022-0001-27	277 -502	HOSE SHOWA FSC645	A572-1002	1	H0110-0002-42	158 -502	OIL CONTROLLER	A555-0106	1
H0022-0001-27	278 -502	HOSE SHOWA FSC645	A572-1002	1	H0120-0002-82	228 -501	TANK, lubrication SHOWA	A572-0640	1
H0022-0003-48	228 -503	HOSE FSC642 SHOWA	A572-1002	1	H0120-0002-82	277 -501	TANK, lubrication SHOWA	A540-0640	1
H0022-0003-98	228 -502	HOSE FSC612 SHOE A	A572-1002	1	H0120-0002-82	278 -501	TANK, lubrication SHOWA	A540-0640	1
H0022-0004-45	228 -507	HOSE FSC631 SHOWA	A572-1002	1	H0130-0012-10-1	109 -501	HYDRAULIC UNIT NA CHI (STD)	A572-0600	1
H0022-0004-45	277 -523	HOSE SHOWA FSC631	A572-1002	1	H0130-0012-10-1	159 -501	HYDRAULIC UNIT NA CHI (STD)	A572-0600	1
H0022-0004-45	278 -514	HOSE SHOWA FSC631	A572-1002	1	H0130-0012-10-1	210 -501	HYDRAULIC UNIT NA CHI	A572-0600	1
H0022-0004-79	277 -503	HOSE SHOWA FSC637	A572-1002	1	H0130-0012-10-1	261 -501	HYDRAULIC UNIT NA CHI	A572-0600	1
H0026-0001-80	277 -518	HOSE SHOWA FSC665	A572-1002	1	H0130-0012-11-1	109 -502	HYDRAULIC UNIT NA CHI (IEC)	A572-0601	1
H0026-0001-80	278 -513	HOSE SHOWA FSC665	A572-1002	1	H0130-0012-11-1	159 -502	HYDRAULIC UNIT NA CHI (IEC)	A572-0601	1
H0026-0005-77	105 -502	HOSE, vinyl	A572-3070	1	H0130-0012-11-1	210 -502	HYDRAULIC UNIT NA CHI	A572-0601	1
H0026-0006-72	228 -517	PIPE, nylon 4X4000	A572-1002	1	H0130-0012-11-1	261 -502	HYDRAULIC UNIT NA CHI	A572-0601	1
H0026-0006-72	277 -508	PIPE SHOWA 4X4000	A572-1002	1	H0162-0000-46-1	404 -503	CHIP CONVEYOR (L)	A572-0900	1
H0026-0006-72	278 -504	PIPE SHOWA 4X4000	A572-1002	1	H1000-0002-91	271 -504	SNAP-RING IWATA	A572-1002	1
H0026-0006-73	228 -509	PIPE, nylon 6X200	A572-1002	1	H1001-0008-05	319A-501	BOLT, flat-head	A572-1002	2
H0027-0008-54	105 -503	HOSE	A572-3070	1	H1001-0014-76	251 -502	SCREW, flat-head G OSHO	A572-0307	5
H0027-0008-54	155 -502	HOSE	A572-3070	1	H1001-0014-76	251 -503	SCREW, flat-head G OSHO	A572-1002	2
H0031-0005-01	202 -502	X-RING NIHON BARU KA	A572-0360	1	H1001-0014-76	251 -505	SCREW, flat-head G OSHO	A572-1002	2
H0031-0005-01	253 -502	X-RING NIHON BARU KA	A572-0300	1	H1001-0014-76	271 -501	SCREW, flat-head G OSHO	A572-0225	2
H0031-0007-76	205 -501	PACKING SAKAGAMI	A572-0360	1	H1001-0014-76	271 -503	SCREW, flat-head G OSHO	A572-1002	3
H0031-0007-76	256 -501	PACKING SAKAGAMI	A572-0300	1	H1001-0017-88	301 -501	BOLT	A572-1007	1
H0031-0007-83	205 -502	PACKING SAKAGAMI	A572-0360	1	H1001-0017-88	302 -501	BOLT	A572-1007	1
H0031-0007-83	256 -502	PACKING SAKAGAMI	A572-0300	1	H1001-0019-05	251 -505	SCREW, flat-head G OSHO	A572-1002	2
H0031-0015-54	2 -501	Z-RING NOK	A572-0200	1	H1001-1001-04-1	10 -501	BOLT	A572-0000	48
H0031-0015-54	5 -501	Z-RING	A572-0200	1	H1001-1001-06-2	233 -501	BOLT	A572-2008	2
H0031-0015-54	8 -501	Z-RING NOK	A572-0205	1	H1001-1001-06-2	233 -502	BOLT	A572-2009	2

P016

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
H1001-1001-06-2	233 -503	BOLT	A572-2007	2	H1019-0009-18	260 -504	PULLEY, scynchro B ANDO	A572-0305	1
H1001-1001-06-2	283 -501	BOLT	A572-2008	2	H1019-0009-19-1	274 -501	PULLEY, scynchro B ANDO	A572-0225	1
H1001-1001-06-2	283 -502	BOLT	A572-2009	2	H1019-0009-20	274 -502	PULLEY, scynchro B ANDO	A572-0225	1
H1001-1001-06-2	283 -503	BOLT	A572-2007	2	H1019-0009-41-1	223 -502	PULLEY, scynchro B ANDO	A572-0260	1
H1002-1000-36	203 -501	PIN S45C	A572-0360	2	H1019-0009-42-2	223 -501	PULLEY, scynchro B ANDO	A572-0260	1
H1002-1000-36	254 -501	PIN S45C	A572-0300	2	H1020-1101-71	312 -502	PLATE	A572-1002	1
H1003-0002-03	305 -501	HINGE	A572-1002	2	H1020-1101-71	314 -501	PLATE	A572-1002	1
H1003-0002-03	311 -501	HINGE	A572-1015	2	H1020-1126-20	106 -501	PACKING	A572-3050	2
H1003-0002-79	310 -501	HINGE	A572-1007	1	H1020-1126-20	156 -501	PACKING	A572-3050	2
H1003-0002-80	310 -502	HINGE	A572-1007	1	H1020-1129-92-1	106 -502	PLATE	A572-3051	1
H1004-0003-17	203 -502	GT-WASHER GOSHO	A572-0360	6	H1020-1129-92-1	106 -502	PLATE	A572-3050	1
H1004-0003-17	254 -502	GT-WASHER GOSHO	A572-0300	6	H1020-1129-92-1	156 -502	PLATE	A572-3051	1
H1011-0000-43	102 -504	CARRIPER ASSY	A572-0135	2	H1020-1129-92-1	156 -502	PLATE	A572-3050	1
H1011-0000-43	152 -504	CARRIPER ASSY	A572-0135	2	H1020-1131-33-1	272 -506	PACKING	A572-1002	1
H1012-0002-16	209 -501	POWER LOCK TUBAKI MOTO	A572-0360	2	H1020-1134-49-2	313 -503	PLATE	A572-1040	1
H1012-0002-16	260 -501	POWER LOCK TUBAKI MOTO	A572-0305	2	H1020-1134-50	320 -501	PLATE	A572-1002	1
H1012-0003-09	209 -502	POWER LOCK TUBAKI MOTO	A572-0360	2	H1020-1134-51	320 -502	PLATE	A572-1002	1
H1012-0003-09	260 -502	POWER LOCK TUBAKI MOTO	A572-0305	2	H1020-1134-69-1	251 -504	PACKING	A572-1002	1
H1012-0003-91	3 -501	COUPLING	A572-0200	1	H1020-1137-25	227 -502	STOPPER	A572-0260	1
H1012-0003-91	6 -501	COUPLING	A572-0200	1	H1020-1137-28-1	275 -501	STOPPER	A572-0225	1
H1012-0003-91	9 -502	COUPLING	A572-0205	1	H1020-1137-38	8 -502	STOPPER	A572-0205	1
H1012-0004-01	226 -501	COUPLING	A572-0260	1	H1020-1137-39	9 -503	STOPPER	A572-0205	1
H1014-0009-40-1	1 -501	BALL SCREW NTN	A572-0272	1	H1020-1137-40-1	3 -502	STOPPER	A572-0200	1
H1014-0009-40-1	4 -501	BALL SCREW	A572-0272	1	H1020-1137-41-1	6 -502	STOPPER	A572-0200	1
H1014-0009-42-1	276 -501	BALL-SCREW	A572-0271	1	H1020-1137-42-1	2 -502	STOPPER	A572-0200	1
H1014-0009-43-1	7 -501	BALL SCREW NTN	A572-0273	1	H1020-1137-43-1	5 -502	STOPPER	A572-0200	1
H1014-0010-42	224 -501	BALL-SCREW	A572-0275	1	H1020-1137-47	276 -502	STOPPER	A572-0225	1
H1014-0010-43-1	227 -501	BALL-SCREW	A572-0274	1	H1020-1137-84	301 -502	PACKING	A572-1007	1
H1019-0009-17	209 -503	PULLEY, scynchro B ANDO	A572-0305	1	H1020-1137-84	302 -502	PACKING	A572-1007	1
H1019-0009-17	260 -503	PULLEY, scynchro B ANDO	A572-0305	1	H1020-1137-85	301 -503	PACKING	A572-1007	1
H1019-0009-18	209 -504	PULLEY, scynchro B ANDO	A572-0360	1	H1020-1137-85	302 -503	PACKING	A572-1007	1


P017

P018

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
H1020-1137-86	326 -501	PLATE	A572-1002	8	H1023-0017-54-2	314 -503	WIPER	A572-1002	1
H1020-1137-87	326 -502	PLATE	A572-1002	8	H1023-0017-99	271 -502	WIPER	A572-1002	1
H1020-1138-93-1	327 -501	PLATE	A572-1002	1	H1023-0018-34-1	318 -501	WIPER	A572-1002	1
H1020-1139-78	303 -501	PLATE	A572-1006	1	H1023-0018-36-1	222 -501	WIPER	A572-0260	1
H1020-1139-79	303 -502	PLATE	A572-1006	1	H1023-0018-40-1	225 -501	WIPER	A572-0260	1
H1020-1139-82	224 -502	STOPPER	A572-0260	1	H1024-0003-48-1	1 -502	BELLOWS	A572-0200	2
H1020-1139-83	223 -503	PLATE	A572-0260	1	H1024-0003-48-1	4 -502	BELLOWS	A572-0200	2
H1020-1139-84	226 -502	STOPPER	A572-0260	1	H1024-0003-50-1	7 -502	BELLOWS	A572-0205	1
H1020-1142-86	316 -507	PLATE	A572-1002	1	H1024-0003-51	7 -503	BELLOWS	A572-0205	1
H1020-1142-87	316 -506	PLATE	A572-1002	1	H1032-1006-70-1	272 -505	PACKING	A572-1002	1
H1020-1142-88	312 -505	PLATE	A572-1040	1	H1032-1006-92	316 -503	WIPER	A572-1002	1
H1020-1142-89	312 -504	PLATE	A572-1040	1	H1032-1006-93	316 -504	WIPER	A572-1002	1
H1020-1145-67-1	319A-503	PLATE	A572-1002	1	H1032-1006-94	316 -505	WIPER	A572-1002	1
H1020-1145-68-1	319A-502	PLATE	A572-1002	1	H1032-1006-95	313 -504	WIPER	A572-1040	1
H1020-1146-30	322 -501	PLATE	A572-1002	1	H1032-1006-96	313 -505	WIPER	A572-1040	1
H1020-1146-31	322 -502	PLATE	A572-1002	1	H1032-1006-97	313 -506	WIPER	A572-1040	1
H1020-1151-30	315 -502	PLATE	A572-1002	1	H1032-1006-98	313 -507	WIPER	A572-1040	1
H1020-1156-96	310 -503	PLATE	A572-1007	2	H1032-1006-99	313 -508	WIPER	A572-1040	1
H1022-1047-05	312 -503	PLATE	A572-1002	1	H1040-1021-98	110 -501	NAMEPLATE	A118-0012	1
H1022-1047-05	314 -502	PLATE	A572-1002	1	H1040-1021-98	160 -501	NAMEPLATE	A118-0012	1
H1022-1063-70	301 -504	PLATE	A572-1007	1	H1040-1021-99	110 -502	NAMEPLATE	A118-0012	1
H1022-1063-70	302 -504	PLATE	A572-1007	1	H1040-1021-99	160 -502	NAMEPLATE	A118-0012	1
H1022-1069-35-2	326 -503	SHEET	A572-1002	4	H1040-1045-55-3	202 -501	NAMEPLATE	A572-0360	1
H1022-1070-40-1	319 -501	WIPER	A572-1002	1	H1040-1045-56-3	253 -501	NAMEPLATE	A572-0302	1
H1023-0016-99-2	272 -501	WIPER	A572-0225	1	H1040-1050-12	301 -506	NAMEPLATE ALP	A572-1922	1
H1023-0017-41	313 -502	WIPER	A572-1002	1	H1062-0000-36	311 -503	KNOB	A572-1015	1
H1023-0017-42-1	315 -501	WIPER	A572-1002	1	H1062-0000-36	311A-501	KNOB	A572-1015	1
H1023-0017-43-1	320 -503	WIPER	A572-1002	1	H1062-0001-76	301 -505	HANDLE	A572-1007	1
H1023-0017-44-1	251 -501	WIPER	A572-1002	1	H1062-0001-76	302 -505	HANDLE	A572-1007	1
H1023-0017-51-3	316 -501	WIPER	A572-1002	1	H1069-0000-26	305 -502	BALL CATCH	A572-1002	1
H1023-0017-53-2	312 -501	WIPER	A572-1040	1	H1069-0000-86	311 -504	KEY, lock	A572-1015	1

PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY	PARTS NO.	INDEX NO.	DESCRIPTION	UNIT NO.	QTY
H1069-0000-86	311A-502	KEY, LOCK	A572-1015	1					
H1080-0002-67	402 -502	WHEEL TAKIGEN	A572-0800	1					
H1080-0002-70	404 -501	CASTER KOBAYASHI	A127-0200	1					
H1080-0002-70	404 -501	CASTER	A127-0201	2					
H1080-0002-71	404 -502	CASTER	A127-0201	2					
H1080-0002-71	404 -502	CASTER KOBAYASHI	A127-0200	2					
H1080-0002-71	404 -503	CHIP CONVEYOR (H)	A572-0902	2					
H1080-0002-75	402 -503	CASTER TAKIGEN	A572-0800	4					
H1090-0012-25-2	316 -502	COVER	A572-1002	1					
H1090-0012-95-1	271 -505	COVER, telesco ENO MOTO	A572-1002	1					
H9009-1200-03-1	221 -501	TERMINAL BOX	A572-1002	1					
H9011-1700-05	221A-501	TERMINAL BOX	A572-1002	1					
H9022-6200-13-2	306 -504	TERMINAL BOX	A572-1002	1					
H9023-2600-01-4	151 -501	TERMINAL BOX	A572-0120	1					
H9023-2600-02-4	101 -502	TERMINAL BOX SPHC	A572-0121	1					

P019

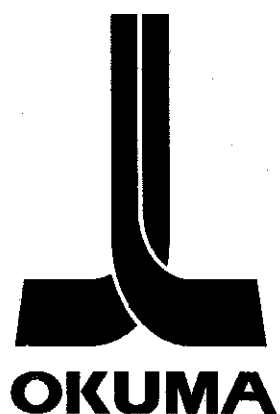

STANDARD/PURCHASE PARTS LIST

1001

PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION
C0201-060321	ITP 6X32	C3511-000030	SCREW DRIVER, cross
C0201-060361	ITP 6X36	C3559-004500	TOOL BOX
C0201-080321	ITP 8X32	C5000-050201	BOLT 5X20
C0201-080361	ITP 8X36	C5000-050251	BOLT 5X25
C0201-080451	ITP 8X45	C5000-060081	BOLT 6X8
C0201-100401	ITP 10X40	C5000-060101	BOLT 6X10
C0201-100501	ITP 10X50	C5000-060121	BOLT 6X12
C0500-000281	COVER, blind 28	C5000-060161	BOLT 6X16
C0500-000401	COVER, blind 40	C5000-060201	BOLT 6X20
C2600-000112	DAMPER, pressure	C5000-060551	BOLT 6X55
C2765-000351	CLAMP, wire 35	C5000-080201	BOLT 8X20
C2781-000812	P NIPPLE PA8	C5000-080251	BOLT 8X25
C2781-321022	PR ELBOW PR10	C5000-080301	BOLT 8X30
C2790-064002	10K HOSE 6X4000	C5000-080351	BOLT 8X35
C2790-068502	10K HOSE 6X8500	C5000-100351	BOLT 10X35
C2790-090802	10K HOSE 9X800	C5000-120251	BOLT 12X25
C2790-091002	10K HOSE 9X1000	C5000-120301	BOLT 12X30
C2790-091602	10K HOSE 9X1600	C5000-120401	BOLT 12X40
C2790-122002	10K HOSE 12X2000	C5000-120451	BOLT 12X45
C2790-192202	10K HOSE 19X2200	C5000-120501	BOLT 12X50
C2790-195202	10K HOSE 19X5200	C5000-120651	BOLT 12X65
C2790-196702	10K HOSE 19X6700	C5000-240651	BOLT 24X65
C2791-060902	30K HOSE 6X900	C5000-240701	BOLT 24X70
C2792-120502	70K HOSE 12X500	C5000-240901	BOLT 24X90
C2792-123502	70K HOSE 12X3500	C5000-242001	BOLT 24X200
C2792-124802	70K HOSE 12X4800	C5002-060251	BOLT, hex, head, grooved under head
C2792-125402	70K HOSE 12X5400	C5002-080451	BOLT, hex, head, grooved under head
C2792-126002	70K HOSE 12X6000	C5006-000321	BOLT, jack 32
C3510-000500	SCREW DRIVER, flat	C5010-040081	BOLT, socket-head 4X8
C3510-001500	SCREW DRIVER, flat	C5010-040101	BOLT, socket-head 4X10
C3511-000020	SCREW DRIVER, cross	C5010-040121	BOLT, socket-head 4X12

2005

PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION
C5010-040161	BOLT, socket-head 4X16	C5010-080451	BOLT, socket-head 8X45
C5010-040201	BOLT, socket-head 4X20	C5010-080501	BOLT, socket-head 8X50
C5010-050081	BOLT, socket-head 5X8	C5010-080851	BOLT, socket-head 8X85
C5010-050101	BOLT, socket-head 5X10	C5010-080901	BOLT, socket-head 8X90
C5010-050121	BOLT, socket-head 5X12	C5010-100141	BOLT, socket-head 10X14
C5010-050141	BOLT, socket-head 5X14	C5010-100201	BOLT, socket-head 10X20
C5010-050161	BOLT, socket-head 5X16	C5010-100251	BOLT, socket-head 10X25
C5010-050201	BOLT, socket-head 5X20	C5010-100301	BOLT, socket-head 10X30
C5010-050251	BOLT, socket-head 5X25	C5010-100351	BOLT, socket-head 10X35
C5010-050301	BOLT, socket-head 5X30	C5010-120251	BOLT, socket-head 12X25
C5010-050351	BOLT, socket-head 5X35	C5010-120301	BOLT, socket-head 12X30
C5010-060101	BOLT, socket-head 6X10	C5010-120351	BOLT, socket-head 12X35
C5010-060121	BOLT, socket-head 6X12	C5010-120401	BOLT, socket-head 12X40
C5010-060141	BOLT, socket-head 6X14	C5010-120501	BOLT, socket-head 12X50
C5010-060161	BOLT, socket-head 6X16	C5010-120601	BOLT, socket-head 12X60
C5010-060181	BOLT, socket-head 6X18	C5010-120751	BOLT, socket-head 12X75
C5010-060201	BOLT, socket-head 6X20	C5010-120851	BOLT, socket-head 12X85
C5010-060251	BOLT, socket-head 6X25	C5010-160301	BOLT, socket-head 16X30
C5010-060301	BOLT, socket-head 6X30	C5010-160401	BOLT, socket-head 16X40
C5010-060351	BOLT, socket-head 6X35	C5010-160601	BOLT, socket-head 16X60
C5010-060451	BOLT, socket-head 6X45	C5010-160651	BOLT, socket-head 16X65
C5010-060501	BOLT, socket-head 6X50	C5010-200601	BOLT, socket-head 20X60
C5010-060651	BOLT, socket-head 6X65	C5010-200801	BOLT, socket-head 20X80
C5010-080121	BOLT, socket-head 8X12	C5010-240651	BOLT, socket-head 24X65
C5010-080141	BOLT, socket-head 8X14	C5010-240701	BOLT, socket-head 24X70
C5010-080161	BOLT, socket-head 8X16	C5010-241201	BOLT, socket-head 24X120
C5010-080201	BOLT, socket-head 8X20	C5013-040081	SPACIAL BOLT
C5010-080251	BOLT, socket-head 8X25	C5013-050101	SPACIAL BOLT
C5010-080301	BOLT, socket-head 8X30	C5013-050121	SPACIAL BOLT
C5010-080351	BOLT, socket-head 8X35	C5013-060101	SPACIAL BOLT
C5010-080401	BOLT, socket-head 8X40	C5013-060121	SPACIAL BOLT

5005

PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION
C5013-060141	SPACIAL BOLT	C5040-005081	SCREW, pan-head 5X8
C5013-060161	SPACIAL BOLT	C5040-005101	SCREW, pan-head 5X10
C5013-060201	SPACIAL BOLT	C5040-006081	SCREW, pan-head 6X8
C5013-060251	SPACIAL BOLT	C5040-006101	SCREW, pan-head 6X10
C5013-080161	SPACIAL BOLT	C5040-006201	SCREW, pan-head 6X20
C5021-000161	LIFTING eyebolt 16	C5041-004081	SCREW, pan-head with washer 4X8
C5022-000121	PLUG, filler, eye-bolt hole 12	C5050-004081	SCREW, flat-head 4X8
C5030-004051	SET-SCREW, flat-point 4X5	C5050-004121	SCREW, flat-head 4X12
C5030-005051	SET-SCREW, flat-point 5X5	C5050-005081	SCREW, flat-head 5X8
C5030-005121	SET-SCREW, flat-point 5X12	C5050-005101	SCREW, flat-head 5X10
C5030-006061	SET-SCREW, flat-point 6X6	C5050-006121	SCREW, flat-head 6X12
C5034-006101	SET-SCREW 6X10	C5050-008301	SCREW, flat-head 8X30
C5034-006221	SET-SCREW 6X22	C5076-000020	SCREW, drive
C5035-006161	SET-SCREW, dog-point 6X16	C5085-080251	KNOB BOLT
C5035-008121	SET-SCREW, dog-point 8X12	C5089-100351	SCREW, pin
C5035-008161	SET-SCREW, dog-point 8X16	C5100-000041	NUT, hex. No. 3 4
C5035-010161	SET-SCREW, dog-point 10X16	C5100-000051	NUT, hex. NO. 3 5
C5035-012221	SET-SCREW, dog-point 12X22	C5100-000081	NUT, hex. NO. 3 8
C5036-006061	SET-SCREW, drilled head, flat poin	C5100-000101	NUT, hex. No. 3 10
C5036-006081	SET-SCREW, drilled head, flat poin	C5100-000201	NUT, hex. NO. 3 20
C5036-006121	SET-SCREW, drilled head, flat poin	C5100-000241	NUT, hex. NO. 3 24
C5036-006161	SET-SCREW, drilled head, flat poin	C5104-000321	NUT, jack-bolt
C5036-008081	SET-SCREW, drilled head, flat poin	C5110-000051	NUT, hex. NO. 4 5
C5036-008121	SET-SCREW, drilled head, flat poin	C5110-000101	NUT, hex. NO. 4 10
C5036-010121	SET-SCREW, drilled head, flat poin	C5110-000121	NUT, hex. NO. 4 12
C5036-012161	SET-SCREW, drilled head, flat poin	C5131-000201	NUT, round slotted precision 20
C5036-012201	SET-SCREW, drilled head, flat poin	C5131-000251	NUT, round slotted precision 25
C5036-012251	SET-SCREW, drilled head, flat poin	C5131-000351	NUT, round slotted precision 35
C5036-016251	SET-SCREW, drilled head, flat poin	C5131-000401	NUT, round slotted precision 40
C5036-016401	SET-SCREW, drilled head, flat poin	C5131-000851	NUT, round slotted precision 85
C5040-004121	SCREW, pan-head 4X12	C5132-000121	NUT, bearing 12

5004

PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION
C5140-000051	WASHER, polished 5	C5175-150401	KEY, feather with screw
C5140-000061	WASHER, polished 6	C5175-151001	KEY, feather with screw
C5140-000081	WASHER, polished 8	C5180-000100	SNAP-RING, external 10
C5140-000101	WASHER, polished 10	C5180-000300	SNAP-RING, external 30
C5140-000121	WASHER, polished 12	C5180-000350	SNAP-RING, external 35
C5140-000161	WASHER, polished 16	C5180-000400	SNAP-RING, external 40
C5150-000061	WASHER, plain 6	C5180-000450	SNAP-RING, external 45
C5150-000081	WASHER, plain 8	C5180-000650	SNAP-RING, external 65
C5150-000101	WASHER, plain 10	C5181-000280	SNAP-RING, internal 28
C5150-000121	WASHER, plain 12	C5181-000320	SNAP-RING, internal 32
C5151-000061	WASHER 6	C5181-000470	SNAP-RING, internal 47
C5153-000200	WASHER, lock, precision 20	C5181-000620	SNAP-RING, internal 62
C5153-000250	WASHER, lock, precision 25	C5181-001200	SNAP-RING, internal 120
C5153-000350	WASHER, lock, precision 35	C5201-003060	PIN, parallel 3X6
C5153-000400	WASHER, lock, precision 40	C5201-004160	PIN, parallel 4X16
C5153-000850	WASHER, lock, precision 85	C5201-010160	PIN, parallel 10X16
C5160-000051	WASHER, spring 5	C5201-010200	PIN, parallel 10X20
C5160-000061	WASHER, spring 6	C5211-030060	PIN, spring, W 3X6
C5160-000081	WASHER, spring 8	C5211-050100	PIN, spring, W 5X10
C5160-000101	WASHER, spring 10	C5211-080360	PIN, spring, W 8X36
C5160-000121	WASHER, spring 12	C5220-001000	HINGE
C5160-000161	WASHER, spring 16	C5250-040060	PLUG
C5160-000201	WASHER, spring 20	C5250-060060	PLUG
C5161-000051	WASHER, spring for hole 5	C5250-080080	PLUG
C5161-000061	WASHER, spring for hole 6	C5416-001000	HINGE
C5161-000121	WASHER, spring for hole 12	C5420-102050	COLLAR
C5170-040120	KEY, feather 4X4X12	C5486-012100	COLLAR, distance, inner
C5170-050120	KEY, feather 5X5X12	C5800-004030	SET PIECE 4X3
C5170-050200	KEY, feather 5X5X20	C5800-004060	SET PIECE 4X6
C5170-100200	KEY, feather 10X10X20	C5800-006040	SET PIECE 6X4
C5175-120501	KEY, feather with screw	C5800-006060	SET PIECE 6X6

5005

PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION
C5901-000790	BALL, steel	C7781-080300	PIPE, steel
C5901-000950	BALL, steel	C7782-000022	NIPPLE, barrel
C6101-308100	STRING, rubber	C7784-400502	PIPE, gas
C6105-000010	PACKING	C7784-400702	PIPE, gas
C6110-0000P6	O-RING	C7793-250950	HOSE, vinyl
C6110-0000P7	O-RING	C7793-251000	HOSE, vinyl
C6110-0000P8	O-RING	C7793-251200	HOSE, vinyl
C6110-0000P9	O-RING	C7793-252500	HOSE, vinyl
C6110-000G25	O-RING	C7793-254500	HOSE, vinyl
C6110-000G45	O-RING	C7800-000422	M-NIPPLE
C6110-000G55	O-RING	C7806-000442	M-SOCKET, male-female 3/4
C6110-000G65	O-RING	C7810-000442	M ELBOW
C6110-000G75	O-RING	C7812-000442	M ELBOW, street
C6110-000G80	O-RING	C7813-000442	M45° ELBOW male-female
C6110-000P10	O-RING	C7861-000002	PLUG, socket-head
C6110-000P11	O-RING	C7861-000012	PLUG, socket-head
C6110-000P16	O-RING	C7861-000022	PLUG, socket-head
C6110-000P35	O-RING	C7861-000032	PLUG, socket-head
C6110-000P52	O-RING	C7861-000042	PLUG, socket-head
C6110-00G100	O-RING	C7861-000052	PLUG, socket-head
C6110-00G120	O-RING	C7865-000042	BOSS, welded tapped hole
C6110-00G145	O-RING	C7870-000012	JOINT, hose socket
C6110-00G150	O-RING	C7870-000022	JOINT, hose socket
C6110-00G190	O-RING	C7870-000042	JOINT, hose socket
C6110-00G195	O-RING	C7870-010012	JOINT, hose nipple
C6110-00G200	O-RING	C7870-010022	JOINT, hose nipple
C6110-00G230	O-RING	C7870-010032	JOINT, hose nipple
C6110-00P190	O-RING	C7870-010042	JOINT, hose nipple
C7780-000100	PIPE	C7870-020012	JOINT, hose elbow
C7781-040040	PIPE, steel	C7870-020022	JOINT, hose elbow
C7781-040060	PIPE, steel	C7870-020032	JOINT, hose elbow

900S

PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION
C7870-020042	JOINT, hose elbow	D7784-400502	PIPE, gas 3/4X50
C7870-020052	JOINT, hose elbow	D7870-000022	SOCKET, hose joint 3/8 (9)
C7870-030022	JOINT, hose 45° elbow	D7870-000042	SOCKET, hose joint 3/4 (19)
C7870-030032	JOINT, hose 45° elbow	D7870-010012	NIPPLE, hose joint 1/4 (6)
C7872-002542	JOINT, hose	D7870-010032	NIPPLE, hose joint 1/2 (12)
C7875-000112	JOINT	D7870-010042	NIPPLE, hose joint 3/4 (19)
C7900-000112	S NIPPLE	D7870-020012	ELBOW, hose joint 1/4 (6)
C7900-020112	S SOCKET male-female	D7870-020022	ELBOW, hose joint 3/8 (9)
C7900-020122	S SOCKET male-female	D7870-020042	ELBOW, hose joint 3/4 (19)
C7900-020332	S SOCKET male-female	D7870-020052	ELBOW, hose joint 1 (25)
C7900-050112	S SOCKET male-female	D7870-030032	ELBOW 45°, hose joint 1/2 (12)
C7900-060112	S TEE	D7872-002542	JOINT, vinyl hose
C8500-008100	WRENCH, open-end 8X10	E1005-288-019	MOTOR
C8500-012140	WRENCH, open-end 12X14	E1005-288-019-2	MOTOR
C8500-013170	WRENCH, open-end 13X17	E1005-288-020-1	MOTOR
C8500-019220	WRENCH, open-end 19X22	E1013-288-001	MOTOR
C8500-024270	WRENCH, open-end 24X27	E2131-120-023-1	BRAKE, magnetic OGURA RNB0.4G-16
C8500-030320	WRENCH, open-end 30X32	E2131-120-025	BRAKE, magnetic OGURA RNB0.4G
C8500-036410	WRENCH, open-end 36X41	E2131-120-034-1	BRAKE, magnetic OGURA
C8502-000030	KEY, socket-head screw	E2131-120-035	BRAKE, magnetic OGURA
C8502-000040	KEY, socket-head screw	E2860-119-001	FOOT-SWITCH OFL-1-SM2C
C8502-000050	KEY, socket-head screw	E2860-119-003	FOOT-SWITCH OFL-TW-SM2C
C8502-000060	KEY, socket-head screw	E2860-119-005	FOOT-SWITCH OFL-1-SM2. KS
C8502-000080	KEY, socket-head screw	E3012-891-001	SWITCH, limit YAMATAKE
C8502-000100	KEY, socket-head screw	E3012-891-056	SWITCH, limit YAMATEKE
C8502-000140	KEY, socket-head screw	E3019-891-017	SWITCH, limit YAMATAKE
C8502-000170	KEY, socket-head screw	E3020-397-101	SENSOR, proximity switch, empty
C8502-000190	KEY, socket-head screw	E3020-397-102	SENSOR, proximity switch, empty
D2760-000222	HANDLE COCK 3/8	E3020-397-182	SENSOR, proximity switch, empty
D7781-060200	PIPE, steel 6X200	E3532-801-016	WORK LIGHT MATSUSHITA

5007

PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION
E5150-023-005	SENSOR ER-M-G500P	J9811-1110-030006	SCREW, flat-head 3X6.0
E5150-023-012	SENSOR ER-M-G500	J9811-1110-030012	SCREW, flat-head JIS-B1111
E5150-023-017	SENSOR ER-M-G225	J9811-1110-040006	SCREW, flat-head 4X6
		J9811-1110-050008	SCREW, flat-head 5X8
F0000-431-000-19	D SOLENOID VALVE NACHI	J9811-1700-060006	SET-SCREW JIS-B1117
F0000-445-000-04	D SOLENOID VALVE NACHI	J9811-1700-060010	SET-SCREW JIS-B1117
F0010-720-000-02	VALVE NACHI	J9811-7600-030016	BOLT, socket-head JIS-B1176
F0011-730-000-06	VALVE, reducing NACHI	J9811-7600-030020	BOLT, socket-head M3.0X20-6G 12.9
F0011-740-000-20	VALVE, reducing NACHI	J9811-7600-050035	BOLT, socket-head JIS-B1176
F0040-980-000-13	VALVE, check NACHI	J9811-7600-050045	BOLT, socket-head JIS-B1176
F0130-03-000-69	PUMP, coolant FUJI	J9811-7600-050085	BOLT, socket-head JIS-B1176
F100-150-00550	O-RING NOK	J9811-7600-050125	BOLT, socket-head JIS-B1176
F100-150-00750	O-RING NOK	J9811-7600-060008	BOLT, socket-head JIS-B1176
F100-200-02450	O-RING NOK	J9811-7600-060065	BOLT, socket-head JIS-B1176
F100-200-02550	O-RING NOK	J9811-7600-060070	BOLT, socket-head JIS-B1176
F100-200-03150	O-RING NOK	J9811-7600-060095	BOLT, socket-head JIS-B1176
F109-0001-45	O-RING NOK	J9811-7600-060130	BOLT, socket-head JIS-B1176
F109-0002-25	O-RING NOK	J9811-7600-060160	BOLT, socket-head JIS-B1176
F109-0002-51	O-RING NOK	J9811-7600-060220	BOLT, socket-head JIS-B1176
F1100-032-05208	SEAL, oil NOK	J9811-7700-050005	SET-SCREW, drilled head, flat poin
F1100-035-04707	SEAL, oil NOK	J9811-7740-040005	SET-SCREW JIS-B1177
F1100-035-05207	SEAL, oil NOK	J9811-7740-060006	SET-SCREW JIS-B1177
F1100-038-05208	SEAL, oil NOK	J9811-8000-240220	BOLT JIS-B1180
F1100-042-05509	SEAL, oil NOK	J9812-5610-000030	WASHER JIS-B1256
F1110-032-05208	SEAL, oil NOK	J9828-0500-000040	E-RING JIS-B2805
F1110-035-04804	SEAL, oil NOK	J9828-0500-000060	E-RING JIS-B2805
F1113-018-02604	SEAL, oil NTN	J9828-0610-000500	C-RING JIS-B2806
F1113-038-04804	SEAL, oil NTN		
J9811-1100-040005	SCREW, pan-head M4X5.0	M000-6000ZZ	BEARING
J9811-1110-030004	SCREW, flat-head JIS-B1111	M000-6001ZZ	BEARING
		M000-6002ZZ	BEARING

PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION
M000-6007ZZP5	BEARING	M009-0027-20-1	BEARING THK
M000-6008ZP5	BEARING	M009-0027-71	BEARING FAG
M000-6011Z	BEARING	M009-0029-46	BEARING NSK
M000-6013ZZP5	BEARING	M009-0029-47	BEARING NSK
M000-6205LLBP5	BEARING NTN	M009-0029-77	BEARING THK
M000-6305LLBP5	BEARING NTN	M009-0029-79	BEARING NSK
M000-6906LLBP5	BEARING	M019-0010-53-1	HOSE, flexible CAPTAIN IND
M000-6908LLBP5	BEARING	M019-0010-55	DUCT KINJYO
M000-6909ZZP5	BEARING	M019-0010-62	DUCT CAPTAIN INP
M000-6917	BEARING NSK	M019-0010-63-1	HOSE, flexible CAPTAIN IND
M000-6917ZZ	BEARING	M019-0010-64-1	HOSE, flexible CAPTAIN IND
M000-7004P4	BEARING	M019-0010-88	DUCT CAPTAIN IND
M000-7005DBP4	BEARING	M019-0010-88-1	DUCT CAPTAIN IND
M000-L-1480ZZ	BEARING NMB	M019-0011-64	HOSE, flexible KINJO
M001-AS1105	BEARING NTN	M100-06066-02118	SPRING, compression
M001-CF10	BEARING IKO CF10	M100-08088-04423	SPRING, compression
M001-CF10B	BEARING IKO	M101-12110-02006	SPRING, compression
M001-CFH6UUR	BEARING THK CFH6UUR	M101-16216-01802	SPRING, compression
M001-CFH6UUR-A	BEARING THK	M101-20270-02102	SPRING, compression
M001-NK18/16	BEARING NTN	M101-35295-06909	SPRING, compression
M001-NK38/20R	BEARING NTN	M109-0013-55	SPRING, dish IWATA
M001-RNA4900LL	BEARING NTN	M109-1035-56-1	PLATE SUP3
M004-DBB6030	BEARING DAIDO	M109-1036-56	PLATE SUP3
M004-MB0606DU	BEARING DAIDO	M119-0006-91	STS BELT
M004-MB1008DU	BEARING DAIDO	M119-0009-07	STS BELT
M009-0010-32-1	BEARING NSK	M119-0009-22	STS BELT
M009-0010-98	BEARING NTN	M1310-01103050	SHEET
M009-0016-80	BEARING NTN	M1310-01103090	SHEET
M009-0019-99	BEARING NTN	M1311-01524020	SHEET
M009-0026-09	BEARING NTN	M1311-02408320	SHEET
M009-0027-20	BEARING THK HSR35HR	M1371-0033004130	TURKITE B

8005

PARTS NO.	DESCRIPTION	PARTS NO.	DESCRIPTION
T009-200-008-83	POWER CHECK KITAGAWA		
T009-200-009-62	POWER CHECK KITAGAWA		
T019-400-002-04	GAUGE, pressure TOYO		
T019-400-003-34	GAUGE, pressure NAGANO		
T019-400-003-35	GAUGE, pressure NAGANO		
T029-000-001-90	WRENCH		
T029-000-004-59	SPANNER		
T029-000-005-32	WRENCH, torque		
T029-010-000-55	HANDLE, T		
T029-030-000-14	SOCKET		
T129-410-000-79	NUT SAKAMAKI		

600S

LIST OF PUBLICATIONS

Publication No.	Date	Edition
LE15-102-R1	September 1993	1st
LE15-102-R2	September 1994	2nd

This manual may be at variance with the actual product due to specification or design changes.

Please also note that specifications are subject to change without notice.

If you require clarification or further explanation of any point in this manual, please contact your OKUMA representative.