


Engine Oil

Inspection

1. Check engine oil with the engine off and the car parked on level ground.
2. Make certain that the oil level indicated on the dipstick is between the upper and lower marks.
3. If the level has dropped close to the lower mark, add oil until it reaches the upper mark.


CAUTION: Insert the dipstick carefully to avoid bending it.

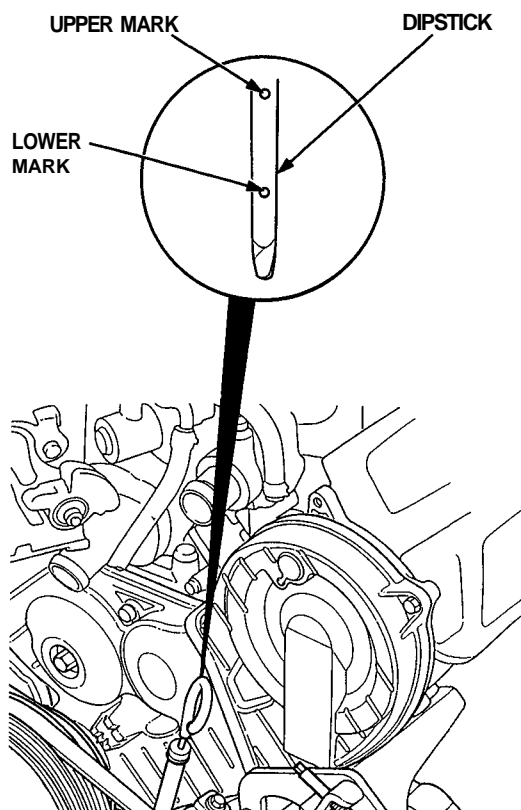

Replacement

CAUTION: Remove the drain bolt carefully. Hot oil may cause scalding.

1. Warm up the engine.
2. Drain the engine oil.

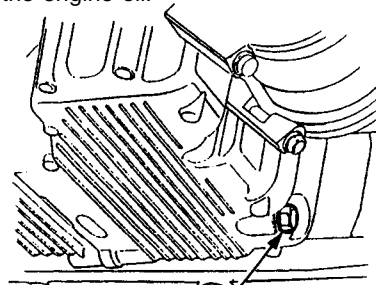

DRAIN BOLT
45 N·m (4.5 kg·m,
33 lb·ft)

3. Reinstall the drain plug with a new washer, and refill with the recommended oil.


CAUTION: Do not overtighten the drain bolt.

Requirement	API Service Grade: Use "Energy Conserving II" SG or SH grade oil. SAE 5W – 30 preferred. You can also use an oil a container that bears API CERTIFICATION mark.
Capacity	4.7 l (5.0 US qt, 4.1 Imp qt) at change, including filter. 5.0 l (5.3 US qt, 4.4 Imp qt) after engine overhaul.
Change	Every 7,500 miles (12,000 km) or 6 months whichever comes first.



APICERTIFICATIONMARK

Engine Oil Viscosity for Outside Temperature Ranges.

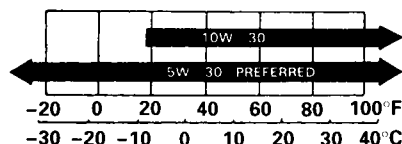

NOTE:

- Oil filter should be replaced at each oil change.

4. Fill the engine with oil up to the specified level, run the engine for more than three minutes, then check for oil leakage and oil level.