




PGM-FI System

Troubleshooting Flowchart — Ignition Output Signal



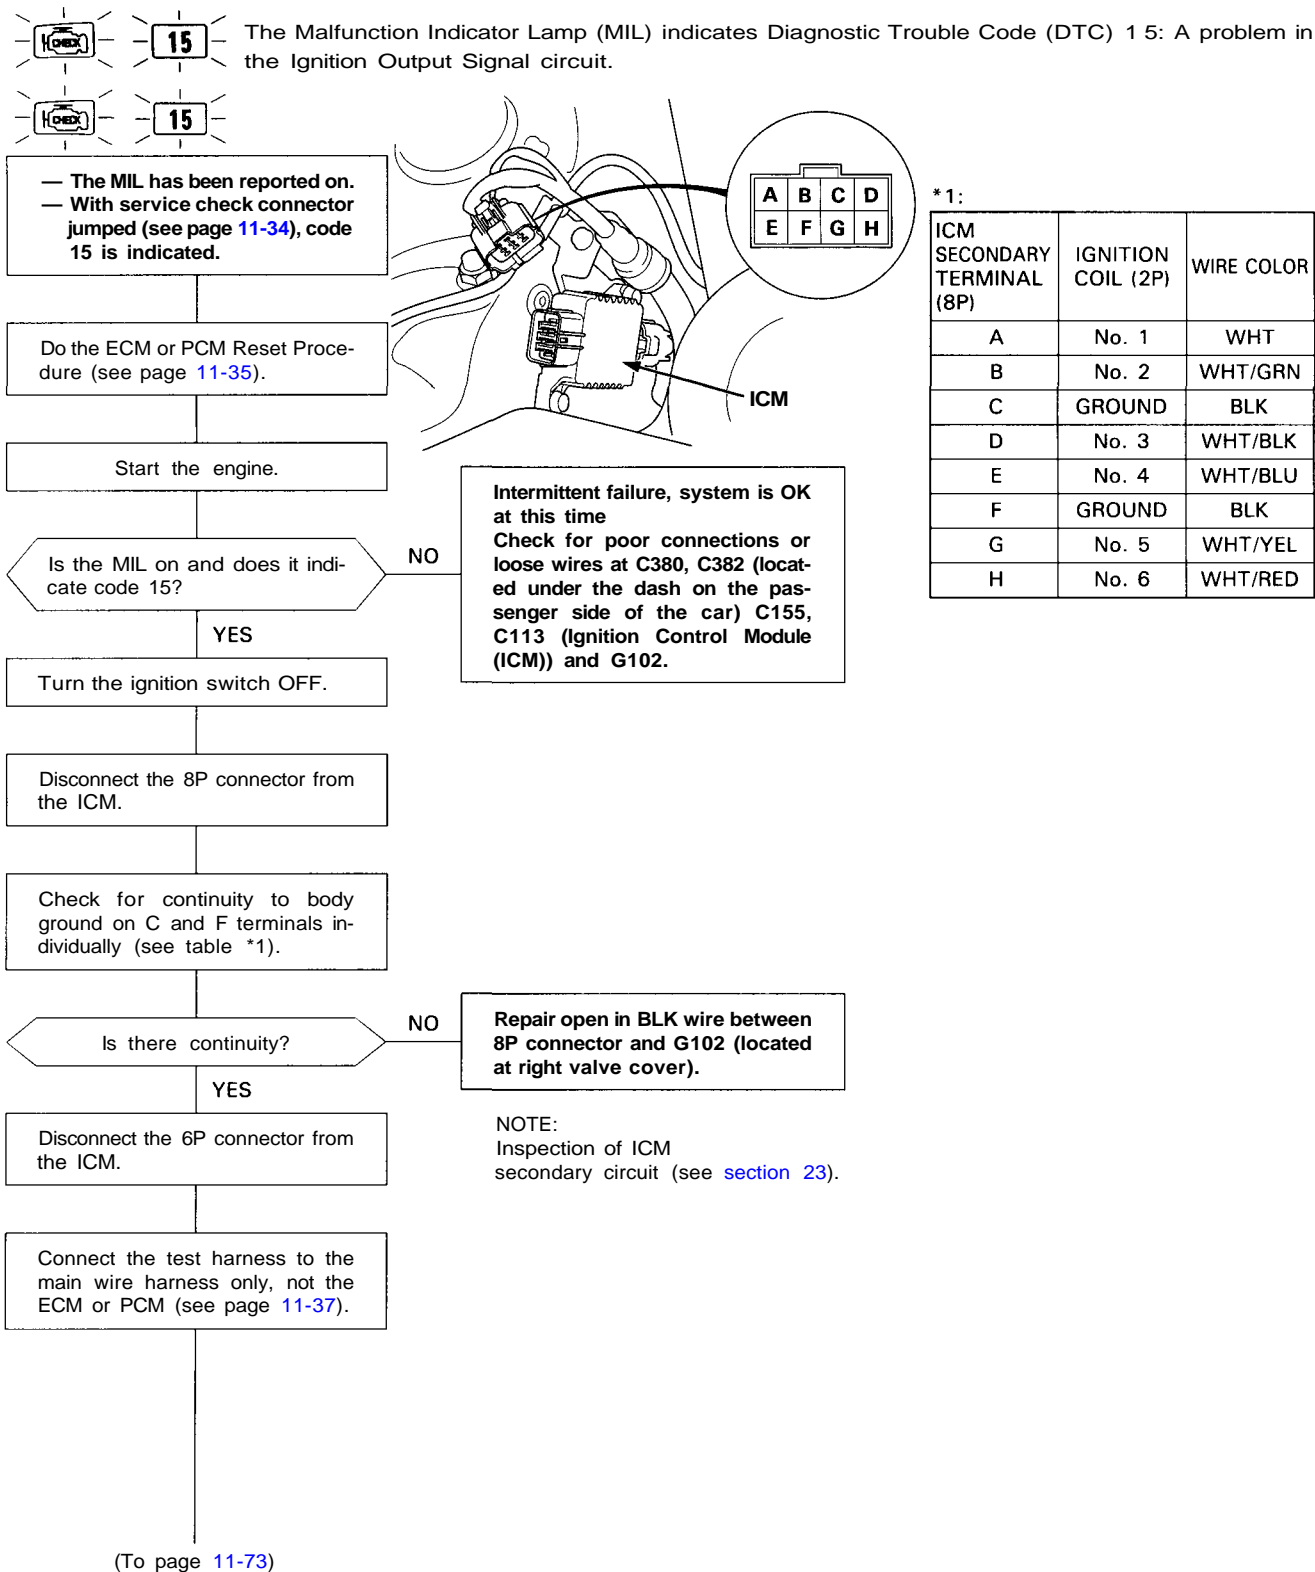

(From page 11-72)

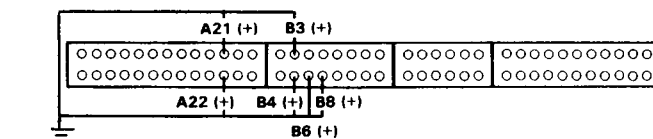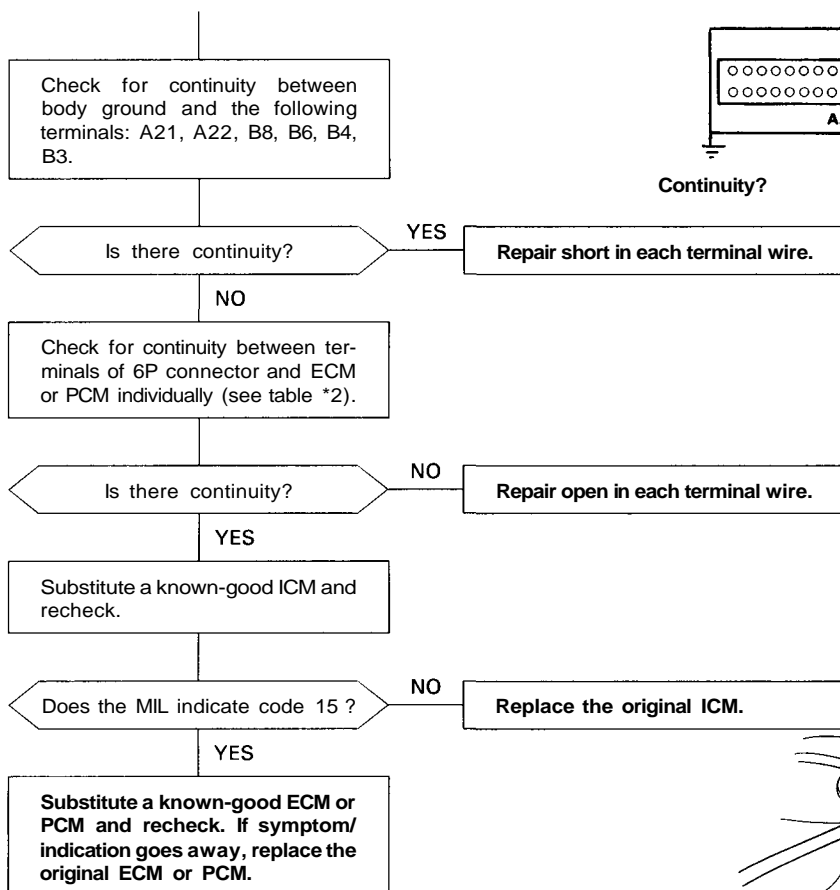

Continuity?

*2:

ICM PRIMARY TERMINAL (6P)	ECM TERMINAL	WIRE COLOR
A	B8 (No. 1)	BLU
B	A22 (No. 2)	BRN
C	A21 (No. 1)	PNK
D	B3 (No. 6)	RED
E	B4 (No. 5)	GRY
F	B6 (No. 4)	GRN

