




Disassembly/Reassembly

NOTE:

- Clean all parts thoroughly in solvent or carburetor cleaner, and dry with compressed air.
- Blow out all passages.
- Coat all parts with ATF before reassembly.
- Replace the O-rings and filters.
- Install the filters in the direction shown.

CAUTION: Do not use a magnet to remove the check balls; it may magnetize the balls.

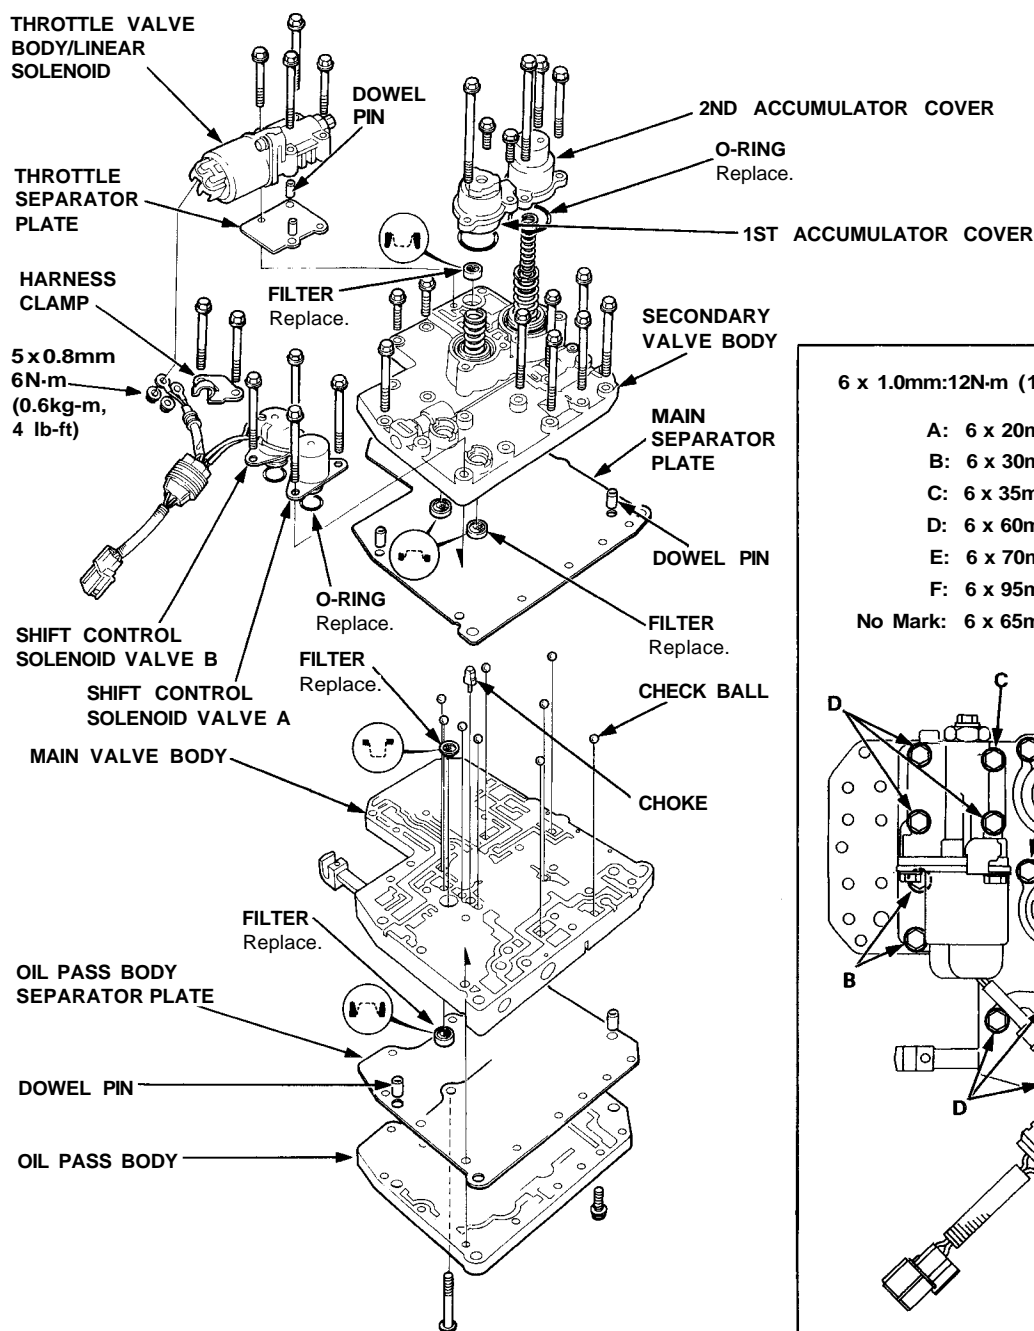

6 x 1.0mm:12N-m (1.2 kg-m, 9 lb-ft)

- A: 6 x 20mm 2 Bolts
- B: 6 x 30mm 2 Bolts
- C: 6 x 35mm 1 Bolt
- D: 6 x 60mm 6 Bolts
- E: 6 x 70mm 4 Bolts
- F: 6 x 95mm 2 Bolts
- No Mark: 6 x 65mm 8 Bolts

