


Power Door Mirror

Replacement

NOTE: Lower the glass fully.

1. Remove the door panel (see page 20-4).
2. Peel the plastic cover back (see page 20-5) and disconnect the connector.
3. Remove the mounting nuts. Detach the clip, then remove the door mirror while holding it.

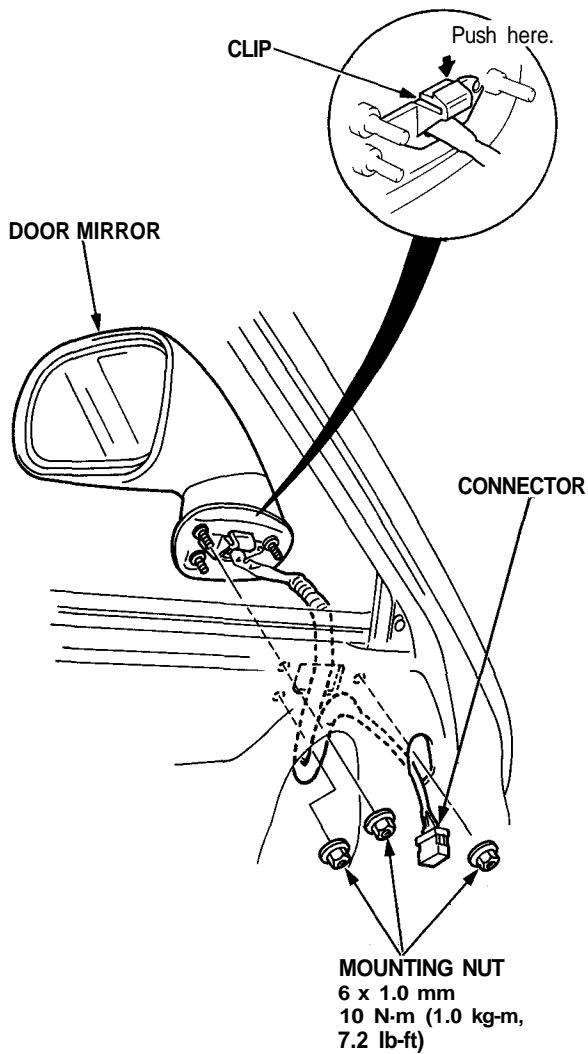


4. Installation is the reverse of the removal procedure.


Mirror Holder Replacement

1. Pry the mirror holder from the bottom until you can see the actuator, then disconnect the hooks using a flat tip screwdriver as shown.

NOTE: Take care not to scratch the mirror housing.

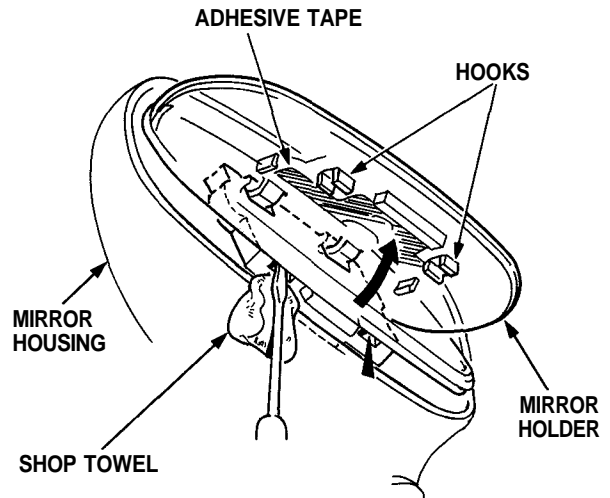

2. Disconnect the hooks and connector, then remove the mirror holder from the actuator.

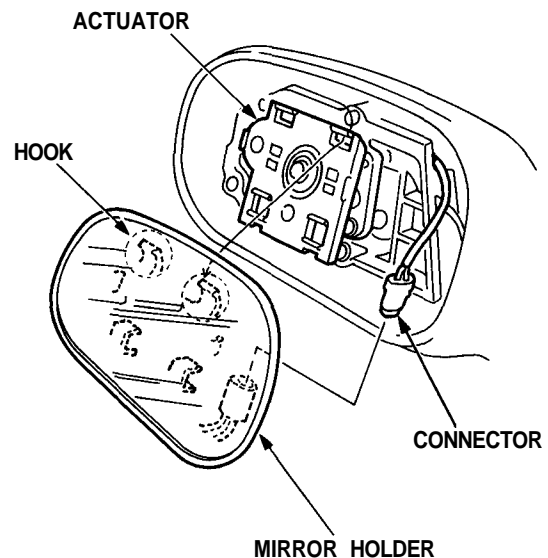

3. Installation is the reverse of the removal procedure.