




Headliner

Replacement

1. Remove:

- Sunvisors, center visor and holders
- Ceiling light
- Rearview mirror (see page 20-72)
- Front pillar trim (see page 20-43 ('91-'92)('93-'95))
- Center pillar trim (see page 20-43 ('91-'92)('93-'95)).
- Rear pillar trim (see page 20-43).
- Roof trim
- Grab handles
- Center armrest (see page 20-75)
- Front seat (see page 20-46)
- Rear seat (see page 20-66)

2. Remove the 10 screws.

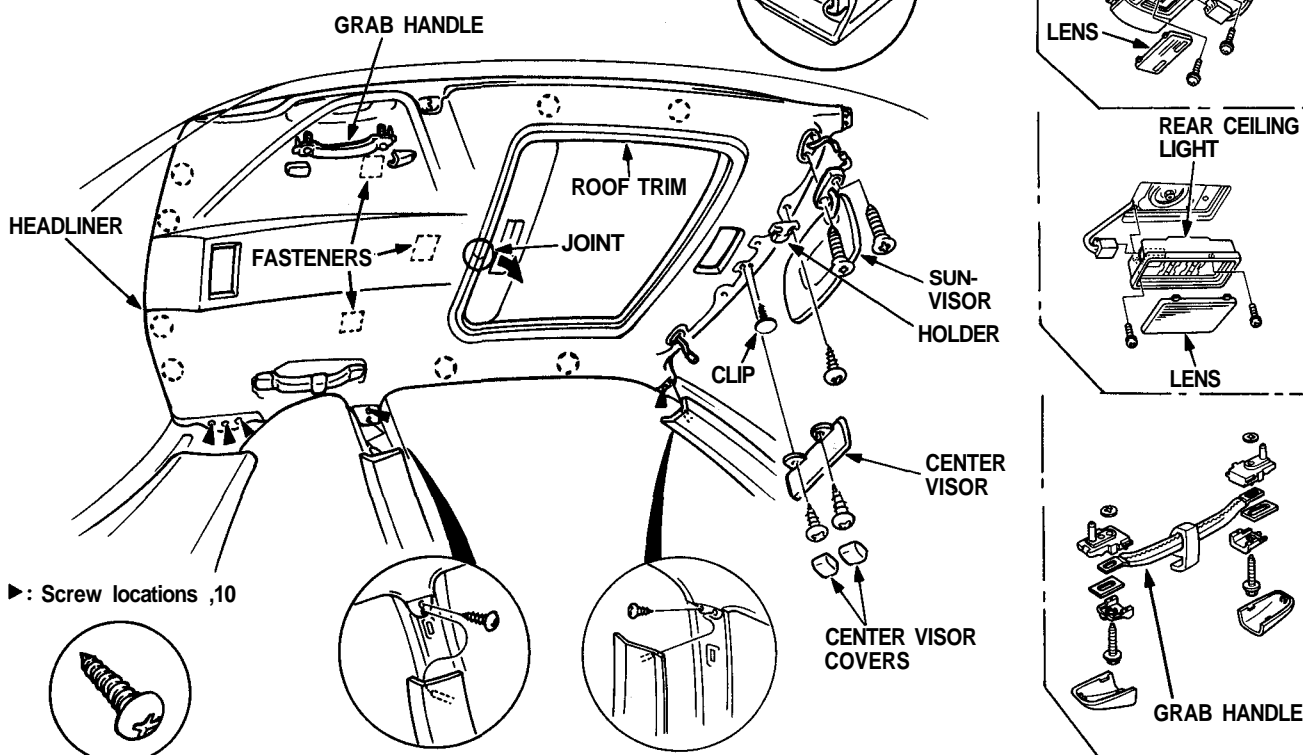

3. Remove the clips and fasteners, then remove the headliner.

4. Remove the headliner from the passenger's door opening.

NOTE:

- Take care not to bend the headliner.
- Keep water away from the headliner.
- Be careful not to damage the dashboard and other interior trim.

5. Installation is the reverse of the removal procedure.

NOTE:

- When inserting the headliner through the door opening, be careful not to fold or bend it. Also, be careful not to scratch the body.
- Check that the both sides of the headliner are securely attached to the trim.
- When installing the roof trim, install the joint towards the rear.

