


# Stereo Sound System

## Power Antenna Motor Replacement

1. Remove the trunk left side lining (see [section 20](#)).
2. Disconnect the 3-P connector and antenna lead from the motor, then remove the special nut and two mounting nuts to take out the motor with the mast antenna.

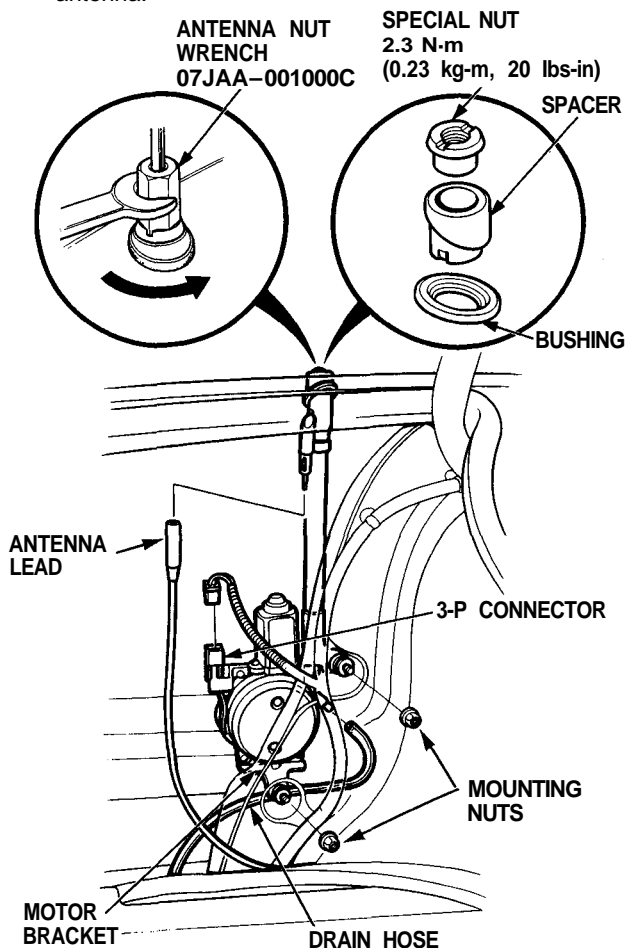


3. Install in the reverse order of removal.

NOTE: Tighten the special nut, then tighten the two mounting nuts to the motor bracket.

## Amplifier Removal

1. Remove the rear seat (see [section 20](#)).
2. Remove the three mounting bolts.
3. Disconnect the 5-P, 7-P and 1 6-P connectors, and take out the amplifier.

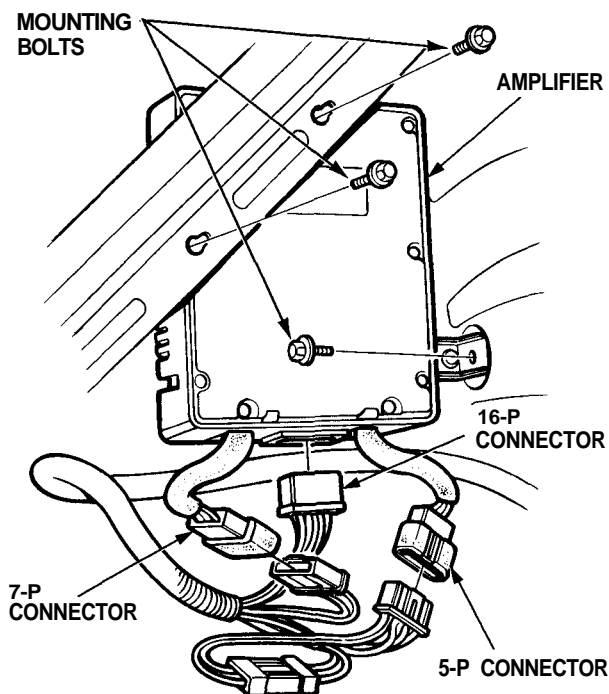

4. Install in the reverse order of removal.