

Stereo Sound System

Cable Reel Harness Test

CAUTION: Disconnect the battery negative cable and then the positive cable. Connect the short connector to the airbag assembly (see page 23-409).

1. Disconnect the cable reel 7-P connector from the SRS main harness, and connect Test Harness C only to the cable reel side of the 7-P connector.

CABLE REEL
HARNESS SIDE OF
7-P CONNECTOR

TEST
HARNESS C
07MA2-SP00600

1	2	3	4	5
6	7	8	9	10


Attach the short
connector

2. Separate the radio remote switch (see page 23-229).
3. Disconnect the 2-P connector from the radio remote switch.

RADIO REMOTE SWITCH

SWITCH COVER

2-P CONNECTOR

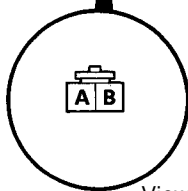

View from terminal side

4. Check for continuity between the No. 7 and B terminals. There should be continuity.
 - If there is no continuity, replace the cable reel.
 - If there is continuity, go to step 5.

5. Check for continuity between the A terminal and body ground. There should be continuity.

If there is no continuity, go to step 6.

6. Remove the airbag (see page 23-432).

7. Disconnect the ground connector, then check for continuity between the A terminal and ground connector. There should be continuity.

If there is no continuity, replace the cable reel.

