



Outer Molding/Inner Molding Replacement


CAUTION: Wear gloves to remove and install the outer molding and inner molding.

1. Lower the glass fully.

NOTE:

- Take care not to twist or scratch the outer and inner molding.
- The numbers after the part names show the quantities of the parts used.

Outer Molding:

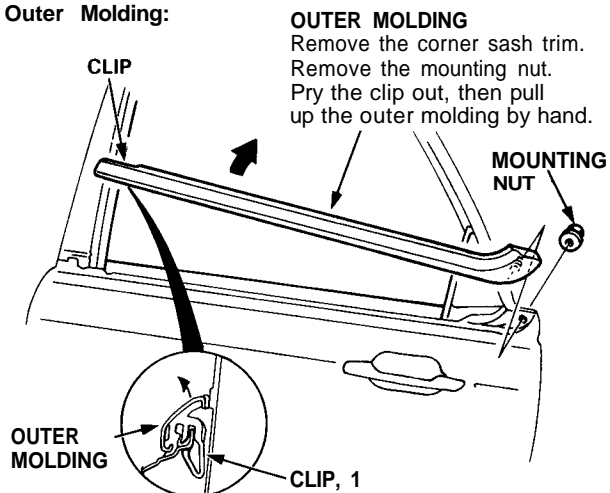


Inner Molding:

INNER MOLDING


Remove the door panel (see page 20-13).

Pry the clips out using a flat tip screwdriver, then pull up the inner molding.

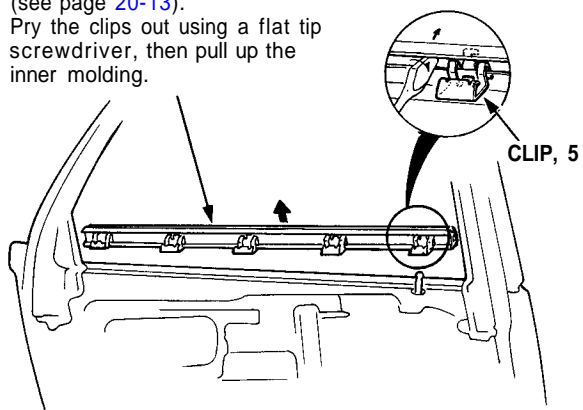

CLIP

If necessary, replace any damaged clips as shown.

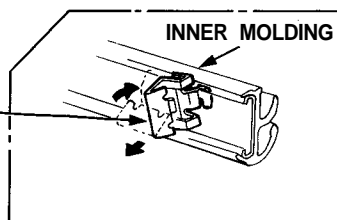


2. Installation is the reverse of the removal procedure.


Sash Trim Replacement

NOTE: Remove the glass (see page 20-17).

1. Peel the outer weatherstrip (see page 20-20) out, then remove the upper screw and loosen the other two screws.
2. Peel the glass run channel out, and remove the screws, then remove the sash trim by hand.

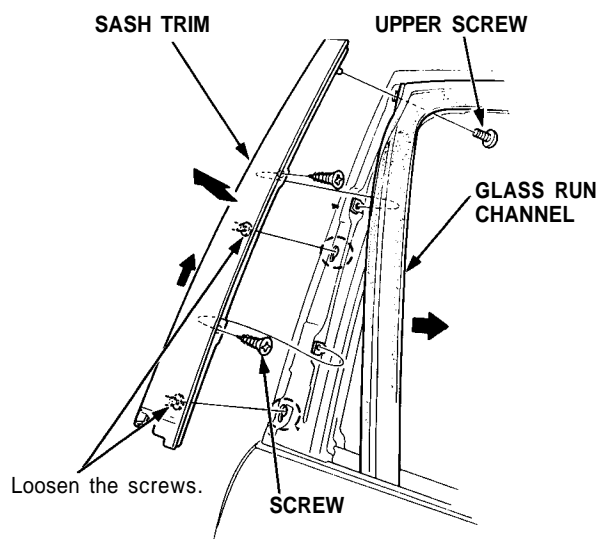

Corner Sash Trim: First peel the inner weatherstrip.

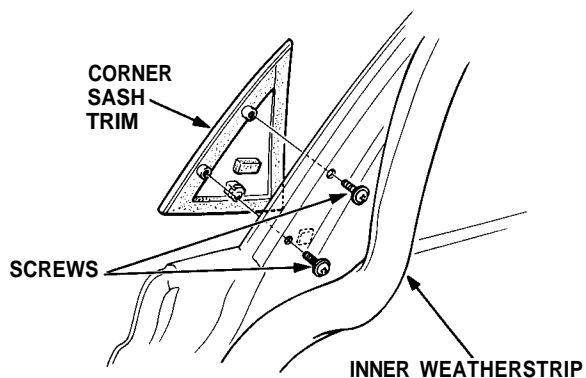

3. Installation is the reverse of the removal procedure.

NOTE:

- After installing, make sure the glass run channel is not twisted.
- Roll the glass up and down to see if it moves freely without binding.