



Slide Joint Cable Replacement


CAUTION: Wear gloves to remove and install the slide joint cable.

NOTE:

- Take care not to scratch the seat covers.
- Remove the front seat (see page 20-47).

1. Remove the slide joint cable.


NOTE: Take care not to bend the slide joint cable.

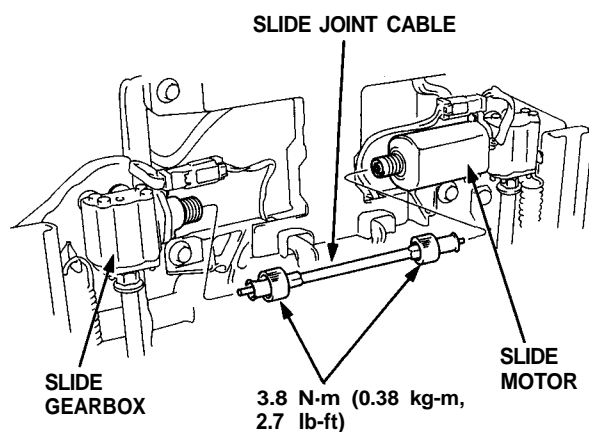

2. Installation is the reverse of the removal procedure.

NOTE:

- When installing the slide joint cable, set the inner cable securely.

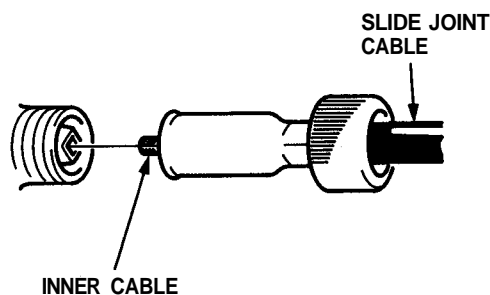


- Check that the slide motor and slide gearbox operate properly.

Recline Memory Switch Replacement


CAUTION: Wear gloves to remove and install the front seat.

NOTE: Take care not to scratch the seat covers.

1. Remove the front seat (see page 20-47).
2. Remove the cushion front cover, recline cover and height cover (see page 20-47).
3. Disconnect the connector and detach the wire ties (see page 20-48).

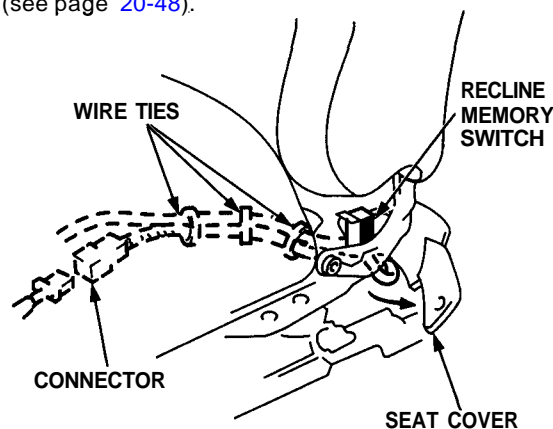

4. Pull back the seat cover.
5. Remove the recline memory switch.

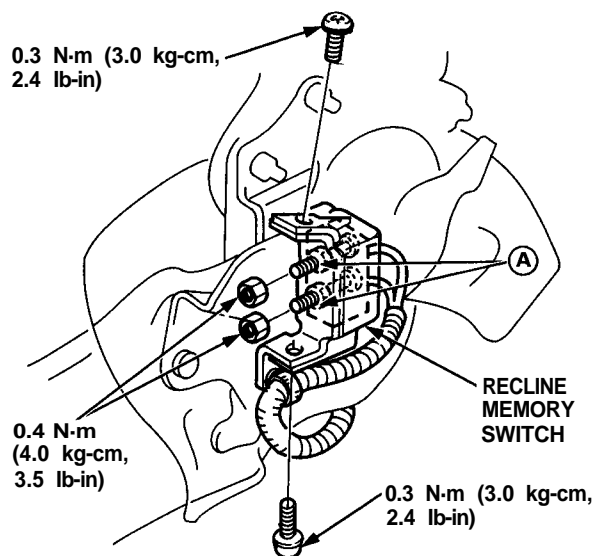

6. Installation is the reverse of the removal procedure.

NOTE:

- After installing the recline memory switch, apply liquid thread lock to (A) locations, then tighten the nuts.
- Make sure the connector is connected properly.
- Check the recline memory switch operation.