




Flowchart — A/C System

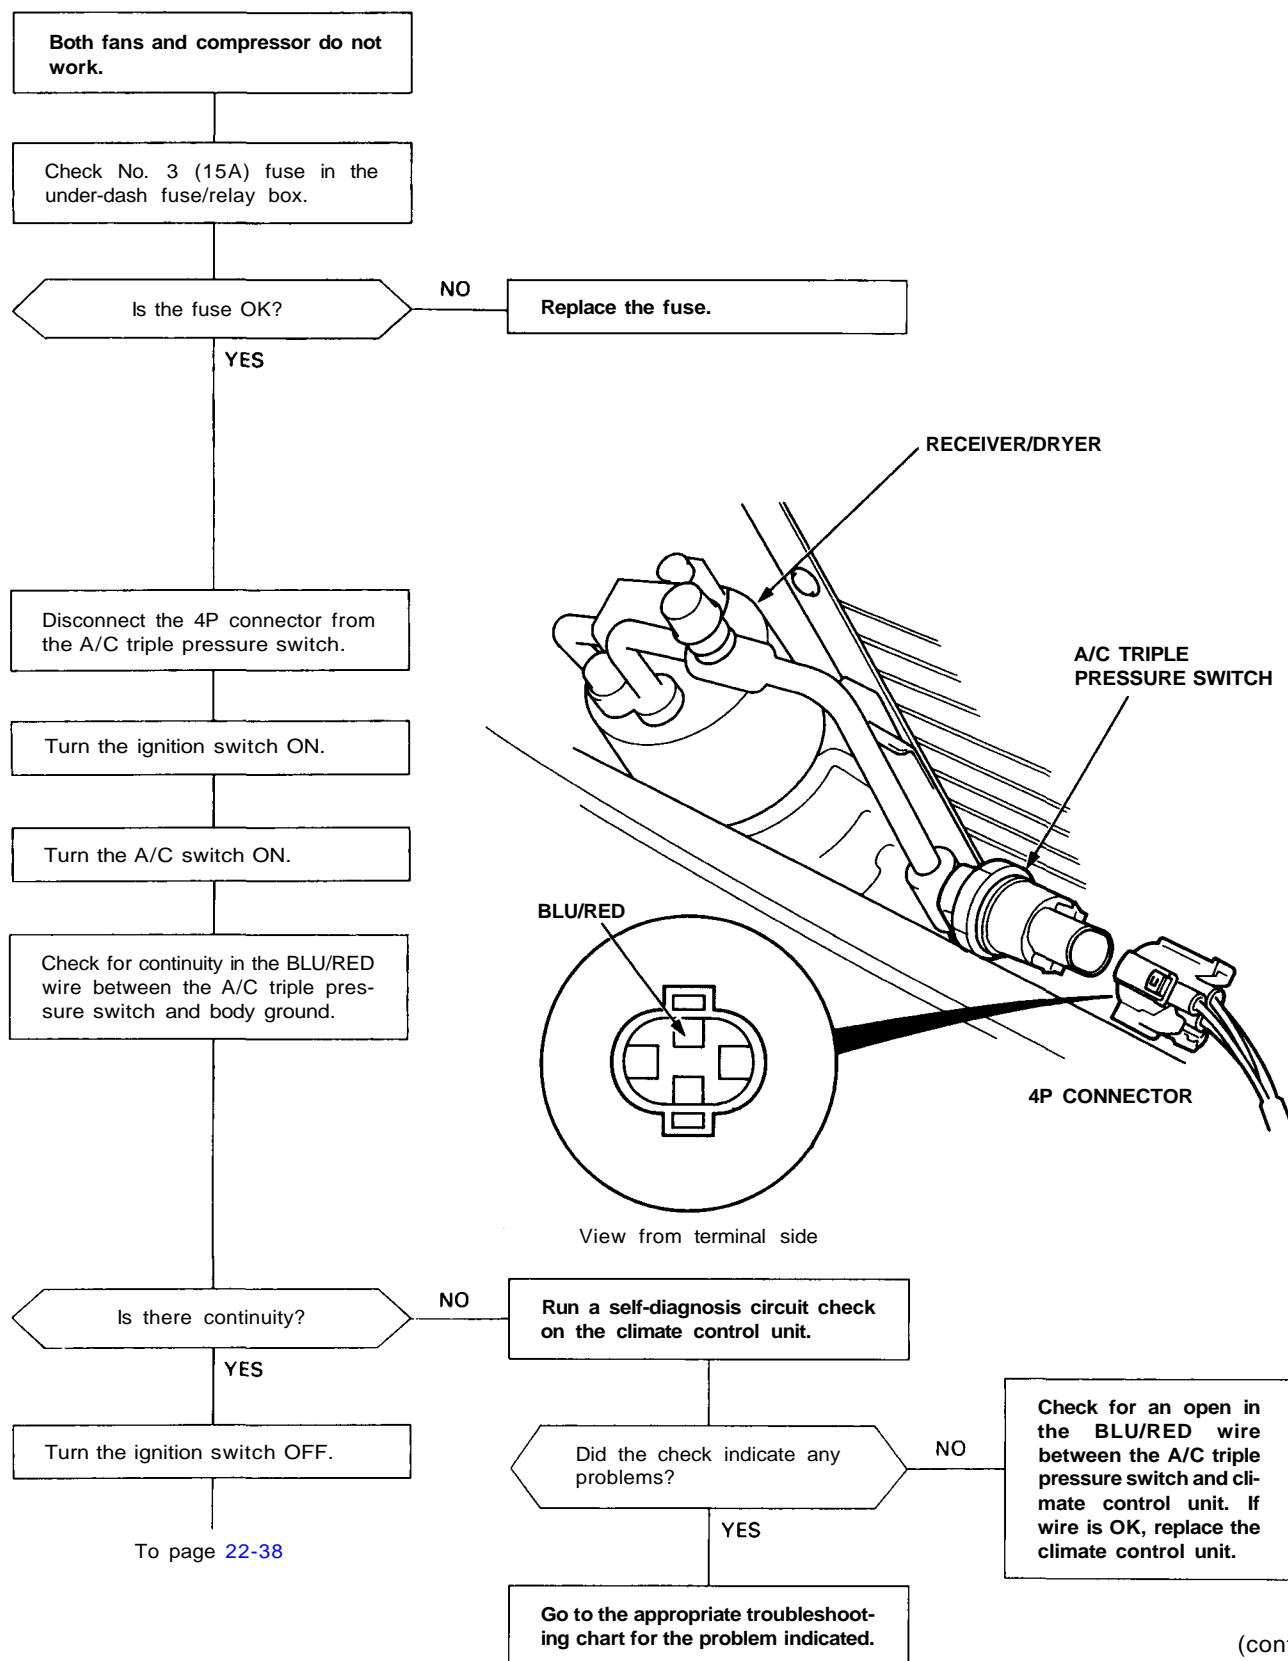

(cont'd)

Troubleshooting

Flowchart — A/C System (cont'd)

From page 22-37

Check for continuity between the No. ① and No. ② terminals of the A/C triple pressure switch.

Is there continuity?

NO

To page 22-39

YES

Disconnect the 12P connector from the fan control unit.

Check for continuity in the BLK wire between the fan control unit and body ground.

Is there continuity?

NO

Check for an open in the BLK wire between the fan control unit and body ground. If the wire is OK, check for poor ground at G301, G302, and G303.

YES

Turn the ignition switch ON.

Measure voltage between the YEL/BLK wire terminal (+) body ground(-).

Is there battery voltage?

NO



Repair open in the YEL/BLK wire between the fan control unit and the No. 3 115 A fuse in the under-dash fuse/relay box.

YES

Turn the ignition switch OFF.




To page 22-39

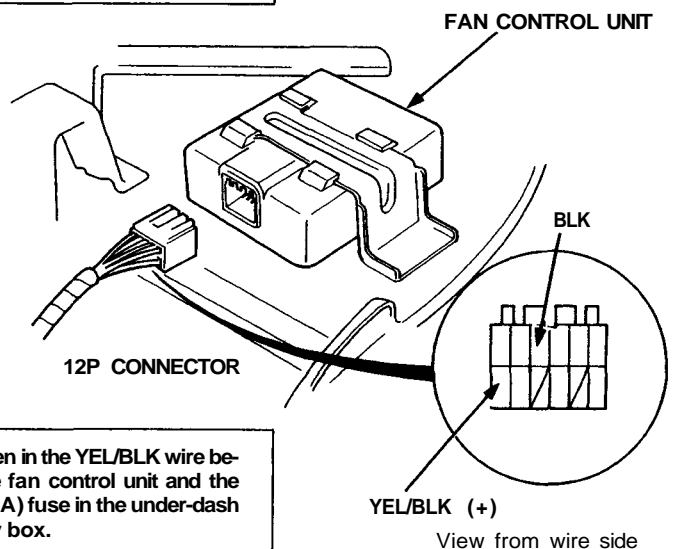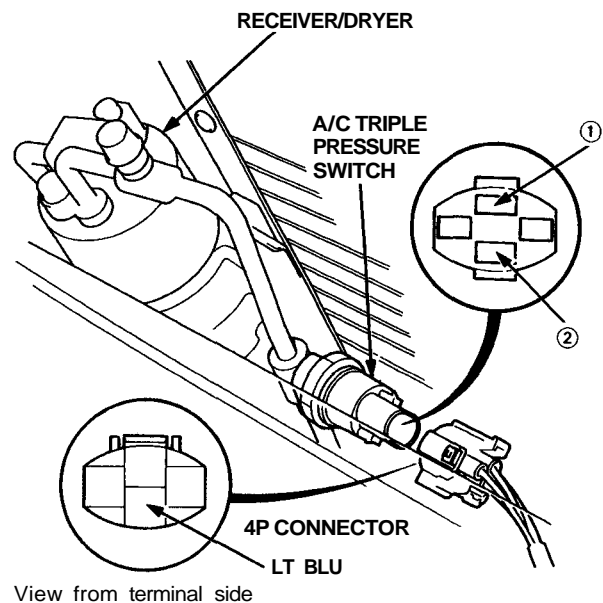



From page 22-38

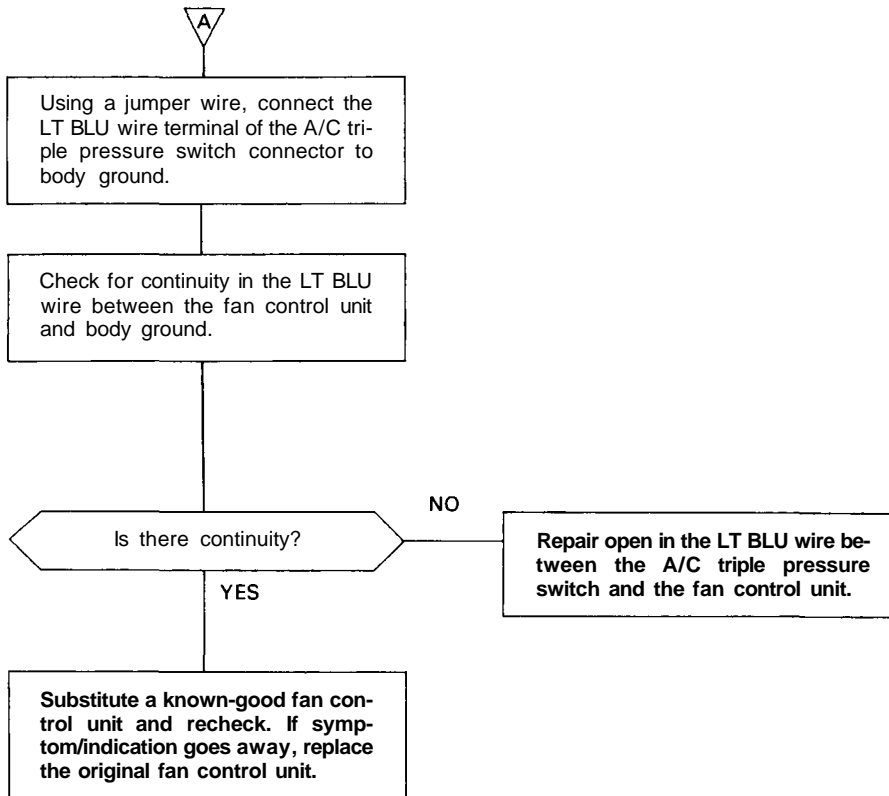

From page 22-38

