

4.2 Adding service fluid

If the service fluid level is low, the message: "Please refill service fluid" is displayed on the operating panel.



INFO:


If this message is displayed frequently, check that the air supply at the installation location is sufficient. There is no need to add service fluid under normal operating conditions.

Use original EFOY service fluid only.

Switch off the EFOY COMFORT fuel cell before refilling with service fluid. Disconnect the charge line.

Make sure that no dirt or foreign bodies enter the fill opening.

English

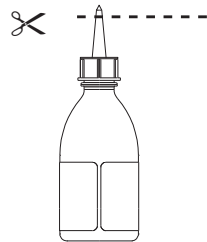


1. Use a clean pair of scissors to cut off the tip of the bottle.




INFO:

The service fluid bottle is for one time use only.

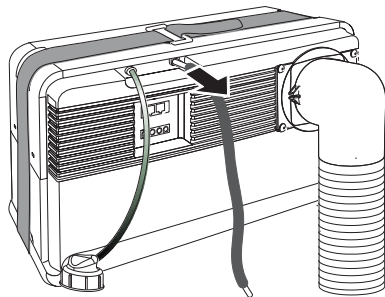

2. Disconnect the exhaust hose from the device.

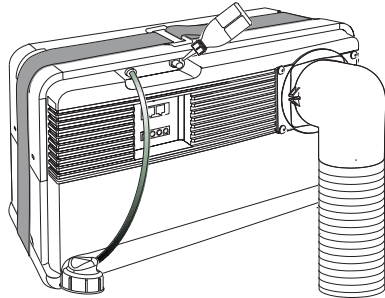


3. Insert the tip of the bottle into the connection nozzle on the device and slowly squeeze the entire contents into the opening.



INFO:

Never refill the fuel cell with more than one bottle of service fluid at a time.

4. Use a cloth to wipe away any excess service fluid that may spill over.

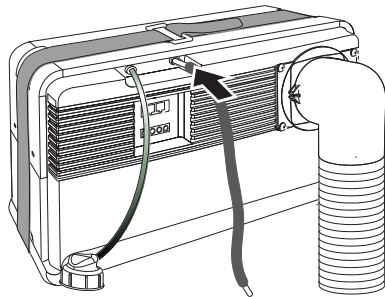

5. Reattach the exhaust hose.
6. Reconnect the charge line to the EFOY COMFORT fuel cell.
7. When you have finished filling the device, press [ok].
The message is deleted and the EFOY COMFORT fuel cell returns to its previous operating status, e.g. automatic mode.
8. Be sure to order your next refill of EFOY Service Fluid from your specialist dealer in plenty of time.