

IFP8650/IFP7550/IFP6550 F/W upgrade SOP


Two methods are available for IFP8650/IFP7550/IFP6550 firmware upgrade:

- ✓ 1. Debug Menu Upgrade (Recommended)
- ✓ 2. Power Key Upgrade

1. Debug Menu Upgrade Procedure

(1) Format the USB disk as FAT32.

(2) Extract upgrade file to the U disk (FAT32) in the root directory. You will get "upgrade_510" folder. Insert USB disk into the USB2.0 port of the TV board which is next to the HDMI 1.

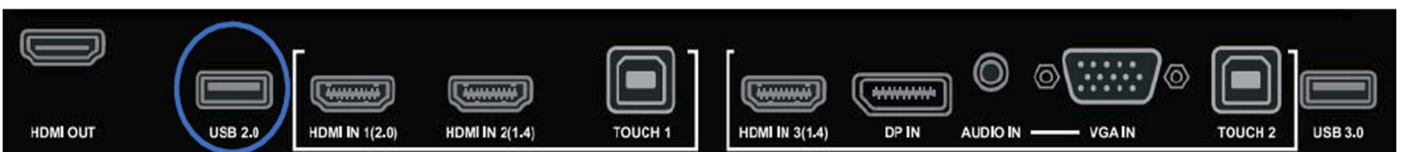

(3) Turn on the panel. Press "INPUT 9-9-1" with remote controller, and then the debug menu will pop up. Select Upgrade-> Upgrade All, press "Enter", and confirm.

DEBUG MENU	
Init TV	>>>
Burn mode	>>>
Upgrade	>>>
Burn Video	>>>
CHANNEL IMPORT	>>>
CHANNEL EXPORT	>>>
Android Setting	>>>
System Debug	>>>
Remote Control	>>>
Other Setting	>>>
HDMI Setting	>>>
Software Information	>>>
Self-Check Information	>>>
EXIT	

Upgarde	
Upgrade All	>>>
Upgarde Main	>>>
Upgarde OTA Package	>>>
Upgarde MCU	>>>
Upgarde Touch	>>>
Update Wired Transmitter	<OFF>
Back	

(4) The power LED will keep twinkle in red and blue during upgrade process. After finished, the panel will reboot and enter Android channel. It will take 3 minutes to complete the upgrade procedure.

2. Power Key Upgrade Procedure

(1) Format the USB disk as FAT32.

(2) Extract upgrade file to the U disk (FAT32) in the root directory. You will get "upgrade_510" folder. Insert USB disk into the USB2.0 port of the TV board which is next to the HDMI 1.



(3) Power on the panel. Press the POWER key and hold it for 6 seconds until the power LED twinkles in red and blue.

(4) The TV will upgrade first. When finished, the screen will reboot and upgrade MCU automatically. It will take 3 minutes to complete the upgrade procedure.