


Balboa BP 120 Volt Configuration

This is an instructional guide detailing the correct configuration for 120 Volt Set Up of the BP Pack

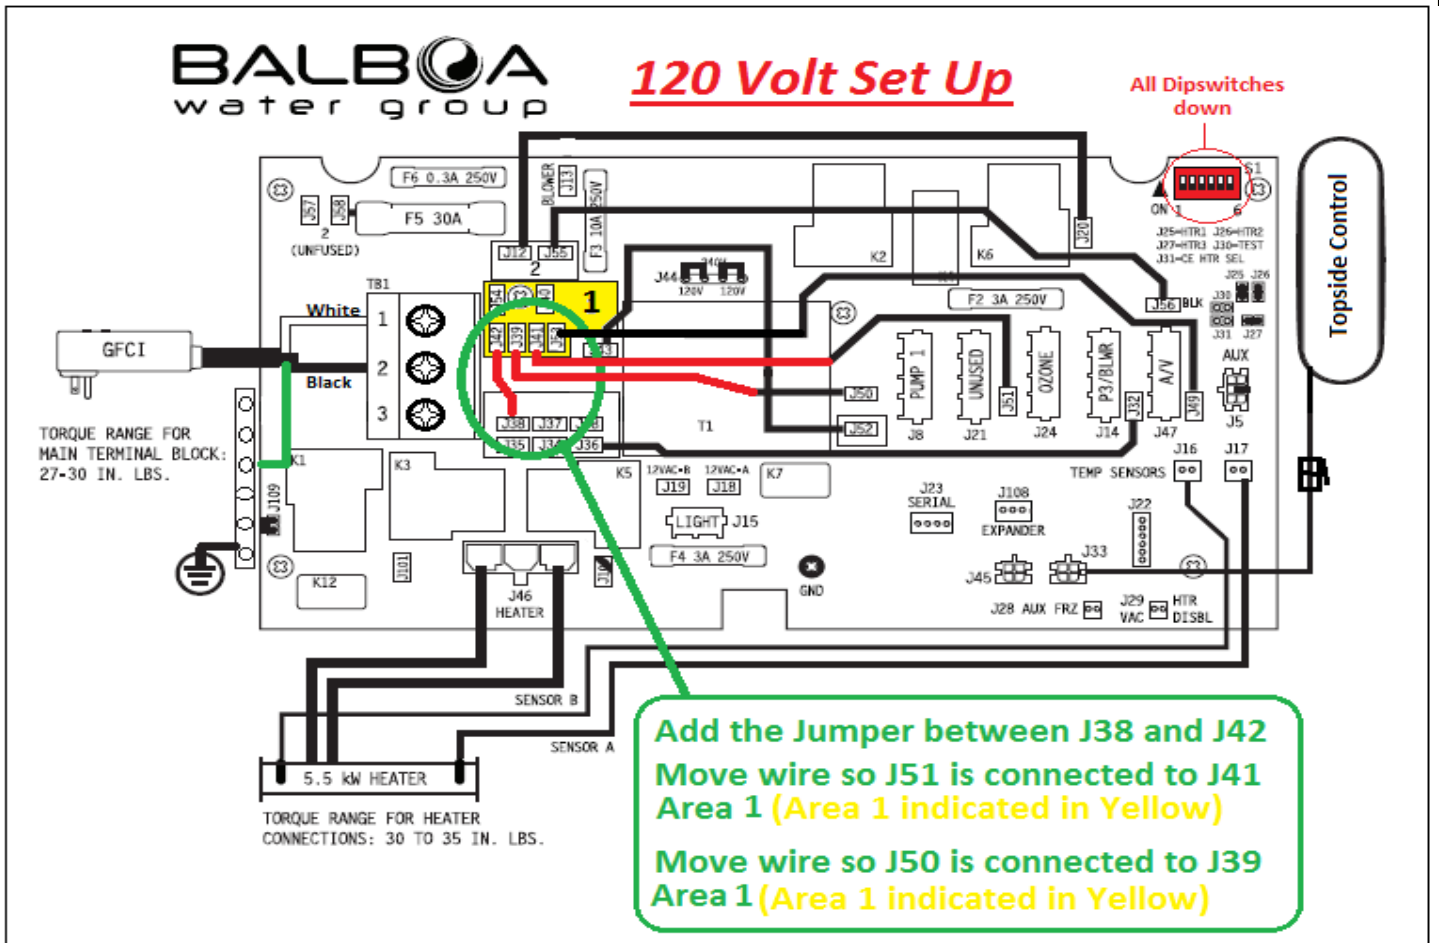

**PUMP 1 AND OZONE MUST BE WIRED TO 120VAC WHEN SYSTEM IS CONFIGURED WITH 120VAC POWER INPUT/GFCI CORD (SETUPS 5 & 10 ONLY).
 J50 AND J51 MUST BE CONNECTED TO AREA 1 (NEUTRAL)

Dip Switches

OFF POSITION	S1 SWITCH #	ON POSITION
TEST MODE OFF	◀ 1	TEST MODE ON
DON'T ADD 1 HS PUMP W/HTR	◀ 2	ADD 1 HS PUMP WITH HEAT
DON'T ADD 2 HS PUMPS W/HTR	◀ 3	ADD 2 HS PUMPS WITH HEAT
1 MIN HTR COOLDOWN (ELEC)	◀ 4	5 MIN HTR COOLDOWN (GAS)
SPECIAL AMPERAGE RULE OFF	◀ 5	SPECIAL AMPERAGE RULE ON
STORE SETTINGS*	◀ 6	MEMORY RESET*