




Customer Service Hours: 9am-5pm Eastern Time
Monday through Friday
Toll Free: 800-537-2118
Local/International: 716-332-2970
Website: www.IndependentLiving.com

Instruction Manual for ila 1 Button Choice of Voice Analog Talking Watch

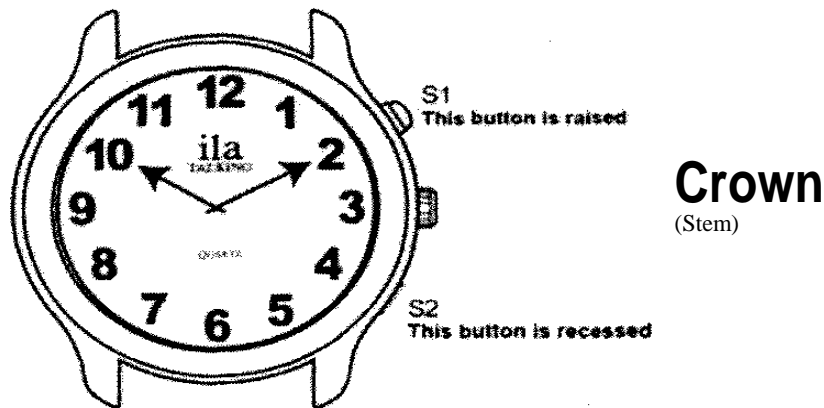

- This watch is shipped in sleep mode. Please press and hold in the 2 o'clock, upper right hand button, until the hands of the face begin to spin.

**** PLEASE NOTE ... DO NOT TOUCH OR PULL THE STEM OF THE WATCH. READ THESE INSTRUCTIONS THOROUGHLY BEFORE YOU ATTEMPT TO SET THE WATCH!**

Upon receiving your watch, take note that the face of the watch will not be running and the stem/crown will be pushed in. Please do not pull out the crown/stem to set the face. After setting the voice mechanism of the watch, with the recessed 4 o'clock button, the hands will automatically begin spinning, synchronize with the voice, and set itself.

Independent Living Aids, LLC
137 Rano Street
Buffalo, NY 14207
Phone: 800-537-2118 716-332-2970

Hours: 9am-5pm Eastern Time
Website: www.independentliving.com
Toll Free Fax: 855-937-3906
Local/International Fax: 716-873-3632



**Customer Service Hours: 9am-5pm Eastern Time
Monday through Friday
Toll Free: 800-537-2118
Local/International: 716-332-2970
Website: www.IndependentLiving.com**

Your new Talking Watch uses a real voice that automatically synchronizes to the analog watch face. The watch contains only one battery and one quartz crystal inside in order to maintain the timekeeping for both the voice and the watch hands. The time should always be set by following the instructions through the talking mechanism of the watch (recessed 4 o'clock button) and NOT with the watch hands.

About the Buttons

The 2 o'clock button (S1) is raised and can be pressed with a finger.

The 4 o'clock button (S2) is flush with the case. There is a small depression in the center of it. Use a ball point pen, paper clip or similar object to press in the recessed button.

Button Functions

Time and Day/Date Announcement

Press the 2 o'clock button (S1) once to speak the Time. The watch will speak the Hour and Minute.

Press the 2 o'clock button (S1) again after hearing the time spoken to further hear the Day, Month, Date and Year.

Choice of Voice Selection (Male or Female)

This watch speaks in either a male or female voice. Press and hold the 2 o'clock button

(S1) until the selected voice (male or female) announces current time setting or calendar data.

Time Setting and Watch Hands Synchronization

Independent Living Aids, LLC

**137 Rano Street
Buffalo, NY 14207
Phone: 800-537-2118 716-332-2970**

**Hours: 9am-5pm Eastern Time
Website: www.independentliving.com
Toll Free Fax: 855-937-3906
Local/International Fax: 716-873-3632**



**Customer Service Hours: 9am-5pm Eastern Time
Monday through Friday
Toll Free: 800-537-2118
Local/International: 716-332-2970
Website: www.IndependentLiving.com**

Set Time

Time is always set by VOICE FUNCTION! DO NOT set time with the winding stem (crown).

- 1. Press 4 o'clock button (S2) once. The watch will announce "Set Time, Press 2 o'clock button (S1) to Set".**
- 2. Press 2 o'clock button (S1) to confirm that Time Change is desired. The watch will announce, "Press 4 o'clock button (S2) to Set Hour, 2 o'clock button (S1) to confirm."**
- 3. Press 4 o'clock button (S2) to change the Hour. Note: Take care to notice the AM or PM indicator after the choices are announced.**
- 4. Press 2 o'clock button (S1) to confirm hour chosen. The watch will announce "Press 4 o'clock button (S2) to Set Minute, 2 o'clock button (S1) to confirm."**
- 5. Press 4 o'clock button (S2) to change the Minute.**
- 6. Press 2 o'clock button (S1) to confirm minute chosen. The watch will announce "Confirm. X:xx pm. Please Wait." The hands on the watch will now spin until the voice and analog face time has been synchronized.**

Please Note: While the watch is synchronizing, the voice will not sound. This is an indication that synchronization is still taking place. The synchronization process for each watch will differ depending on where the internal watch setting is in relation to the preferred current time. DO NOT INTERRUPT THE PROCESS!

When synchronized, the second hand stops spinning.

Independent Living Aids, LLC
137 Rano Street
Buffalo, NY 14207
Phone: 800-537-2118 716-332-2970

Hours: 9am-5pm Eastern Time
Website: www.independentliving.com
Toll Free Fax: 855-937-3906
Local/International Fax: 716-873-3632



**Customer Service Hours: 9am-5pm Eastern Time
Monday through Friday
Toll Free: 800-537-2118
Local/International: 716-332-2970
Website: www.IndependentLiving.com**

Set Date

- 1. Press 4 o'clock button (S2) twice. The watch will announce "Set Date, Press 2 o'clock button (S 1) to set."**
- 2. Press 2 o'clock button (S1) to confirm that Date Change is desired. The watch will announce "Press 4 o'clock button (S2) to Set Year, 2 o'clock button (SI) to confirm."**
- 3. Press 4 o'clock button (S2) to change Year**
- 4. Press 2 o'clock button (S1) to confirm Year chosen. The watch will announce, "Press 4 o'clock button (S2) to Set Month, 2 o'clock button (S1) to confirm."**
- 5. Press 4 o'clock button (S2) to change Month.**
- 6. Press 2 o'clock button (S1) to confirm Month chosen. The watch will state, "Press 4 O'clock button (S2) to Set Date, 2 O'clock button (S1) to confirm."**
- 7. Press 4 o'clock button (S2) to change Date.**
- 8. Press 2 O'clock button (S1) to confirm Date chosen. The watch will announce "Press 4 o'clock button (S2) to Set Day of the Week, 2 o'clock button (S 1) to confirm."**
- 9. Press 4 o'clock button (S2) to change Day of Week.**
- 10. Press 2 o'clock button (SI) to confirm Day of Week chosen. The watch will announce "Confirm; announcing date."**

Independent Living Aids, LLC
137 Rano Street
Buffalo, NY 14207
Phone: 800-537-2118 716-332-2970

Hours: 9am-5pm Eastern Time
Website: www.independentliving.com
Toll Free Fax: 855-937-3906
Local/International Fax: 716-873-3632



**Customer Service Hours: 9am-5pm Eastern Time
Monday through Friday
Toll Free: 800-537-2118
Local/International: 716-332-2970
Website: www.IndependentLiving.com**

TROUBLESHOOTING:

• **If time announcement is different from analog display of watch face you will need to synchronize the watch hands to match with the time announcement. Review "Manually Synchronize Hands to Match Time Announcement" as shown below.**

Manually Synchronize Hands to Match Time Announcement (Requires Sighted Assistance)

Pull out the stem of the watch when the second hand lands on 12:00:00 o'clock so that the second hand stops at 12 o'clock. If you miss the 12 o'clock mark, you must wait for the next chance. The second hand will stop moving when the stem is pulled out.

- 1. Turn the stem of the watch to set the Hour and Minute hands to point at 12 o'clock.**
- 2. Now Hour, Minute and Second hands should all be pointing at 12 o'clock with the stem still pulled out.**
- 3. Hold the 2 o'clock button (S1) for more than 5 seconds with the stem in 'out' position. After a few seconds, push in the stem.**
- 4. The watch hands will start to spin to match the set announced time. This hand spinning may take a few minutes.**
- 5. After the watch resumes normally, check to see if the time announcement and watch hands are synchronized by pressing the 2 clock button (S1) once. If they are synchronized, you have successfully set the watch. If not, repeat Steps 1 through 5.**

Independent Living Aids, LLC
137 Rano Street
Buffalo, NY 14207
Phone: 800-537-2118 716-332-2970

Hours: 9am-5pm Eastern Time
Website: www.independentliving.com
Toll Free Fax: 855-937-3906
Local/International Fax: 716-873-3632



**Customer Service Hours: 9am-5pm Eastern Time
Monday through Friday
Toll Free: 800-537-2118
Local/International: 716-332-2970
Website: www.IndependentLiving.com**

Battery Change

There is only one CR2025 battery inside the watch. This battery is used to drive both the voice announcement as well as the analog movement.

When you need to change the battery, it is best to go to a trained jeweler or watch specialist to avoid any damage to the watch. Carefully open the back case of watch and make sure you do not tamper with it.

- 1. Remove the battery spring on the right.**
- 2. Remove the old battery and insert a fresh, new CR2025 battery. The battery polarity should be positive (+) side up.**
- 3. Replace the battery spring down.**
- 4. Before closing the case back, make sure the seal is correctly in place.**

NOTE: After a battery is replaced, the time and date of your watch must be set and then the watch hands must be synchronized with the voice.

Independent Living Aids, LLC
137 Rano Street
Buffalo, NY 14207
Phone: 800-537-2118 716-332-2970

Hours: 9am-5pm Eastern Time
Website: www.independentliving.com
Toll Free Fax: 855-937-3906
Local/International Fax: 716-873-3632