

Summary	Predadoor coil cord to wireless bottom bar retro				
Products Affected	Predadoor				
Key Word Tags	Wireless, Retro, Coil Cord,				
Tools/Equipment (If Required)					
Parts/Materials (If Required)	LH Wireless Bracket Assy R1060259-1, OR RH Wireless Bracket Assy R1060259-2 EPROM V02-05.38 R0111039 (If Required), Coupler Shaft, Feig RS703988, 3/8" Lock Washer R0554118, Flat Washer R5550015-0Z01, System 3 Control Board R00141006 (If Required), Bottom Bar Assy LH R1060057-1 OR Bottom Bar Assy RH R1060057-2, Encoder Cable R00141086				
Related Media					
Author	Mason Barnett, RevA M. Burzlaff	Issue Date	9/02/2011	Status	Active

PLEASE READ THE ENTIRE BULLETIN BEFORE PROCEEDING WITH RETRO

Customers requesting to convert from coil cord to wireless on their door will need to check the control board for encoder red block jumper availability. If the board has solder dots instead of jumpers, the board will need to be replaced. (See Figure 1).

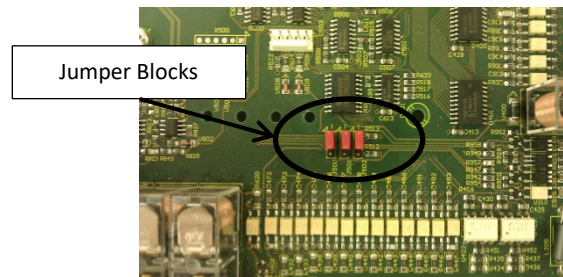


Figure 1

If the door was sent out prior to 11/1/03 and the board was never replaced and software was never upgraded, the customer will need get a new System 3 board. You will also need to check the drive side of the door to make the proper selection for the mobile unit antenna mounting bracket. (See Figure 2 for LH & Figure 3 RH Antenna Assemblies, Figure 4 Bottom Bar Assemblies).

For the Bottom Bar Replacement, refer to Bulletin No. 167

For the EPROM Upgrade if required, refer to Bulletin No. 169

For the System 3 Control Board Replacement if required, refer to Bulletin No. 201

Refer to schematic sent for wiring

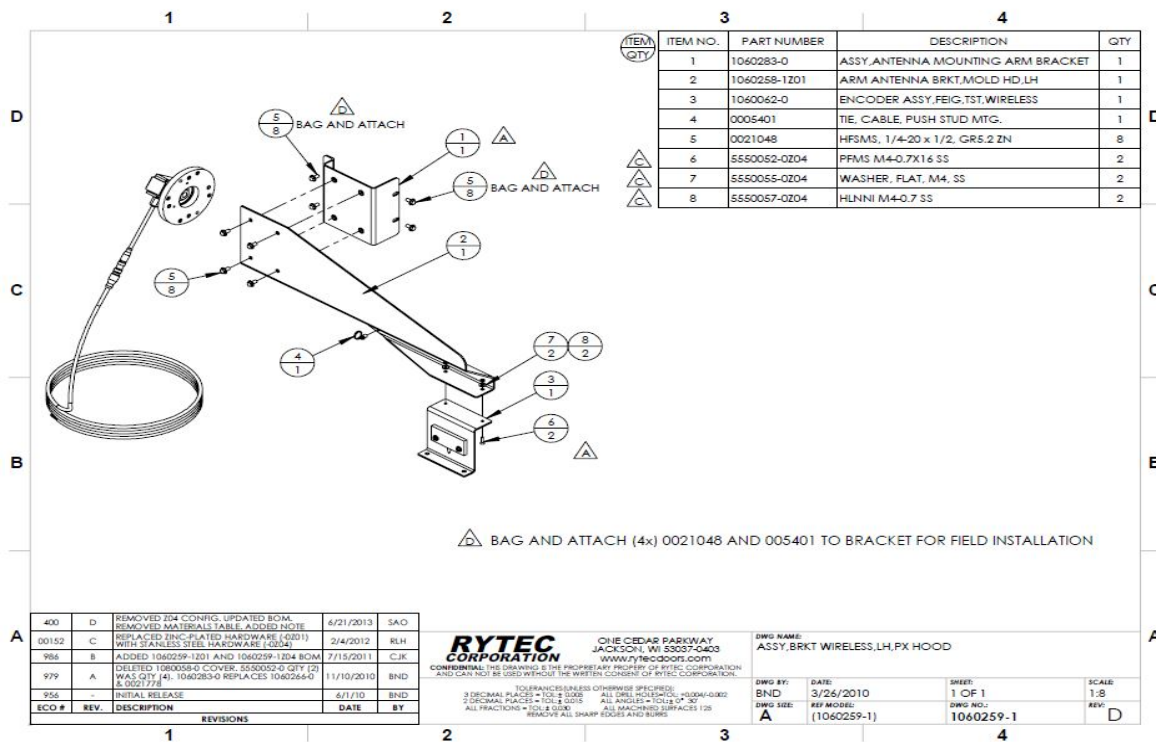


Figure 2

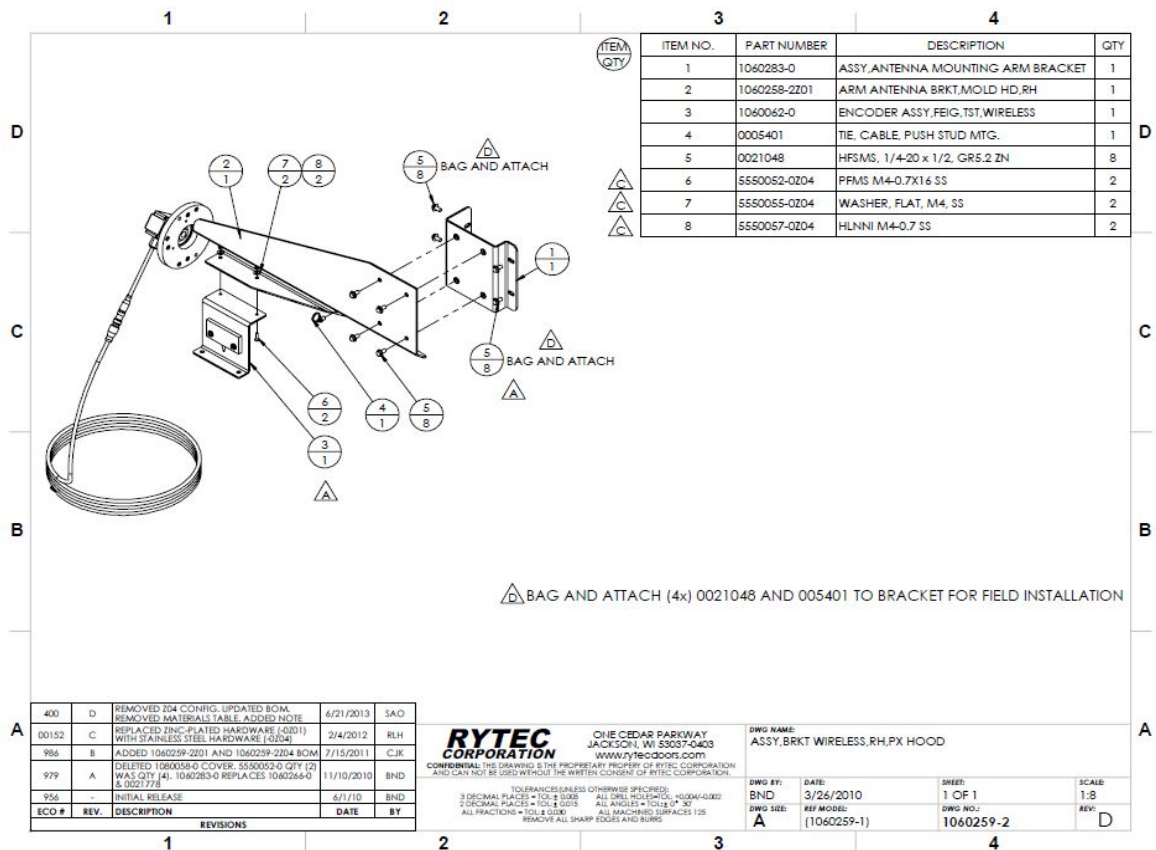


Figure 3

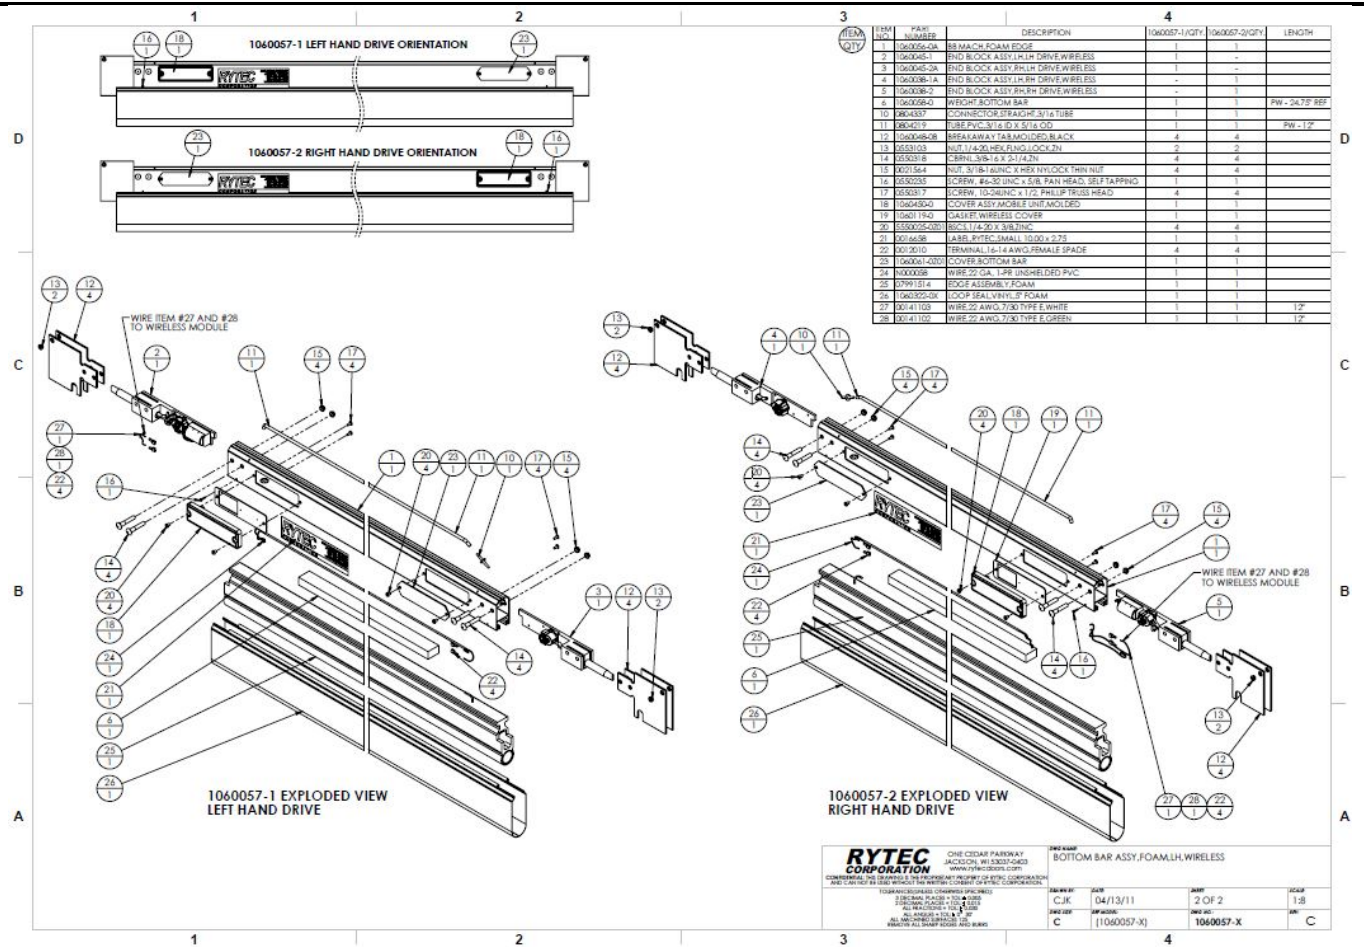


Figure 4

If you have any further questions contact Rytec Customer Support at 1-800-628-1909