




Repair parts list




Key	Part #	Description	Qty	Key	Part #	Description	Qty
1	A0194	Drawer assembly	1	35	A0010	Terminal block	1
2	A0278	Super filter	1	36	A0226	Cable holder	1
3	A0195	Filter rubber seal	1	37		Rating label	1
4		CAUTION label	1		A0227	20200-1	
	A0234	120Vac - 15A			A0228	20200-2	
	A0132	240Vac - 8A			A0229	20200-3	
	A0192	277Vac - 8A		38	A0230	Cover - rear	1
5	A0196	LNG label	1	39	A0231	Base plate - cover side	1
6	A0197	Terminal cover	1	40	A0232	Base plate - wall side	1
7	A0198	Label, Circuit Diagram	1	41	A0233	Absorbent ceramic	1
8	A0199	Cover - front	1	42	A0234	Foam gasket A (on Cover - front)	1
9	A0200	Blower housing - Upper	1	43	A0235	Foam gasket B	1
10	A0201	Blower housing rubber seal	1			(on Main bracket -RH)	
11	A0202	Motor rubber - Lower	1	44	A0236	Foam gasket C	1
12		Motor	1			(on Main bracket - Bottom)	
	A0147	1HP@120Vac		45	A0237	Foam gasket D	1
	A0148	1HP@240Vac	1			(on Drain tray)	
13	A0029	Motor rubber cup ring	1	46	A0238	Foam gasket E	1
14		Heater assembly	1			(on Blower housing - Upper)	
	A0203	450W@120Vac,32Ω		47	-	Self threading screw M3x10,philips pan head	7
	A0204	450W@240Vac,128Ω		48	-	Self threading screw M3x16,philips pan head	2
15	A0205	Blower housing - Lower	1	49	-	Self threading screw M4x10,philips pan head	2
16	A0206	Nozzle manifold - RH	1	50	-	Screw M4x10,philips pan head	4
17	A0207	Nozzle manifold - LH	1	51	-	Screw M4x10,philips pan head	2
18	A0208	Chamber	1			with external tooth lock washer	
19	A0209	Sensor and LED module	1	52	-	Self threading screw M4x16,philips pan head	2
20	A0210	Bracket - RH	1	53	-	Self threading screw M5x10,philips pan head	8
21	A0211	Bracket - LH	1	54	-	Self threading screw M5x15,philips pan head	3
22	A0212	Security hex screw	2	55	-	Screw M4x12,philips pan head	12
23	A0011	Grounding screw with cup	1	56	-	Self threading screw M4x12,philips pan head	30
24	A0213	Air intake screen	1	57	-	Self threading screw №10x1-1/4",philips pan head	8
25	A0214	Terminal label	1				
26		Circuit Board Module (CBM)	1	58	-	Plastic expansion anchor	8
	A0215	120Vac				Ø9/32" x 1-3/8" (Ø7 x 35)	
	A0216	240Vac		59	A0239	Wires Harness (Not Shown)	1
	A0217	277Vac		60	A0240	Power cord,120Vac	1
27	A0218	Socket ID label	1	61	A0124	L-Wrench	1
28	A0219	CBM bracket	1	62	A0241	C-Wrench	1
29	A0220	Main bracket	1	63	A0279	Motor brush	2
30	A0221	Drain tray label	1	64	A0242	Crimp-on wire tips for terminal block	3
31	A0222	Drain tray	1	65	A0243	Instruction label	1
32	A0223	VR2-SW1 cover	1	66	A0244	Conical washer	2
33	A0224	Heater ON/OFF - speed control - CBM label	1				
34	A0225	Heater ON/OFF - speed control - CBM	1				

Assembly Diagram


Tools Req'd (Provided in kit)

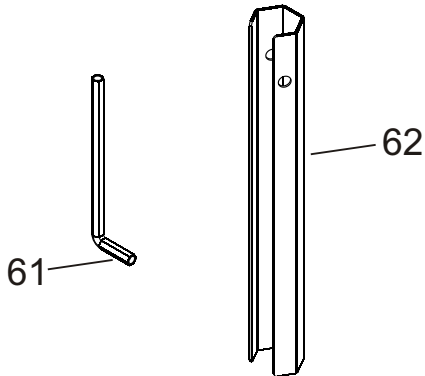

Tools Req'd (Not provided)

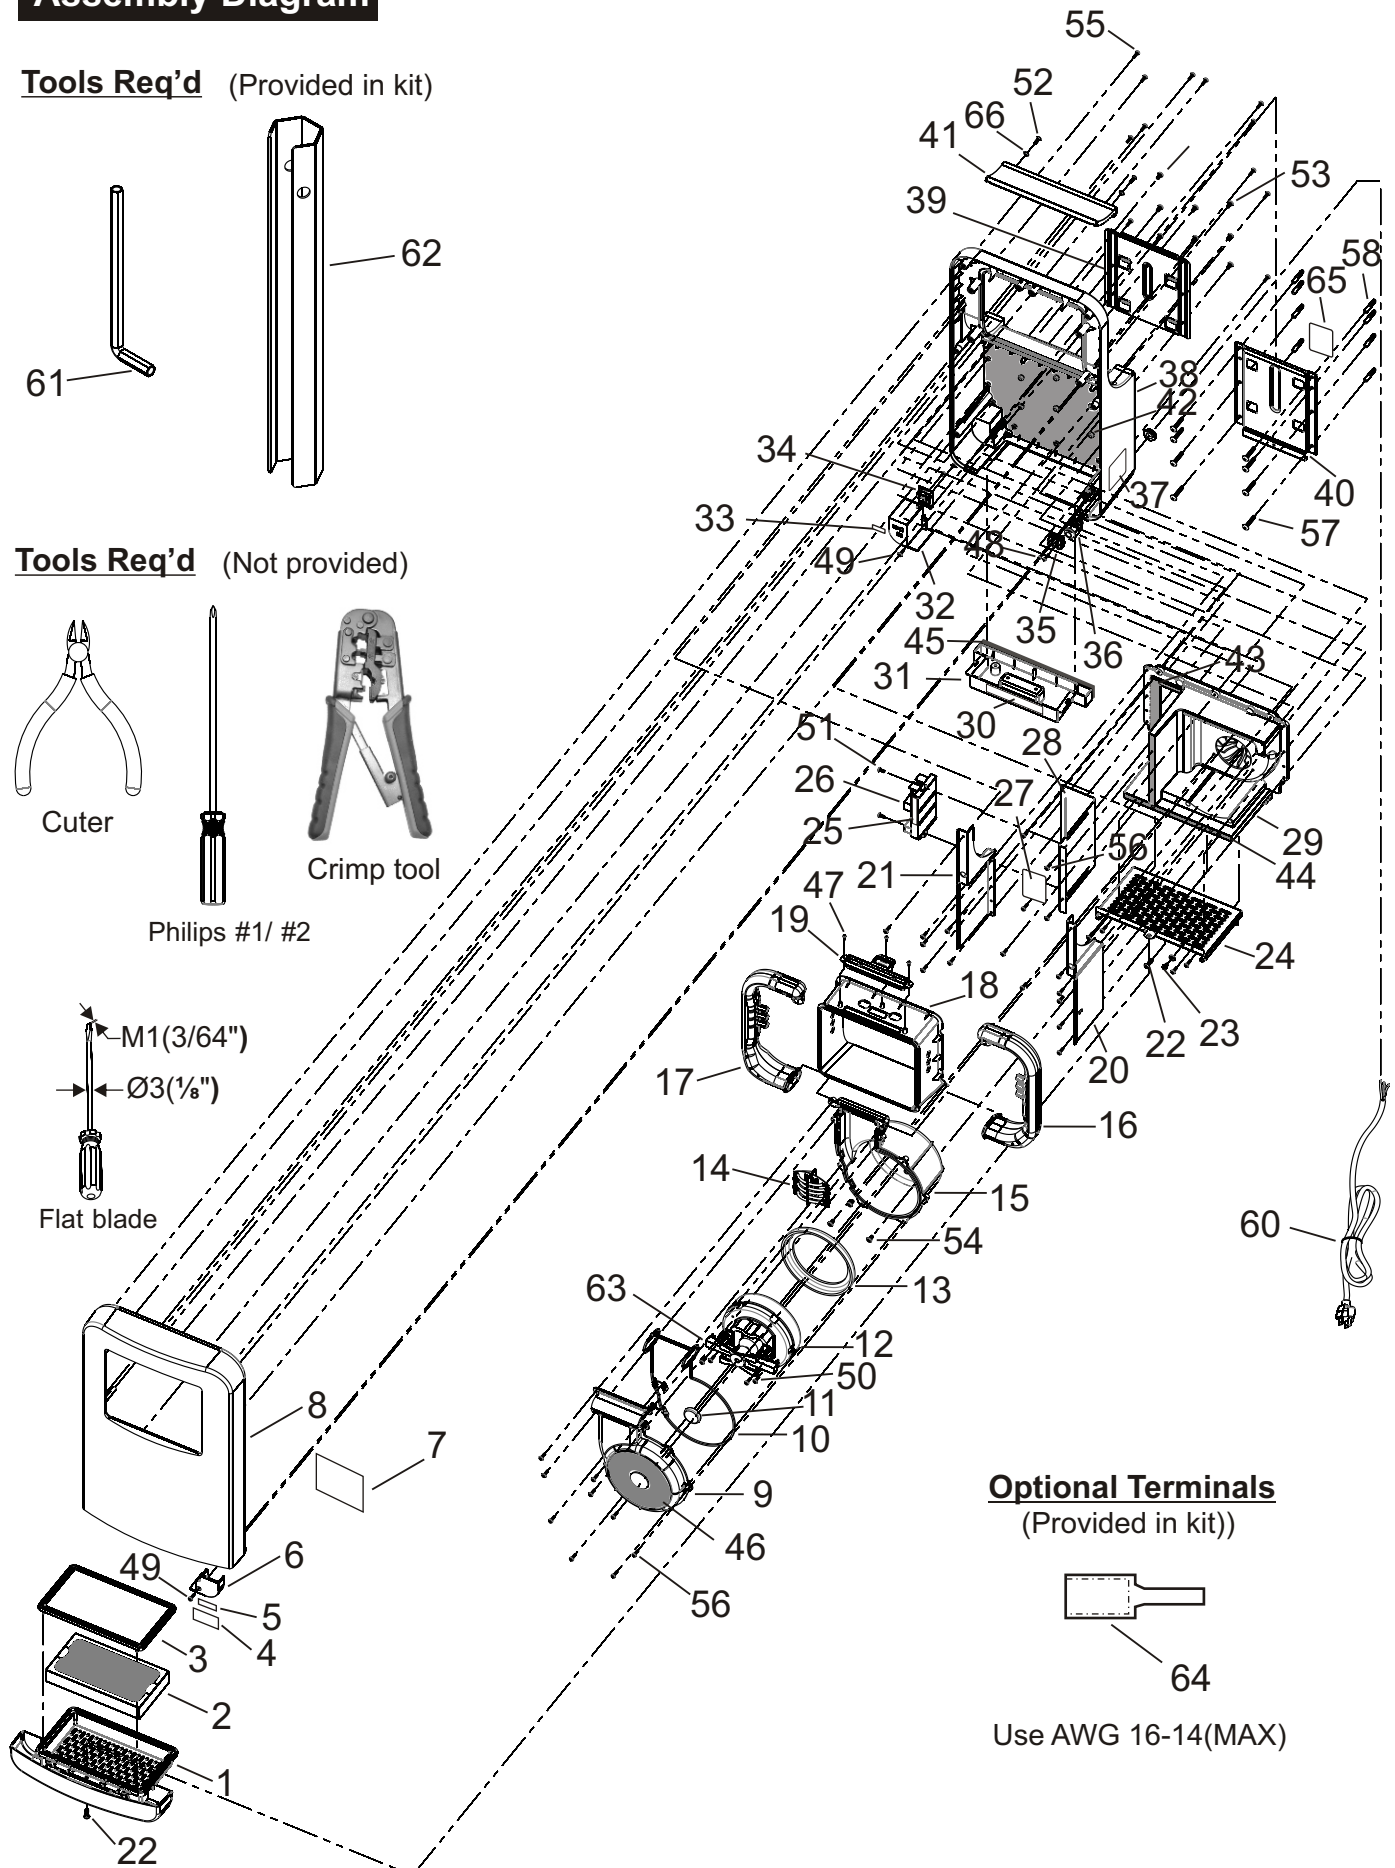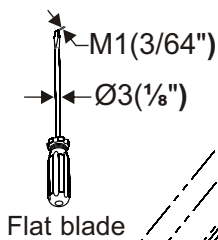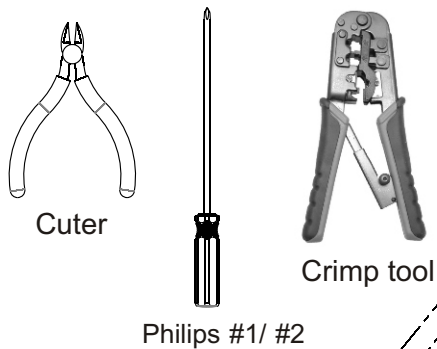

Optional Terminals (Provided in kit))

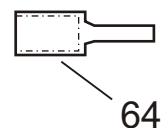

Use AWG 16-14(MAX)