

National Guard Products Inc.

1-800-
647-7874
www.ngp.com




4448S, 4448WH Automatic Door Bottom

WARNING: Maximum drop of this door bottom is 1/2". Adjusting beyond 1/2" drop will damage door bottom, and void warranty.

Unit is factory sized to fit net door width.

Installation Instructions

1. Mortise bottom of the door on centerline 7/8" wide x 1 1/4" deep.
2. Hand the door bottom. Pull and turn the beveled actuator rod setting the beveled edge facing stop on door frame.
3. TO FIELD SIZE: Cut door bottom on end without actuator rod to exact net width of door. Maximum cut = 4".
4. Trim gasket material to extend just beyond each end of the door bottom.
5. Position door bottom in mortise with actuator rod toward hinge edge; mark screw holes.
6. Drill pilot holes for screws using 5/64" drill bit.
7. Install door bottom with actuator rod at hinged-edge of door using screws provided.
8. Set for proper seal. To increase the drop, pull and turn the beveled actuator rod left. To reduce the drop, pull and turn the beveled actuator rod right. Maximum drop = 1/2".

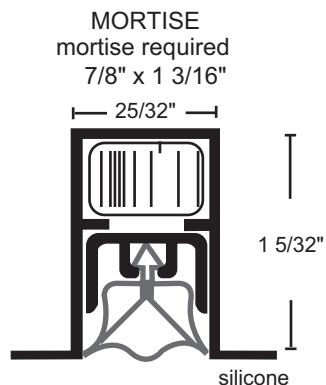

UL 10C Positive Pressure Tested Gasketing Material for
Fire Doors.



UL10B Gasketing Materials for Fire Doors.

Intended for Application to Classified Steel type
fire doors rated up to 3 hours and Wood type fire doors up to 1 1/2
hours.

Smoke and Draft Control door bottom (Category H) tested to UL
1784; meets requirements of NFPA 105, IBC. Intended for appli-
cation to classified "S" label doors.