



## Parts and kits

### Latches

All ND-Series latches have one-inch diameter housing and adjustable faceplates for flat or beveled doors.

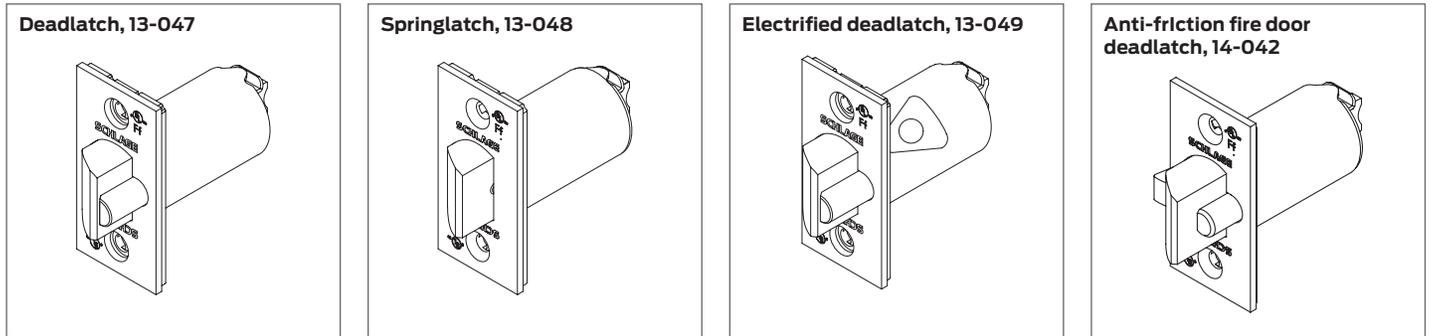

Backset	Description	Springlatch	Deadlatch
2 <sup>3</sup> / <sub>8</sub> "	Square corner, 1 <sup>1</sup> / <sub>8</sub> " x 2 <sup>1</sup> / <sub>4</sub> "	—	14-047
	Square corner, 1" x 2 <sup>1</sup> / <sub>4</sub> "	—	14-048
2 <sup>3</sup> / <sub>4</sub> "	Square corner, 1 <sup>1</sup> / <sub>8</sub> " x 2 <sup>1</sup> / <sub>4</sub> ", standard	13-048	13-047
2 <sup>3</sup> / <sub>4</sub> "	Square corner, electrified latch, 1 <sup>1</sup> / <sub>8</sub> " x 2 <sup>1</sup> / <sub>4</sub> "	—	13-049
2 <sup>3</sup> / <sub>4</sub> "	Anti-friction fire door latch, square corner, 1 <sup>1</sup> / <sub>8</sub> " x 2 <sup>1</sup> / <sub>4</sub> ", <sup>3</sup> / <sub>4</sub> " throw	—	14-042
3 <sup>3</sup> / <sub>4</sub> "	Square corner, 1 <sup>1</sup> / <sub>8</sub> " x 2 <sup>1</sup> / <sub>4</sub> "	14-010	14-028
5"	Backset extension link	—	43-005**
—	Rabbeted latch and strike kit, 605, 626 only	39-030*	

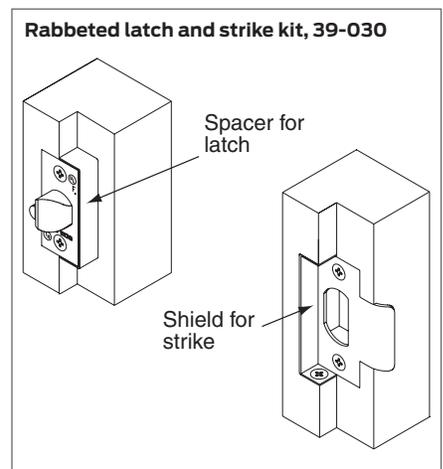


\* Adapts square corner latch and 2<sup>3</sup>/<sub>4</sub>" high square corner strike to <sup>1</sup>/<sub>2</sub>" rabbeted door and frame preparations.

\*\* Can only be used with 2<sup>3</sup>/<sub>4</sub>" backset latch.


### Installation tools and kits

Boring jigs and tools are designed to provide fast and accurate lock installation. Complete kits or individual tools can be ordered for preparing doors and jambs for Schlage products.

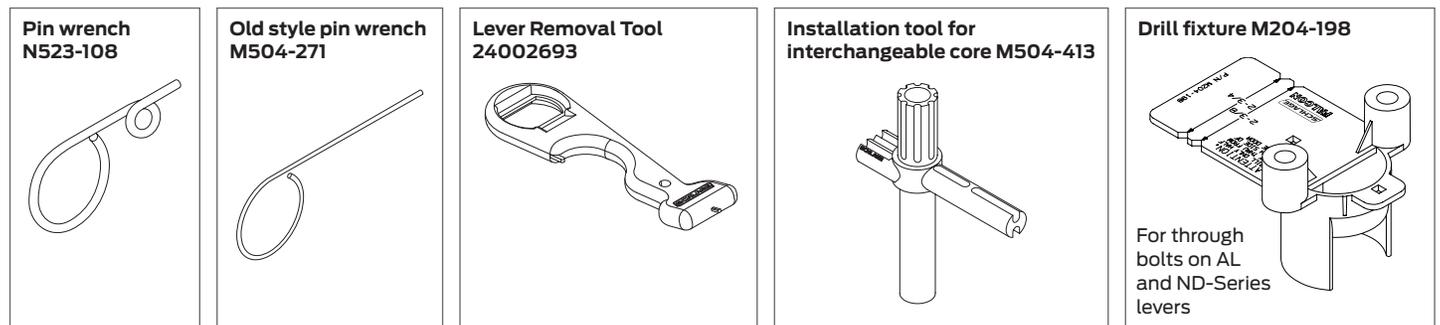

#### Reinforcement kit 37-001

Reinforcement kit 37-001 is used to reinforce and prevent the collapse of hollow metal doors when locksets are mounted. This kit should be used for installation in hollow metal doors to prevent lateral movement of the latch bolt. Extension link is included for long backset installations. Specify door thickness 1<sup>3</sup>/<sub>8</sub>" or 1<sup>3</sup>/<sub>4</sub>" when ordering.

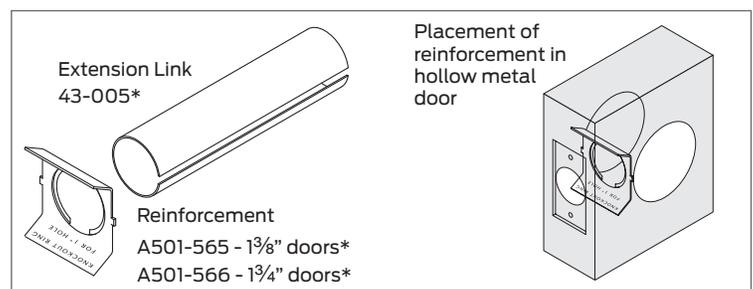

## Parts and kits


\* Parts may be ordered separately.

### Installation kit 40-147

Installation kit 40-147 for locksets and deadbolts is adjustable for 2 $\frac{3}{8}$ " and 2 $\frac{3}{4}$ " backsets. Includes a removable bushing adaptor for  $\frac{7}{8}$ " latch hole. For door thickness 1 $\frac{1}{8}$ " to 2 $\frac{1}{8}$ ".

Part no.	Description
40-015	$\frac{7}{8}$ " Bit
40-029	Full Lip Strike Chisel
40-030	1 $\frac{1}{8}$ " x 2 $\frac{3}{4}$ " Latch Chisel
40-031	1" x 2 $\frac{1}{4}$ " Latch Chisel
40-032	1 $\frac{1}{8}$ " x 2 $\frac{1}{4}$ " Latch Chisel
40-035	$\frac{7}{8}$ " Strike Locator

Part no.	Description
40-148	Installation Jig *
40-175	1" Bit
40-176	2 $\frac{1}{8}$ " Multi Spur Bit
40-177	1 $\frac{1}{2}$ " Multi Spur Bit
40-178	Quick Change Bit Adapter
M504-497	Case *

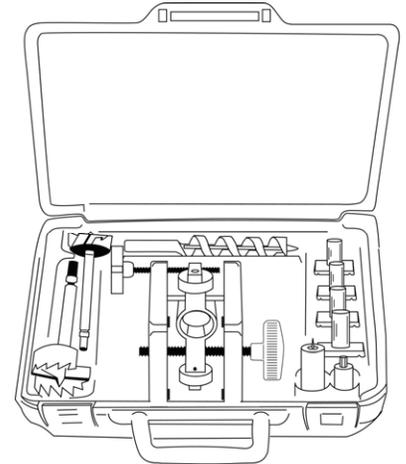

\* May be ordered separately.

### Maintenance Kit 40-097

Maintenance kit for ND-Series lever locks contains: plunger sleeves, screw packs in various finishes, slide catches and service parts listed below.

Part no.	Description	Qty	Slot no.
N523-055	Plate, anti-rotation	2	1
N523-020	Cylinder	3	2
N523-091	Driver, SFIC	5	2
N523-127	Driver, IC	5	2
23988066	Insert, gauge	10	3
N523-025	Clip, slide	2	4
N523-149	Slide	2	4
D500-000	Spacer, SFIC	5	5
N523-021	Screw, mounting	4	5
N523-092	Screw, machine, oval head	4	5
C604-187	Catch, slide	2	6
C604-188	Catch, slide	2	6
C604-191	Spring, catch, slide	4	6
C503-019	Slide, spring	8	7
N523-054	Plate, adjustment	2	8
N123-008	Keycam assembly	2	10
N123-009	Keycam assembly	2	11
N123-010	Keycam assembly	2	12
N123-011	Keycam assembly	2	13
N123-012	Keycam assembly	2	13
N123-013	Keycam assembly	2	14
24002693	Tool, trim removal	2	15
N123-028	Plunger assembly	5	16
N123-017	Plunger assembly	3	17
N523-056	Spindle, inside	2	18
N523-013	Spindle, outside	2	19
N523-019	Spindle, outside, electrified	2	20
N123-020	Package, screw	2	21
N123-040	Package, screw	2	22
24085037	Hub, inside	2	23
24085060	Hub, inside	2	24

Part no.	Description	Qty	Slot no.
24088544	Housing, outside	2	Bottom
63-104	Spring cage assembly, dummy	1	Bottom
M504-413	Installation tool, IC	1	Bottom
N123-021	Spring cage assy, inside	1	Bottom
N123-022	Spring cage assy, outside	1	Bottom
N123-032	Spring cage assy, inside	1	Bottom
N123-043	Spring cage assy, outside	1	Bottom
N123-056	Spring cage assy, SFIC, O/S	1	Bottom
N123-057	Spring cage assy, SFIC, I/S	1	Bottom
P515-181	Component sheet	1	Bottom

