

L9000 Trim Assemblies Chart

	P/N	Description	L0170	L0172	L9010	LM9010	L9040	LV9040	L9040/XL11-446**	LV9040/XL11-446**	L9044*	LV9044	L9050	LM9050	LV9050	LMV9050	L9056	LM9056	LV9056	LMV9056	L9060	LV9060	L9070	LM9070	LV9070	LMV9070	L9071	LM9071	LV9071	LMV9071	L9076	LV9076	L9077	LV9077	L9080	LM9080	LV9080	LMV9080	L9080EL	LV9080EL	L9080EU	LV9080EU	L9080EL-RX***	L9080EU-RX***				
CC	Mounting Trim Screws:																																															
	F506-237	Wood doors x L escutcheon	2																																													
	L583-066	Wood/metal doors x rose/ Escutcheon x knob/lever except single dummy	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2	2		
	L583-290	Wood/metal doors x rose/ Escutcheon x lever	2																																													
	L583-291	Wood/metal doors x rose/ Escutcheon x knob	2																																													
DD	L583-195	Compression spring											•	•	•	•	•	•	•	•	2	2	•	•	•	•	•	2	2	2	2	•	•	2	2	•	•	•	•	•	•	•	•	•	•	•	•	•
EE	L583-212	Mounting posts, L		2	2	2	2	2		2		2	2	2		2	2			2	2	2	2	2	2		2	2	2		2	2	2	2	2	2	2		2	2		2	2	2	2	2	2	
	L583-497	Mounting posts, LV					2	2	2	2				2	2		2	2			2			2	2		2	2		2	2	2	2		2	2		2	2		2	2		2	2		2	2
FF	L583-233	Emergency turn					•	•																																								
GG	L583-286	Dummy mounting bar	•	•																																												
HH	L583-321	I/S Knob mounting plate	•	•	•	•	•	•	•	•	•	•	•	•		•	•			•		•	•	•	•		•	•		•	•		•	•			•	•		•		•		•	•	•	•	
II	L583-322	Lever spacer	•	2																																	•	•										
JJ	10-091	Armor strike																																			•	•										

* Available with rose trim only.

** Available with knob x rose trim only.

*** Not available with N escutcheon.

Trim Assembly Parts

Mounting Posts

Two required per lock

L Functions	
Part Number	Door Thickness
L583-211	1 $\frac{3}{8}$ "
L583-212	1 $\frac{3}{4}$ "
L583-213	2"
L583-215	2 $\frac{1}{2}$ "
L583-216	2 $\frac{3}{4}$ "
L583-217	3"
L583-218	3 $\frac{1}{4}$ "
L583-219	3 $\frac{1}{2}$ "

LV Functions	
Part Number	Door Thickness
N/A	1 $\frac{3}{8}$ "
L583-497	1 $\frac{3}{4}$ "
L583-498	2"
L583-500	2 $\frac{1}{2}$ "
L583-501	2 $\frac{3}{4}$ "
L583-502	3"
L583-503	3 $\frac{1}{4}$ "
L583-504	3 $\frac{1}{2}$ "

Spindles and Springs

Two required per lock

Part Number	Description
L283-060	1 $\frac{3}{8}$ "–1 $\frac{7}{8}$ " doors
L283-061	2"–3 $\frac{1}{2}$ " doors
L283-064*	L0172 double dummy L9082 EL/EU
L283-065*	L0170 single dummy

* One required per lock

Mounting Plate for Trim One Side Only

DOOR DETAIL

For location of cylinder and/or thumbturn holes, as well as all other dimensions, see appropriate lock function template.

NOTE: PREPARE DOOR FOR ROSE TRIM ON ONE SIDE OF DOOR ONLY.

SCHLAGE®

Installation Instructions

L-Series

Mounting plate for trim one side

©2001 Schlage Lock Company
Printed in U.S.A.
P513-301 Rev. 01/01

IR Security & Safety


L283-150 Mounting Plate and Posts for rose trim on one side of door. For lever use with Spring Cage L283-031, for knob use with Mounting Plate L583-321.

ANSI A115.1 1990 Hollow Steel Door Installations

L283-029 For 1 $\frac{3}{4}$ " thick hollow steel doors prepared per ANSI A115.1 1990.

Install two spacers between the spring cage (or knob mounting plate) and lock chassis as shown. Spacers are required for both the inside and outside escutcheons.


NOTE: L-design escutcheons are not applicable for ANSI A115.1 door preparations.

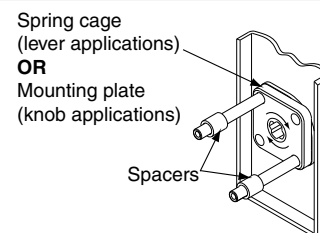

Trim assemblies

L9000-Series double dummy trim

L0172

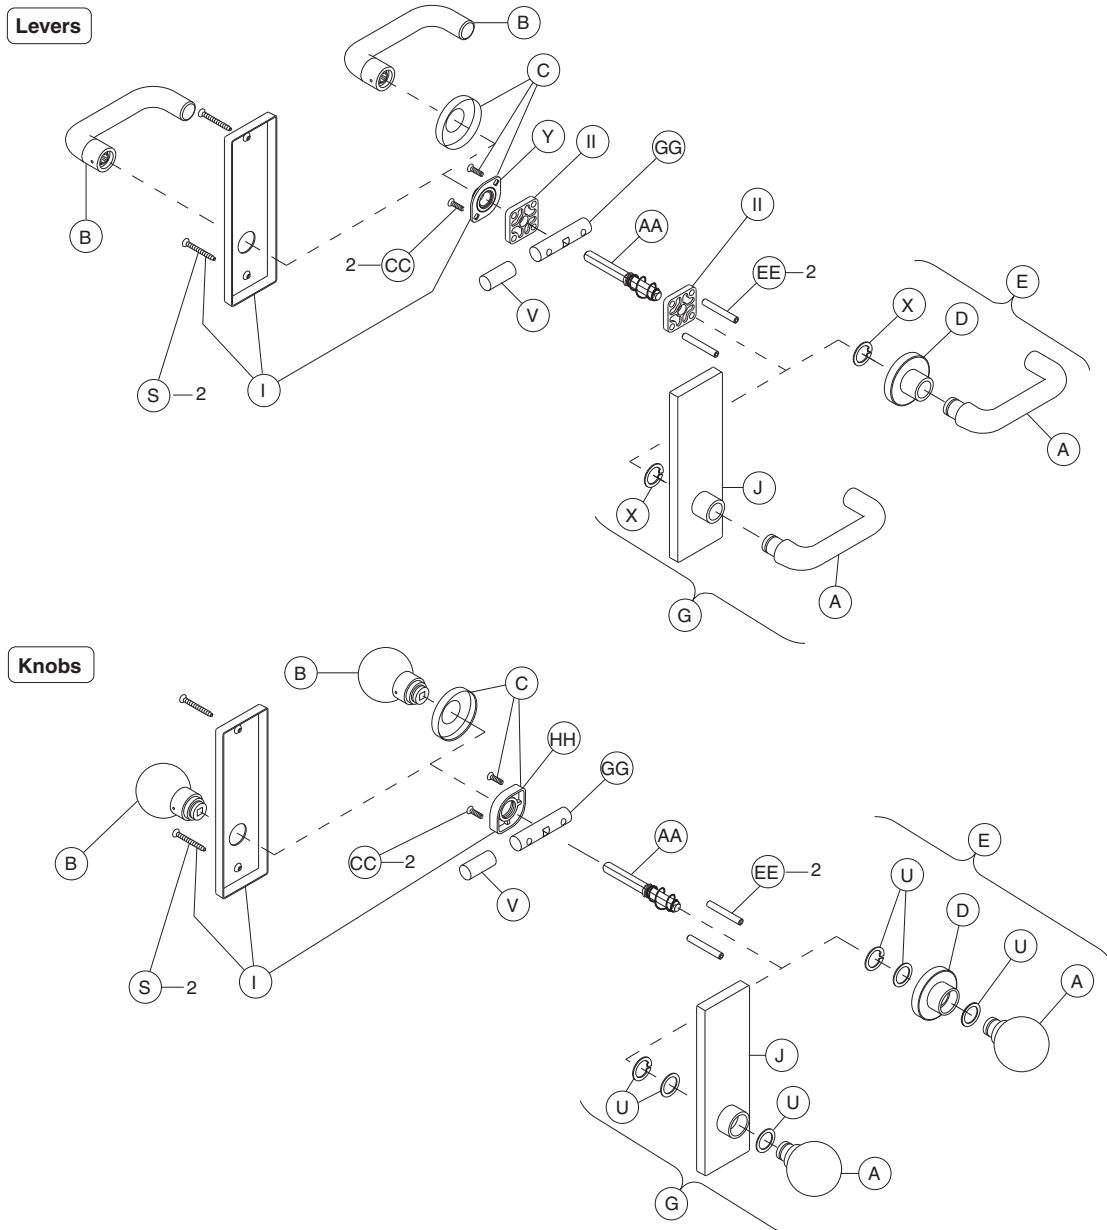

	P/N	Description
A	09-401	Outside knob and lever
B	09-402	Inside knob and lever
C	09-403	Inside rose
D	09-404	Outside rose and bushing
E	09-506	O/S rose & knob/lever, all designs except AST, AVA, MER
	09-655	Outside rose and knob/lever, AST, AVA, MER designs
G	09-550	Outside escutcheon x knob/lever (except 93 lever), L and N x blank
I	09-632	Inside escutcheon for knob/lever, L and N x blank
J	09-636	O/S escutcheon & bushing x knob/lever (except 93 lever), L and N x blank
	09-650	Outside N escutcheon and bushing x 93 lever, blank

	P/N	Description
S	L583-133	Escutcheon thru-bolts/screws (qty – 2), N escutcheon
	L583-287	Escutcheon thru-bolts/screws (qty – 2), L escutcheon
U	K110-550	Knob truarc rings and spacer pack
V	K510-320	Dummy mounting plug
X	L283-030	Lever truarc rings
Y	L283-031	Inside lever mounting plate
AA	L283-064	Spindle and spring, double dummy
CC	L583-066	Mounting plate screws (qty – 2), wood/metal door x rose/escutcheon x knob/lever, except single dummy
EE	L583-212	Mounting posts, L (qty – 2)
GG	L583-286	Dummy mounting bar
HH	L583-321	Inside knob mounting plate
II	L583-322	Outside lever spacers (qty – 2)

Note: Reinforcement required for metal door applications. See template at www.allegion.com/us.