





Series	Barrel Length	Keying	Bolt Type	Mounting	Revision Date
DCN	See chart	N Series - National Keyway	Cam lock	Surface	6/2019

DCN Cam Lock - Installation Instructions


Typical Installation

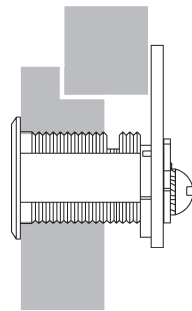

Lipped/Overlay

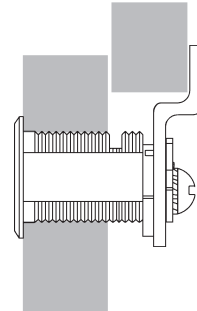

Overlay

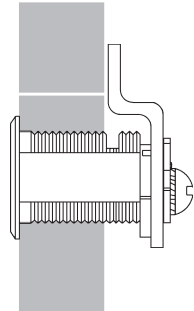

Flush


Included Accessories:

2 keys
3 lock mounting screws
Straight cam
Offset reversible cam
Anti-rotation plate
Lost-motion cam shifter


Cam Lock Dimensions

	For Mat. Thickness	Straight Cam (X)	Inbent Cam (Y)	Outbent Cam (Z)	Cylinder Length (A)
DCN1	3/4"	1-1/16"	3/4"	1-3/8"	1"
DCN2	7/8"	1-3/16"	7/8"	1-1/2"	1-1/8"
DCN3	1-1/8"	1-7/16"	1-1/8"	1-3/4"	1-3/8"
DCN4	1-1/2"	1-13/16"	1-1/2"	2-1/8"	1-3/4"



Mounting Cutout

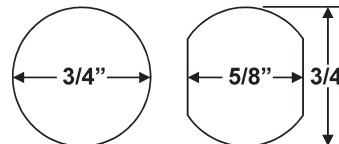

Straight Cam

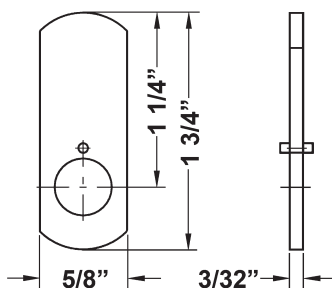

Offset Reversible Cam

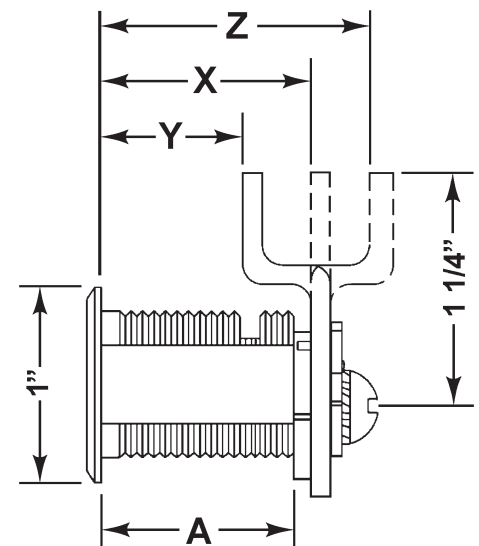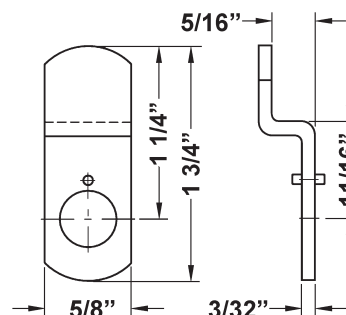

**OLYMPUS
LOCK** INC

18424 Highway 99 | Lynnwood, WA 98037 | 800.525.0954 | www.olympuslock.com
Copyright © 2019 Olympus Lock, Inc. all rights reserved.


DCN

All below configurations can be used with straight cam or offset cam (in either the inbent or outbent position).

Function:
right-hand door,
vertical drawer




Rear view

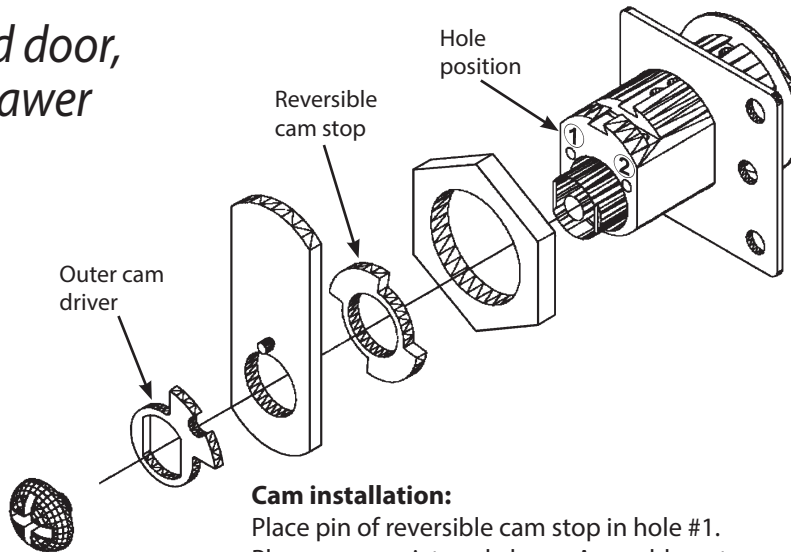


Cam installation:

Place pin of reversible cam stop in hole #1. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to left of the "ears." Screw in cam screw until tight.

DOOR

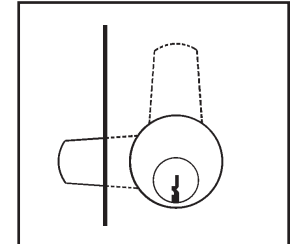

360° key rotation
Key removable at cam
positions 9:00 and 12:00

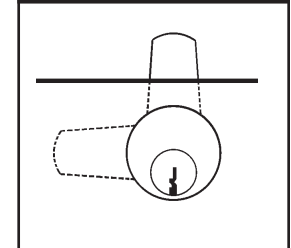


DRAWER

Function:
left-hand door,
vertical drawer




Rear view

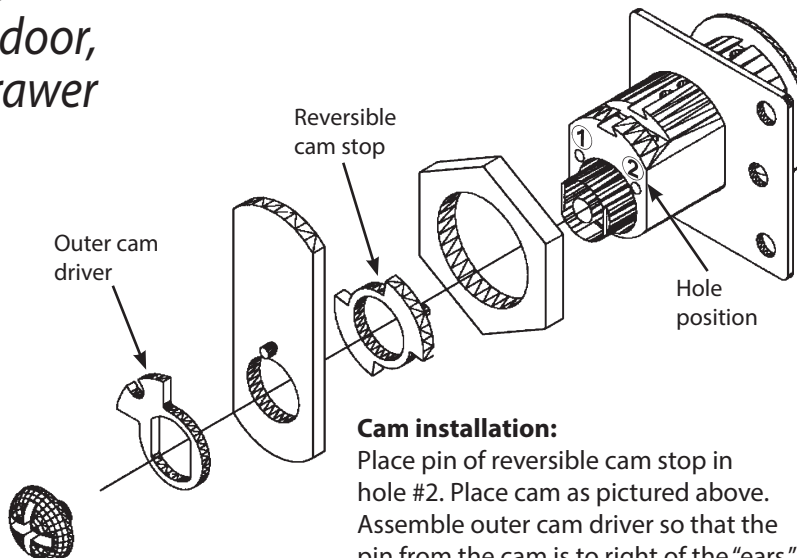


Cam installation:

Place pin of reversible cam stop in hole #2. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to right of the "ears." Screw in cam screw until tight.

DOOR

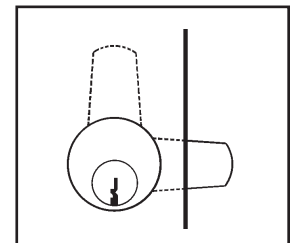

360° key rotation
Key removable at cam
positions 12:00 and 3:00

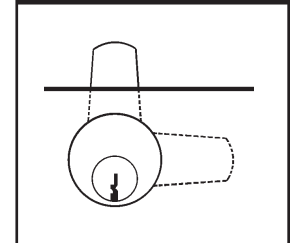

DRAWER



**OLYMPUS
LOCK**

18424 Highway 99 | Lynnwood, WA 98037 | 800.525.0954 | www.olympuslock.com
Copyright © 2019 Olympus Lock, Inc. all rights reserved.


DCN

All below configurations can be used with straight cam or offset cam (in either the inbent or outbent position).

Function:
right-hand door,
inverted drawer




Rear view

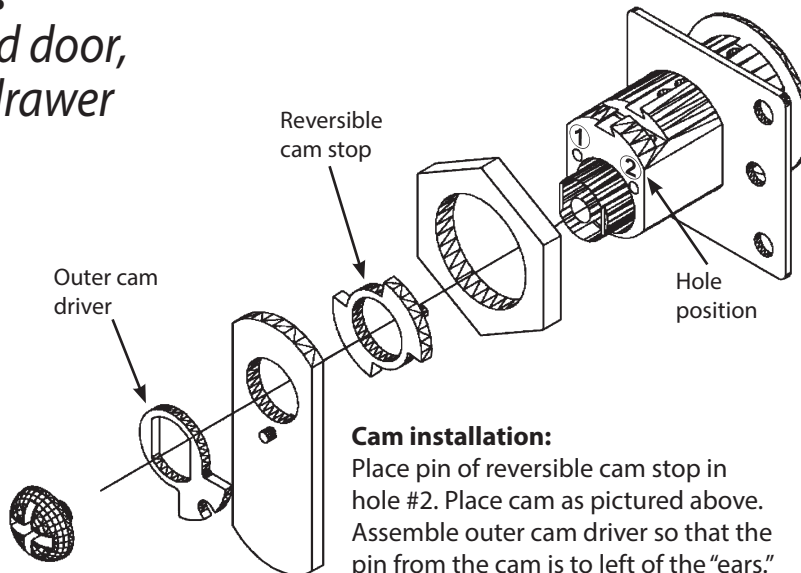


Cam installation:

Place pin of reversible cam stop in hole #2. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to left of the "ears." Screw in cam screw until tight.

DOOR

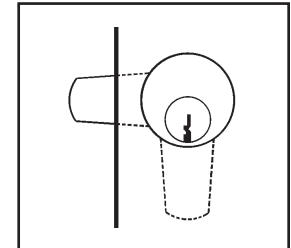

360° key rotation
Key removable at cam
positions 6:00 and 9:00

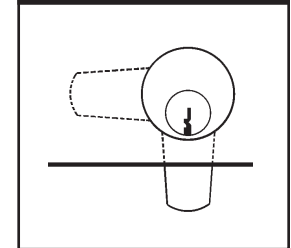


DRAWER

Function:
left-hand door,
inverted drawer




Rear view

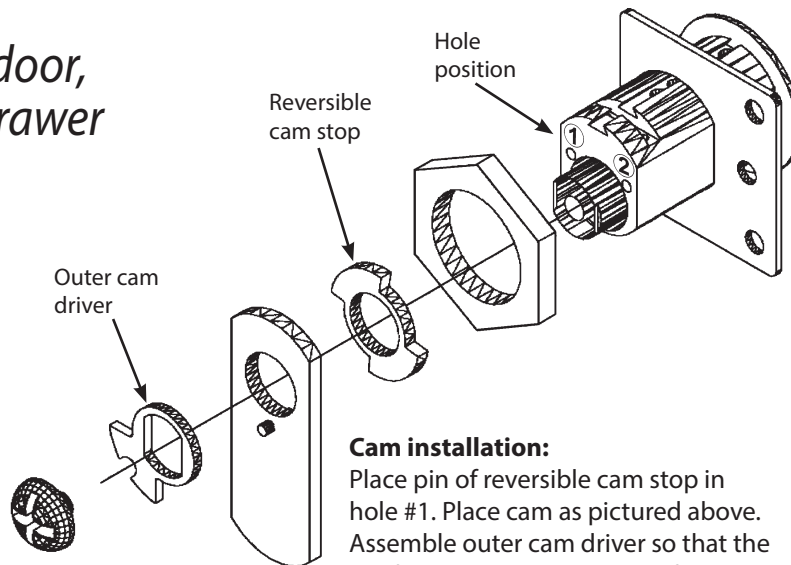


Cam installation:

Place pin of reversible cam stop in hole #1. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to right of the "ears." Screw in cam screw until tight.

DOOR

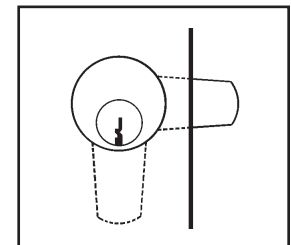

360° key rotation
Key removable at cam
positions 3:00 and 6:00

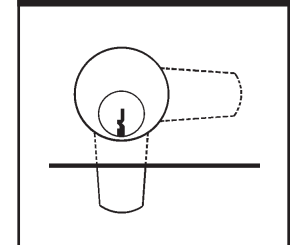

DRAWER



**OLYMPUS
LOCK** INC.

18424 Highway 99 | Lynnwood, WA 98037 | 800.525.0954 | www.olympuslock.com
Copyright © 2019 Olympus Lock, Inc. all rights reserved.