





Series	Barrel Length	Keying	Bolt Type	Mounting	Revision Date
DCR	See chart	R Series - CCL R1	Cam lock	Surface	6/2019

# DCN Cam Lock - Installation Instructions


## Typical Installation

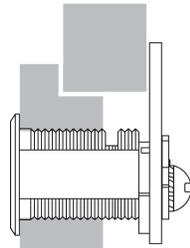

Lipped/Overlay

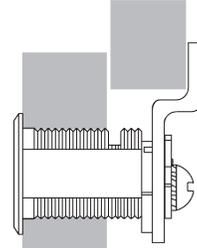

Overlay

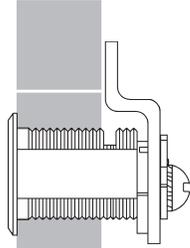

Flush


### Included Accessories:

- 2 keys
- 3 lock mounting screws
- Straight cam
- Offset reversible cam
- Anti-rotation plate
- Lost-motion cam shifter


### Cam Lock Dimensions

	For Mat. Thickness	Straight Cam (X)	Inbent Cam (Y)	Outbent Cam (Z)	Cylinder Length (A)
DCN1	3/4"	1-1/16"	3/4"	1-3/8"	1"
DCN2	7/8"	1-3/16"	7/8"	1-1/2"	1-1/8"
DCN3	1-1/8"	1-7/16"	1-1/8"	1-3/4"	1-3/8"
DCN4	1-1/2"	1-13/16"	1-1/2"	2-1/8"	1-3/4"



### Mounting Cutout

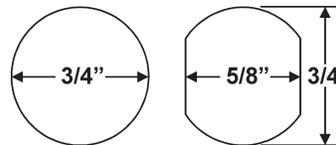

### Straight Cam

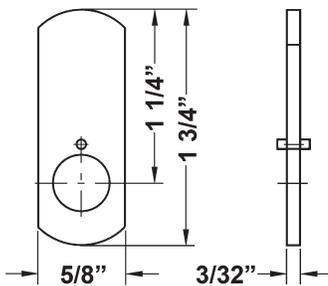

### Offset Reversible Cam

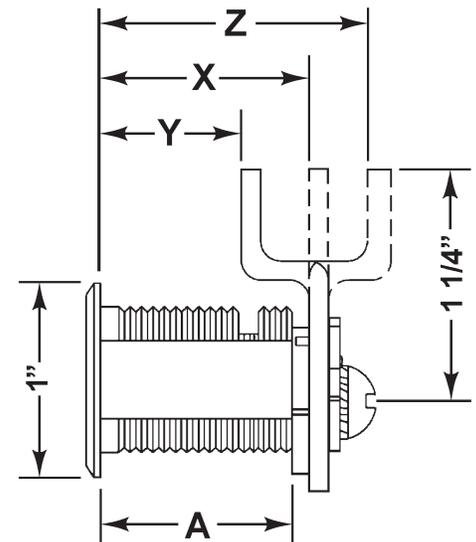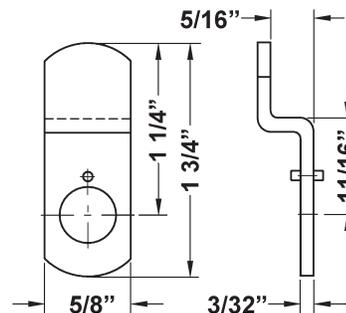

**OLYMPUS  
LOCK**  
INC


18424 Highway 99 | Lynnwood, WA 98037 | 800.525.0954 | www.olympuslock.com  
Copyright © 2019 Olympus Lock, Inc. all rights reserved.

**DCR** All below configurations can be used with straight cam or offset cam (in either the inbent or outbent position).

**Function:**  
right-hand door,  
vertical drawer




Rear view

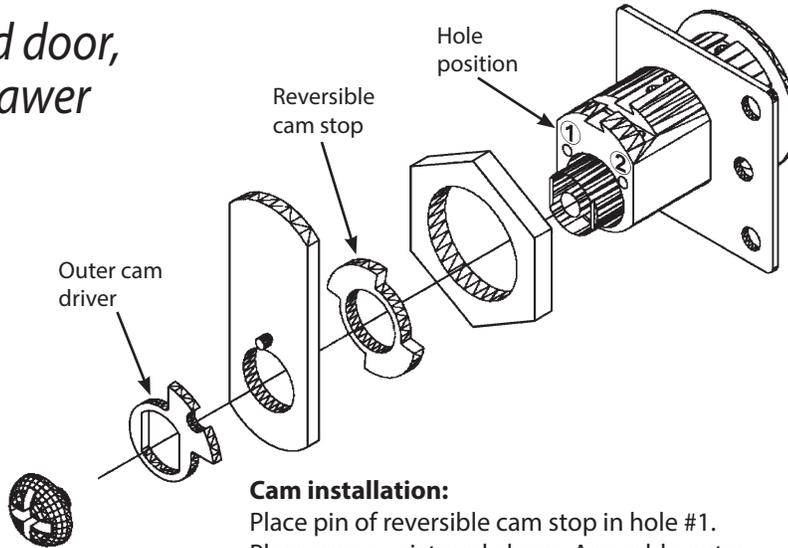


**Cam installation:**

Place pin of reversible cam stop in hole #1. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to left of the "ears." Screw in cam screw until tight.

DOOR

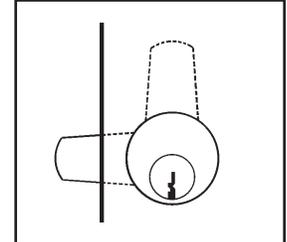

360° key rotation  
Key removable at cam  
positions 9:00 and 12:00

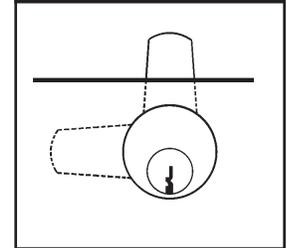


DRAWER

**Function:**  
left-hand door,  
vertical drawer




Rear view

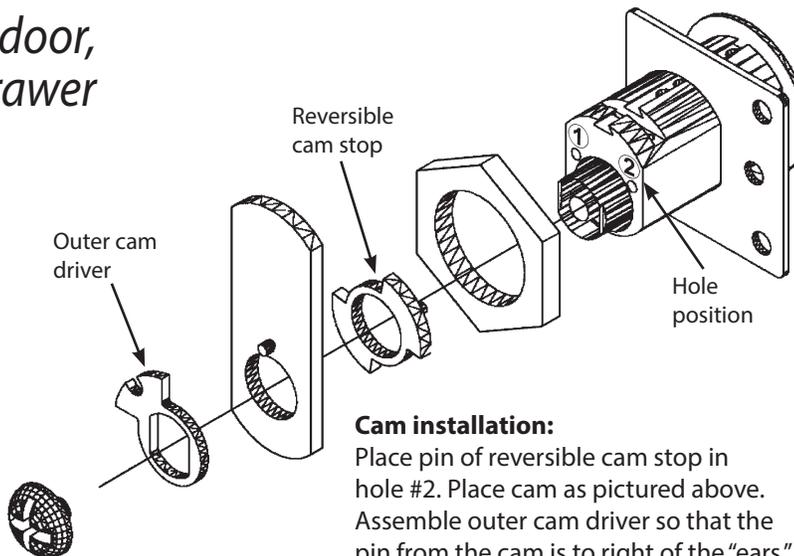


**Cam installation:**

Place pin of reversible cam stop in hole #2. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to right of the "ears." Screw in cam screw until tight.

DOOR

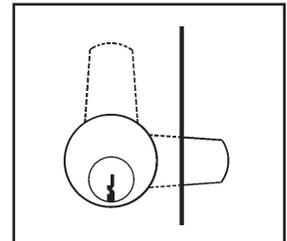

360° key rotation  
Key removable at cam  
positions 12:00 and 3:00

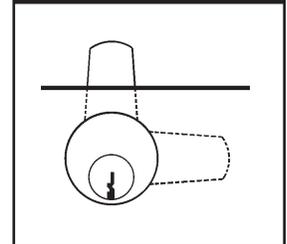

DRAWER




**OLYMPUS  
LOCK**

**DCR** All below configurations can be used with straight cam or offset cam (in either the inbent or outbent position).

**Function:**  
right-hand door,  
inverted drawer




Rear view

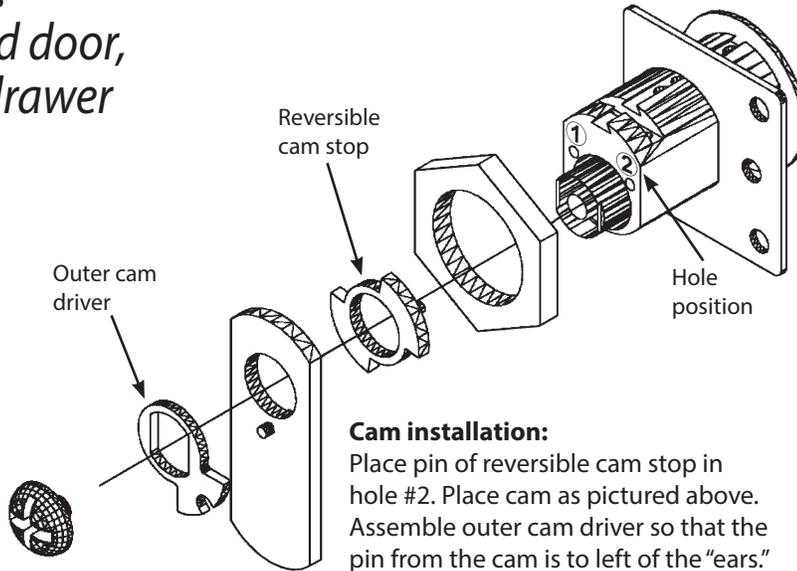


**Cam installation:**  
Place pin of reversible cam stop in hole #2. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to left of the "ears." Screw in cam screw until tight.

DOOR

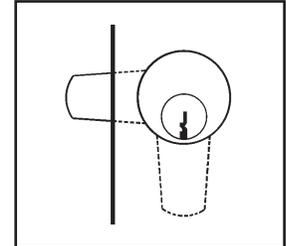

360° key rotation  
Key removable at cam positions 6:00 and 9:00

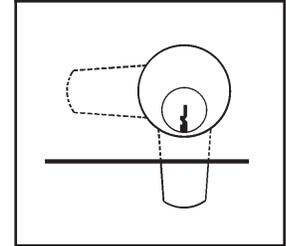


DRAWER

**Function:**  
left-hand door,  
inverted drawer




Rear view

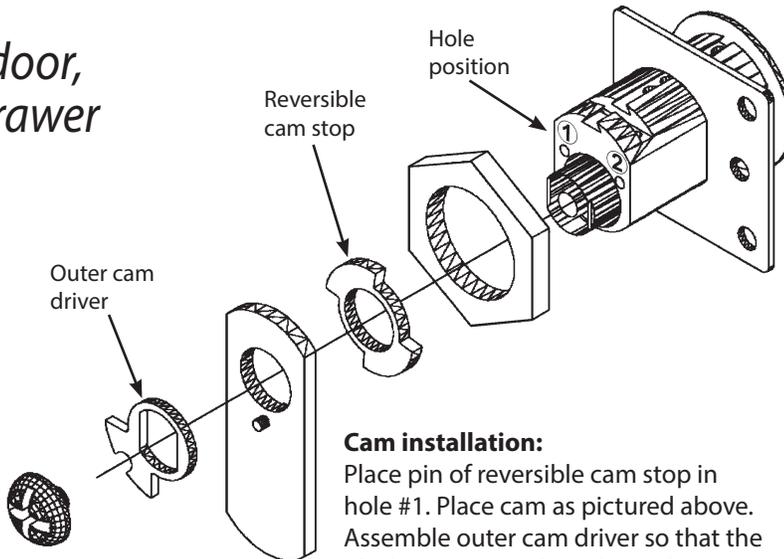


**Cam installation:**  
Place pin of reversible cam stop in hole #1. Place cam as pictured above. Assemble outer cam driver so that the pin from the cam is to right of the "ears." Screw in cam screw until tight.

DOOR

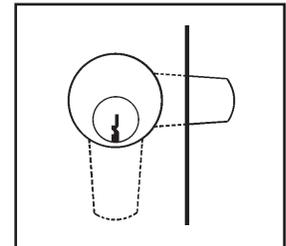

360° key rotation  
Key removable at cam positions 3:00 and 6:00

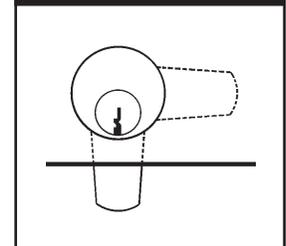

DRAWER

