


603F, 622F, 624F, 625F, 626F, 628F, 629F trim

Item	Part No.	Description
1		Escutcheon Assembly
	60-7000-0612-FIN	603F, 622F, 624F, 625F, 626F
	60-7000-0615-FIN	628F, 629F
2	See Chart page 60	Lever/Knob/Thumbturn Assy. (603F)
3	See Chart page 61	Cylinder, Rim*
5	60-7000-0215-000	Housing & Cam Assy.
6	60-7000-1235-048	Screw, Cylinder Mounting (2)
7	81-0016-2200-999	Screw, NL
8	60-7000-9002-999	Driver Gear Assembly
9	81-4414-0308-036	Screw, Tailpiece Plate, #6 x 3/8", PHT-T-PH (2)
10		Tailpiece Assembly
	60-7000-0611-059	1-3/4" Door Without Shim Kit
	60-7000-0217-059	2" - 2-1/4" Door or Std. Door with Shim Kit
11		Gear, Drive
	60-7000-1328-048	Thumbturn/Lever (603F, 626F, 628F)
	60-7000-1011-059	Knob/Rigid Lever (629F, 625)
	60-7000-1339-048	Knob Gear (622F, 624F)

Item	Part No.	Description
12	60-7000-6220-999	Universal Spring Hub, Lever
14	99-9958-0047-999	Cotter Pin
15	99-9999-3516-999	Nut, Spindle
16	60-7000-9001-999	Thimble Insert, Nylon (Levers) Not Shown
17	81-9500-1476-FIN	Screw Packet, Mtg.
		Consists of the following:
	81-0013-0670-FIN	Screw, 1/4-20 x 1 OPHMS (2)
	99-9999-7156-FIN	Washer, #14 Finish (2)
18		Spring, Grip Return
	60-7000-1234-999	Knob Not Shown
	60-7000-1220-999	Levers, Universal Spring
19	60-7000-1306-999	Spring Not Shown Under Tailpiece
20	60-7000-1365-999	Hex Nut / Bushing for Spring Not Shown
21	60-7000-1236-059	Washer Under Tailpiece (2) Not Shown

*See page 61 for cylinder collar applications.

603F, 622F, 624F, 625F, 626F, 628F, 629F trim

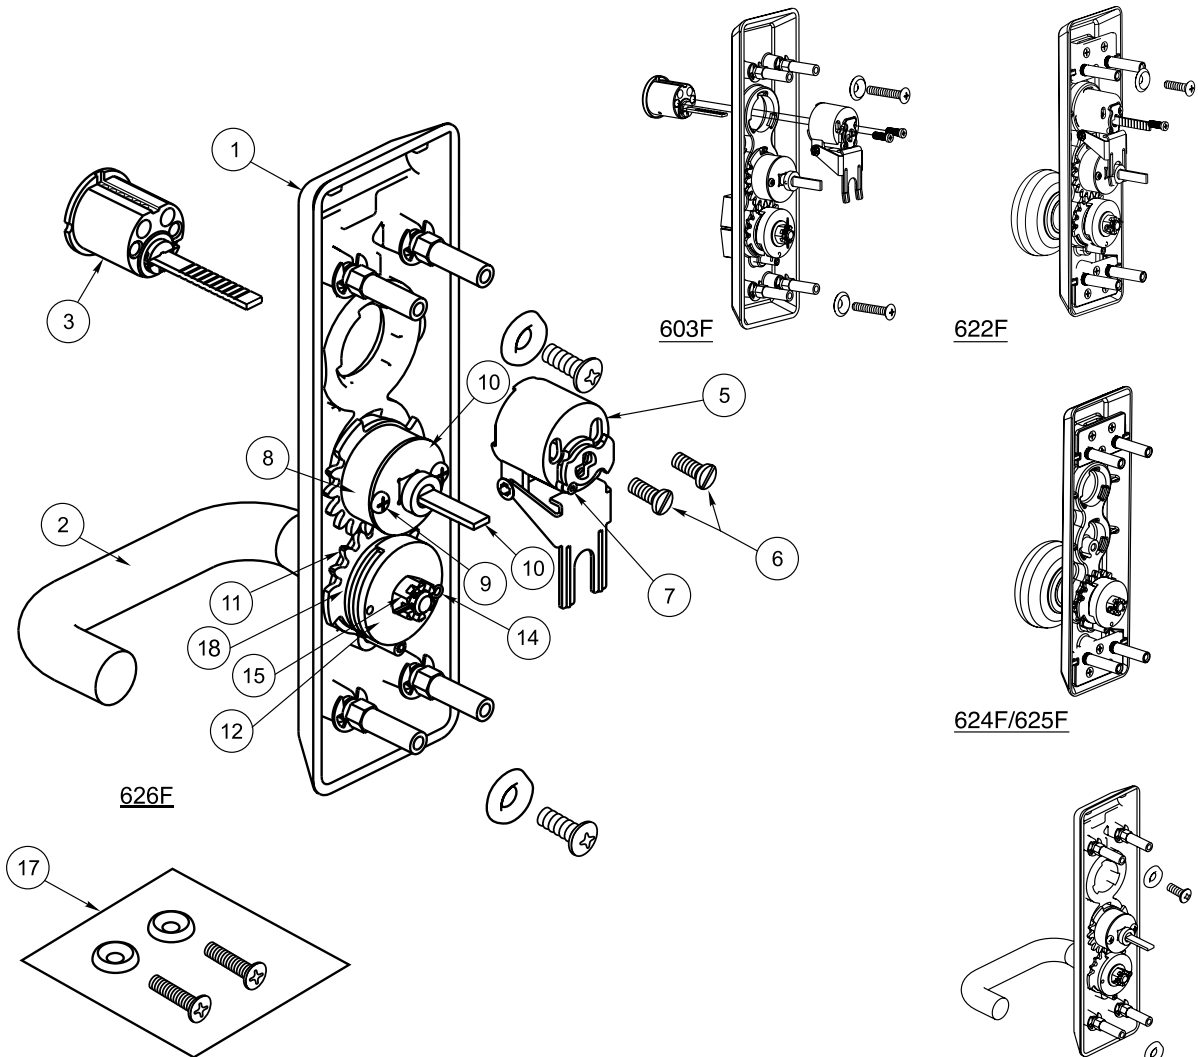

Cylinder Controls Thumbturn	Cylinder Controls Knob	(DT) Active Knob (Passage)	(DT) Rigid Knob	Cylinder Controls Lever	Access by Key and Lever	(Passage) Active Lever or (DT) Free Wheeling Lever	(DT) Rigid Lever
11/12	08	02	02	08	09	—	02
603F	622F	624F	625F	626F	626F	628F	629F

628F


629F

633F, 635F trim

Item	Part No.	Description
1		Escutcheon Assembly
	60-7000-0715-FIN	633F
	60-7000-0714-FIN	635F
2	60-7000-X192-FIN	Thumbpiece
3	See Chart Page 61	Cylinder, Rim* (633F)
5	60-7000-0215-000	Housing & Cam Assembly
6	60-7000-1235-048	Screw, Cylinder Mounting (2)
7	81-0016-2200-999	Screw, NL Function
9	81-4414-0308-036	Screw, Tailpiece Plate, #6 x 3/8 PHT-T-PH (2)
10	60-7000-0611-059	Tailpiece Assembly
17	81-9500-1476-FIN	Screw Packet, Mtg.
		Consists of the following:
	81-0013-0670-FIN	Screw, 1/4-20 x 1 OPHMS (3)
	99-9999-7156-FIN	Washer, #14 Finish (3)
19	60-7000-1306-999	Spring Under Tailpiece
20	60-7000-1305-059	Hex Nut/Bushing for Spring
38	60-0010-2639-FIN	Pull, Straight
39	60-7000-1039-048	Screw Post
40	99-9999-7154-036	Lock Washer, Screw Post
41	99-9999-5697-999	Spring, Thumbpiece (2)
42	60-7000-1190-059	Slider, Thumbpiece
43	60-7000-0214-000	Housing, Tailpiece Assy.
48	60-7000-1045-059	Pin, Thumbpiece
49	60-7000-1189-059	Thumbpiece Support Bracket


* See page 61 for cylinder collar applications.

633F, 635F trim

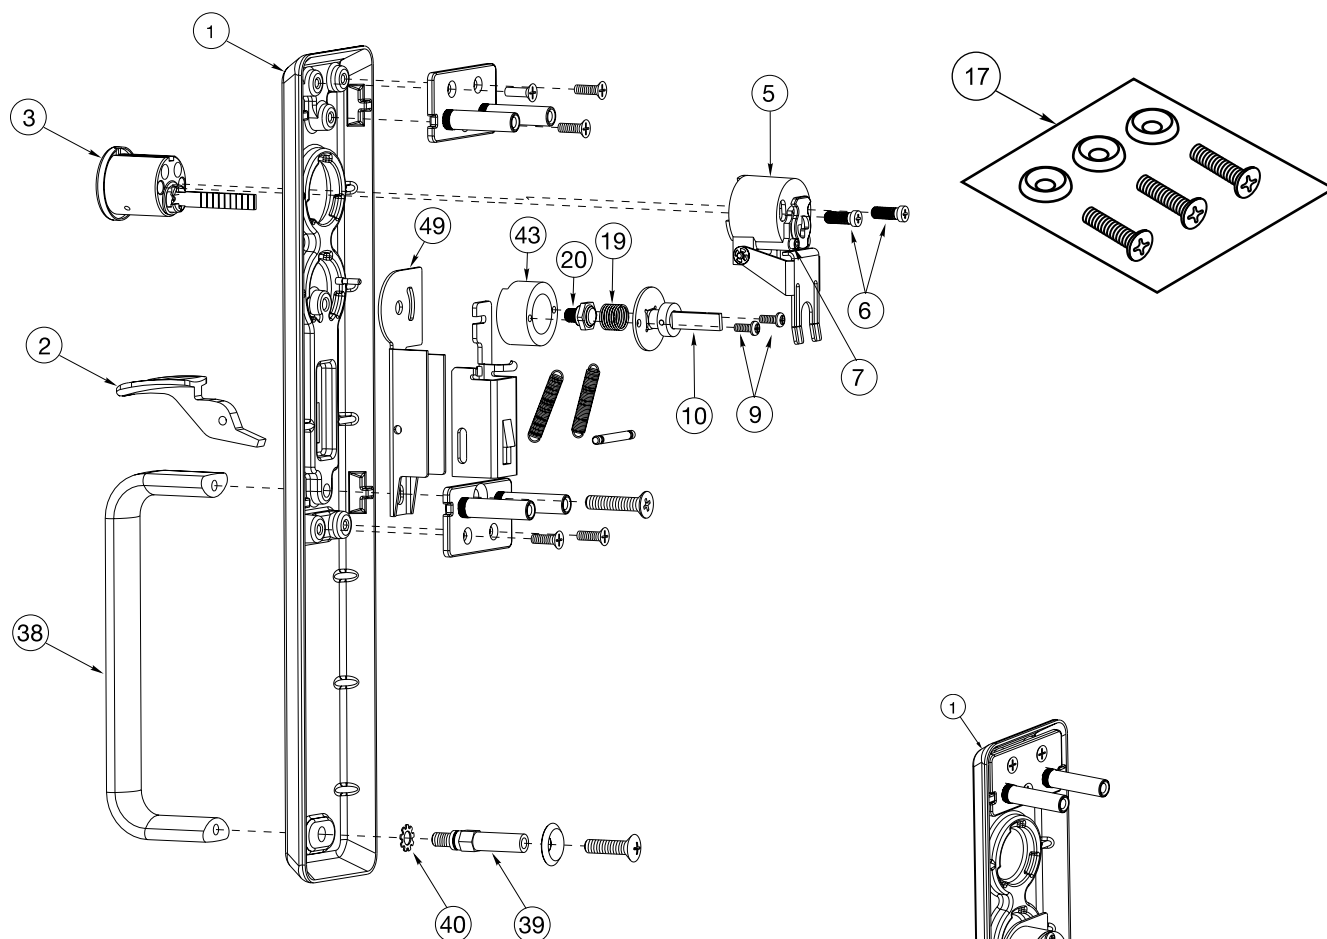

633F

Cylinder Controls T-Piece	Access by Key and T-Piece	(Passage) Active T-Piece
05	06	—
633F	633F	635F

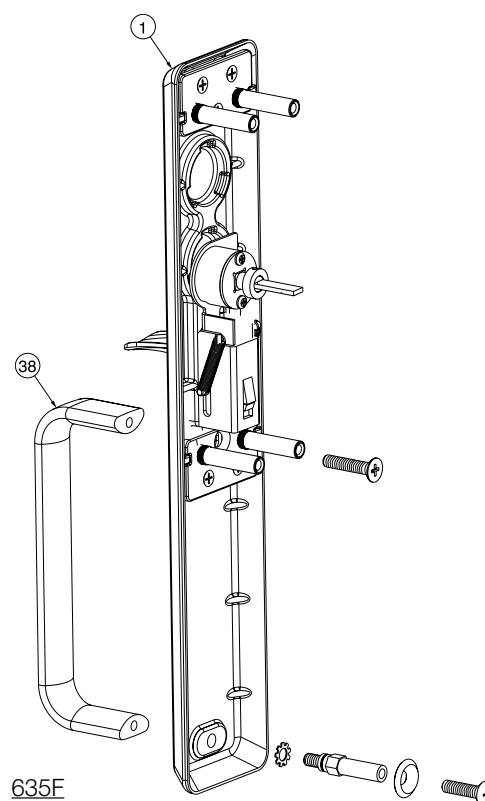

635F