Part No.	Reference No.	Quantity	Description
75009901	SEC 01		MODEL NUMBER DESCRIPTION DIGIT 1-17
75009902	SEC 01		MODEL NUMBER DESCRIPTION DIGIT 18-31
75009005	SEC 02		GENERAL ILLUSTRATION
75010913	SEC 03		COMPRESSOR MOUNTING HARDWARE
75011760	SEC 03		COMPRESSOR POWER HARNESSES
75012194	SEC 03		COMPRESSORS AND CRANKCASE HEATERS
75009944	SEC 03		REFRIGERATION CIRCUIT CONTROLS
75009909	SEC 04		FILTERS AND DRAIN PANS
75012170	SEC 08		OUTDOOR FAN ASSEMBLY
75012166	SEC 08		OUTDOOR FAN MOTORS
75012173	SEC 09		INDOOR FAN ASSEMBLY
75012169	SEC 09		INDOOR FAN MOTOR
75012175	SEC 10		OUTDOOR CONDENSOR COIL
75012098	SEC 12		EVAPORATOR COIL
75009958	SEC 25		UNIT SENSING
75012744	SEC 41		AIR FLOW PANELS
75012749	SEC 43		COMM PANELS
75012144	SEC 45		OPTIONAL FIELD INSTALLED ACCESSORIES

Model Number Description

75009902 REV E

Voyager 2
Digits 18–31

Digit 18 Through The Base Provisions
0= No through the base provisions
A= Through the base electric
B= Through the base gas
C= Through the base electric and gas
D= Through the base access

Digit 19 Disconnect Switch/ Circuit Breaker
0= No Disconnect,circuit break, phase monitor
1= Unit Mount Non-Fused and Disconnect Switch
2= Unit Mount Circuit Breaker
3= Phase Monitor
4= Phase Monitor and Disconnect
5= Phase Monitor and Circuit Breaker

Digit 20 Convenience Outlet Option
0= Without Convenience Outlet
A= Convenience Outlet Unpowered (FIELD)
B= Convenience Outlet Powered (FACTORY)

Digit 21 Communications Options
0= Without Communications Options
1= Trane Communications Interface
2= Lontalk Communications Interface
3= Novar 2024 Controls Interface
4= Novar 3051 Controls Interface
5= Novar 3051 Communications Interface with Demand Control Ventilation
6= Building Automation Control Network Communications Interface
7= Wireless Building Automation Control Network Communications Interface

Digit 22 Refrigeration System Option
0= Standard refrigeration system
A= Thermal Expansion Valve (TXV)
B= Dehumidification (hot gas reheat)

Digit 23 Refrigeration Controls
0= Without Refrigeration Controls
1= Frostat
2= Crankcase Heater
3= Frostat and Crankcase Heater
4= High Pressure Control
5= High Pressure Control and Frostat
6= High Pressure and Crankcase Heater
7= High Pressure, Crankcase Heater, Frostat

Digit 24 Smoke Detector
0= Without Smoke Detector
A= Return Air Smoke Detector
B= Supply Air Smoke Detector
C= Return/Supply Air Smoke Detector

Digit 25 System Monitoring Controls
0= No monitoring controls
1= Clogged filter switch
2= Fan failure switch
3= Discharge air sensing
4= Clogged filter switch and fan failure
5= Clogged switch and discharge air sensing
6= Fan failure switch and discharge air sensing
7= Clogged filter switch, fan failure switch and discharge air sensing
8= NOVAR Return Air Sensor (Novar 2024)
9= NOVAR Zone Temp Sensor (Novar 3051)
A= Condensate Overflow Switch
B= Condensate Overflow Switch and Clogged filter switch
C= Condensate Overflow Switch and Fan Fail
D= Condensate Overflow Switch and Discharge Air
E= Condensate Overflow Switch and Clogged filter switch, Fan Fail
F= Condensate Overflow Switch and Clogged filter switch, Discharge Air
G= Condensate Overflow Switch and Fan Fail, Discharge Air
H= Condensate Overflow Switch, Clogged Filter, Fan Fail, Discharge Air

Digit 26 System Monitoring Controls
0= No monitoring controls
A= Demand Control Ventilation
B= Fault Detection Device
C= Demand Control Ventilation and Fault Detection Device

Digit 27 Stainless Steel Drain pan
0= No stainless Drain pan
1= Stainless Steel Drain pan

Digit 28 Short Circuit Current Rating (SCCR)
0= Standard
A= 65kA

Digit 29,30 Reserved For Future
0= Standard

Digit 31 Unit Controls
0= Standard

Model Number Description

75009901 REV E

Voyager 2
Digits 1–17

Digit 1 Unit Type
Y= Gas/Electric
T= Cooling
W= Heat pump

Digit 2 Efficiency
S= Standard
H= High
Z= Ultra High

Digit 3 Airflow
D= Downflow
H= Horizontal

Digit 4,5,6 Unit Tonnage
150= 12.5 Ton
155= 15 Ton 50 hz
175= 17.5 Ton 50 hz
180= 15 Ton
200= 20 Ton 50 hz
210= 17.5 Ton
240= 20 Ton
250= 25 Ton 50 hz
300= 25 Ton

Digit 7 Major Design Sequence
E= R-410a
F= Micro-channel
G= ASHRAE 90.1

Digit 8 Voltage Selection
3= 230/60/3
4= 460/60/3
D= 380-415/50/3
K= 380/60/3
T= 200/50/3
W= 575/60/3

Digit 9 Unit Controls
R= Reliatel

Digit 10 Heating Capacity
0= No Heat
G= 18 kW electric heat
K= 27 kW electric heat
N= 36 kW electric heat
P= 54 kW electric heat
R= 72 kW electric heat
H= Gas Heat - High
L= Gas Heat - Low
V= Gas Heat - Modulating
X= Gas Heat - SS Ht Ex - Low
Z= Gas Heat - SS Ht Ex - High

Digit 11 Minor Design Sequence
A= Minor Des. Seq.

Digit 12,13 Service Sequence

Digit 14 Fresh Air Selection
0= No Fresh Air
A= Manual damper
D= Econ Dry Bulb w/ barometric relief
F= Econ Reference Enthaply with barometric relief
H= Econ Comparative Enthaply with barometric relief
K= Low Leak Econ Dry Bulb with barometric relief
M= Low Leak Econ Reference Enthalpy with barometric relief
P= Low Leak Econ Comparative Enthalpy with barometric relief


Digit 15 Supply Fan/Drive Type/Motor
0= Standard Drive
1= Oversized Motor
3= High Efficiency Belt Drive
6= Single Zone Variable Air Volume Standard
7= Two Speed Standard
8= Single Zone Variable Air Volume Oversized
9= Two Speed Oversized
A= Single Zone Variable Air Volume Standard with Shaft Ground Ring
B= Two Speed Standard w/ Shaft Ground Ring
C= Single Zone Variable Air Volume Oversized with Shaft Ground Ring
D= Two Speed Oversized w/ Shaft Ground Ring
E= VAV Supply Air Temperature Control - Standard
F= VAV Supply Air Temperature Control - Oversized
G= VAV Supply Air Temperature Control - Standard w/ Shaft Ground Ring
H= VAV Supply Air Temperature Control - Oversized w/ Shaft Ground Ring


Digit 16 Hinged Service Access / Filters
0= Standard panels/standard filters
A= Hinged access/standard filters
B= Standard panels/2" inch pleated filters
C= Hinged access/2" inch pleated filters
D= Standard panels/MERV 13 filters
E= Hinged access/MERV 13 filters

Digit 17 Condenser Coil Protection
0= Standard coil
1= Standard coil with hail guard
2= Epoxy Coated Condenser Coil
3= Epoxy Coated Condenser Coil and Hail Guard
4= ECoated Coil
5= ECoated Coil with Hail Guard

Voyager Rooftop
General Illustration
YCD240 shown

75009005 REV A

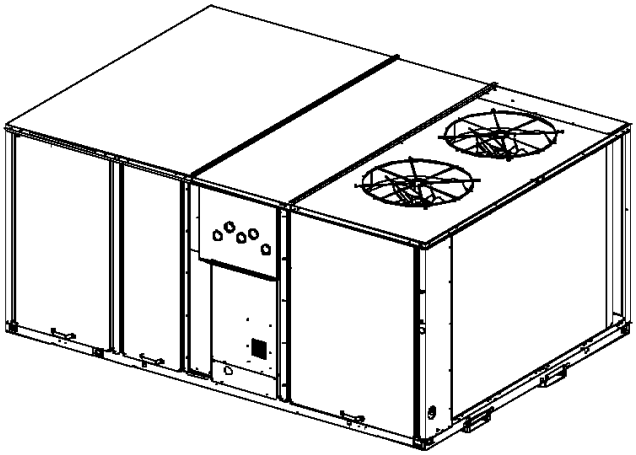


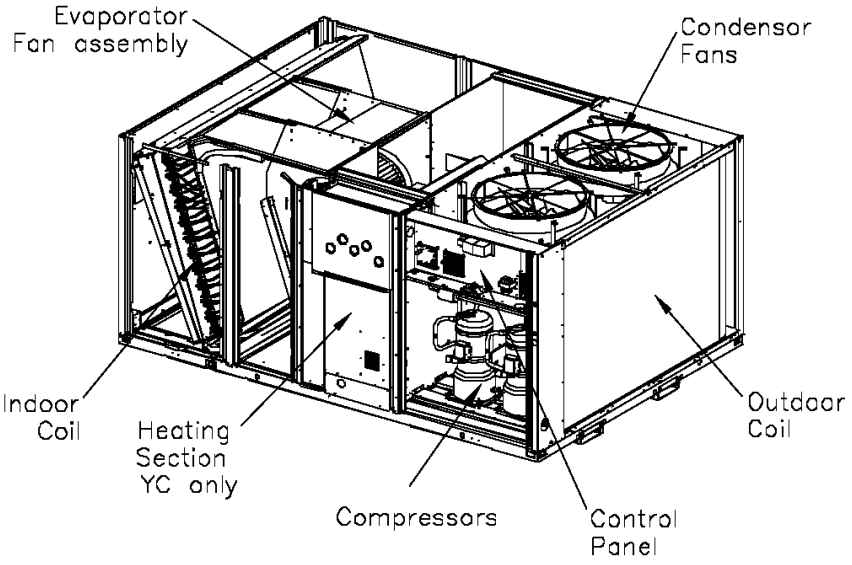

REFRIGERATION CIRCUIT CONTROLS

75009944

REV
B

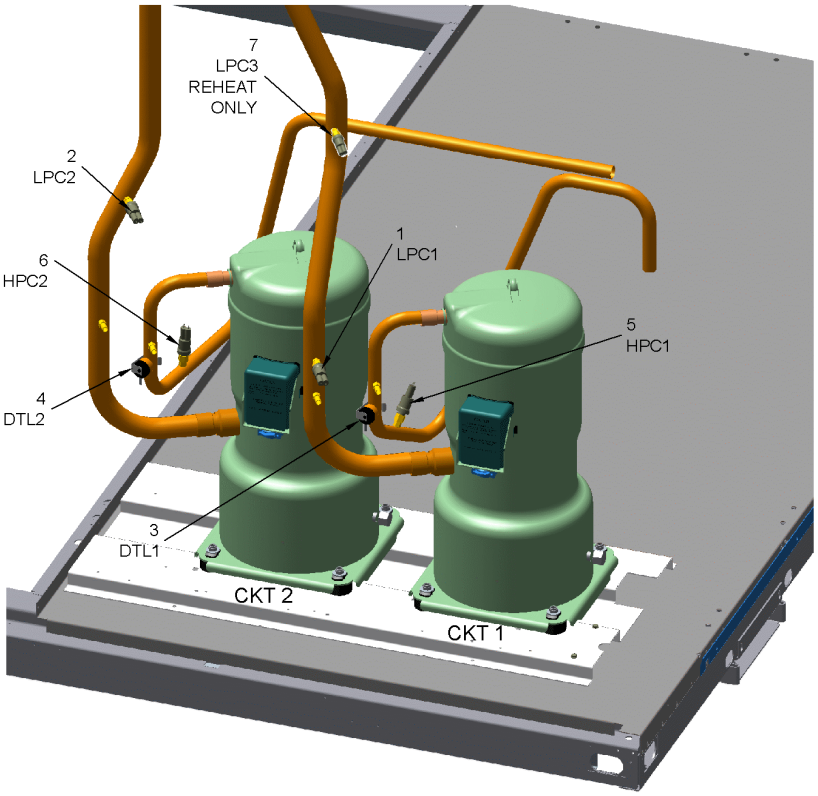

This is a typical illustration. The unit in the field may not appear exactly as shown.

Part No.	Reference No.	Quantity	Description
CNT07733	1	1	CONTROL; LOW PRESSURE, CUTOUT, BLUE LEAD WIRES, CIRCUIT 1
CNT07734	2	1	CONTROL; LOW PRESSURE, CUTOUT, YELLOW LEAD WIRES, CIRCUIT 2
CNT07730	5	1	CONTROL; HI-PRESSURE, BLACK LEAD WIRES
CNT07731	6	1	CONTROL; HI-PRESSURE, RED LEAD WIRES


COMPRESSOR MOUNTING HARDWARE

75010913

REV A

VOYAGER 2

TYPICAL ILLUSTRATION

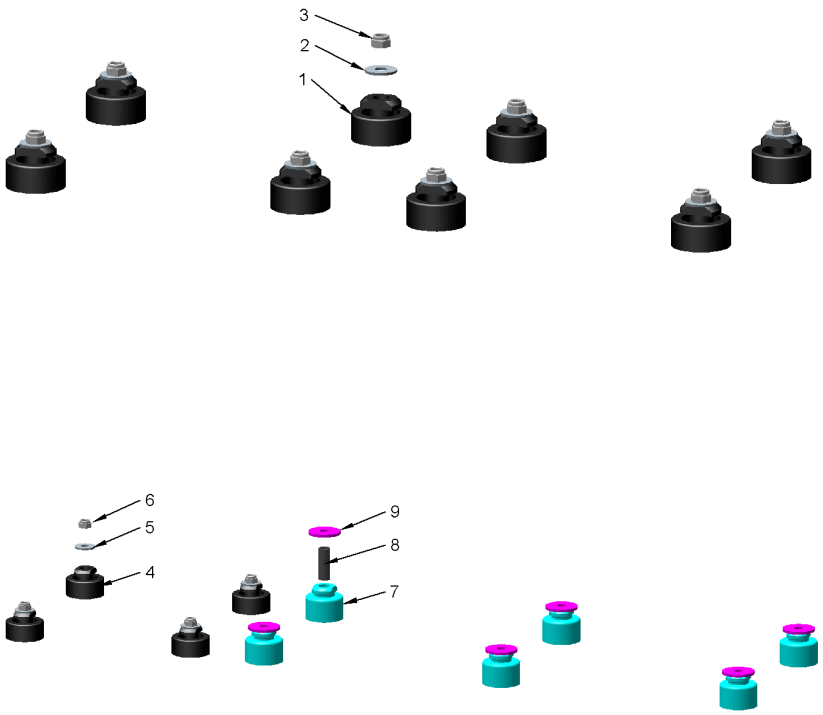


Part No.	Reference No.	Quantity	Description
GRM00888	1	8	GROMMET; ISOLATOR, COMPRESSOR, .438 ID X .160 GRV, .750 DIA X 1.625 OD, BLACK NEOPRENE RUBBER
NUT00355	3	8	NUT; HEX, LOCK, 5/16IN.-18

COMPRESSOR POWER HARNESSES

75011760

REV A

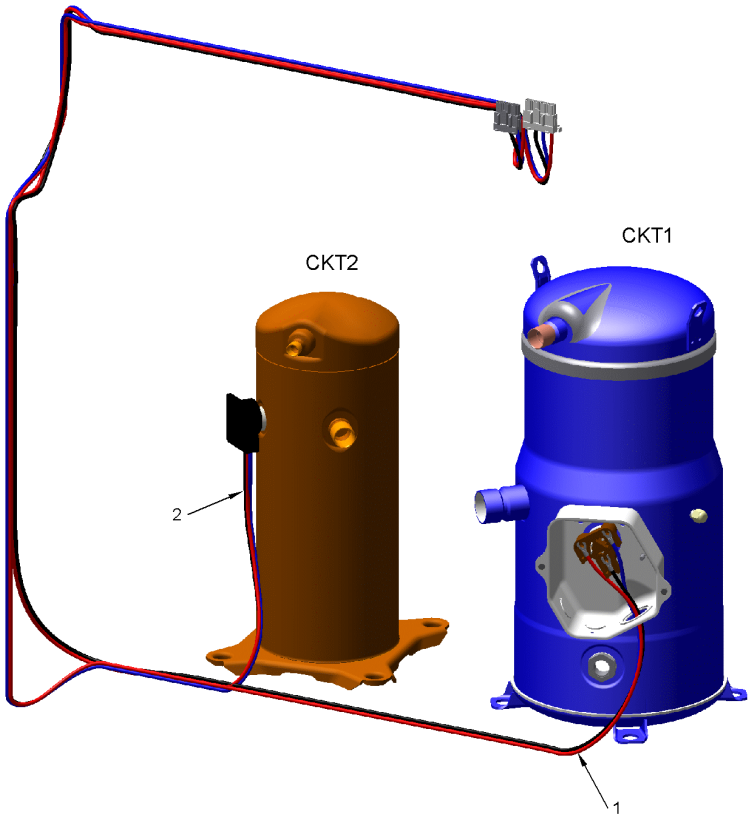


This is a typical illustration. The unit in the field may not appear exactly as shown.

COMPRESSORS
AND CRANKCASE HEATERS


75012194

REV A

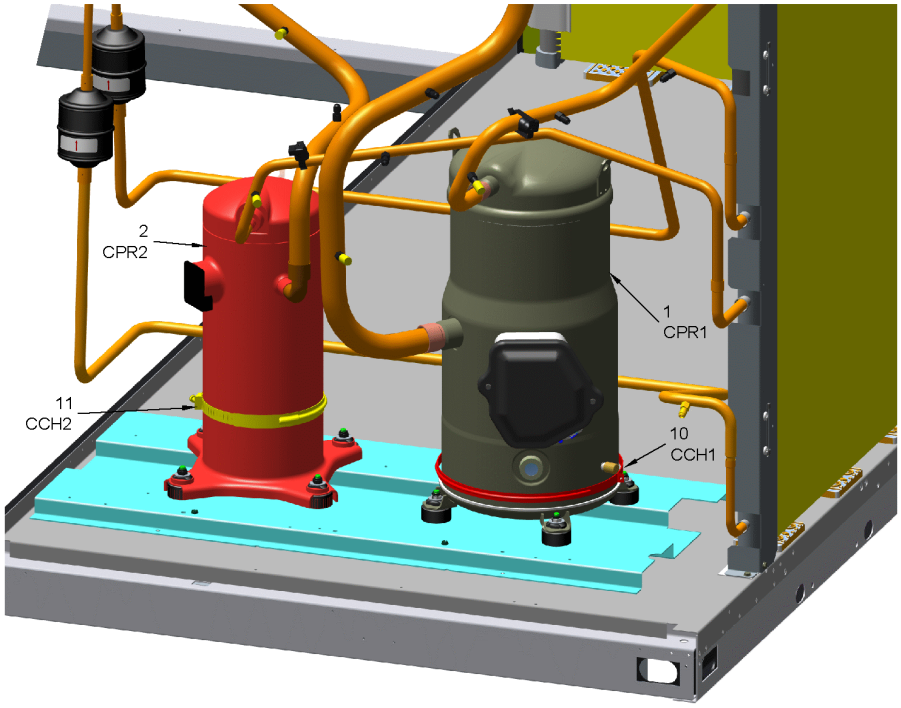

This is a typical illustration. The unit in the field may not appear exactly as shown.

FILTERS AND DRAINPAINS 75009909 REV A

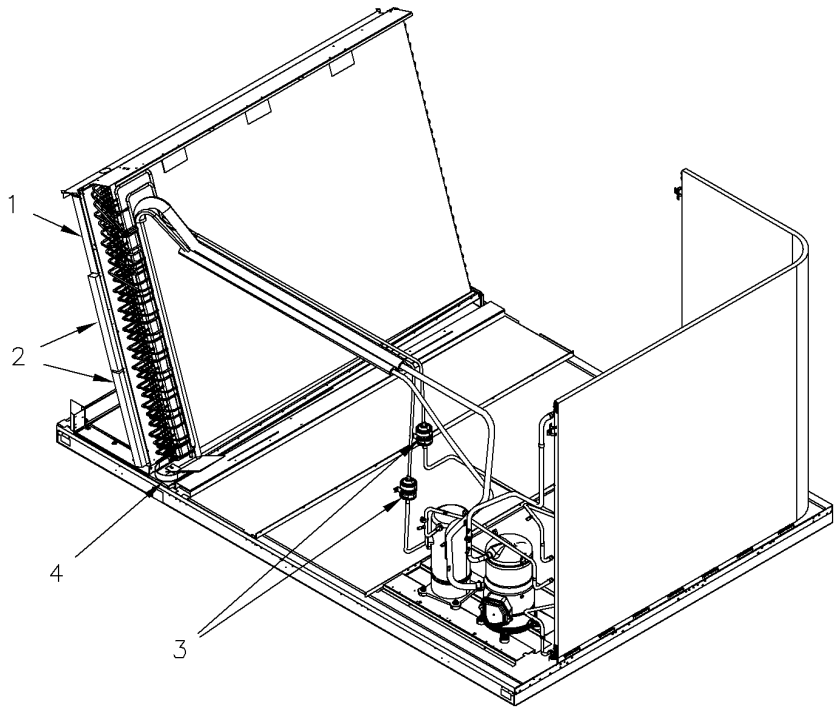


Part No.	Reference No.	Quantity	Description
DHY01470	3	2	DRIER; LIQUID LINE; SERVICE FIRST; 16 CU. IN. DCL165/4S, 5/8 ODF INLET X 1/2 ODF OUTLET; 11.4 TON CAPACITY; APPROVED FOR MINERAL OIL AND POE OIL REF

OUTDOOR FAN MOTORS

75012166

REV B

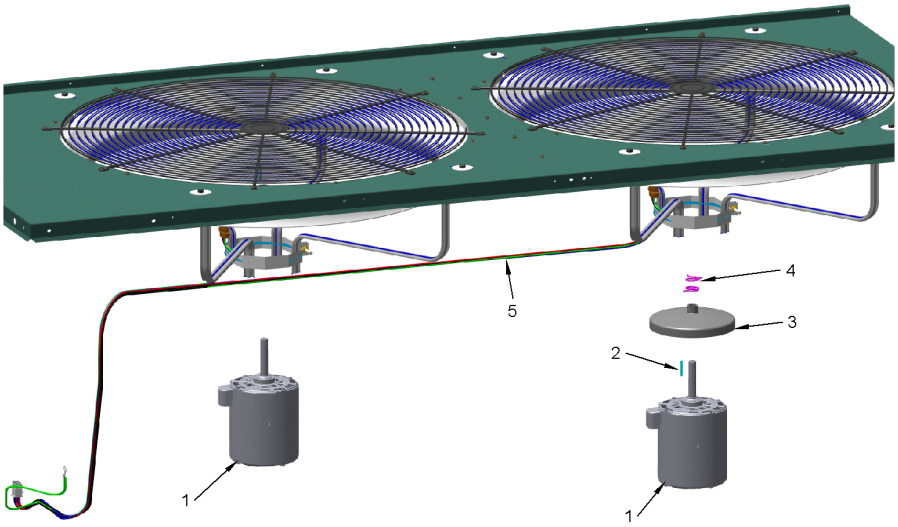


This is a typical illustration. The unit in the field may not appear exactly as shown.

Part No.	Reference No.	Quantity	Description
MOT17983	1	2	MOTOR; AC; 1/2 HP, 575 60 3,1100 RPM
WIR08799	5	1	WIRE; HARNESS; 3 PHASE OUTDOOR MOTOR HARNESS

OUTDOOR FAN ASSEMBLY

75012170

REV B

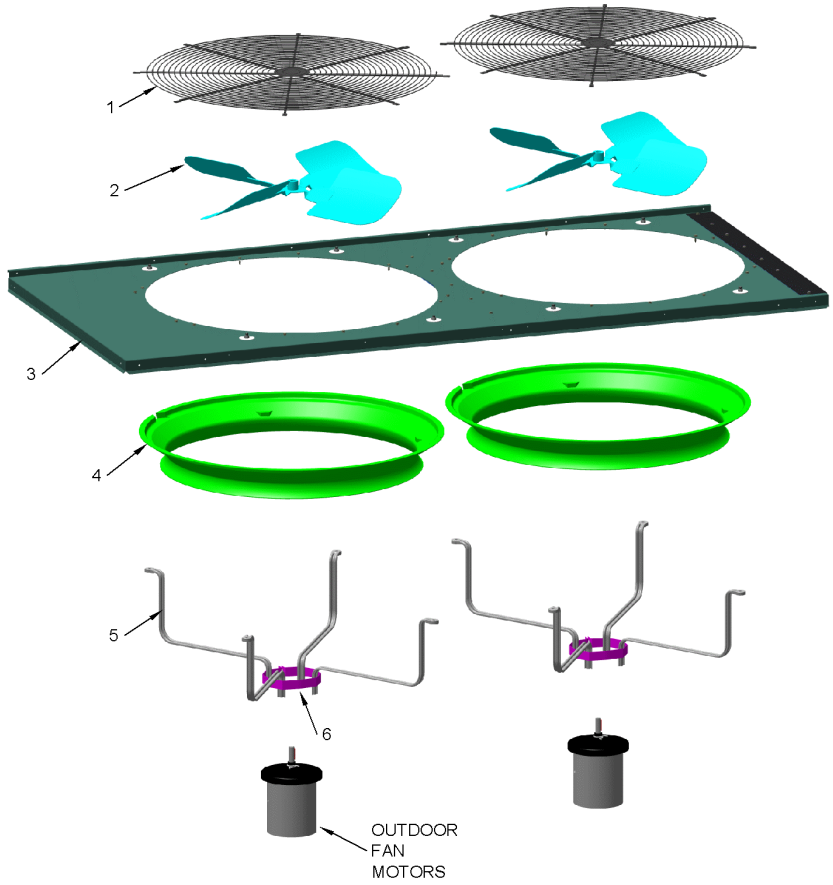


This is a typical illustration. The unit in the field may not appear exactly as shown.

Part No.	Reference No.	Quantity	Description
GRD00450	1	2	GUARD; FAN, 27.5 DIA
FAN01531	2	2	FAN;3 BLADE,ALUM,26 DIA, 22-25 DEG,.50 BORE,CW
COV04719	3	1	COVER; TOP OUT DOOR SECTION
ORF00576	4	2	ORIFICE;CONDENSER FAN
BRK01632	5	8	BRACKET;MOTOR MOUNT, 13.77 LEG
BRK01160	6	2	BRACKET, MOTOR MOUNT

INDOOR FAN MOTOR

75012169

REV
A

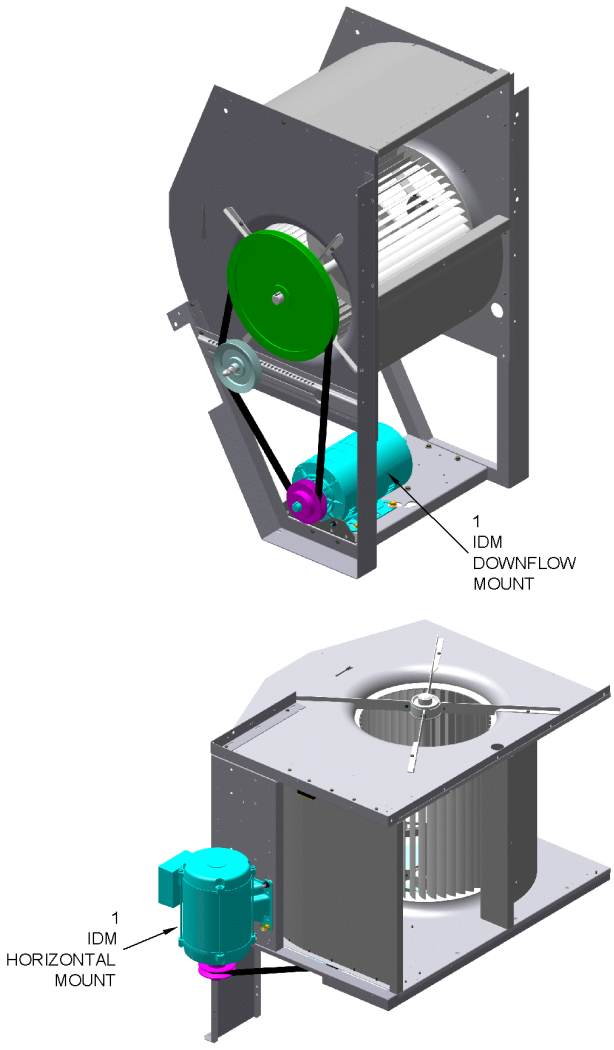


This is a typical illustration. The unit in the field may not appear exactly as shown.

INDOOR FAN ASSEMBLY

75012173

REV A

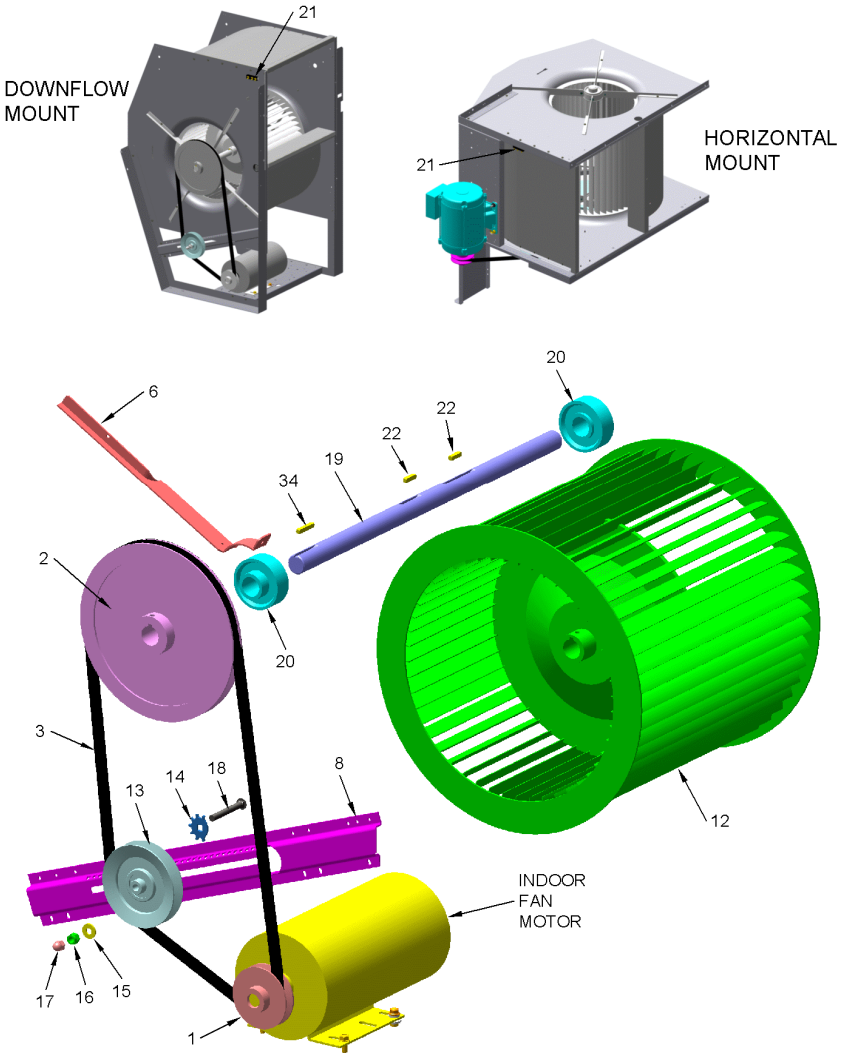


This is a typical illustration. The unit in the field may not appear exactly as shown.

Part No.	Reference No.	Quantity	Description
SHE00554	1	1	SHEAVE; 1VP44, 7/8IN. BORE
BRK01161	6	8	BRACKET; BEARING ARM
SUP04990	8	1	SUPPORT; IDLER
WHL00625	12	1	WHEEL; FAN, STEEL, 15 DIA X 15 LG, 1.0 BORE, BELT
SHE01565	13	1	SHEAVE; STEEL IDLER, V-BELT, 3/8
GER00321	14	1	GEAR; IDLER
WAS00561	15	1	WASHER;FLAT DG
NUT00150	16	1	NUT; HEX, SELF LOCKING, .38-16
NUT00587	17	1	NUT; HEX CAP, 38-16
SHF01504	19	1	SHAFT; FAN, 1 X 22.295
BRG00740	20	2	BEARING; CARTRIDGE, BALL 1.00 BORE
KEY00299	22	2	KEY; 1/4 IN X 1/4 IN X 1 IN
KEY00300	34	1	KEY; 1/4 IN X 1/4 IN X 1-1/2 IN

OUTDOOR CONDENSER COIL

75012175

REV A

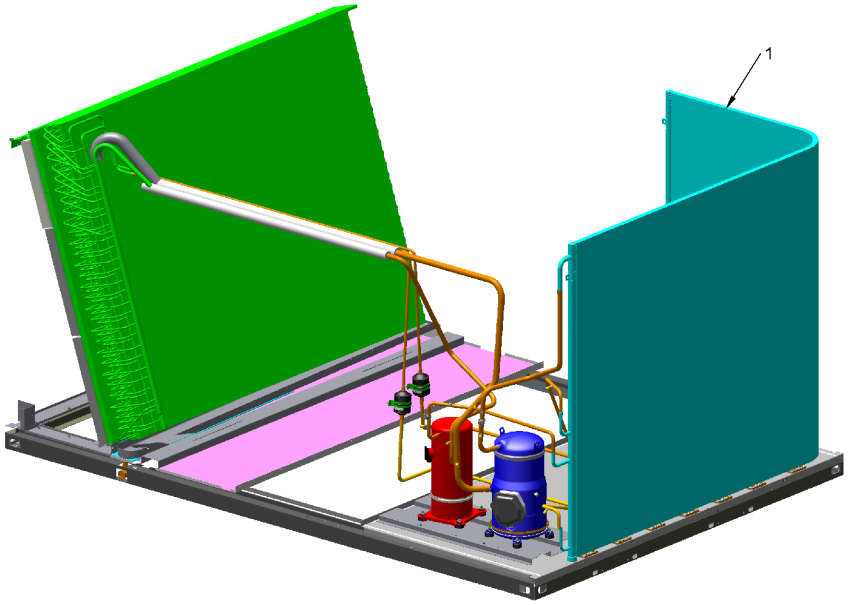


This is a typical illustration. The unit in the field may not appear exactly as shown.

EVAPORATOR COIL

75012098

REV A

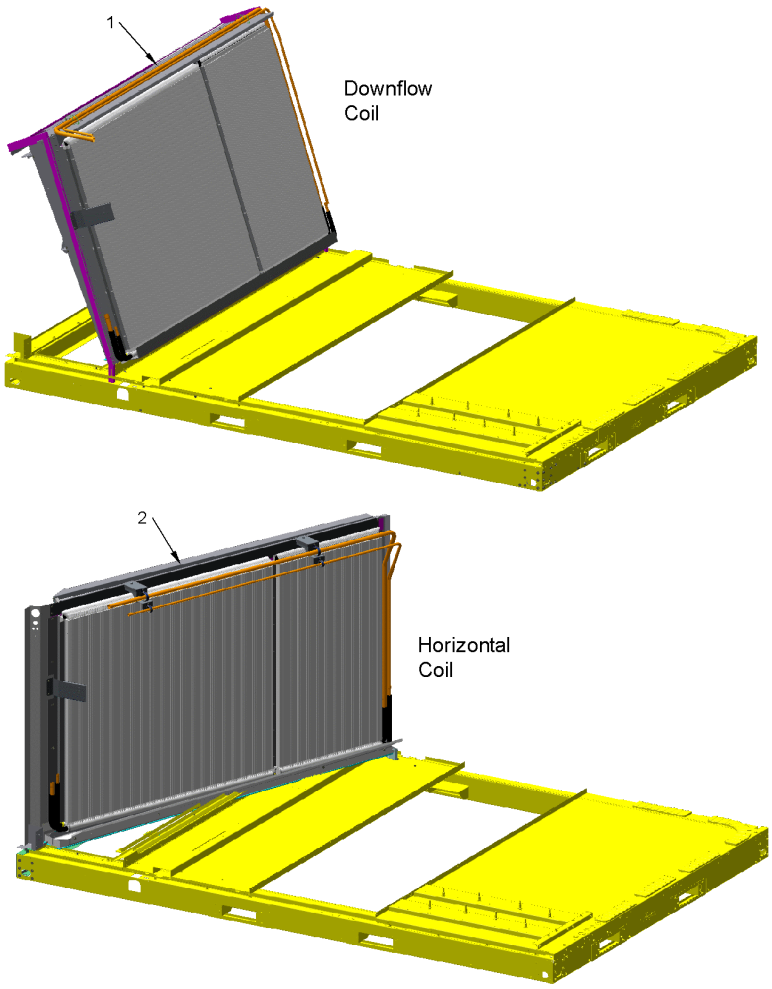


This is a typical illustration. The unit in the field may not appear exactly as shown.

UNIT SENSORS

75009958

REV B

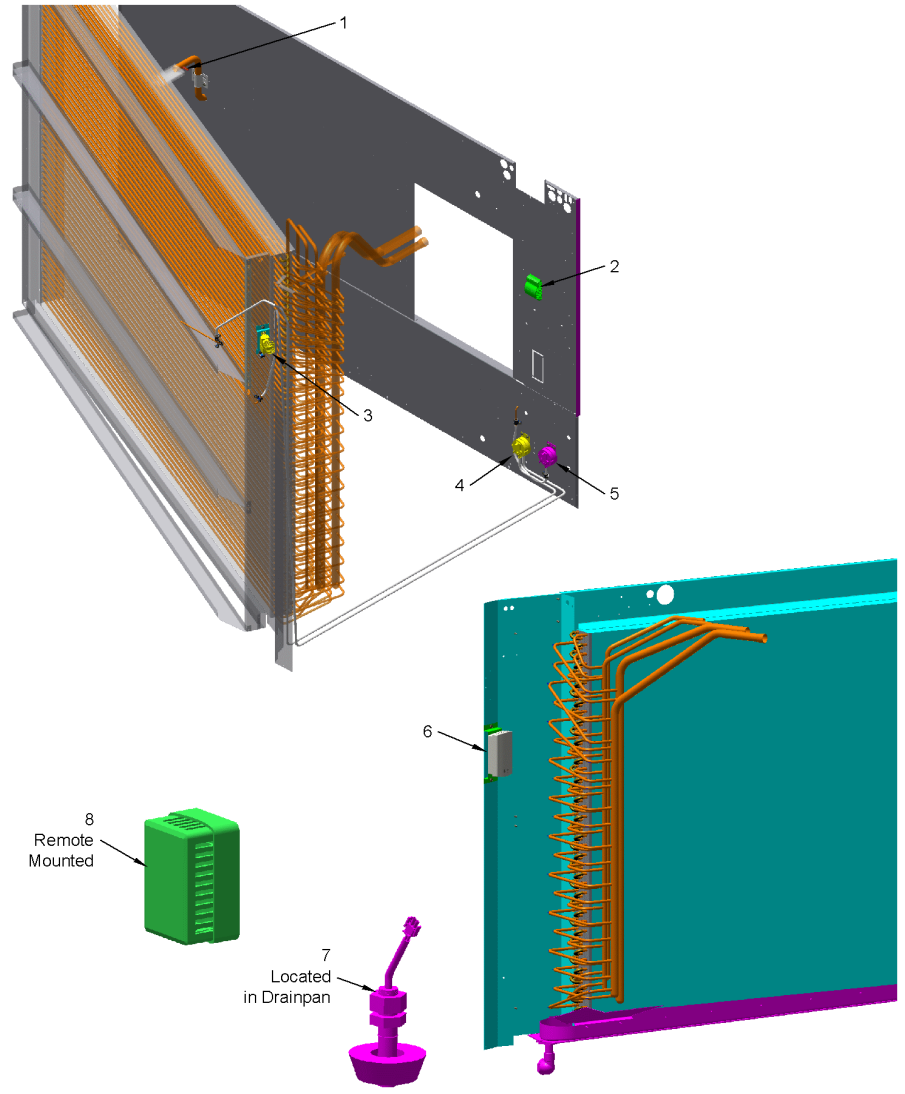


This is a typical illustration. The unit in the field may not appear exactly as shown.

AIR FLOW PANELS

75012744

REV A

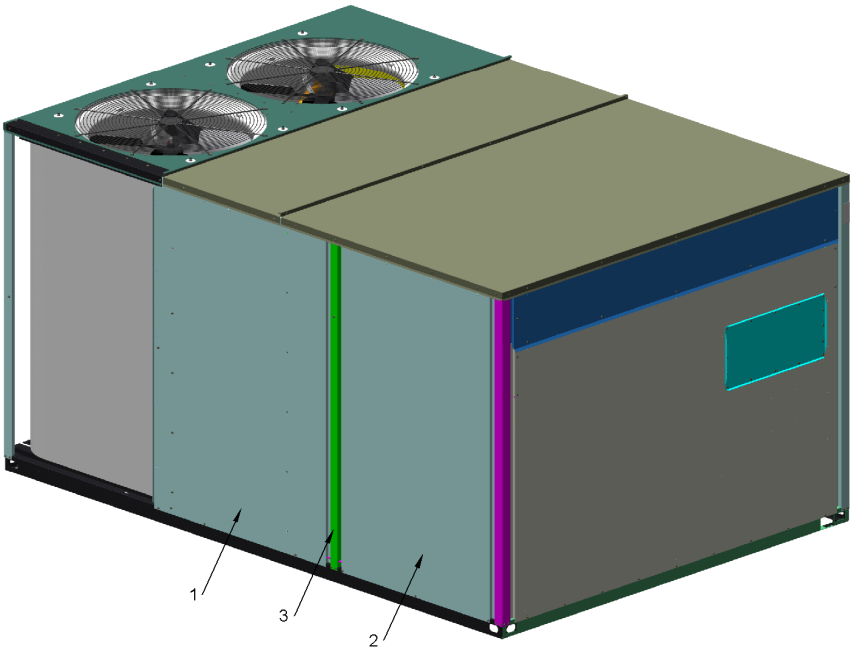


This is a typical illustration. The unit in the field may not appear exactly as shown.

COMM PANELS

75012749

REV A

DOWNFLOW

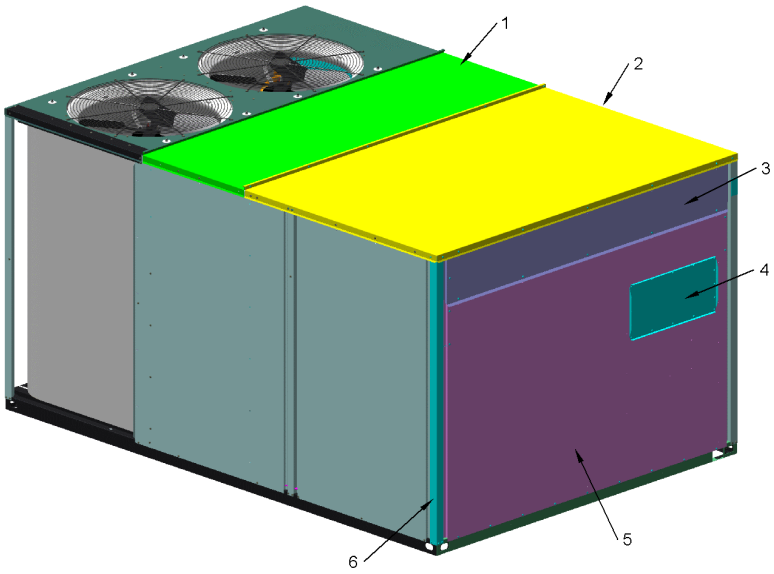

This is a typical illustration. The unit in the field may not appear exactly as shown.

Part No.	Reference No.	Quantity	Description
COV01378	1	1	COVER, HEAT SECTION TOP ASSEMBLY
COV01377	2	1	COVER, EVAPORATOR TOP ASSEMBLY
COV01353	4	1	COVER, MANUAL FRESH AIR, 24.42 X 11.71
PNN01121	5	1	PANEL; LEFT END, ASSEMBLY

VOYAGER 75012144 REV A

OPTIONAL FIELD INSTALLED ACCESSORIES

ACCESSORY TYPE

ECON = Economizer
ASCT = Anti-Cycle Timer
BARM = Barometric Relief
BASE = Base
BURN = Burner
CTHI = Board-Convention Inerface
CURB = Roofcurb
CCHT = Crankcase Heater
DFSR = Air Diffuser
DMPR = SS Damper
DNKT = Downflow Kit
FCCV = Flow Control Check Valve
FLSW = Flow Switch
FLTR = Filter
FRST = High Temperature Sensor
GARD = Coil Guard
HALT = High Altitude Kit
HSDR = Optimized Sheave Accessory
HSMT = Oversized Motor Kit or High Static Motor
HTR = Electric Heater (Digit 7 is used to differentiate the products accessory is used with)
ICSI = Board Communication Interface
ISLT = Isolator
KSKT = Start Accessory Kit
LEGS = Snow Legs
LIFT = Roof Mount Kit
LOAM = Low Ambient
LPKT = L.P. Kit
MOTR = Low Ambient Motor Kit
NXKT = No Oxide Kit
PLNM = Plenum
PLUS = Plus One Kit
PSMN = Power Supply Monitor Kit
PWRX = Power Exhaust
QACB = Quick Adapt Curb
RLAY = Relay
SENS = Sensor
SPEK = Single Source Power Entry
STAT = Thermostat
STMT = Elapsed Time Meter
TBKT = Thru Base Utility Kit
TEST = Test Accessory
TIME = ICS Interface Kit
TXVA = Thermal Expansion Valve Kit
TXVH = Thermal Expansion Valve Kit
VDPR = Vent Damper
WATR = Hot Water or Steam Coil
2STG = 2 Stage Gas

When identifying accessories please refer to WAVE94591.