



ADJUSTABLE OPERATING ROD


Prevents Faucet Tube From Bursting in Freezing Conditions!

(Fits Woodford Models 14, 16, 17, 19, 22 or V22)

RK-ADJ-PRV

INCLUDES ANTI-BURST PRV VALVE

- Upgrade a Woodford Model 14 or 17 wall faucet or replace a Model 16, 19 or 22 operating rod with an RK-ADJ-PRV Adjustable Length Operating Rod with patented, resetting Pressure Relief Valve (PRV).
- The PRV is designed to prevent the copper tube from bursting in freezing conditions *even if a hose is unintentionally left on.*

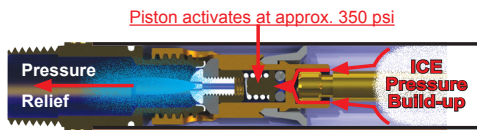

- Arrange and assemble a combination of color coded rod stems to create a replacement operating rod. Rod assemblies fit Woodford models with 4" to 14" wall thickness.
- Sample installation instructions are shown below. *Complete full scale instructions are provided with each RK-ADJ-PRV.*

RK-ADJ-PRV Components
NOT SOLD SEPARATELY


- (1) Inlet Stem
- (1) Middle Stem
- (1) Handle Stem
- (1) Stem Stop
- (2) Stainless Steel Clips
- (1) EPDM Packing
- (1) Packing Nut
- (1) Round Metal Wheel Handle
- (1) Handle Screw

See Reverse Side For More Faucet Accessories


Installation Instructions



- 1
- Shut off water supply
 - Remove Handle Screw, Handle, Packing Nut and Packing.
 - Use flat head screwdriver to remove packing material.

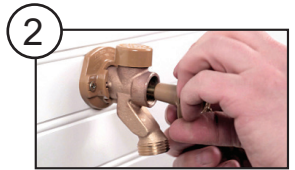

- 2
- Place handle back on rod without screw and turn counter-clockwise.
 - Remove old rod.
 - Save and reuse old brass washer

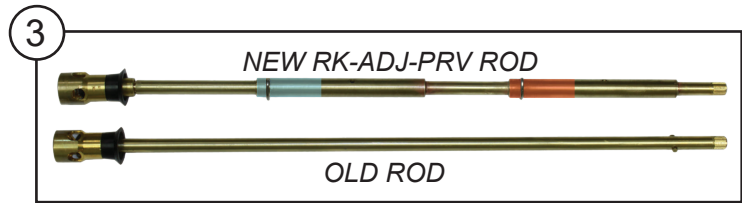


- 3
- Match old rod length with the new RK-ADJ-PRV rod assembly combination using chart below.

Assembly Combinations According To Measured Operating Rod Overall Length

Note: Lengths are not to scale. A detailed, full scale, diagram is included with each RK-ADJ-PRV.

- 6" Overall Rod Length (Fits 4" Faucet)
- 8" Overall Rod Length (Fits 6" Faucet)
- 10" Overall Rod Length (Fits 8" Faucet)
- 12" Overall Rod Length (Fits 10" Faucet)
- 14" Overall Rod Length (Fits 12" Faucet)
- 16" Overall Rod Length (Fits 14" Faucet)

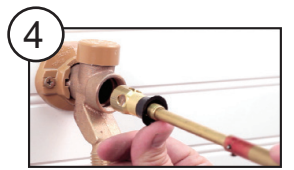

- 4
- Insert new RK-ADJ-PRV
 - Assemble old brass washer, new Packing, Packing Nut, Handle and Handle Screw.
 - Turn on water.