

Product information presented here reflects conditions at time of publication. Consult factory regarding discrepancies or inconsistencies.



PUMP COMPANY

Zoeller Family of Water Solutions™

MAIL TO: P.O. BOX 16347 • Louisville, KY 40256-0347
SHIP TO: 3649 Cane Run Road • Louisville, KY 40211-1961
 (502) 778-2731 • 1 (800) 928-PUMP • FAX (502) 774-3624

visit our web site:
www.zoeller.com


REPLACEMENT PARTS LIST FOR MODELS:

M3098 AUTOMATIC 115V
D3098 AUTOMATIC 230V
N3098 NONAUTOMATIC 115V
E3098 NONAUTOMATIC 230V


TO ORDER REPLACEMENT PARTS:

PLEASE FURNISH THE FOLLOWING INFORMATION:

- Model Number.
- Part Number of Pump.
- Part Number and Description of part.

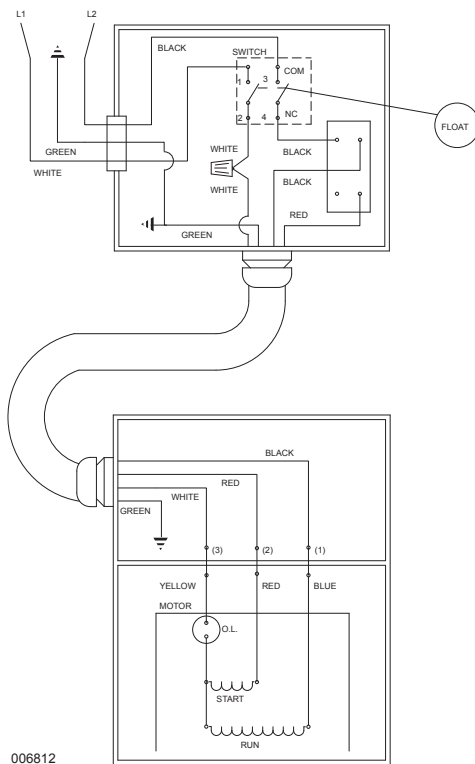

WIRING DIAGRAM FOR MODELS
 "M3098-A", "M3098-B", "M3098-C", "M3098-D", and "M3098-E"
 "D3098-A", "D3098-B", "D3098-C", and "D3098-D"
 8/91 thru Present

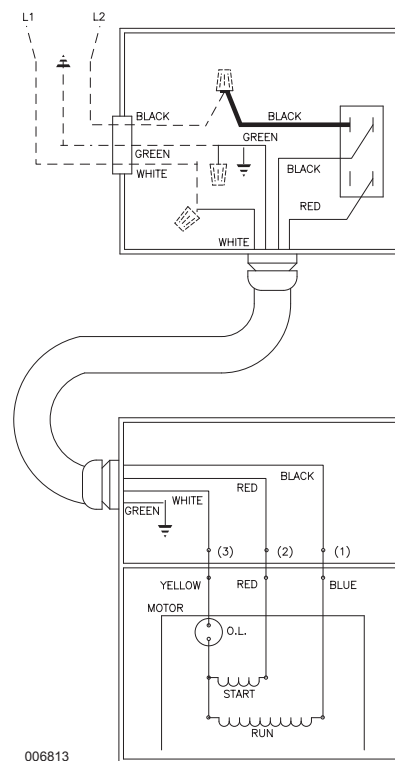

WIRING DIAGRAM FOR MODELS
 "N3098-A", "N3098-B", "N3098-C", "N3098-D", and "N3098-E"
 "E3098-A", "E3098-B", "E3098-C", and "E3098-D"
 8/91 thru Present

REPLACEMENT PARTS LIST FOR MODELS "M3098" and "D3098"

See back page for "M3098" and "D3098" illustration.

MODELS: M3098-A M3098-B M3098-C M3098-D M3098-E										D3098-A	D3098-B	D3098-C	D3098-D
REF NO.	DESCRIPTION	QTY	NOTES	8/91 thru 9/94	10/94 thru 1/96	2/96 thru 2/01	3/01 thru 8/09	9/09 thru Current		8/91 thru 9/94	10/94 thru 2/01	3/01 thru 8/09	9/09 thru Current
1	• Plug,Test-ED	2		034051	034051	034051	034051	034051		034051	034051	034051	034051
2	Cover & Handle "3098"	1		005344	009602	009602	009602	009602		005344	009602	009602	009602
3	• Seal,Thru Wall Term	3		003402	003402	003402	003402	003402		003402	003402	003402	003402
4	• Gasket,Case/Cover	1		034046	034046	034046	014553	014553		034046	034046	014553	014553
5	Housing, Mtr- & Term Asm "3098"	1		007092	007092	007092	007092	007092		007092	007092	007092	007092
6	Stator W/Screws 1P/ 3098	1	4, 5	007084	007084	010526	010526	010526		007085	007085	007085	007085
7	Rotor Asm 115/230V/1PH "98" EMD"3098"	1	4	007050	007050	010270	010270	010270		007050	007050	007050	007050
8	• Seal,Mtr Hsg	1		034007	034007	034007	014556	014556		034007	034007	014556	014556
9	• Washer,Trst-NYL-.875X.504X.050"	1		002140	002140	002140	002140	002140		002140	002140	002140	002140
10	• Oil, Dielectric - (30.5 Oz Can)	1		012133	012133	012133	012133	012133		012133	012133	012133	012133
11	Housing, Pump-Mach	1	5	006107	006107	006107	006107	150149		006107	006107	006107	150149
12	• Seal, Shaft	1		005095	005095	005095	014554	014554		005095	005095	014554	014554
13	Impeller "3098"	1		002570	002570	002570	002570	002570		002570	002570	002570	002570
14	Base-Mach "3098"	1		006333	006333	006333	006333	006333		006333	006333	006333	006333
15	Case Handle & Arm HT "3098"	1		007088	007088	007088	007088	007088		007088	007088	007088	007088
16	Guard	1		267008	267008	267008	267008	267008		267008	267008	267008	267008
17	• Arm & Seal Asm	1		004741	004741	004741	004741	004741		004741	004741	004741	004741
18	Case & Switch HT "3098"	1		007087	007087	007087	007087	007087		007087	007087	007087	007087
19	Switch Asm HT "3098"	1		007089	007089	007089	007089	007089		007089	007089	007089	007089
20	Capacitor Asm 10 UF "3098"	1		007093	007093	007093	007093	007093		007093	007093	007093	007093
21	Case Gasket	1		267007	267007	267007	014555	014555		267007	267007	014555	014555
22	Housing, Switch Case Mach HT "3098"	1		006836	009453	009453	009453	009453		006836	009453	009453	009453
23	Float	1		034019	034019	034019	034019	034019		034019	034019	034019	034019
24	Float Rod Asm	1		005352	005352	005352	005352	005352		005352	005352	005352	005352
25	Float- Mach	1		004912	004912	004912	004912	004912		004912	004912	004912	004912
26	Cord Term & Seal 115V	1		005348	005369	005369	005369	005369		005369	005369	005369	005369
27	• Clamp, Strain Relief Red	2		001770	001770	001770	001770	001770		001770	001770	001770	001770
28	• Seal Asm & Strain Relief	1		004721	004721	004721	004721	004721		004721	004721	004721	004721
29	Wirenut Connector	2		001776	001776	001776	001776	001776		001776	001776	001776	001776
30	• Seal Asm,Conduit	1		009603	009643	009643	009643	009643		009603	009643	009643	009643
31	Seal Asm	1		005345	009643	009643	009643	009643		005345	009643	009643	009643
32	Cordage Conduit & SLS HT/A "3098"	1		007090	009644	009644	009644	009644		007090	009644	009644	009644
33	Conduit 3'	1		005167	005167	005167	005167	005167		005167	005167	005167	005167
34	Cordage & Terms HT/AUTO "3098"	1		007091	007091	007091	007091	007091		007091	007091	007091	007091
35	Clamp, # 36 Worm	3		001766	001766	001766	001766	001766		001766	001766	001766	001766
36	• Screw, #10-24x.75 RHM-SL SS	12		001885	001885	001885	001885	001885		001885	001885	001885	001885
37	• Screw, #6-32x375 RHSL STL ZI	3		001877	001877	001877	001877	001877		001877	001877	001877	001877
38	• Screw, Stator	2		001914	001914	001914	001914	150099		001914	001914	001914	150099
39	• Sem, 10-24x .375 HH-SL TC.688 Wash	1		002000	002000	002000	002000	002000		002000	002000	002000	002000
40	• Screw, 6-32x.375 RHSL STL ZI	3		004644	004644	004644	004644	004644		004644	004644	004644	004644
41	• Screw, 10-24 x.375 RHM-SL SS	2		001883	001883	001883	001883	001883		001883	001883	001883	001883
42	• Screw, 25-20 x .75 HHM-SS	4		001916	001916	001916	001916	001916		001916	001916	001916	001916
□	Rebuild Kit "3098"		5	007096	018092	018092	018092	018092		007096	018092	018092	018092

• Items included in Rebuild Kit.

□ Not Shown in Illustration.

NOTES:

- 1) See FM0160 Parts Price Sheet for listing of parts prices.
- 2) "NA" indicates, not applicable.
- 3) If an "X" follows Model No., or Date Mfg. on brass ID tag, consult factory for ordering of this part.
- 4) When ordering these parts, customer must identify if G.E. or EMD.
- 5) Kits are supplied with two different length screws for mounting stators. During assembly verify length and ensure screws are seated properly.

REPLACEMENT PARTS LIST FOR MODELS "N3098" and "E3098"

See back page for "N3098" and "E3098" illustration.

MODELS: N3098-A N3098-B N3098-C N3098-D N3098-E										E3098-A	E3098-B	E3098-C	E3098-D
REF NO.	DESCRIPTION	QTY	NOTES	8/91 thru 9/94	10/94 thru 1/96	2/96 thru 2/01	3/01 thru 8/09	9/09 thru Current		8/91 thru 9/94	10/94 thru 2/01	3/01 thru 8/09	9/09 thru Current
1	• Plug,Test-ED	2		034051	034051	034051	034051	034051		034051	034051	034051	034051
2	Cover & Handle "3098"	1		005344	009602	009602	009602	009602		005344	009602	009602	009602
3	• Seal,Thru Wall Term	3		003402	003402	003402	003402	003402		003402	003402	003402	003402
4	• Gasket,Case/Cover	1		034046	034046	034046	014553	014553		034046	034046	014553	014553
5	Housing, Mtr- & Term Asm "3098"	1		007092	007092	007092	007092	007092		007092	007092	007092	007092
6	Stator W/Screws 1P/EMD 3098	1	4, 5	007084	007084	010526	010526	010526		007085	007085	007085	007085
7	Rotor Asm 115/230V/1PH "98" EMD"3098"	1	4	007050	007050	010270	010270	010270		007050	007050	007050	007050
8	• Seal,Mtr Hsg	1		034007	034007	034007	014556	014556		034007	034007	014556	014556
9	• Washer,Trst-NYL.875X.504X.050"	1		002140	002140	002140	002140	002140		002140	002140	002140	002140
10	• Oil, Dielectric - (30.5 Oz Can)	1		012133	012133	012133	012133	012133		012133	012133	012133	012133
11	Housing, Pump-Mach	1	5	006107	006107	006107	006107	150149		006107	006107	006107	150149
12	• Seal, Shaft	1		005095	005095	005095	014554	014554		005095	005095	014554	014554
13	Impeller "3098"	1		002570	002570	002570	002570	002570		002570	002570	002570	002570
14	Base-Mach "3098"	1		006333	006333	006333	006333	006333		006333	006333	006333	006333
15	Cover, Plate & Gasket	1		007652	007652	007652	007652	007652		007652	007652	007652	007652
16	Capacitor Asm 10 UF "3098"	1		007093	007093	007093	007093	007093		007093	007093	007093	007093
17	Case Gasket	1		267007	267007	267007	014555	014555		267007	267007	014555	014555
18	Box Mach HT NA	1		006837	009454	009454	009454	009454		006837	009454	009454	009454
19	Clamp, # 36 Worm	2		001766	001766	001766	001766	001766		001766	001766	001766	001766
20	Wire Asm - (1) Wire Black 6" long	1		007650	007650	007650	007650	007650		007650	007650	007650	007650
21	Seal Asm	1		005345	009643	009643	009643	009643		005345	009643	009643	009643
22	• Seal Asm,Conduit	1		009604	009643	009643	009643	009643		009604	009643	009643	009643
23	Cordage conduit & SLS HT/NA "3098"	1		007095	009645	009645	009645	009645		007095	009645	009645	009645
24	Conduit-Mach 6'	1		005252	005252	005252	005252	005252		005252	005252	005252	005252
25	Cordage & Terms HT/NA "3098"	1		007094	007094	007094	007094	007094		007094	007094	007094	007094
26	• Clamp, Strain Relief Red	2		001770	001770	001770	001770	001770		001770	001770	001770	001770
27	• Screw, #10-24x.75 RHM-SL SS	12		001885	001885	001885	001885	001885		001885	001885	001885	001885
28	• Screw, #6-32x375 RHSL STL ZI	3		001877	001877	001877	001877	001877		001877	001877	001877	001877
29	• Screw, Stator	2		001914	001914	001914	001914	150099		001914	001914	001914	150099
30	• Sem, 10-24x .375 HH-SL TC.688 Wash	1		002000	002000	002000	002000	002000		002000	002000	002000	002000
31	• Screw, 25-20 x .75 HHM-SS	4		001916	001916	001916	001916	001916		001916	001916	001916	001916
32	• Screw, 6-32x.375 RHSL STL ZI	1		004644	004644	004644	004644	004644		004644	004644	004644	004644
33	Wirenut Connector	2		001776	001776	001776	001776	001776		001776	001776	001776	001776
34	Handle	1		267032	267032	267032	267032	267032		267032	267032	267032	267032
35	Retainer, Handle	2		267053	267053	267053	267053	267053		267053	267053	267053	267053
36	Screw, #10-24 x .375 RHM -SS	2		001883	001883	001883	001883	001883		001883	001883	001883	001883
□	Rebuild Kit "3098		5	018091	018092	018092	018092	018092		018091	018092	018092	018092

• Items included in Rebuild Kit.

□ Not Shown in Illustration.

NOTES:

- 1) See FM0160 Parts Price Sheet for listing of parts prices.
- 2) "NA" indicates, not applicable.
- 3) If an "X" follows Model No., or Date Mfg. on brass ID tag, consult factory for ordering of this part.
- 4) When ordering these parts, customer must identify if G.E. or EMD.
- 5) Kits are supplied with two different length screws for mounting stators. During assembly verify length and ensure screws are seated properly.




PUMP COMPANY

MAIL TO: P.O. BOX 16347 • Louisville, KY 40256-0347
SHIP TO: 3649 Cane Run Road • Louisville, KY 40211-1961
(502) 778-2731 • 1 (800) 928-PUMP • FAX (502) 774-3624

Your Peace of Mind is Our Top Priority®


visit our web site:
www.zoeller.com

REPLACEMENT PARTS ILLUSTRATION FOR MODELS "M3098" AND "D3098"

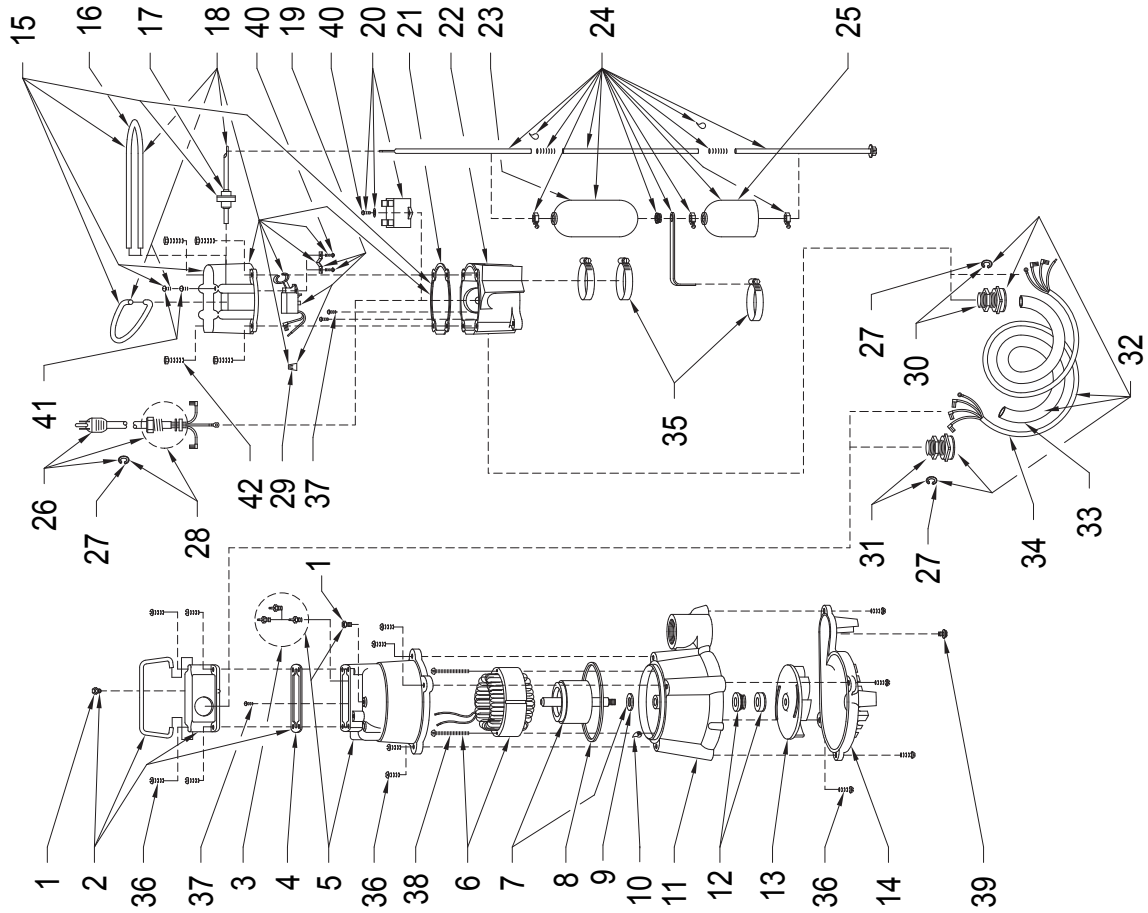

SK1155

REPLACEMENT PARTS ILLUSTRATION FOR MODELS "N3098" AND "E3098"

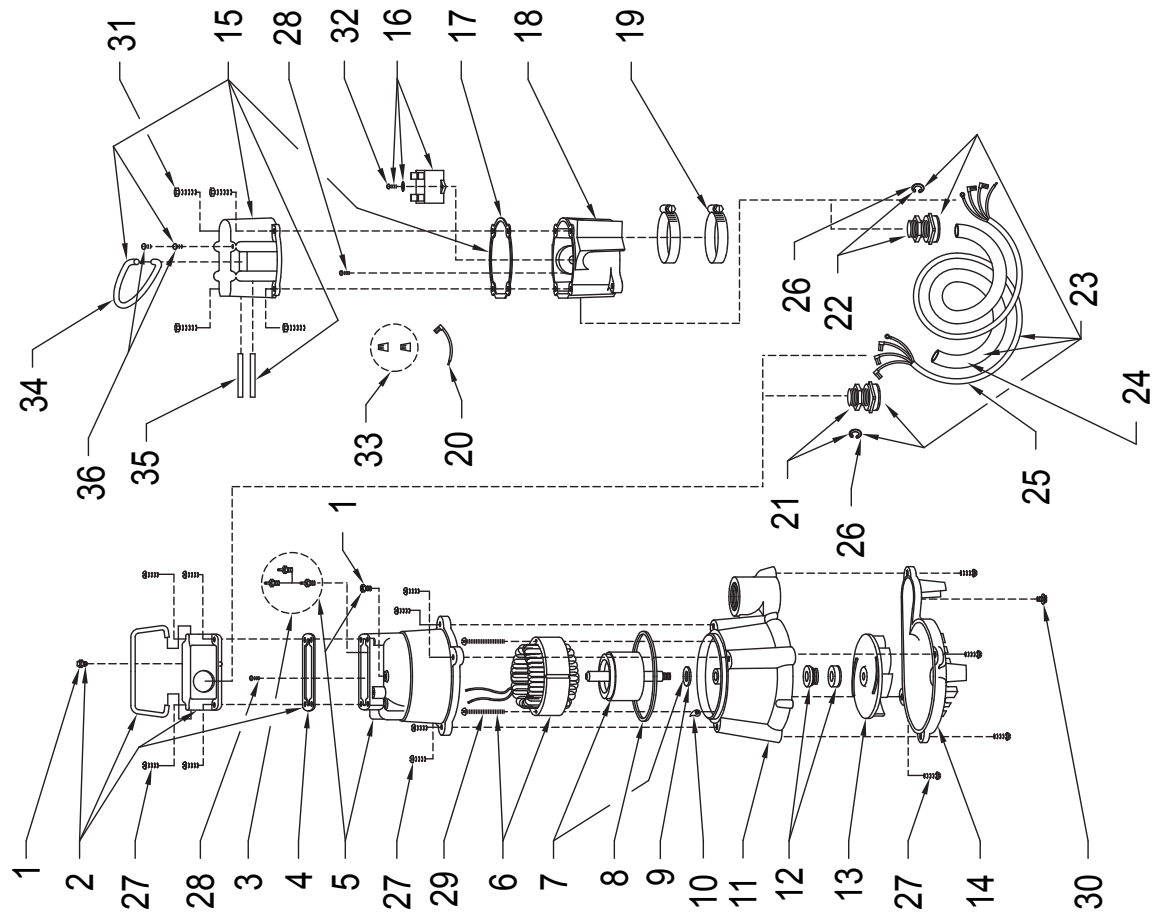

SK1156