




**30" GAS FREESTANDING SELF CLEAN RANGE
Finger Print Resistant**

MODELS:

WFG525S0HZ0 (Stainless)

WFG525S0HV0 (Black Stainless)


COOKTOP PARTS

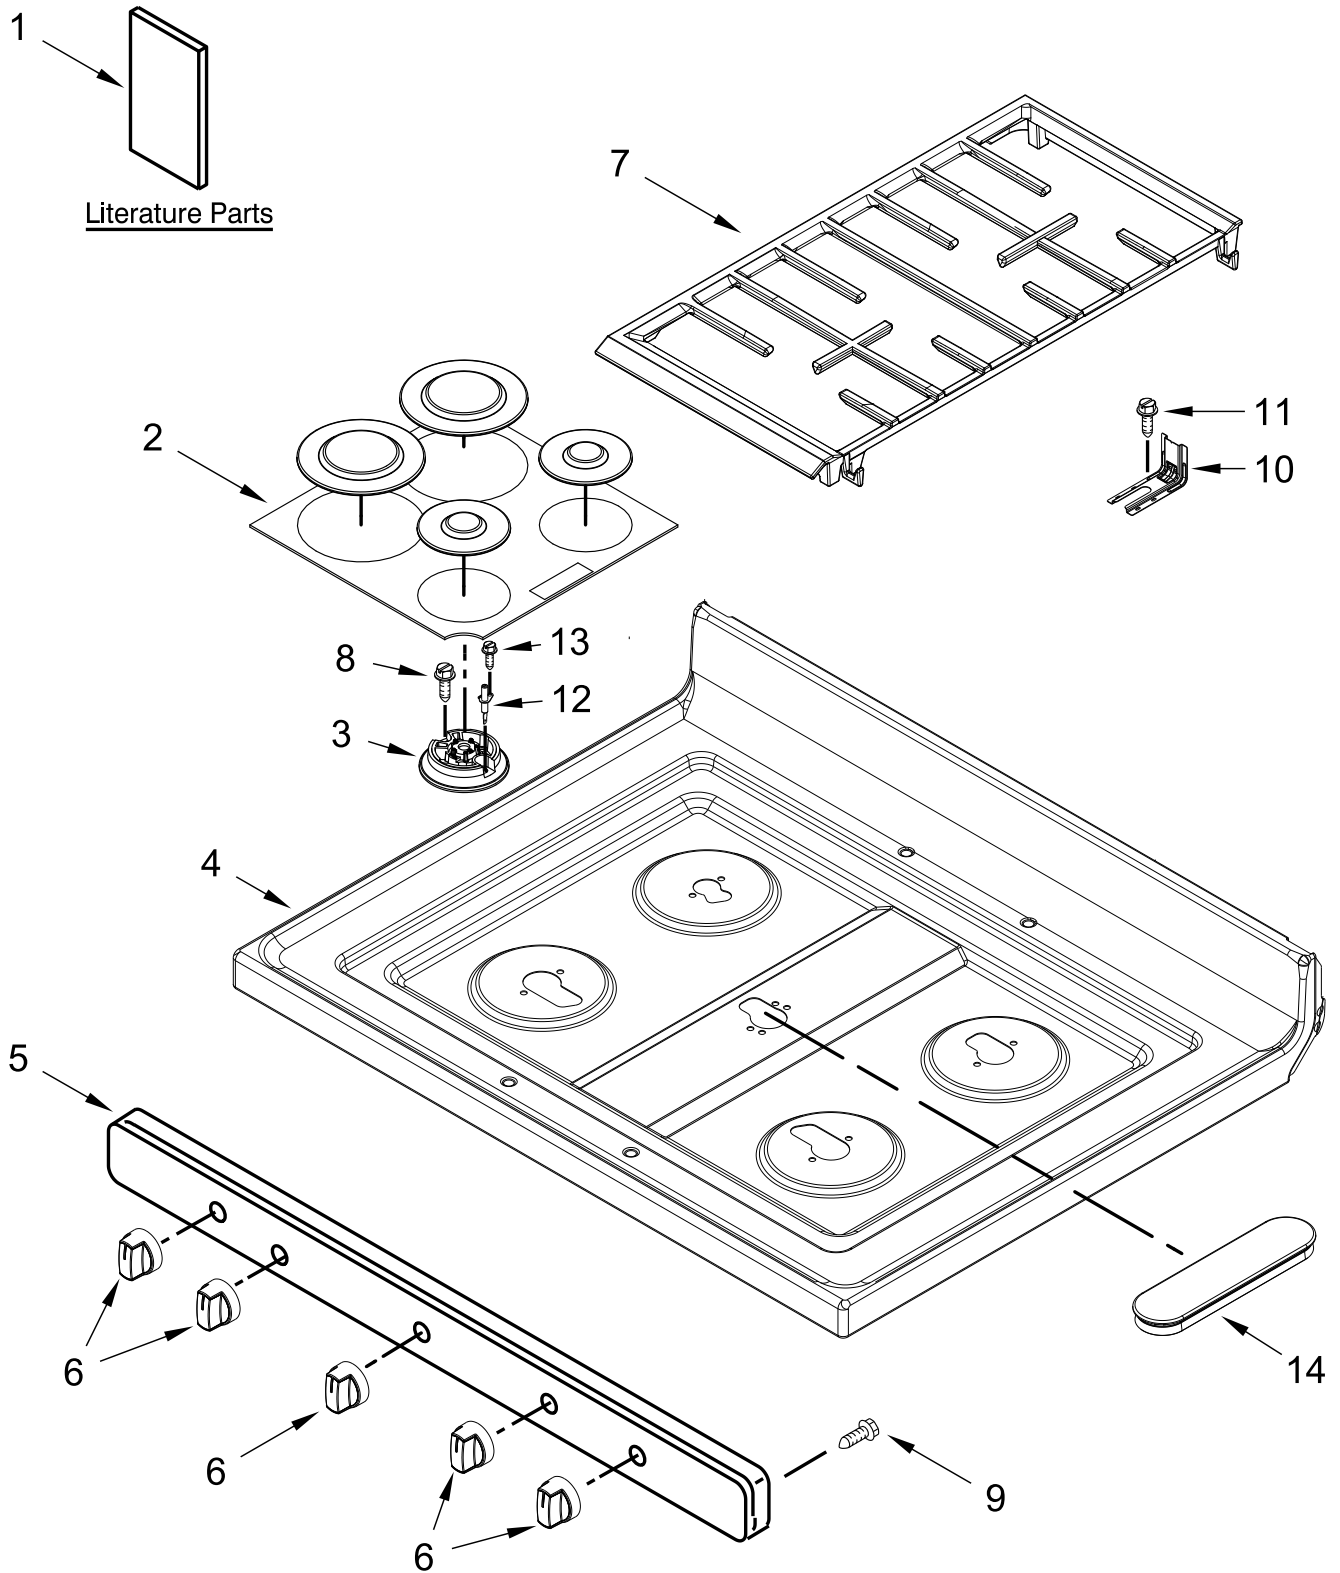

COOKTOP PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10515455	Assembly, Burner (17.5K)	8	3400701	Screw
	W10545337	Instructions, Installation			(Left Front & Right Front)	9	3196557	Screw
	W11102912	Guide, Use and Care		W10515454	Assembly, Burner (9.5K)	10	W10306542	Bracket, Anti-Tip
	W11102748	Sheet, Tech (English)			(Left Rear & Center)	11	7101P485-60	Screw, Anti-Tip Kit
	W11032799	Diagram, Wiring		W10515453	Burner, Auxiliary (6K)	12	W10515459	Electrode
	9762761	Tips, Safe Cooking (English)			(Right Rear)	13	8273062	Screw
	W10065852	Tips, Safe Cooking (French)				14	W10298664	Spreader, Flame
2		Kit, Burner Cap	4		Cooktop			FOLLOWING PARTS NOT ILLUSTRATED
	W10850506	Black (Set of 4)		W10884167	Black		W10842520	Harness, Main
			5		Panel, Manifold		W10753750	Harness, Bake/Broil
				W11044911	Stainless		W10809927	Harness, Cooktop
				W11044910	Black Stainless		3196520	Clip, Wire
			6		Knob, Control		W10334923	Clip, Gas Wiring
				W11023139	Stainless		313438	Clip, Harness
				W11032553	Black Stainless			
			7		Kit, Grate			
				W11037721	Black			


CONTROL PANEL PARTS

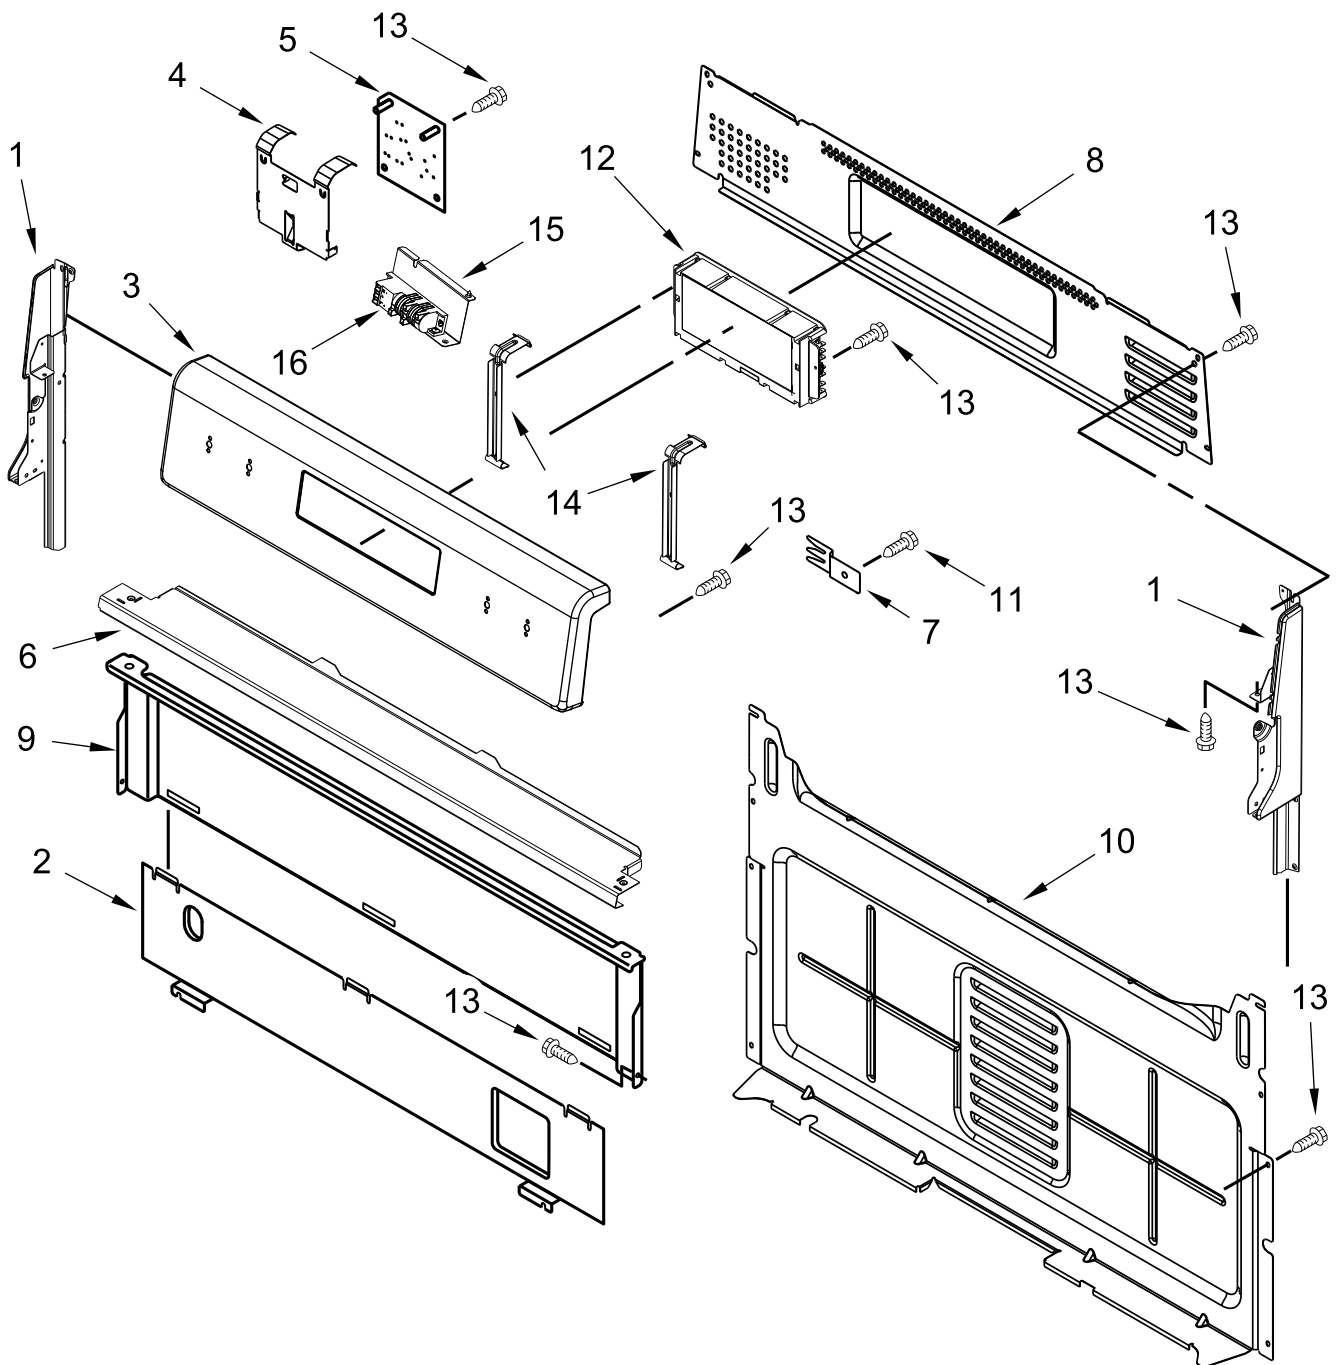

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	5	W10920631	Module, Spark DSI	11	3196169	Screw
	W10184437	Black (Left)	6	W10516123	Bracket, Console Mounting	12		Control, Range LCC190
	W10184438	Black (Right)					W11038146	Black
2	8053505	Shield, Heat	7	8523412	Bracket, Rear Cooktop	13	3196178	Screw
3		Panel, Control	8	W10198745	Cover, Upper	14	W10695491	Bracket, Control
	W10835288	Stainless	9	W10192841	Shield, Heat	15	W10797001	Bracket, Ignitor
	W11027384	Black Stainless	10	W10184370	Cover, Back	16	W10475149	Module, Spark (5+0)
4	W10762981	Bracket, Mounting						


MANIFOLD PARTS

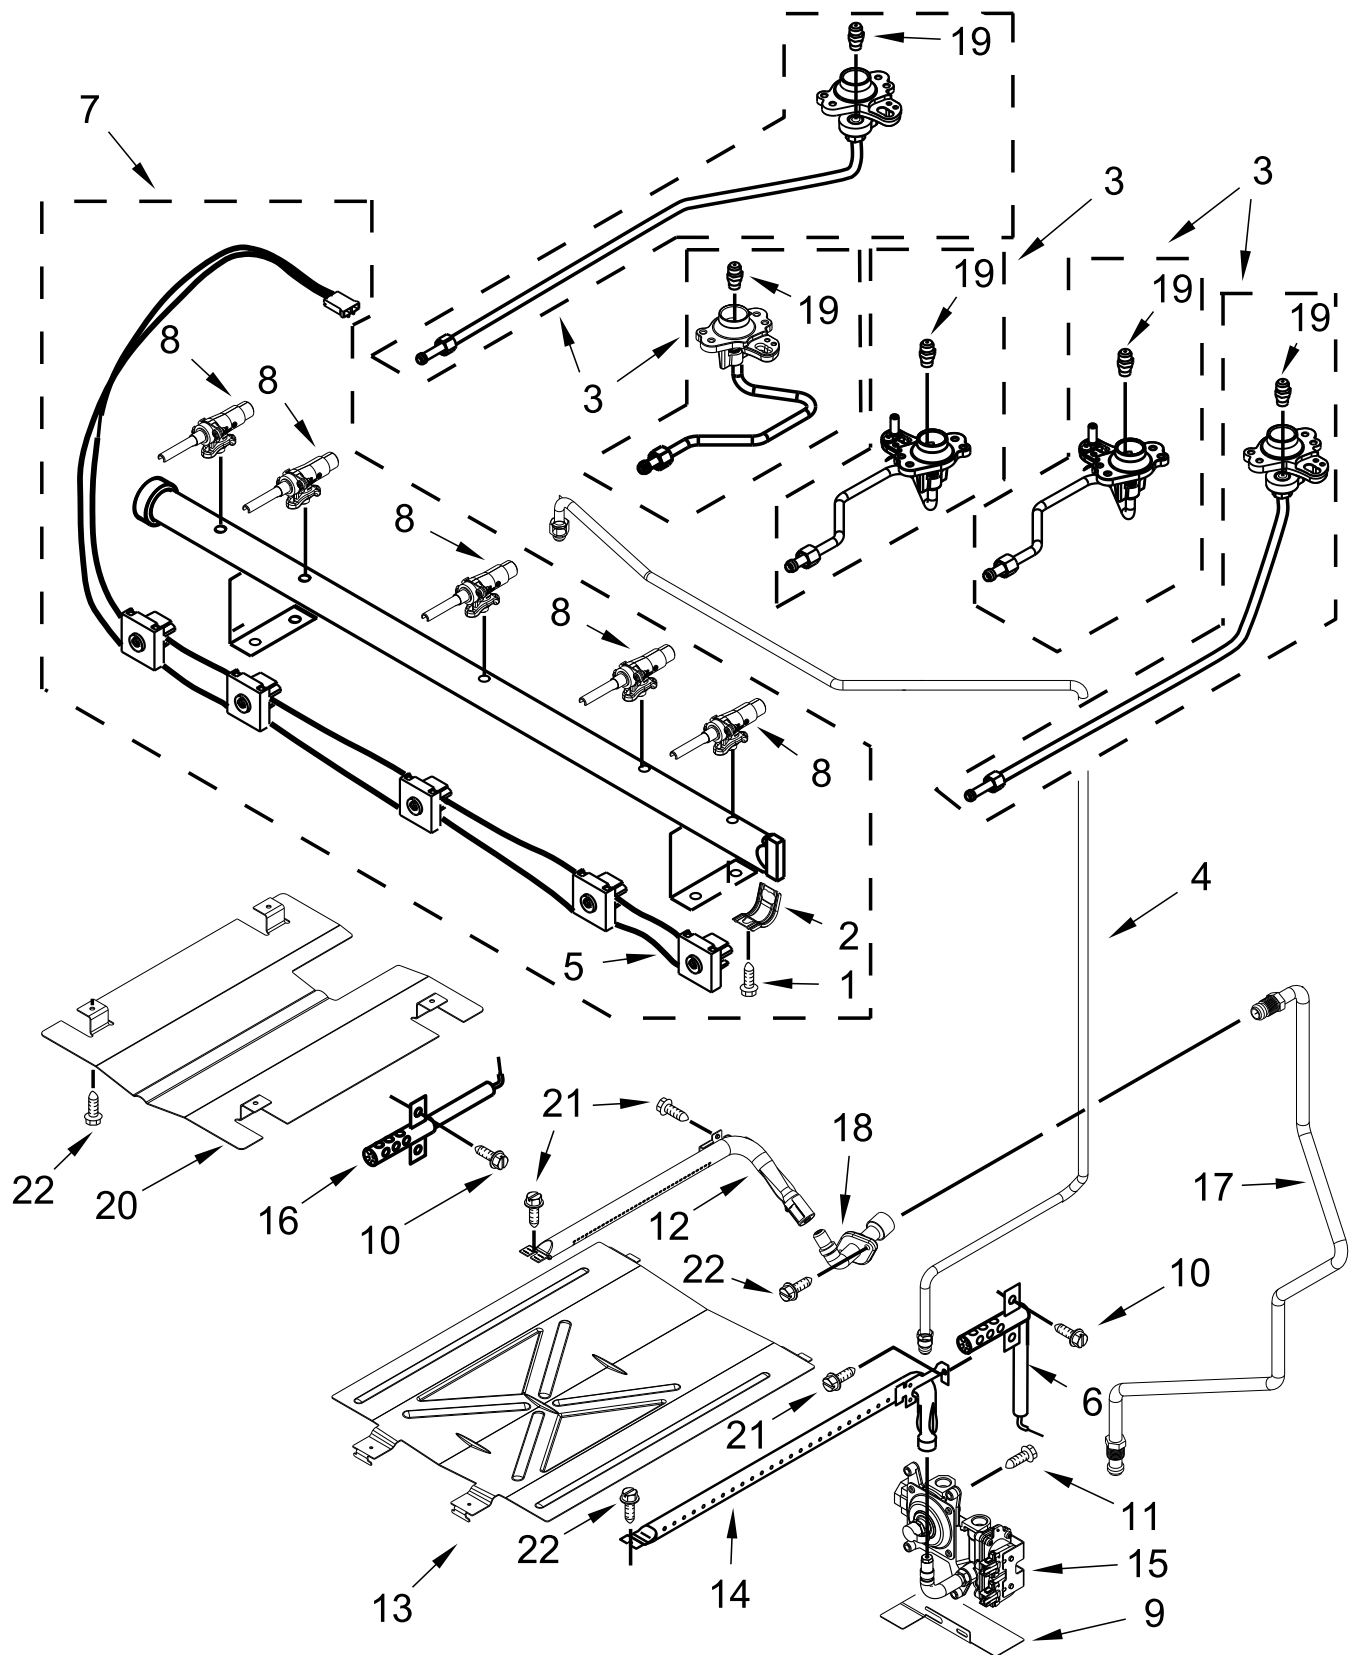

MANIFOLD PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10295997	Screw, Valve	6	9758079	Electrode, Bake	19	W10347414	Orifice (15K) (Left Front & Right Front)
2	W10295996	Bracket, Saddle Valve	7	W10859728	Assembly, Manifold		W10170508	Orifice (9.5K) (Left Rear)
3	W10473936	Assembly, Orifice Holder (15K) (Left Front)	8	W10279615	Valve, Gas (Left Front & Right Front)		W10170506	Orifice, Natural (5K) (Right Rear)
	W10473932	Assembly, Orifice Holder (9.5K) (Left Rear)		W10279614	Valve, Gas (Left Rear & Center)		W10657947	Orifice (8K) (Center)
	W10474166	Assembly, Orifice Holder (15K) (Right Front)		W10247744	Valve, Gas (Right Rear)	20	W10137062	Spreader, Flame (Broiler)
	W10474162	Assembly, Orifice Holder (5K) (Right Rear)	9	W10224921	Bracket, Aegis	21	3196265	Screw
	W10836764	Assembly, Orifice Holder (8K) (Center)	10	3196385	Screw	22	W10362924	Screw Following Parts Not Illustrated
4	W10215439	Tubing (Manifold to Regulator)	11	3400016	Screw		W10170516	Kit, LP 5 Orifice Conversion
5	W10811691	Harness, Igniter (Includes Switches)	12	8054078	Burner, Broiler		W10566537	Kit, LP Bake and Broil
			13	W10184491	Spreader, Flame (Oven)		W10400495	Orifice, LP Bake
			14	9758078	Burner, Bake			
			15	W10602001	Regulator			
			16	W10333842	Electrode, Broil			
			17	W10420040	Tube, Broiler Supply			
			18	W10592836	Fitting, Broiler			


CHASSIS PARTS

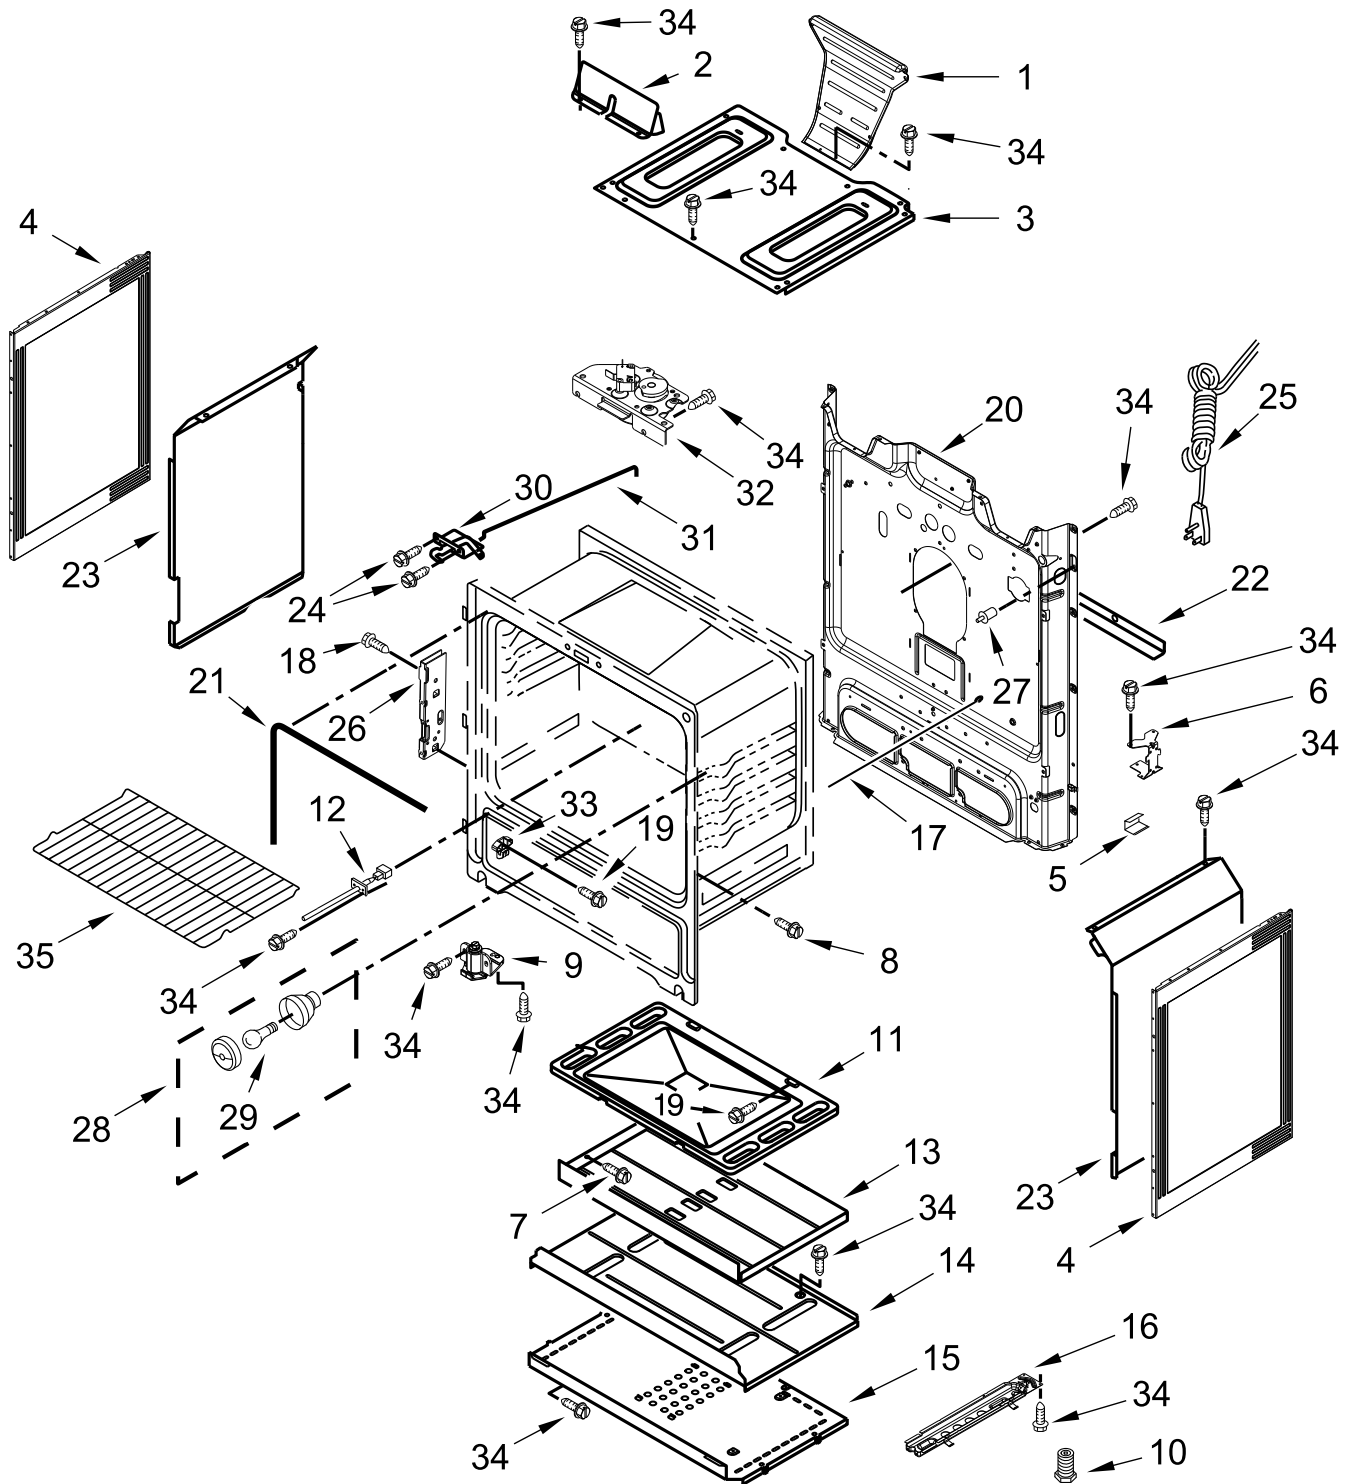

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10153186	Box, Flue	15	8053968	Shield, Lower	26	W10289077	Receiver, Hinge
2	8272747	Shield, Flue	16	W10390008	Assembly, Base Rail (Left)	27	W10627802	Switch, Door
3	8273036	Box-Burner, Gas Sealed		W10390007	Assembly, Base Rail (Right)	28	W10454648	Assembly, Light
4		Panel, Side	17	9757239	Rod, Door Switch	29	311255	Bulb, Oven Light
	W10162245	Black	18	W10031780	Screw	30	9761013	Assembly, Door Latch (Front)
5	W10137382	Clip, Panel	19	3400080	Screw	31	W10078370	Rod, Push Latch
6	8523249	Bracket, Manifold	20	W10416100	Back, Main	32	W10107820	Assembly, Door Latch (Rear)
7	W10362924	Screw	21	W10658354	Seal, Door	33	W10674705	Glide, Drawer Front
8	3196560	Screw	22	W10435470	Brace, Main Back	34	3196178	Screw
9	W10341186	Assembly, Front Foot	23	9761449	Retainer, Insulation (Left)	35	W10268578	Rack, Oven
10	W10058460	Foot, Leveling		9761448	Retainer, Insulation (Right)			FOLLOWING PARTS NOT ILLUSTRATED
11	3195097	Bottom, Oven					8524099	Insulation, Wrap
12	W10586204	Sensor	24	3196560	Screw		W10180437	Insulation, Back
13	8053967	Baffle, Burner Oven	25	W10624590	Cord, Power			
14	8053969	Shield, Heat						

DOOR PARTS

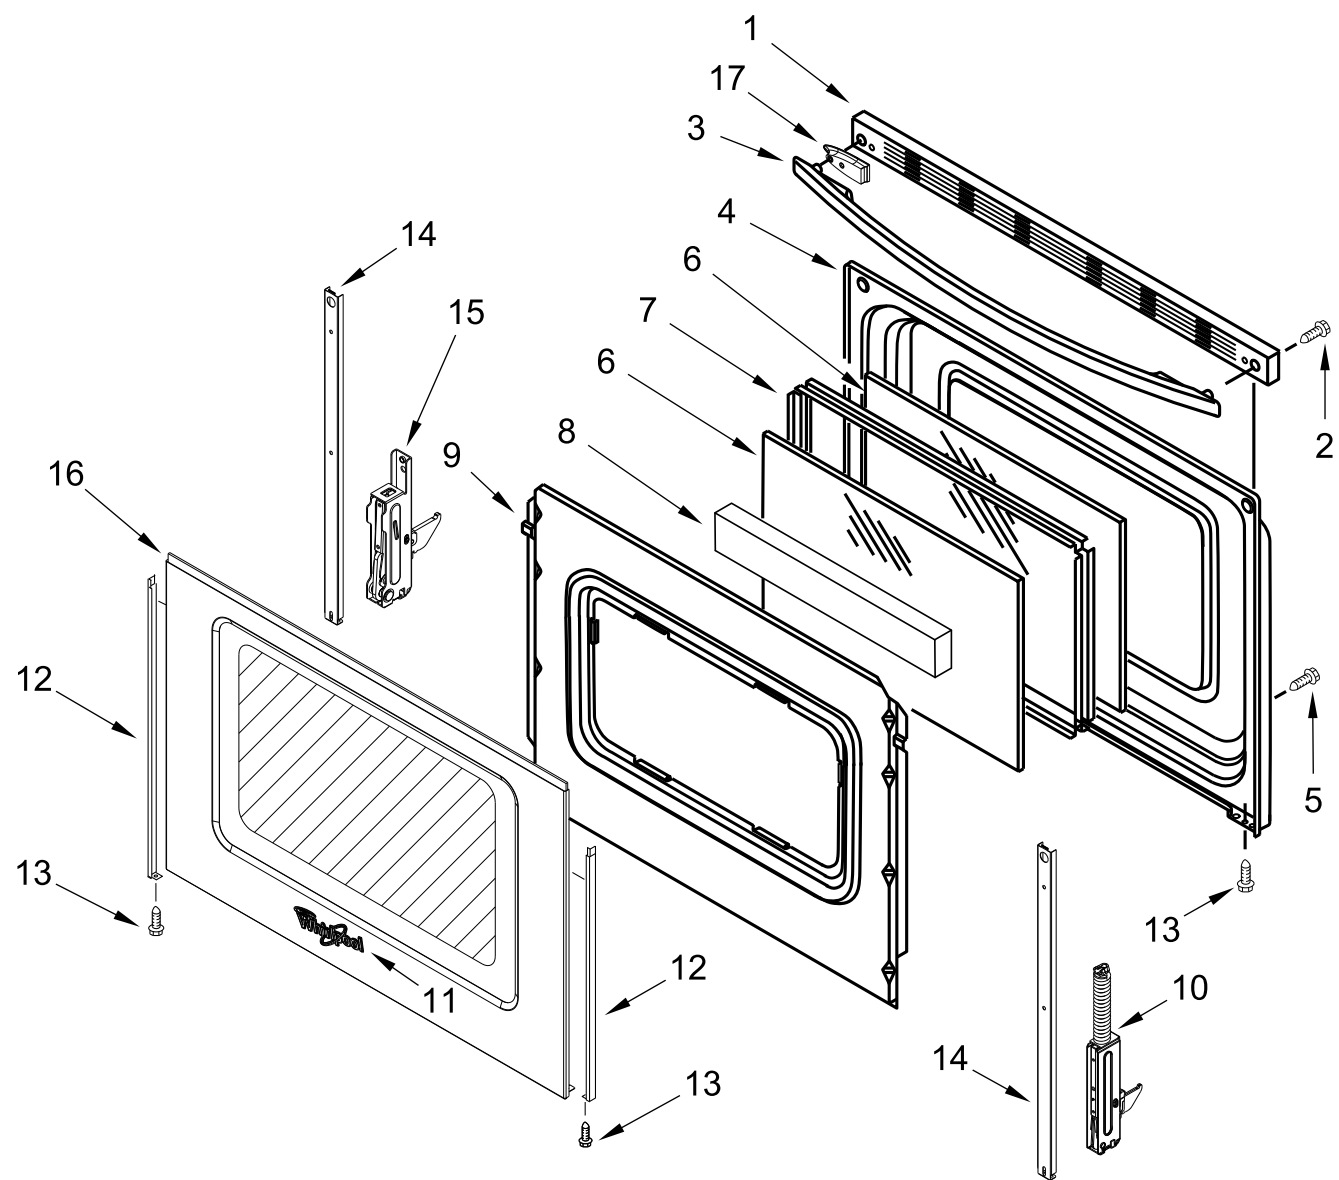


DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Trim, Top
	W10310922	Black
2	W10480830	Screw
3		Handle, Door
	W10875206	Stainless
	W10903342	Black Stainless
4	9761344	Liner, Door
5	W10031790	Screw
6	W11044424	Glass, Inner
7	W10316950	Frame, Glass

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
8	W10278991	Insulation, Door Strip
9	9761357	Retainer, Insulation
10	W10299224	Hinge, Active (With Spring)
11	W10884775	Nameplate
12		Trim, Door
	W10746436	Black (Left)
	W10746435	Black (Right)
13	W10327235	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
14	W10544179	Strap, Door
15	W10299227	Hinge, Door (Passive)
16		Glass Assembly, Outer Door
	W10861544	Stainless
	W11090765	Black Stainless
17		Standoff, Handle
	W11037027	Black

DRAWER PARTS

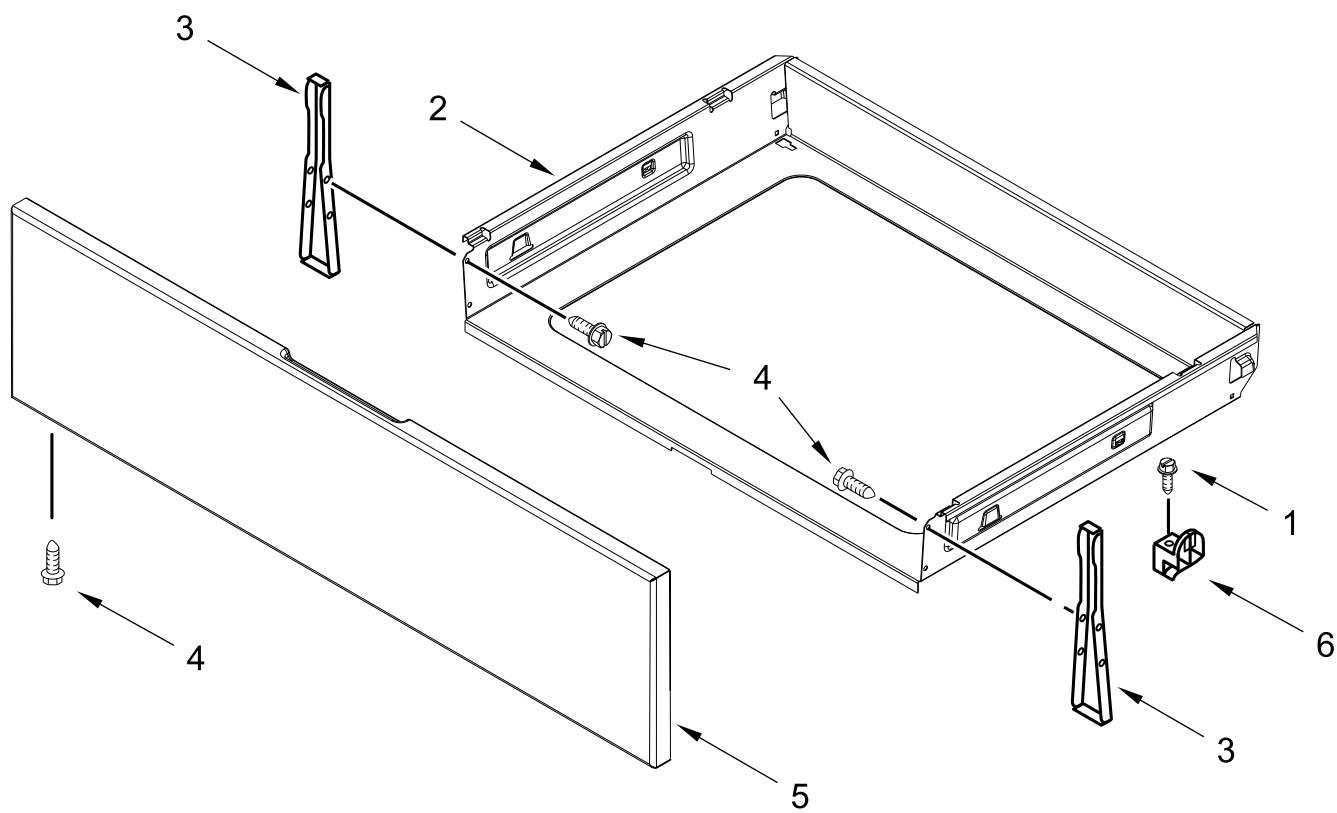

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196178	Screw
2	W10688022	Drawer, Storage
3	W10462909	Bracket, Mounting

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4	3196169	Screw

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W10861549	Stainless
	W11045574	Black Stainless
6	W10674708	Glide, Drawer Rear

OPTIONAL PARTS (NOT INCLUDED)

REFINISHING MATERIAL

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

INSULATION

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

PAINT, BULK (1 QT.)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

ACCESSORY PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning
	W10275756	Cleaner, Granite
	31617A	Cleaner, Grate & Drip Pan
	W10268578	Rack, Oven
	4396096RB	Griddle
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting