
FrameOne[™] - media:scape[™]

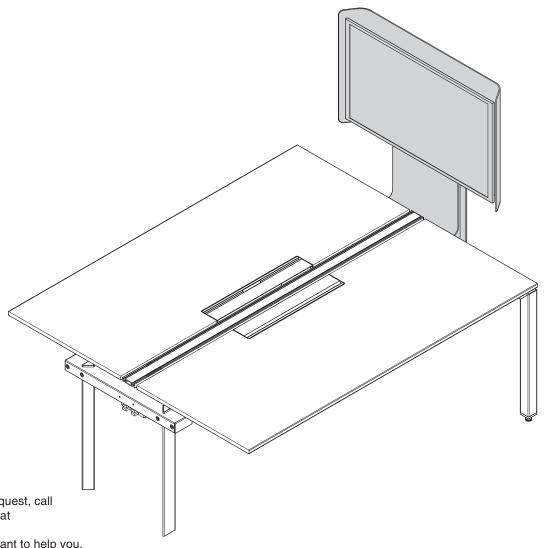


If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522)

for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500) Or visit our website: www.steelcase.com

© 2010 Steelcase Inc. Grand Rapids, MI 49501 U.S.A.

Printed in U.S.A.

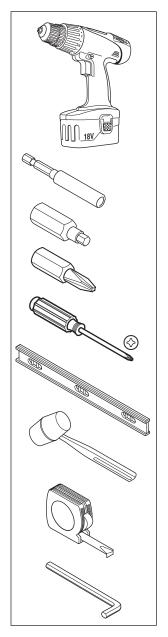

Page 1 of 10 939502064 Rev E

Warranty Disclaimer:

All Steelcase warranties and certifications are explicitly limited to the Steelcase product. For information regarding any non-Steelcase electrical or electronic components, refer to the identification label(s) and use instructions provided with those components.

Limitations de garantie:


Toutes les garanties et les certifications Steelcase sont expressément limitées au produit de Steelcase. Pour de plus amples renseignements sur les composantes électriques et électroniques non fournies par Steelcase, consultez les étiquettes d'identification de ces composantes et suivez les directives qui y figurent.

Renuncia de garantía:


Todas las garantías y certificaciones de Steelcase están explícitamente limitadas al producto de Steelcase. Para obtener información sobre cualquier componente eléctrico o electrónico que no sea de Steelcase, consulte la(s) etiqueta(s) de identificación y siga las instrucciones provistas con esos componentes.


Note: Refer to assembly direction 939500470 for assembly of FrameOne Bench. Perform all steps except for installation of worksurfaces.

1. Position the channel between the FrameOne tubes (1a) and clamp with four (4) screws provided (1b).

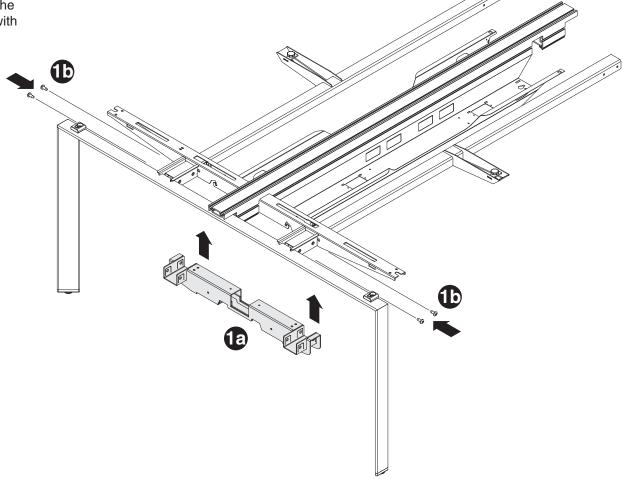


- **2.** Position preassembled bridge onto FrameOne channel as shown.
- **3.** Align holes in the bridge with holes in the channel, then install (2) flat head screws.
- **4.** From underneath, install (8) flat head screws.
- **5.** Secure bridge with (2) socket head cap screws, on both sides of cantilever.

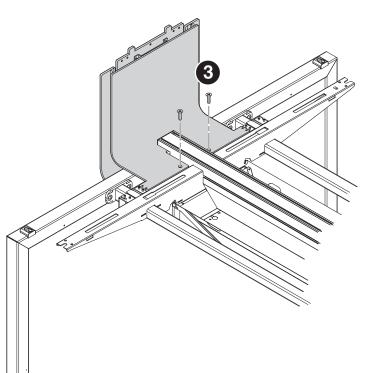

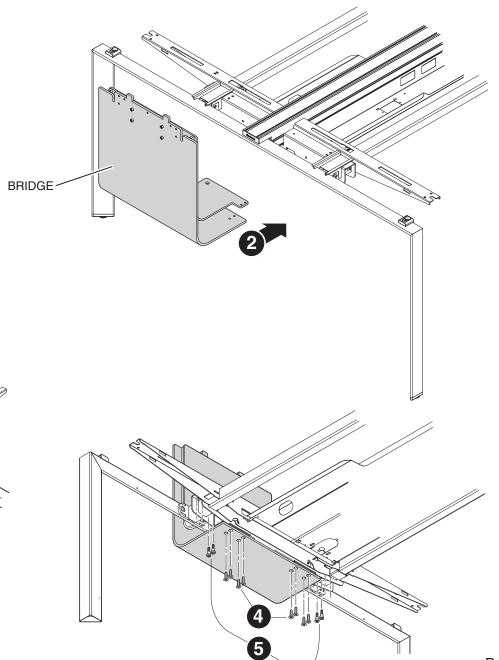

Page 4 of 10 939502064 Rev E

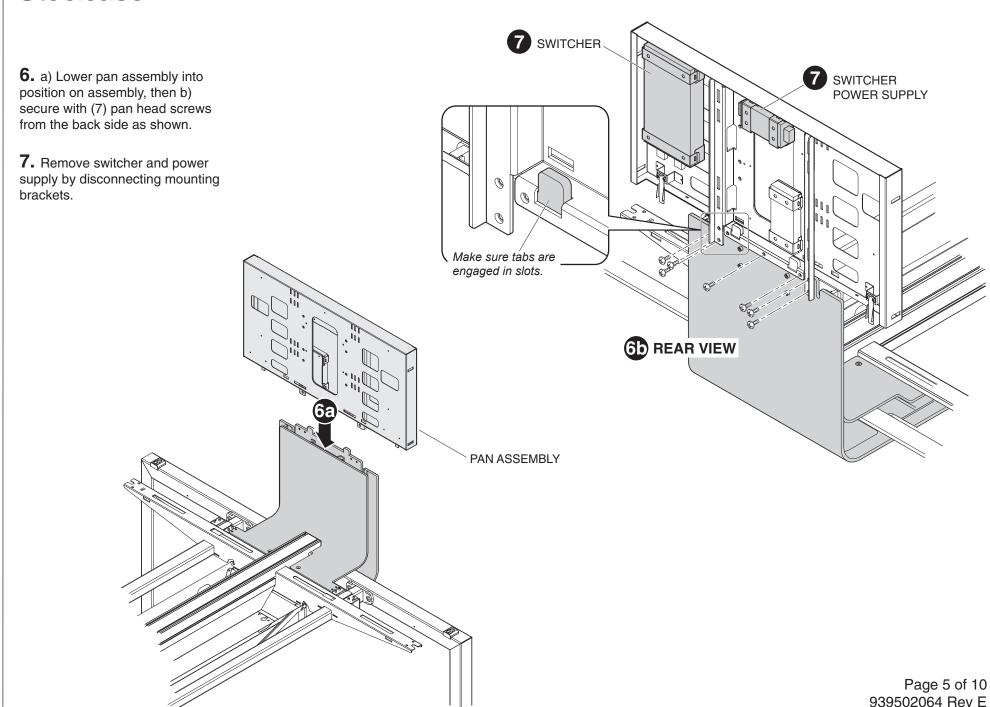

- **8.** Relocate switcher to opposite end of desk using (2) hanger brackets.
- **9.** Route cables within the area shown, then into tray area of FrameOne.
- **10.** Connect switcher power supply to switcher, connect other end into desk outlets. Tuck power supply box inside lower tray.
- **11.** Install end covers into each side of the bridge by snapping them into place.
- **12.** a) Insert grommet into data

port opening, then b), route puck cable down through grommet and connect to switcher. NOTE: When installing 6 or 8 pucks, extension cables for the pucks must be used. **13.** Snap puck cradle into rail and set puck onto cradle. **UPPER TRAY -PUCK CRADLE**

8 SWITCHER

[::] [:·/

10 SWITCHER POWER SUPPLY

MCB

Route cable from

MCB to switcher

in this space.

END COVERS


Page 6 of 10

939502064 Rev E


Steelcase 42" LG MONITOR Replace the existing power **14.** (For 42" LG Monitors only) cord Prepare monitor for installation. Remove power cord supplied with monitor with and replace with power cord provided. the one **CAUTION: Maximum monitor current** provided by not to exceed 5 amps. Steelcase. Note that the metal contacts are "up". Note that the metal contacts are "up". Page 7 of 10 939502064 Rev E

15. Add mounting brackets to back of television.


Do not exceed maximum monitor weight. NOTE: The monitor weight for a media:scape mini is rated up to a maximum of 55 pounds (245 newtons).

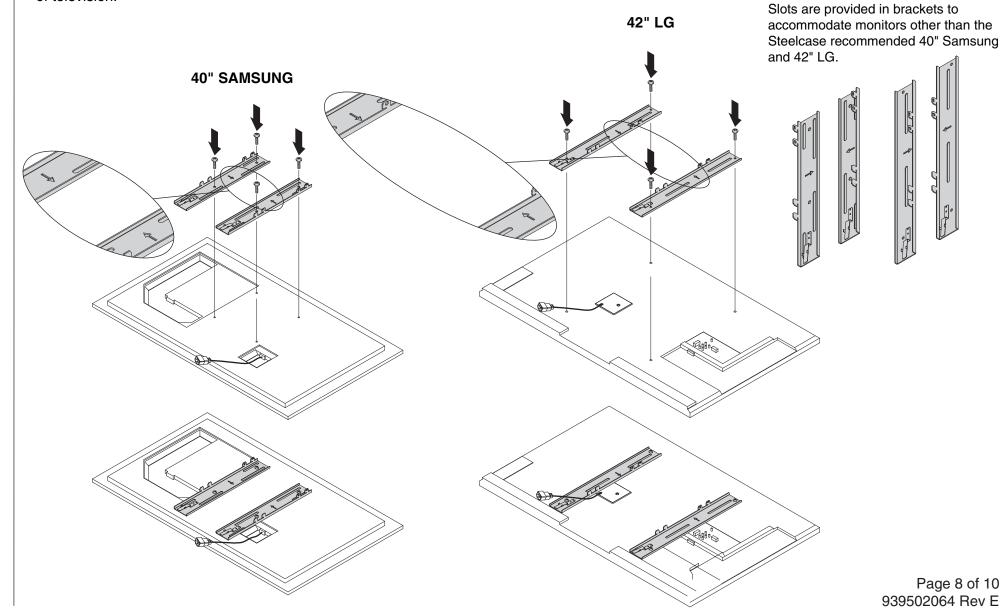

16. Plug the power, monitor connection, and audio from the FrameOne media:scape to the monitor.

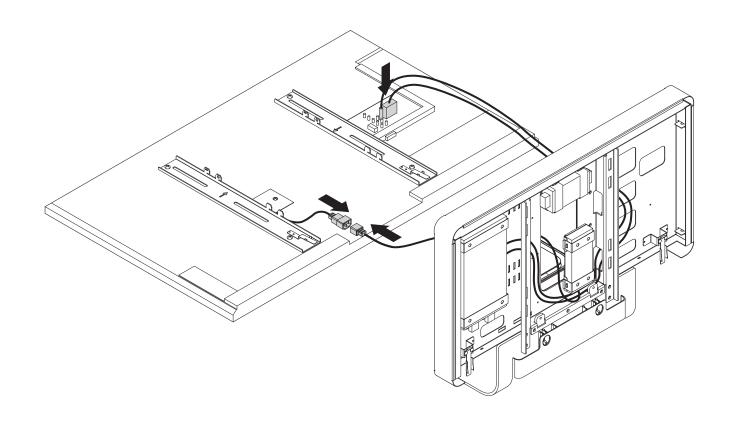

17. Install monitor onto FrameOne media:scape. Connect power supply cord, VGA, and audio cables to the monitor.

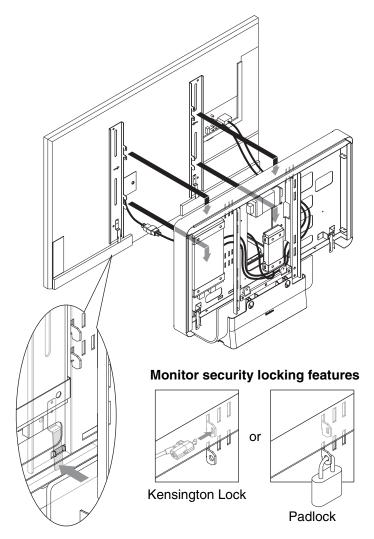


To remove monitor, locate anti-dislodgement clips on each side. Press them towards the monitor and lift up & out.

18. Install shroud onto FrameOne media:scape.

NOTE: Make sure that the shroud 'L' brackets are below and engaging the hooks on the anti-dislodgement clips.

19. Programming of Switcher and Pucks

Load CD included with media:scape electronics package. Refer to the detailed instructions on the CD.

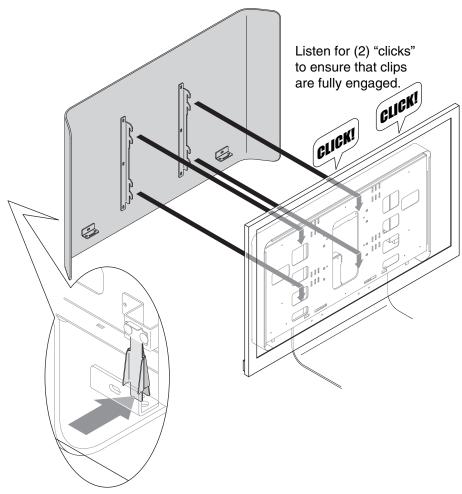

To remove shroud, locate anti-dislodgement clips on each side. Press them towards the monitor and lift up & out.

Page 10 of 10 939502064 Rev E