# **BAB714S**


Single-Stage | Omniguard® Coil | R-454B | 60Hz

RESIDENTIAL PRODUCT SPECIFICATIONS

Cooling Capacity | 1.5 to 5 Tons



# MODEL NUMBER IDENTIFICATION

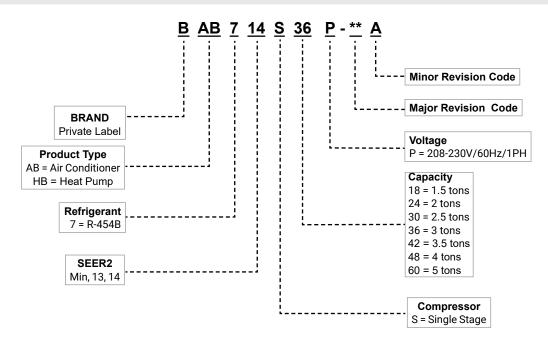

# **FEATURE HIGHLIGHTS**

- Outdoor Coil Fan
- Omniguard<sup>®</sup> Coil
- High Capacity Liquid Line Drier
- High Pressure Switch
- Low Pressure Switch
- Scroll Compressor
- Heavy Gauge Steel Cabinet
- Refrigerant Line Connections and Access

# **CONTENTS**

odel Number Identification ....................................	′
pprovals And Warranty	3
eatures	3
pecifications	6
otional Accessories - Order Separately	6
otional Controls - Order Separately	7
ectrical Data	7
mensions - Unit	8
panded Sound Data	9
eld Wiring	9
stallation Clearances	9
(V Substitution	10
(VIIsane	10

#### APPROVALS AND WARRANTY

### **APPROVALS**

- · AHRI Standard 210/240-2023 certified
- AHRI Certified system match-ups and expanded ratings, visit <a href="www.alliedratings.com">www.alliedratings.com</a>
- ENERGY STAR® Certified
- Sound rated to AHRI Standard 270-2008 test conditions
- Rated According to U.S. Department of Energy (DOE) test procedures
- Region specific models meet the minimum efficiency requirements for U.S. DOE Federal Regional Standards in that area
- Unit and components ETL, NEC and CEC bonded for grounding to meet safety standards for servicing
- ETL certified (U.S. and Canada)
- ISO 9001 Registered Manufacturing Quality System

## **WARRANTY**

10-years limited warranty on all parts, extended warranty available.

Coverage (Standard 5-year limited parts warranty plus an additional 5-year limited extended parts warranty).

Warranty must be registered online within 60 days of installation to qualify for 10-year coverage.

Unregistered equipment defaults to 5-year coverage.

See full warranty at www.alliedair.com for terms, conditions, and exclusions.

#### **FEATURES**

### **APPLICATIONS**

- 1.5 through 5 tons
- · Sound levels as low as 73 dBA
- Single-phase power supply
- Vertical air discharge
- Applicable to indoor air handlers or gas furnaces with indoor add-on coils
- Shipped completely factory assembled, piped and wired
- Factory test operated

# **REFRIGERATION SYSTEM**

### R-454B Refrigerant

- Low GWP (Global Warming Potential)
- Zero ODP (Ozone Depletion Potential)
- Unit is factory pre-charged

### **Outdoor Coil Fan**

- · Direct drive fan
- Vertical air discharge
- · Totally enclosed fan motor
- Ball bearings
- Inherently protected
- · Motor rain shield

## Omniguard® Coil

- Proprietary design
- Enhanced aluminum alloy tube/enhanced fin coil
- Superior corrosion resistance

- · Ripple-edged aluminum fins
- Aluminum tube construction
- Lanced fins for maximum fin surface exposure
- Fin collars grip tubing for maximum contact area
- Flared shoulder tubing connections
- · Factory tested under high pressure
- · Entire coil is accessible for cleaning

### **High Capacity Liquid Line Drier**

- · Furnished with unit for field installation
- Traps any moisture or dirt that could contaminate the refrigerant system
- 100% molecular-sieve, bead type, drier

# **High Pressure Switch**

- Protects the system from high pressure conditions that can be a result of fan failure or a blocked/dirty coil
- Manual reset

### **Low Pressure Switch**

- · Shuts off unit if suction pressure falls below setting
- Provides loss of charge and freeze-up protection
- Automatic reset

#### **FEATURES**

### **REFRIGERATION SYSTEM (Continued)**

### **Optional Accessories**

### **Expansion Valve Kits**

- Factory installed with R-454B on all Indoor units
- See TXV Usage table
- · Chatleff-style fitting

### **Freezestat**

- Senses suction line temperature
- Cycles compressor off when suction line temperature falls below freezestat setpoint
- Opens at 29°F and closes at 58°F
- Installs on or near the discharge line of the evaporator or on the suction line

# Loss of Charge Switch Kit

- Protects compressor from damage from low refrigerant charge conditions
- · SPST, normally-closed
- · Automatic reset

### INDOOR REFRIGERANT DETECTION SYSTEM (RDS)

- Complies with UL 60335-2-40 approved standard
- · Required for all systems using R-454B refrigerant
- · Factory or field installed on all indoor units
- Consists of a RDS refrigerant detection sensor and an independent RDS control
- If refrigerant is detected the refrigerant detection system will prevent compressor and heating operation until refrigerant is no longer detected
- Refrigeration detection system also energizes the blower if refrigerant is detected to dissipate any concentrations of refrigerant from the space
- Refer to indoor unit Product Specifications documents for additional details

### **COMPRESSOR**

# Single-Stage Scroll Compressor

- · High volumetric efficiency
- Uniform suction flow
- · Constant discharge flow
- High efficiency
- · Quiet operation
- Low gas pulses during compression reduces operational sound levels
- Compressor motor is internally protected from excessive current and temperature
- Muffler in discharge line reduces operating sound levels
- Compressor is installed in the unit on resilient rubber mounts for vibration free operation

### **Scroll Compressor Operation**

- Two involute spiral scrolls matched together generate a series of crescent-shaped gas pockets between them
- During compression, one scroll remains stationary while the other scroll orbits around it
- Gas is drawn into the outer pocket, the pocket is sealed as the scroll rotates
- As the spiral movement continues, gas pockets are pushed to the center of the scrolls. Volume between the pockets is simultaneously reduced
- When the pocket reaches the center, gas is now at high pressure and is forced out of a port located in the center of the fixed scrolls
- During compression, several pockets are compressed simultaneously resulting in a smooth continuous compression cycle
- Continuous flank contact, maintained by centrifugal force, minimizes gas leakage and maximizes efficiency
- Compressor is tolerant to the effects of slugging and contaminants. If this occurs, scrolls separate, allowing liquid or contaminants to be worked toward the center and discharged

# Compressor Crankcase Heater (042, 048, and 060 Models)

 Prevents migration of liquid refrigerant into compressor and ensures proper compressor lubrication

### **Optional Accessories**

# Compressor Crankcase Heater (018, 024, 030, 036 Models)

 Prevents migration of liquid refrigerant into compressor and ensures proper compressor lubrication

## **Compressor Sound Cover**

- Polymer outer shell
- 1/2 inch thick polyester fiber insulation
- All open edges are sealed with a one-inch wide hook and loop fastening tape



### **FEATURES**

### **COMPRESSOR** (continued)

Optional Accessories (continued)

### **Compressor Hard Start Kit**

- Single-phase units are equipped with a PSC compressor motor
- This type of motor normally does not need a potential relay and start capacitor
- For conditions such as low voltage, kit may be required to increase the compressor starting torque

# **Compressor Low Ambient Cut-Off Switch**

- Non-adjustable switch (low ambient cut-out)
- Prevents compressor operation when outdoor temperature is below 35°F

### **Compressor Time-Off Control**

- · Kit prevents compressor short-cycling
- Allows time for suction and discharge pressure to equalize.
- Permits compressor start-up in an unloaded condition.
- Automatic reset with 5 minute delay between compressor shut-off and start-up

### **Indoor Blower Off Delay Relay**

Delays the indoor blower-off time during the cooling cycle

## **Low Ambient Kit**

- Air conditioners can operate down to 45°F outdoor air temperature without additional controls
- Allows unit to operate properly down to 30°F
- **NOTE** Crankcase heater and freezestat should be installed on compressors equipped with a low ambient kit.
- **NOTE** A compressor lock-out thermostat should be added to terminate compressor operation below recommended operation conditions.

### **CABINET**

- · Heavy gauge steel construction
- · Pre-painted cabinet finish
- Control box is conveniently located with all controls factory wired
- Corner patch plate allows access to compressor components
- Drainage holes are provided in base section for moisture removal

# Refrigerant Line Connections, Electrical Inlets, Service Valves

- Sweat connection suction and liquid lines
- · Located on corner of unit cabinet
- Suction valve can be fully shut off, while liquid valve may be front seated to manage refrigerant charge while servicing system
- Refrigerant line connections and field wiring inlets are located in one central area of the cabinet
- See dimension drawing

### **Braze-Free/Press Fitting Flexibility**

 Units can accommodate braze-free or press fittings for installation versatility

SPECIFICATION	IS			ALL	REGIONS
Size		018	024	030	036
Nominal Tonnage		1.5	2	2.5	3
Sound Rating Number	dB/	73	75	76	76
Connections	Liquid line (OD) - ir	. 3/8	3/8	3/8	3/8
(Sweat)	Suction line (OD) - ir	. 3/4	3/4	3/4	7/8
Compressor Type		1-Stage Scroll	1-Stage Scroll	1-Stage Scroll	1-Stage Scroll
Defricerent	<sup>1</sup> R-454B charge furnished @ 15 F	Г 4 lbs. 14 oz.	4 lbs. 14 oz.	5 lbs. 10 oz.	6 lbs. 13 oz.
Refrigerant —	<sup>1</sup> R-454B charge furnished @ 30 F	5 lbs. 7 oz.	5 lbs. 7 oz.	6 lbs. 3 oz.	7 lbs. 6 oz.
<b>Indoor Unit Expansion</b>		26Z70	26Z70	26Z70	26Z70
Outdoor	Net face area - ft. <sup>2</sup> Outer co	I 16.33	21.00	16.33	21.00
Coil	Inner co	I -	-	15.75	20.25
	Tube diameter - in	. 5/16	5/16	5/16	5/16
	Row	s 1	1	2	2
	Fins - ir	. 26	26	22	22
Outdoor	HI		1/8	1/8	1/6
Fan	Diameter - in	. 22	22	22	22
	Blade	s 2	3	3	3
	Cfn	n 2610	2990	2820	3040
	Rpn	n 825	825	825	825
	Watt		160	160	190
Shipping Data - Ibs.		155	170	180	200
ELECTRICAL D	ATA				
	Line voltage data (Volts-Phase-Hz	) 208/230-1-60	208/230-1-60	208/230-1-60	208/230-1-60
<sup>2</sup> Maximu	m overcurrent protection (MOCP) amp	<u></u>	20	25	30
	<sup>3</sup> Minimum circuit ampacity (MCA	) 11.2	13.6	16.6	21.8
Compressor	Rated load amp	8.3	10.3	12.7	16.7
•	Locked rotor amp	45	60.2	75.6	93.5
Fan Motor	Full load amp	s 0.74	0.74	0.74	1.0
	Locked rotor amp	1.65	1.65	1.65	1.9
<b>OPTIONAL ACC</b>	<b>ESSORIES - ORDER SEP</b>	ARATELY	•	•	•
Compressor	Copeland 27V6	•	•	•	•
Crankcase Heater	LG <b>27U1</b>		•	•	•
Compressor Hard	Copeland 63W2				
Start Kit	10J4		•	•	•
	LG <b>10J4</b> :		•	•	•
	88M9				
Compressor Low Amb	7 •	•	•	•	
Compressor Timed-Off	_	•	•	•	
Freezestat	F Control 47J3: 93G3:	_	•	•	•
Indoor Blower Off Dela	•	•	•	•	
Loss of Charge Switch	·		•	•	•
<sup>4</sup> Low Ambient Kit (Fan			•	•	•
	range are plus 10% and minus 5% of line voltage	- 1	L	<u> </u>	

NOTE - Extremes of operating range are plus 10% and minus 5% of line voltage.

<sup>&</sup>lt;sup>1</sup> Refrigerant charge is sufficient for 15/30 ft. length of refrigerant lines. For longer line set requirements see the Installation Instructions for information about line set length and additional refrigerant charge required.

<sup>&</sup>lt;sup>2</sup> HACR type breaker or fuse.

<sup>&</sup>lt;sup>3</sup> Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

<sup>&</sup>lt;sup>4</sup> Crankcase Heater and Freezestat are recommended with Low Ambient Kit.

SPECIFICATION	S			Al	LL REGIONS
Size			042	048	060
Nominal Tonnage			3.5	4	5
Sound Rating Number		dBA	76	78	80
Connections	Liquid	line (OD) - in.	3/8	3/8	3/8
(Sweat)	Suction	line (OD) - in.	7/8	7/8	1-1/8
Compressor Type			1-Stage Scroll	1-Stage Scroll	1-Stage Scroll
Defrimenent	<sup>1</sup> R-454B charge furnis	shed @ 15 FT	7 lbs. 2 oz.	8 lbs. 14 oz.	8 lbs. 14 oz.
Refrigerant	<sup>1</sup> R-454B charge furnis	shed @ 30 FT	7 lbs. 11 oz.	9 lbs. 7 oz.	9 lbs. 7 oz.
Indoor Unit Expansion \	/alve (TXV)		26Z71	26Z71	26Z72
Outdoor	Net face area - ft.2	Outer coil	22.17	24.93	29.09
Coil		Inner coil	21.33	24.13	28.16
	Tube	diameter - in.	5/16	5/16	5/16
		Rows	2	2	2
		Fins - in.	22	22	22
Outdoor		HP	1/4	1/4	1/4
Fan		Diameter - in.	26	22	26
		Blades	3	4	4
		Cfm	4060	3700	4180
		Rpm	825	825	825
		Watts	260	290	290
Shipping Data - Ibs.			225	235	260
ELECTRICAL DA	TA				
	Line voltage data (Vo	lts-Phase-Hz)	208/230-1-60	208/230-1-60	208/230-1-60
2	Maximum overcurrent protection (		35	45	50
	³ Minimum circuit am	, ,	23.2	29.7	31.2
Compressor	Rat	ed load amps	17.3	22.4	23.7
•	Lock	ed rotor amps	123	126	157
Fan Motor	F	ull load amps	1.56	1.7	1.56
	Lock	ed rotor amps	3.2	3.2	3.2
OPTIONAL ACCE	ESSORIES - ORDER SE	EPARATEL	_Y		'
Compressor	Copeland	27V63	Factory Installed	Factory Installed	Factory Installed
Crankcase Heater	LG	27U16			. actory metamou
Compressor Hard Start	Copeland				
Kit	2 Sp 3.3	10J42	•	•	•
	LG		•		
	20	88M91		•	•
Compressor Low Ambie	ent Cut-Off Switch	47J27	•	•	•
Compressor Timed-Off		47J35	•	•	•
Freezestat	3/8 in.	93G35	•	•	•
Indoor Blower Off Delay	-	58M81	•	•	•
Loss of Charge Switch I		84M23	•	•	•
<sup>4</sup> Low Ambient Kit (Fan		34M72	•	•	•
	- , ····ˈʊ/	J-1111 Z			1


 $<sup>\</sup>ensuremath{\mathsf{NOTE}}$  - Extremes of operating range are plus 10% and minus 5% of line voltage.


<sup>&</sup>lt;sup>1</sup> Refrigerant charge is sufficient for 15/30 ft. length of refrigerant lines. For longer line set requirements see the Installation Instructions for information about line set length and additional refrigerant charge required.

<sup>&</sup>lt;sup>2</sup> HACR type breaker or fuse.

<sup>&</sup>lt;sup>3</sup> Refer to National or Canadian Electrical Code manual to determine wire, fuse and disconnect size requirements.

<sup>&</sup>lt;sup>4</sup> Crankcase Heater and Freezestat are recommended with Low Ambient Kit.

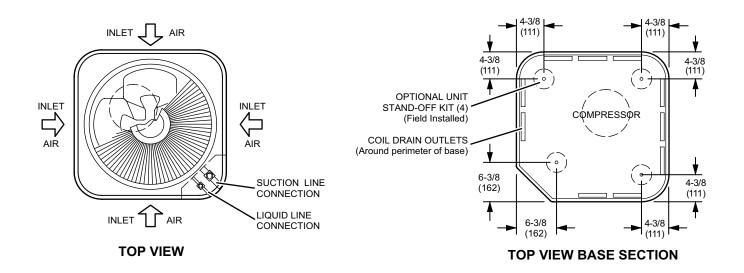

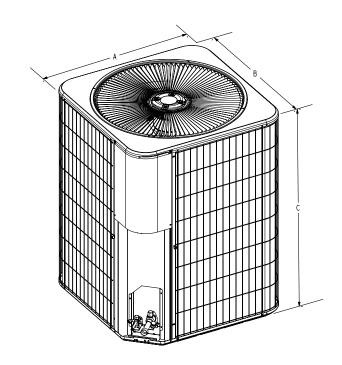


Size	,	B nd Depth	C Height		
	inches	mm	inches	mm	
018	28-1/4	718	29-1/4	743	
024	28-1/4	718	37-1/4	946	
030	28-1/4	718	29-1/4	743	
036	28-1/4	718	37-1/4	946	
042	32-1/4	819	33-1/4	845	
048	28-1/4	718	43-1/4	1099	
060	32-1/4	819	43-1/4	1099	

### **EXPANDED SOUND DATA**

Size	Octav	Octave Band Sound Power Levels dBA, re 10 <sup>-12</sup> Watts Center Frequency - HZ							<sup>2</sup> Estimated Sound Pressure Level at Distance From Unit (dBA at distance in ft.)				
0.20	125	250	500	1000	2000	4000	8000	Number (dBA)	3	5	10	15	50
018	55.5	64.5	69	67.5	65	61	56	73	66	61	55	52	41
024	61.5	64	70	69.5	66	62.5	54.5	75	68	63	57	54	43
030	60	67	72	70.5	67.5	62.5	56	76	69	64	58	55	44
036	58	67.5	72.5	71.5	66.5	62	54.5	76	69	64	58	55	44
042	59.5	67.5	71.5	70	69	63.5	57.5	76	69	64	58	55	44
048	60	70.5	73.5	72.5	70.5	67	60.5	78	71	66	60	57	46
060	63.5	69.5	75	75	73	68	62.5	80	73	68	62	59	48

NOTE - the octave sound power data does not include tonal correction.

## FIELD WIRING

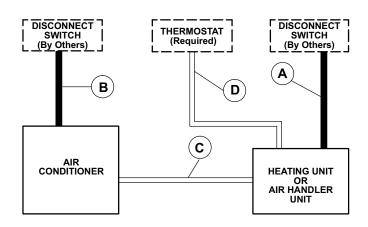


- A Two Wire Power (not furnished). See Indoor Unit Electrical Data
- B Two Wire Power (not furnished). See Electrical Data
- C Four Wire Low Voltage (not furnished). 18 ga. minimum
- D Five Wire Low Voltage (not furnished). 18 ga. minimum

All wiring must conform to NEC or CEC and local electrical codes.

# **INSTALLATION CLEARANCES**

### NOTES:

- Service Clearance 30 in. (762 mm) on one of the sides adjacent to the Control Box.
- One of other three sides must be 36 in. (914 mm).
- One of the two remaining sides may be 12 in. (305 mm).
- The remaining side may be 6 in. (152 mm).
- 48 in. (1219 mm) clearance required on top of unit
- 24 in. (610 mm) required between two units

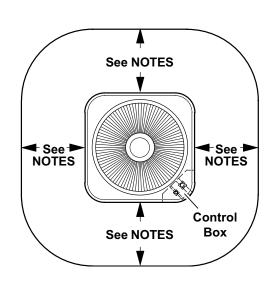

<sup>&</sup>lt;sup>1</sup> Tested according to AHRI Standard 270-2008 test conditions.

<sup>&</sup>lt;sup>2</sup> Estimated sound pressure level at distance based on AHRI Standard 275-2010 method for equipment located on the ground, roof, or on side of building wall with no adjacent reflective surface within 9.8 feet. Sound pressure levels will increase based on changes to assumptions. For other applications, refer to AHRI Standard 275.

# **TXV USAGE**

All Allied coils and air handlers are shipped with a factory installed TXV. In most cases, no substitution is needed.

If a different size TXV is required, it will be listed in the "TXV SUBSTITUTION" table by size. The correct TXV must be ordered separately and field installed.

Size	Order Number
018	26Z70
024	26Z70
030	26Z70
036	26Z70
042	26Z71
048	26Z71
060	26Z72

## AHRI STANDARD 210/240-2023

Standard Ratings relating to cooling or heating capacities shall be net values, including the effects of circulating-fan heat, but not including supplementary electric heat. Power input used for calculating efficiency shall be the Total Power.

Standard Ratings of units which do not have indoor aircirculating fans furnished as part of the model, i.e., Coilonly System, shall be established by subtracting from the total cooling capacity 1,505 Btu/h per 1,000 SCFM, and by adding the same amount to the heating capacity for non-mobile-home, non-Space Constrained units. Total Power for both heating and cooling shall be increased by 441 W per 1,000 SCFM of indoor air circulated.

#### **TXV SUBSTITUTION - R-454B**

A general guide for replacing the factory installed R-454B TXV if the indoor unit (coil/air handler) is larger or smaller than the outdoor unit.

Outdo	oor Unit Indoor Unit		Indoor	Indoor	
Size	Tons	Size	Tons	TXV Furnished	TXV Replacement
018	1 5	42	2.5		
	1.5		3.5	26Z71	26Z70
018	1.5	48	-	26Z71	26Z70
018	1.5	49	4	26Z71	26Z70
018	1.5	50/60	4/5	26Z71	26Z70
018	1.5	51/61	4/5	26Z71	26Z70
018	1.5	60	5	26Z72	26Z70
024	2	42	3.5	26Z71	26Z70
024	2	48	4	26Z71	26Z70
024	2	49	4	26Z71	26Z70
024	2	50/60	4/5	26Z71	26Z70
024	2	51/61	4/5	26Z71	26Z70
024	2	60	5	26Z72	26Z70
030	2.5	42	3.5	26Z71	26Z70
030	2.5	48	4	26Z71	26Z70
030	2.5	49	4	26Z71	26Z70
030	2.5	50/60	4/5	26Z71	26Z70
030	2.5	51/61	4/5	26Z71	26Z70
030	2.5	60	5	26Z71	26Z70
036	3	42	3.5	26Z71	26Z70
036	3	48	4	26Z71	26Z70
036	3	49	4	26Z71	26Z70
036	3	50/60	4/5	26Z71	26Z70
036	3	51/61	4/5	26Z71	26Z70
036	3	60	5	26Z72	26Z70
042	3.5	24	2	26Z70	26Z71
042	3.5	30	2.5	26Z70	26Z71
042	3.5	30/36	2.5/3	26Z70	26Z71
042	3.5	36	3	26Z70	26Z71
042	3.5	60	5	26Z72	26Z71
048	4	30/36	2.5/3	26Z70	26Z71
048	4	36	3	26Z70	26Z71
048	4	60	5	26Z72	26Z71
060	5	50/60	4/5	26Z71	26Z72
060	5	51/61	4/5	26Z71	26Z72
TV// D					

# TXV Ranges:

- **26Z70** 1.5 to 3 ton systems Use on 3 ton (036) and lower systems.
- **26Z71** 3.5-4 ton systems Use on to 4 ton (048) and down to 3.5 ton (042) systems.
- **26Z72** 5 ton systems Use on 5 ton (060) systems only.









Visit us at <a href="www.alliedair.com">www.alliedair.com</a> Contact us at 1-800-448-5872