EchoPod® DX10

Ultrasonic Liquid Level Sensor



Application

The general purpose ultrasonic sensor provides continuous level measurement up to 49.2" (1.25m) with a selectable 0-5 VDC, 0-10 VDC or 976-2000 Hz frequency signal output, and is configured via our free WebCal® software. Select the voltage output for interacte with analog input cards. Select the frequency output for interface with discrete input cards. This non-contact liquid level sensor is ideally suited for corrosive, sticky or dirty liquids, and is widely selected for small day tank, skid, IBC, sump and proecess tank level applications.











Features

- Continuous non-contact level measurement up to 49.2" (1.25m)
- Selectable voltage or frequency (discrete) signal outputs
- Configuration is fast and easy via WebCal software and USB adapter
- Narrow 2" beam width and short 2" dead band optimized for small tanks
- PVDF transducer and 6P polycarbonate enclosure for corrosive liquids
- Automatic temperature compensation for accurate measurement

Success

The disinfection of fresh produce and associated processing equipment is essential to public health. Fruits and vegetables such as strawberries, head lettuce, tomatoes, oranges and artichokes are susceptible to bacterial and viral contamination. Each year,



approximately 40K Americans succumb to Hepatitis A food poisoning. Adults who become ill miss an average of 27 work days. Good Manufacturing Practices and new FDA recommendations call for the disinfection of all fresh produce and processing equipment. To accomplish this, produce suppliers are deploying automated systems that generate, inventory and inject chlorine dioxide into their processes. These are typically small systems that use 55-gal-drum or mini-bulk tanks for chemical make up and storage. From inventory to datalogging, level is critical in these highly corrosive applications. EchoPod is the reliable, level measurement, switch and control solution for chlorine disinfection systems.

Compatible Products



DATAVIEW™

Level Controller



LI40

PODVIEWTM

Level Indicator

EchoPod® DX10

Ultrasonic Liquid Level Sensor



Specifications

Range: 49.2" (1.25m) Accuracy: 0.125" (3mm) **Resolution:** 0.019" (0.5mm)

Dead band: 2" (5cm) Beam width: 2" (5cm) Configuration: WebCal® PC

Windows® USB 2.0

Memory: Non-volatile Supply voltage: 12-24 VDC Consumption: 0.5W

Signal output: 0-5 V, 0-10V, 976-2000Hz. Frequency: Sink current, 15 mA nominal Signal invert: 5-0 V, 10-0V or 2000-976 Hz.

Signal fail-safe: Full, empty or hold last

Process temp.: F: 20° to 140°

C: -7° to 60° Automatic

Temp. comp.: Ambient temp.: F: -31° to 140°

C: -35° to 60°

Pressure: MWP = 30 PSI (2 bar) **Enclosure rating:** Type 6P, encapsulated,

> corrosion resistant & submersible

> > DX10 -

Encl. material: Polycarbonate Strain relief mat.: Santoprene

Trans. material: **PVDF**

Cable jacket mat: Polyurethane


Cable type: 6-conductor, shielded

Cable length: 48" (1.2m) **Process mount:** 1" NPT (1" G) Mount gasket: Viton®

Classification: General purpose

Compliance: CE, RoHS Approvals: cFMus

Dimensions

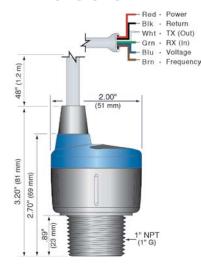

Configuration





The level sensor is configurable via our free WebCal PC software and Fob USB adapter. The sensors are offered with and without Fobs. Fobs are universal and can be used to configure any WebCal compatible product. Download your free copy of WebCal in English or Chinese.

Fittings

For optimum performance, install the level sensor using the below recommended or direct equivalent fittings.

P/N **DESCRIPTION**

LM52-1400 2" NPT x 1" NPT, PVC, schedule 40 LM52-1800 2" NPT x 1" NPT, PVC, schedule 80



LM52-1410 LM52-1810 2" socket x 1" NPT, PVC, schedule 40 2" socket x 1" NPT, PVC, schedule 80



LM52-1850

1" ANSI x 1" NPT, CPVC, schedule 80



LM50-1001-1

1" NPT side mount bracket, PP

Ordering

PROCESS MOUNT (1) NPT (US)

G (Metric) FOB USB ADAPTER (2)

Without Fob 0 With Fob 1

NOTES

- Install the level sensor using Flowline installation fittings or equivalents.
- The level sensor is configured via our WebCal software and one LI99-2001 Fob USB adapter. The level sensor is offered with and without a Fob. Fobs are universal and can be used to configure any WebCal compatible product. WebCal is a free download from our website.