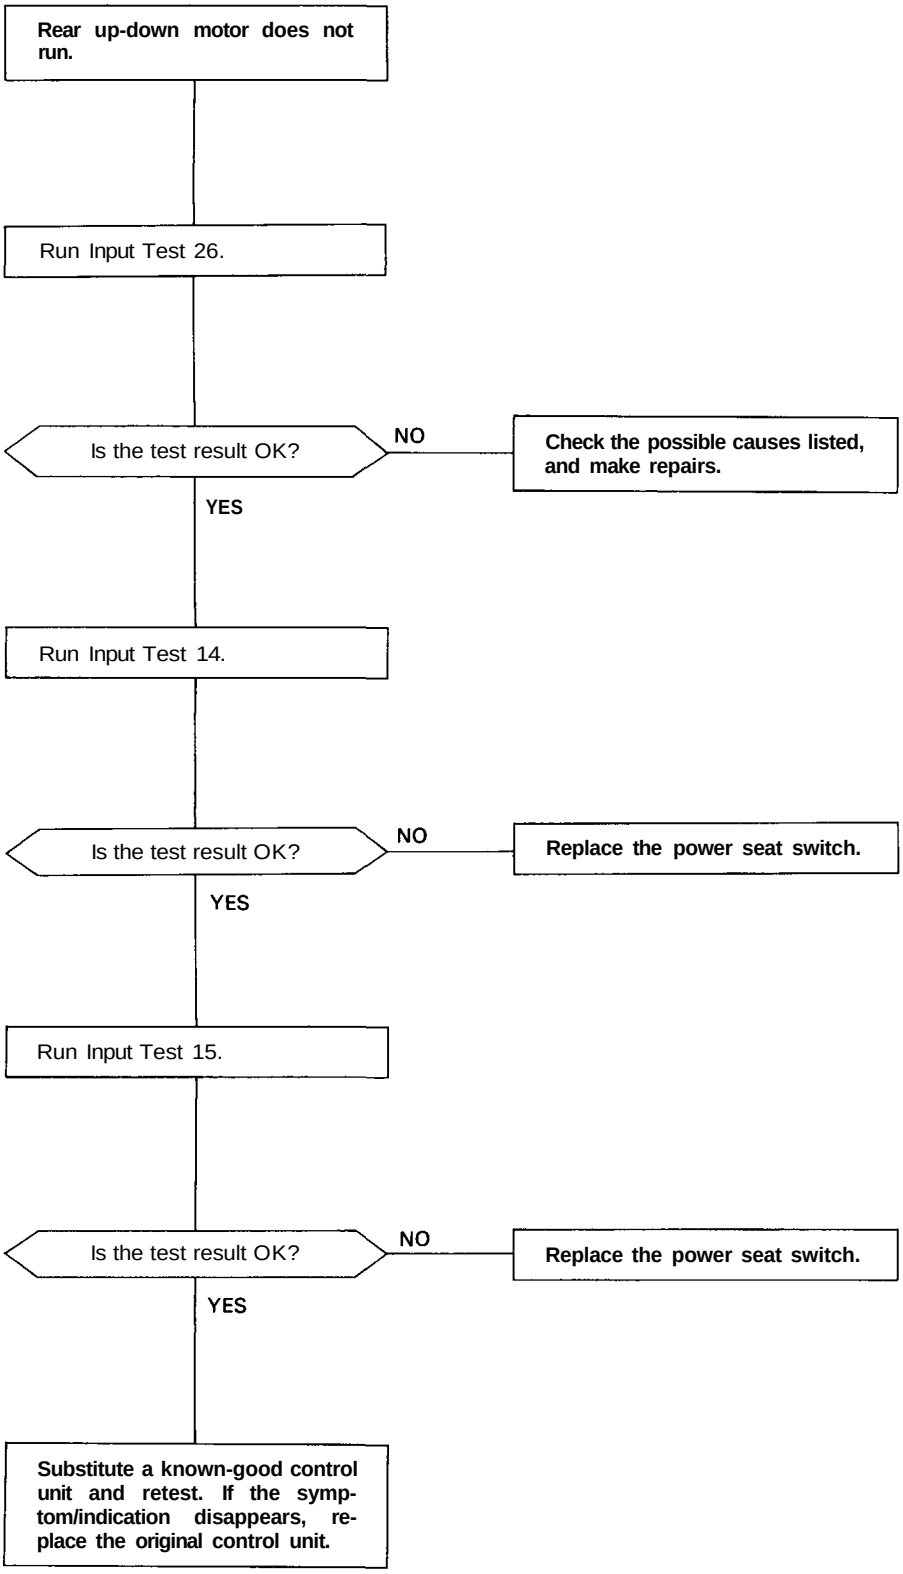
Rear up-down motor does not run.
Run Input Test 26.
Is the test result OK?
NO
Check the possible causes listed, and make repairs.
YES
Run Input Test 14.
Is the test result OK?
NO
Replace the power seat switch.
YES
Run Input Test 15.
Is the test result OK?
NO
Replace the power seat switch.
YES
Substitute a known-good control unit and retest. If the symptom/indication disappears, replace the original control unit.

(cont'd)