
Steelcase®

Freestanding "P" Top and Jetty Top with Modesty Panel Assembly Instructions

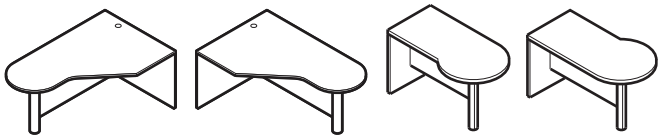

Jetty Top LH Jetty Top RH P-Top RH P-Top LH

Assembly Sequence

1	Unpack Hardware from PL Kit
2	Screw THREADED PINS into Post Leg D
3	Push EXPANDING PINS into CAMLOCKS in parts B & C
4	C ➡ B
5	C + B ➡ A
6	D ➡ C + B + A
7	Stick Covers over Camlocks and unused Expanding Pin holes.
8	Locate angle brackets as shown in Fig 8. Attach using #8 x 1" screws to end and top panels.

6" Diameter Post Leg Kit (PL)	1


Spare Lock Cam	1
Cover	10
Expanding Pin	9
Threaded Pin	2

Hardware Package 7HP9

# 8 x 1" Screws	8
Angle Bracket	2


Pin Installation

1. Push Expanding Pin(s) into Camlock(s), with groove in Pin Sleeve oriented as shown.
2. Engage parts
3. Turn Camlock clockwise approx. 230 degrees to lock Expanding Pin in place.

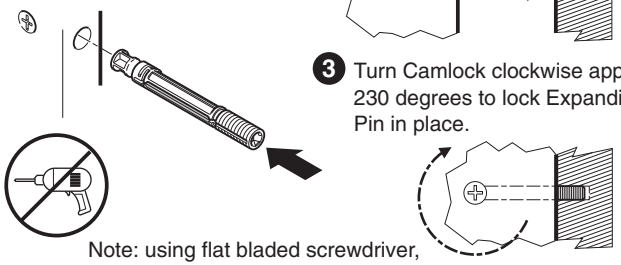

Note: using flat bladed screwdriver, rotate cam connector to 8 O'clock to fully lock.


NOTE: Post Leg is attached LAST.

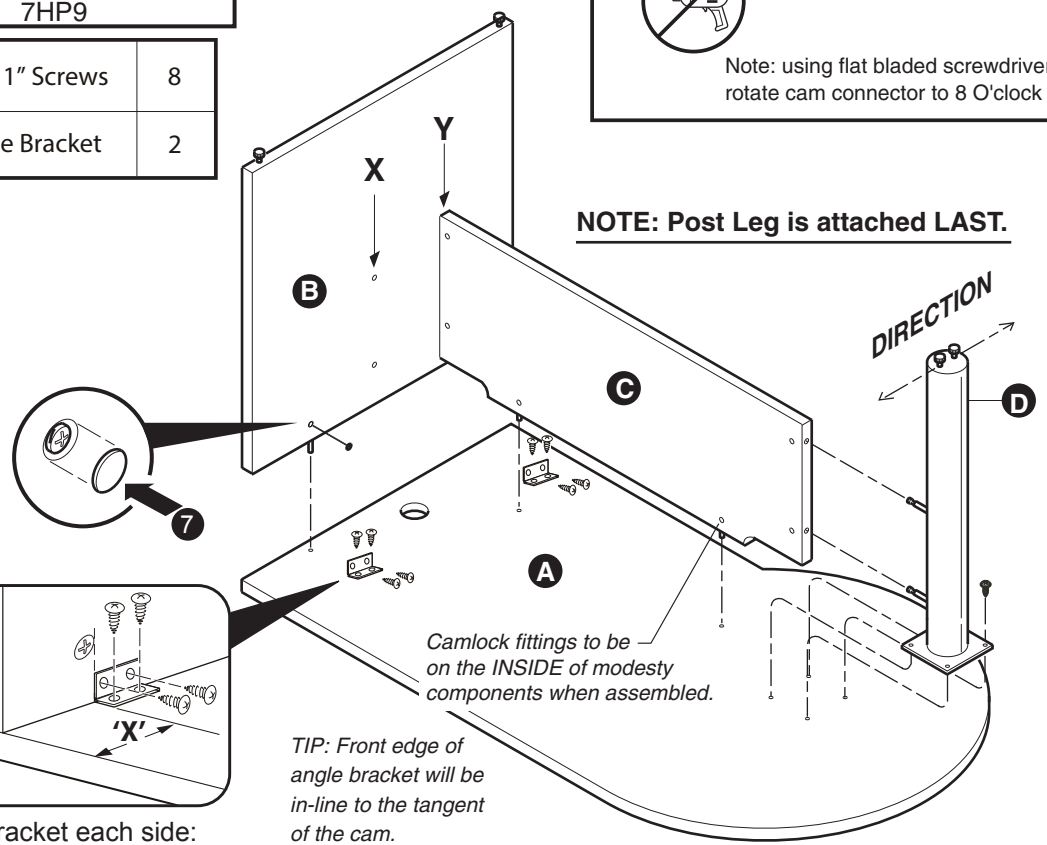

Camlock fittings to be on the INSIDE of modesty components when assembled.

TIP: Front edge of angle bracket will be in-line to the tangent of the cam.

Detail view to show Pins in Post Leg

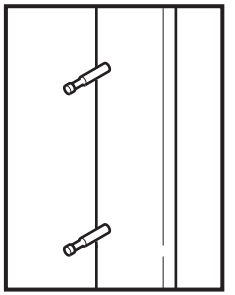

Pins will be inserted into holes "X" for assembly handing as shown. Pins will be inserted into holes "Y" for opposite hand assembly.

8

(1) bracket each side:
X= 4.25" for P-Tops
X= 3.25" for Jetty Tops

If you have a problem, question, or request, call your local dealer, or Steelcase Line 1 at **888.STEELCASE** (888.783.3522) for immediate action by people who want to help you.

(Outside the U.S.A., Canada, Mexico, Puerto Rico, and the U.S. Virgin Islands, call: 1.616.247.2500)
Or visit our website: www.steelcase.com

© 2014 Steelcase Inc.
Grand Rapids, MI 49501
U.S.A.

Printed in U.S.A.