

Glow Instructions

FORM-A-TREAD®

GLOW™

Cartridge Dispensing Instructions



Unscrew cap and remove plug




Dispense small amount until both sides dispense evenly




Screw on Mix Nozzle.
Dispense and discard first 2 inches of material.


Installation Instructions

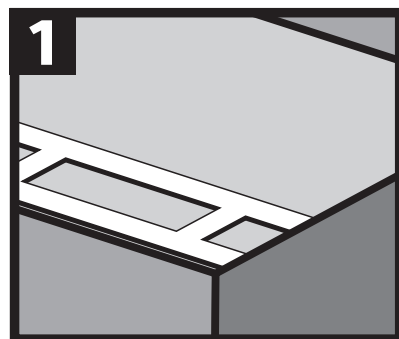


Apply EZ Form™ to desired tread location. Remove connecting tabs

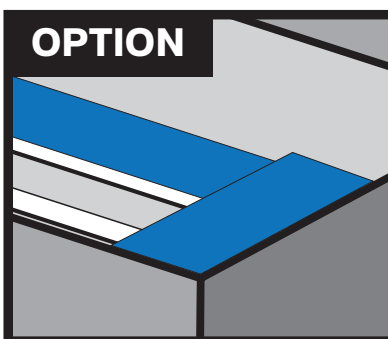


OPTION
Apply painter's tape
[to form a clean edge and for
easier clean up]

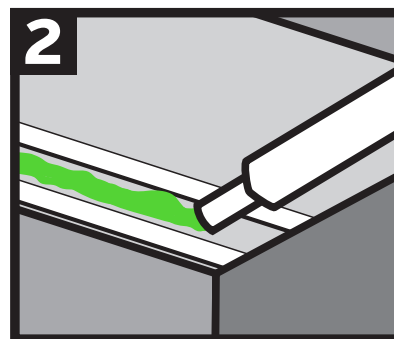

Follow cartridge dispensing
instructions and apply
Form-A-Tread GLOW

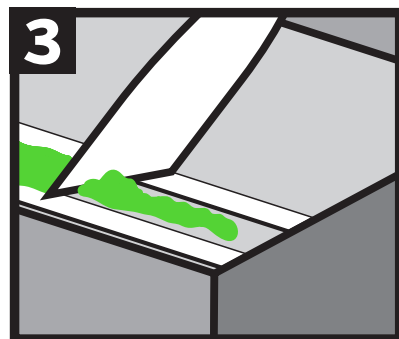

Spread Form-A-Tread GLOW to
the level of the EZ Form

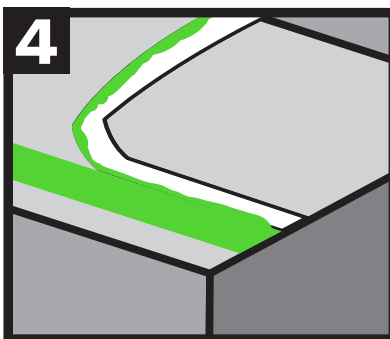

Remove EZ Form within 30 minutes