

Instructions

FORM-A-TREAD®

Cartridge Dispensing Instructions



Unscrew cap and remove plug




Dispense a small amount until both sides flow evenly




Screw on Mix Nozzle.
Dispense and discard first 2 inches of material.


Installation Instructions

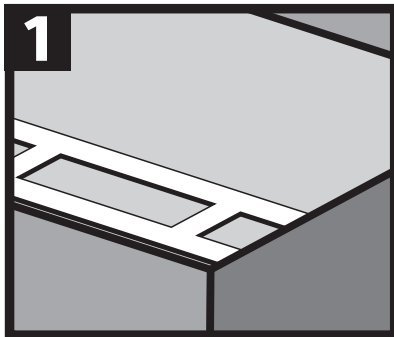


Apply EZ Form™ to desired tread location. Remove connecting tabs to form a continuous tread.

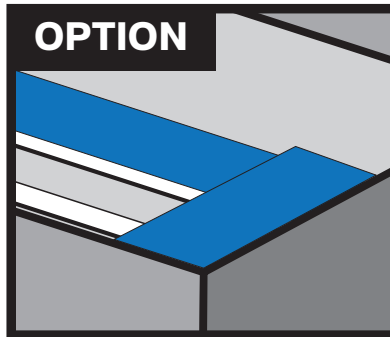


OPTION
Apply painter's tape
[to form a clean edge and for easier clean up]

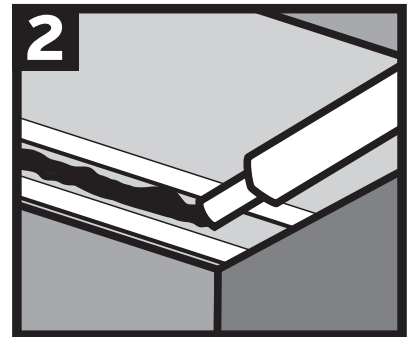


Follow cartridge dispensing instructions and apply Form-A-Tread

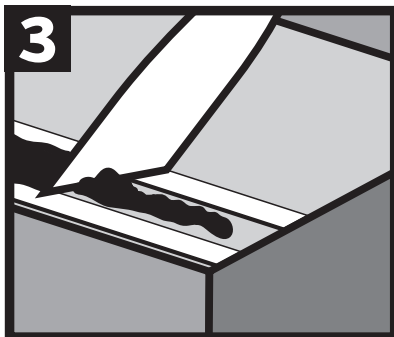

Spread Form-A-Tread to the level of the EZ Form

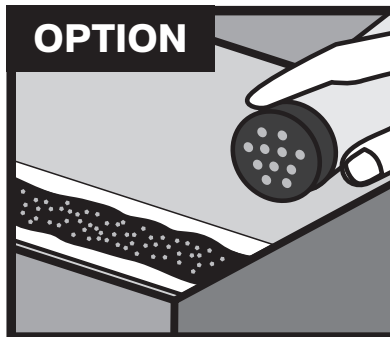

OPTION
Sprinkle on Tread Grit® (HD, LD or WS) for customized texture
[see Data Sheets]

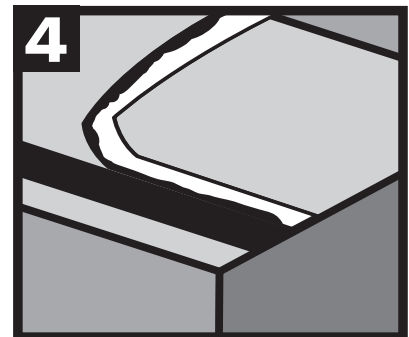

Remove EZ Form within 30 min