11/4"

(32mm)

285%"

(727mm)



### ☐ Model 592 — Partition-Mounted

Serves Two Compartments

Seat Cover Dispenser/Dual Roll Tissue Dispenser

#### **Product Materials**

**CABINET:** 22 gauge stainless steel with exposed surfaces in architectural satin finish. Welded construction with burr-free edges.

**FLANGE:** 22 gauge stainless steel with exposed surfaces in architectural satin finish. One-piece seamless construction, 1" wide with ½" return.

**D00R:** 18 gauge stainless steel with full-length piano hinge and tumbler lock keyed like other Bradley units.

**SPINDLE:** polyethylene, non-removable by user.

### Capacity

Toilet Seat Cover Dispensers — standard single-fold or half-fold toilet seat covers; Toilet Tissue Dispensers — four standard core toilet tissue rolls through 5¼" in diameter.

## **Operation**

Hinged access door permits servicing of components from one side.

#### Installation

Verify all rough-in dimensions prior to installation. Requires partition opening 15% "W x 28%" H. (Location of hole and dimensions should be noted in partition specifications.) Flanges adjustable for partitions from % " to 234" thick. Remove one flange and install cabinet in partition opening flush against partition. Position flanges on both sides of cabinet and secure with mounting screws (included) at holes provided.

## **Guide Specification**

Partition-mounted combination unit shall include toilet seat cover dispenser and toilet tissue dispenser and be fabricated of heavy gauge stainless steel with seamless exposed surfaces in satin finish. Door and back panel shall be 18 gauge. Door shall have piano hinge and tumbler locks.


Overall dimensions: 171/8"W x 305/8"H x 41/2"D.


# **& ADA Compliant**

Consult local and national accessibility codes for proper installation guidelines.

Conformity and compliance to local and national codes is the responsibility of the installer.

Washroom Accessories Document No. 8595

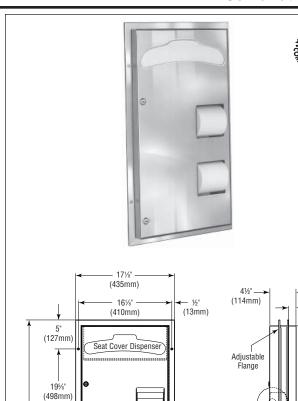

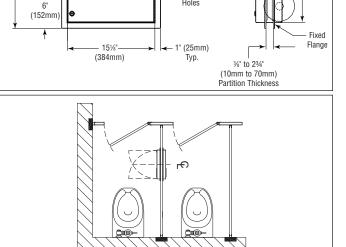

5900 Series Combination Units are to be installed so that doors open 90° to fill product and maintain waste container.

Toilet Tissue Spindle (qty. 4)

Mounting

© 2009 Bradley Corporation P.O. Box 309, Menomonee Falls, WI 53052-0309 Phone: 800.BRADLEY (800.272.3539) Fax: 262.253.4161 bradleycorp.com

30%" (778mm)