



How to Install the Tub Armor Protection System

Step 1 - Cleaning and Prep

To ensure the Armor Tape will adhere properly to the tub, completely clean the tub before installing the Tub Armor. With a vacuum and damp cloth, remove any dust, sand, dirt, glues, and anything abrasive. Wipe edges down with a dry cloth to remove any moisture.

Step 2 – Tub Armor Foam Base Layer

Locate the 2 sizes of Foam Base Layers and Armor Tape.

Foam Bottom Base Layer

With the 24"x48" Foam Bottom Base Layer, place it on the bottom of the tub, centered. The corners of the Foam Bottom Base Layer will be on the side walls of the tub. Cut or rip 4 pieces of Armor Tape approximately 3"x3". Tape each corner of the Foam Bottom Base Layer (See Diagram 1).

Foam Sidewall Base Layer

Install the 12"x48" Foam Sidewall Base Layer on top of the sidewall of the tub. Repeat again by cutting or ripping 4 pieces of Armor Tape 3"x3". Tape each corner of the Foam Sidewall Base Layer. (See Diagram 1).

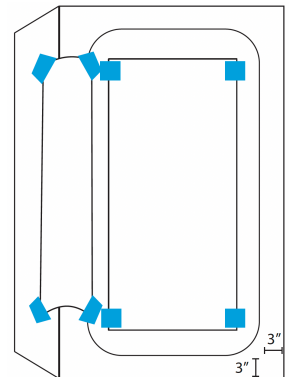


Diagram 1

Step 3 - Tub Armor Plastic Protection Layer

Tub Armor Protection Layer

Unfold the Tub Armor Protection Layer and place it in the tub loosely so it fills the tub and covers the front sidewall. Rotate the Tub Armor until you have the 2" & 3" sides lay against the tub surround walls.

Tub Armor Protection Layer Application

Install the armor tape on the left and right sides of the tub first, then install the tape along the back wall last.

Starting on either the left side or right side, apply a 3x3" piece of tape to hold the tub armor on the tub a minimum of 3" from the side wall. The tape will overlap the tub armor and adhere to the tub 1 1/2". A 2nd piece of tape will be applied on the front sidewall so the tub armor is stretched tight along the top of the tub, apply the 2nd piece of tape. (See diagram 2) Repeat on the opposite side. Next Starting in the back corner install the armor tape covering the tub armor and adhering to the tub, pull the tape towards you and down the front of the sidewall sealing in the tub armor. Repeat this step on both sides of the tub. (See Diagram 3)

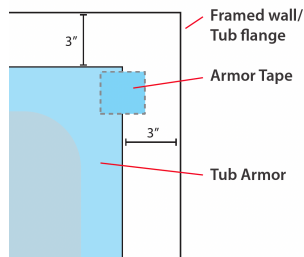


Diagram 2

Excess Armor Protection Layer

If there is excess Plastic Protection Layer in the center of the tub, fold and layer it to take up any slack from the corners. Place a 3"x3" piece of tape to hold it in place (See Diagram 4).

The last piece of tape will be applied to the back wall using the same instructions as above making sure to leave a 1 1/2" space between the tape and the back wall.

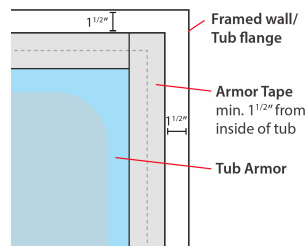


Diagram 3

Step 4 - Tub Armor Tape

Back and Side Walls

Starting at the left back corner of the tub, place Armor Tape 1" from both the left side wall and back wall. Stretch the tape covering both 1" of the Plastic Protection Layer and 1" of the bathtub, taping completely the left side of the tub until it reaches the floor. Repeat this process and tape the remaining right side and back wall edges of the Plastic Protection Layer to completely seal the tub. (See Diagram 4 & 5).

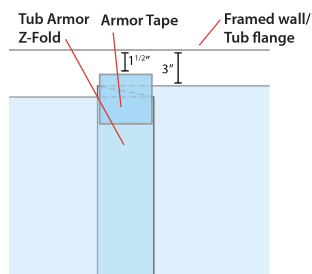


Diagram 4

Watch a short video on how to install the Tub Armor



Product Warranty. Each product manufactured, sold, or delivered by the Company or the Company Subsidiary has been in conformity with all applicable contractual commitments and all express and implied warranties, and neither the Company nor the Company Subsidiary has any Liability (and there is no basis for any present or future action, suit, proceeding, hearing, investigation, charge, complaint, claim, or demand against any of them giving rise to any Liability) for replacement or repair thereof or other damage. No product manufactured, sold, or delivered by the Company or the Company Subsidiary is subject to any guarantee, warranty, or other indemnity beyond the applicable standard terms and conditions of sale. The product will protect against scratches and chips, but the company nor the company subsidiary will guarantee any damage done to any surface it claims to protect. The buyer indemnifies and holds harmless the company or the company subsidiary from any liability or claim.