


Instructions



Wall Safe Combination Changing

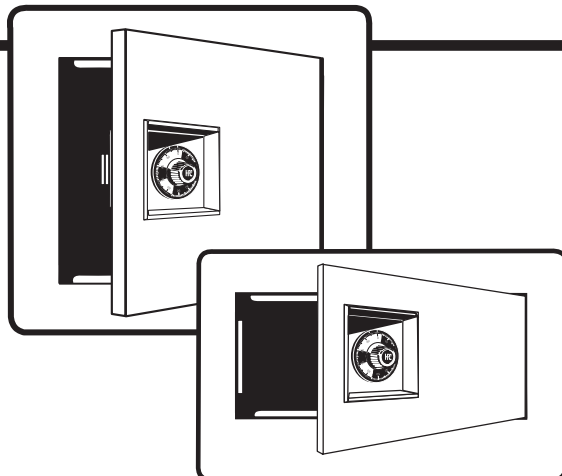

**WS-100C
WS-200C**

IMPORTANT NOTE: Your new safe arrives with the vault door open. Please follow the combination changing instructions and test with the vault door open. If, by any chance you find that the vault door is closed before you have had the chance to change the combination, please refer to the framed "Unlock on Factory Setting" directions on the next page.

OPERATING & CHANGING INSTRUCTIONS


Before operating the lock or changing the combination, READ THESE INSTRUCTIONS THOROUGHLY.

At the top of the dial ring an index is provided for normal dialing and opening. At the side of the opening index, a changing index is provided for use only when setting a new combination.

This is a precision lock, therefore, extreme care must be used to align the combination numbers with the index.

Turn the dial slowly and steadily. If, after turning the correct number of revolutions, any number is turned beyond the index, the entire series of combination numbers must be re-dialed. **DO NOT TURN BACK TO REGAIN A PROPER ALIGNMENT WITH THE NUMBERS.** Each time a selected number is aligned with the opening index, a revolution is counted.

(continued)

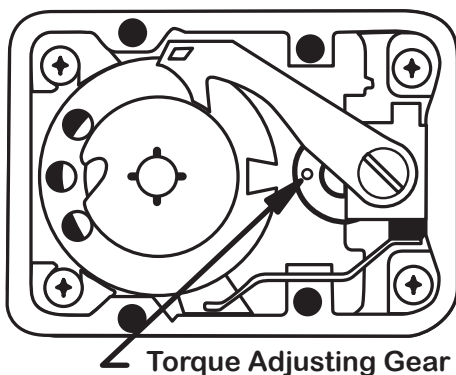

Torque Adjusting Instructions

With cover removed insert a 3/32 allen wrench into adjusting screw (see diagram). Turn clockwise to tighten or counter-clockwise to loosen.

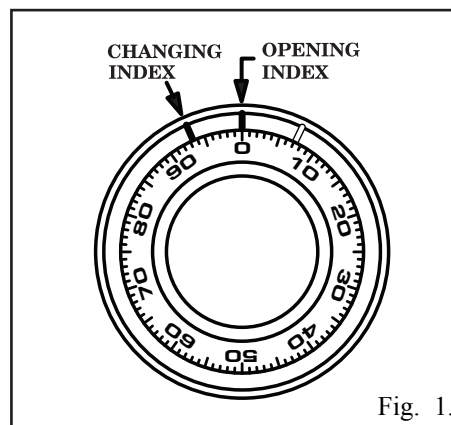


Fig. 1.

**TO UNLOCK ON FACTORY SETTING - TURN DIAL "LEFT" 4 TURNS, STOPPING ON "43".
TURN DIAL RIGHT UNTIL BOLT RETRACTS.**

TO UNLOCK ON 3 NUMBER COMBINATION - FOR EXAMPLE "50-25-50"

1. Turn the dial to the LEFT, stopping when "50" is aligned with the opening index, the FOURTH time.
2. Turn the dial to the RIGHT, stopping when "25" is aligned with the opening index, the THIRD time.
3. Turn the dial to the LEFT, stopping when "50" is aligned with the opening index, the SECOND time.
4. Turn dial slowly to the RIGHT until the bolt retracts.

TO LOCK

Turn dial to the LEFT at least four full revolutions.

CHANGING TO A NEW COMBINATION

Make up a new combination selecting 3 sets of numbers of your own choosing. DO NOT use numbers between 0 and 20 for your last number. (e.g. 32-74-14). For maximum security, DO NOT use numbers ending in 0 or 5 and DO NOT use numbers in a rising or falling sequence. (e.g. 25-40-65 is not as good a combination as 46-32-68)

Wing on key passes through slot in lock plate. (Fig. 2)

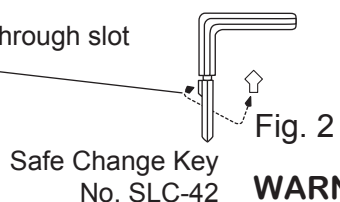


Fig. 3


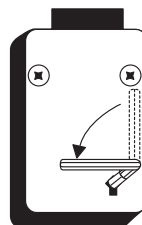


Fig. 4

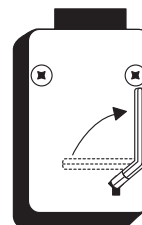

WARNING

**NEVER INSERT THE CHANGING KEY IN THE LOCK WHEN THE COVER IS REMOVED.
ALWAYS BE CERTAIN THE WING OF THE CHANGING KEY IS ENTIRELY WITHIN THE
LOCK (FIG. 2) BEFORE TURNING KEY.**

1. Using the changing index, dial the existing combination as explained in paragraphs 1-2-3 above. The lock leaves the factory with all 3 numbers of the combination set on 50.
2. Hold the dial with the last number at the changing index, and insert the changing key in the key hole in the back of the lock (see Fig. 2). Insert the key until the wing is entirely inside the lock and comes to a positive stop (see Fig. 2).
3. Turn key one quarter turn to the LEFT (see Fig. 3). With the changing key in this position, turn the dial to the LEFT, stopping when the first number of the newly selected combination aligns with the changing index the FOURTH time.
4. Turn the dial to the RIGHT, stopping when the second number is aligned with the changing index, the THIRD time.
5. Turn the dial to the LEFT, stopping when the third number is aligned with the changing index, the SECOND time. Holding the dial in this position, turn the changing key back to the RIGHT and remove it (see Fig. 4). The new combination you have chosen is now set in the lock.

IF AN ERROR HAS BEEN MADE IN SETTING A NEW COMBINATION, we suggest that an accredited locksmith be called.

CAUTION

BEFORE CLOSING UNIT, try the new combination several times, using the opening index.


Instructions

Instrucciones
Instructions



Wall Safe

Coffre-Fort Encastré
Caja de Seguridad Montable

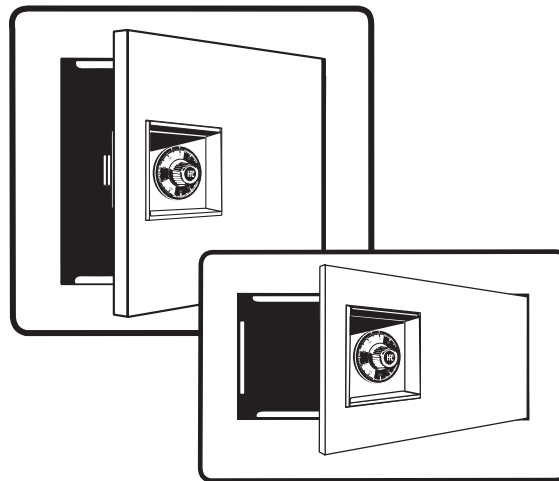

WS-100C
WS-200C

English

MOUNTING INSTRUCTIONS

Tools Needed

- (1) Hand Drill
- (1) Pencil or Pen
- (1) Jig Saw
- (1) 1/2" (12.7mm) Ratchet w/
Extension
- (4) 5/16" Dia. x 1 1/4" (7.94mm x
31.75mm) lg. wood screws
(enclosed)
- (4) 5/16" (7.94mm) Dia.
washers (enclosed)
- (1) 3/16" (12.7) Dia. Drill Bit

Français

INSTRUCTIONS DE MONTAGE

Outils Nécessaires

- Une (1) perceuse
- Un (1) crayon ou un stylo
- Une (1) scie à chantourner
- Une (1) clef à cliquet de 12,7
mm avec extension
- Quatre (4) vis pour bois
(fournies) de 7,94 mm de
diamètre par 31,75 mm de
longueur
- Quatre (4) rondelles de 7,94 mm
de diamètre (fournies)
- Une (1) mèche 4,75 mm de
diamètre



Español

INSTRUCCIONES DE MONTAJE

Herramientas Necesarias

- Un taladro de mano
- Un lápiz o bolígrafo
- Una sierra cortante
- Una matraca de 12,7 mm con
extensión
- 4 Tornillos para madera
(incluidos en el material de
entrega) de 7,94 mm de
diámetro por 31,75 mm de
longitud
- 4 Rondanas de 7,94 mm de
diámetro (incluidas)
- Una Broca de 4,75 mm de
diámetro

Instructions (continued)
Instrucciones (continuación)
Instructions (continue)

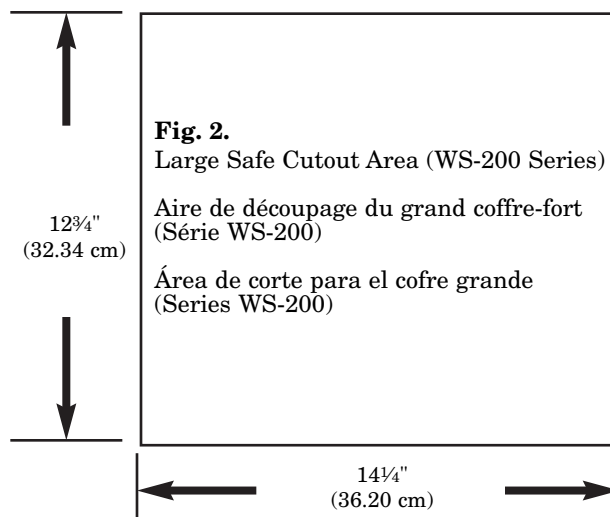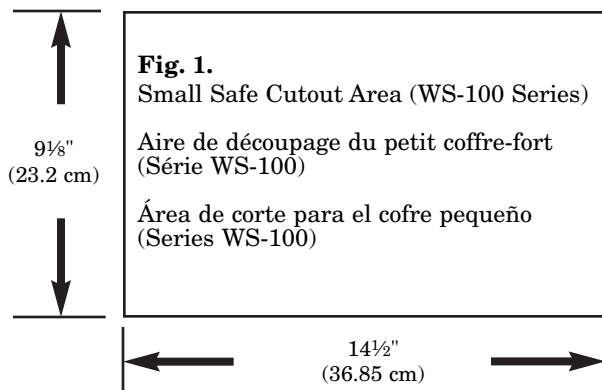

English

1. Determine the area on your wall where the safe is to be mounted. Safes are designed to fit between 16" (40.64cm) O.C. wall joists.
NOTE: Be aware of any electrical outlets before beginning to cut.
2. Use included sketches (see Figs. 1 & 2) to cut out small and large wall safe openings using the jig saw.

Français

1. Déterminer l'aire du mur où le coffre-fort doit être installé. Ces coffres-forts ont été dessinés pour être encastrés dans le mur. Entre le centre de la poutre gauche et le centre de la poutre droite il doit avoir un écart de 40,64 cm.
Attention: Avant de procéder au découpage, s'assurer de la localisation des prises de courant.
2. Utiliser les croquis joints (voir fig. 1 & 2) afin de découper l'ouverture, où on veut encstrer le coffre-fort, dans le mur à l'aide de la scie à chantourner.

Español

1. Determinar en la pared el área donde se desea colocar la caja de seguridad. Las cajas están diseñadas para ser montadas en la pared, teniendo en cuenta que del centro de la viga izquierda al centro de la viga derecha deben existir 40,64 cm de separación.
Nota: Antes de empezar a cortar compruebe que no hayan cerca tomas de corriente.
2. Utilizar los diseños adjuntos (ver fig. 1 & 2) con el fin de efectuar con la sierra la apertura en la pared donde colocará la caja de seguridad pequeña o grande.

Instructions (continued)
Instrucciones (continuación)
Instructions (continue)



English

3. Insert the wall safe into opening previously cut out. Open door and trace circles through (4) holes on inside of safe so that you leave a mark on the inside of the beams. (Make sure that wall safe is pushed inside of wall until back side of face plate touches the face of the wall.)
4. Use 3/16" (4.75mm) diameter drill bit to drill (4) holes through the (2) beams where you previously marked.
5. After holes have been drilled, insert wall safe back into the wall. Place washers on screws then insert into previously drilled holes and tighten.

Français

3. Introduire le coffre-fort dans l'ouverture du mur. Ouvrir la porte et tracer avec le crayon des cercles à l'intérieur des 4 trous du coffre-fort, en laissant une marque dans la poutre. (S'assurer qu'on aie bien poussé le coffre en arrière, de façon que la face extérieure de la plaque postérieure soit en contact avec le mur).
4. Employer une mèche 4,75 mm de diamètre pour forer 4 trous dans les marques des 2 poutres faites auparavant.
5. Après avoir fait les trous, insérer le coffre dans le mur. Placer les vis dans les rondelles, et ces dernières dans les trous forés auparavant. Finalement serrer à fond les vis.

Español

3. Insertar la caja de seguridad en la apertura de la pared. Abrir la puerta y trazar con el lápiz semicírculos en los (4) agujeros del interior de la caja dejando una marca en la viga. (Asegúrese de haber empujado la caja suficientemente hacia dentro, de modo que la cara posterior de la caja toque por completo la pared.)
4. Utilice una broca de 4,75 mm de diámetro para hacer (4) agujeros en las marcas previamente hechas en las (2) vigas.
5. Tras haber hecho los agujeros, inserte la caja de seguridad en la pared. Coloque las rondanas en los tornillos y ponga los tornillos en los agujeros previamente hechos. Finalmente, apriete los tornillos.