


FEATURES

- » Controls an opening with electrified locking device and automatic door operator
- » Separate inputs for activation switch on entry and exit sides of opening
- » Separate 24 VDC outputs for fail safe and fail secure electrified locking devices (1 amp max. for either output)
- » Relay dry contact output to automatic door operator input
- » Input for optional fire alarm or emergency release switch when urgent unlocking of door is required
- » Auxiliary 24VDC Constant Voltage Output for Powering Stand Alone Devices, Such as Keypads, Motion Detectors, and Status Indicators (1 amp max.)
- » Built-in time delay between activation of electrified locking device and automatic door operator
- » Filtered/Regulated 24 Volts DC
- » Class 2 Rated Outputs
- » Overload, Over Voltage, and Short Circuit Protection
- » Automatically Accepts 120VAC or 240VAC Input Without Requiring to Move Jumpers or Set Dip Switches
- » UL Listed and Tested to 294 Standard for Access Control System Units

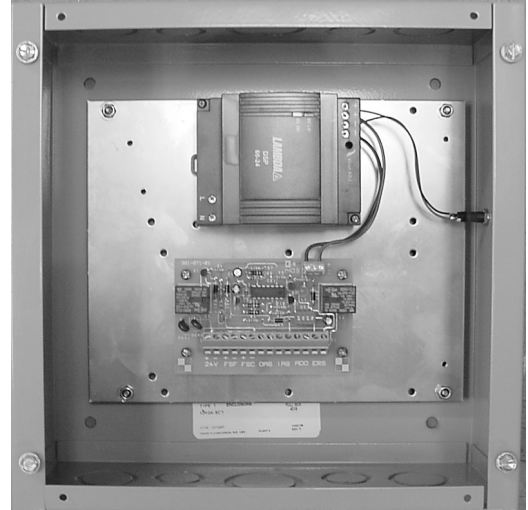

INSTALLATION INSTRUCTIONS

The unit must be mounted indoors and away from any moist or wet areas. Some common locations for mounting 2904 would be in the plenum near the door containing the electric locking device or in a nearby closet or electrical room.

When installing the unit in the plenum, wires must either be of plenum rating or contained inside conduit. The unit must be mounted in a vertical position with the power supply module located at the top, as shown in the photograph above. Four 1/4" holes are provided for mounting the box to the wall or other rigid surface. If the surface material is wood, it must be at least 1 inch thick. Use either a truss or pan head, 1 inch long sheet metal screw (#10 or larger) for fastening the box to the wood surface. When mounting the unit to 1/2 inch or 5/8 inch dry wall, it is recommended that 3/16 inch or 1/4 inch diameter toggle bolts be used for maximum support. Use the same size toggle bolts for mounting the unit to hollow concrete blocks. For mounting to concrete, solid block, or brick, it is recommended to use 1-3/4 inch long (minimum) x 1/4 inch diameter hex head bolt anchors (sometimes called power-bolts) in 18-8 stainless steel or Grade 5 zinc-plated steel. The sub plate can be removed from the box for easier access to the mounting holes. To remove the sub plate, locate the four #6 locknuts near each corner of the plate and remove. The 6-32 studs, from which the sub plate mounts to, are held in place to the box by threaded standoffs.

Wiring the AC Input

The 2904 power supply is rated for use with a 20 amp branch circuit and is capable of accepting either 120VAC or 240VAC input without the need for making any changes, or reconfiguring

to convert from one input voltage to the other. Because the power supply module contains Class 2 double insulation, an earth ground wire is not required. For wiring 120VAC or 240VAC input, run 14 AWG 2-conductor to the power supply module's input terminals marked L (Line) and N (Neutral). Ensure that the conductors are fully inserted into the input terminals with no bare metal exposed. (Refer to the wire stripping instructions included on the wiring diagram attached to the cover plate of this power supply.)

Caution: It is important to maintain separation between the primary (high voltage AC) wiring and secondary (low voltage DC) wiring as they are routed inside the power supply enclosure. The primary wiring must be run inside conduit; and the conduit must be connected to one of the knockouts located towards the left end of the top wall of the enclosure (above and to the left of the power supply module's input terminals). All secondary wiring must be routed through any one of the knockouts located along the bottom wall of the enclosure.

Note: This unit is not equipped with a battery standby power feature.

INSTALLATION INSTRUCTIONS (cont)

General Description

This power supply provides the necessary electronics for controlling a complete automated door opening system by coordinating the control of an electrified locking device and automatic door operator, resulting in a proper sequence of operation from beginning to end of cycle. The paragraph below describes how the system operates, and gives the installer an idea of what can be expected once the system has been installed and is ready for testing.

To start the automatic opening cycle, a control device, normally located next to the opening on the entry and exit sides, is activated. Immediately, the electrified locking device releases to allow the door to swing freely. After a brief delay (about 1 second), the input to the automatic door operator unit receives a dry contact signal from the 2904 power supply, and the door is driven to the open position. The signal to the operator unit resets within approximately 3 - 5 seconds from the time it had been received. From this point, the "Door Hold-Open" time delay built into the automatic door operator unit continues to hold the door in the open position for as long as the delay had been initially set, or programmed for. Once this delay times out, the door will then freely close shut and become locked via the electrified locking device. (The locking device switches back from the unlocked state to the locked state at the same time the signal to the automatic door operator is aborted.) The cycle is completed, and the system is now ready for the next activation occurrence.

Activation Switches

Marked as OAS for "Outside Activation Switch", and IAS for "Inside Activation Switch" at terminal block TB1, these inputs normally require a normally open, momentary switch for activating the automated door opening system. The most commonly used of these types are wall mounted push-button switches with large diameter actuators, such as used for handicap access. Card readers and keypads can be used for authorized access. They utilize the normally open, dry contact output of a relay for activating the system. For best results when using these devices, have their built-in time delay set for one second, simulating the approximate length of time for a contact closure when depressing a push-button switch. By doing this, there are no extended delays to get confused with when coordinating the door hold open time adjustment on the automatic door operator unit with the 3 - 5 second delay generated by the output signal from the 2904 power supply to the operator input.


Maintain Switch Option

By wiring a maintain switch in parallel with a momentary switch across the OAS or IAS input terminals, the signal to the automatic door operator can be extended (while the switch contacts remain closed) for an indefinite period of time, and will hold the door in a maintained open position. This may prove useful in places where extra time is needed to move carts or


other equipment through the door. When the maintain switch contacts are opened, the door will then close after the "Door Hold-Open" delay programmed into the automatic door operator unit times out.

One-Shot Activation Option

The 2904 can be programmed to allow the automated door opening sequence to go through its complete open/close cycle in spite of a constant maintained contact closure held across the OAS or IAS input terminals. This option may be desirable in overcoming any deliberate attempts at holding the activation switch in the closed position which would cause the door to remain in a maintained open position, contrary to its normal cycle. To program in this option, place the slide switch marked "1" on the onboard dip switch bank to the position opposite the "ON" position, as shown below:

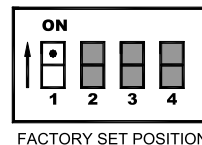

FACTORY SET POSITION

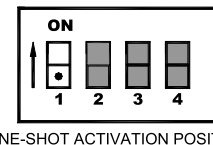

ONE-SHOT ACTIVATION POSITION

The dot shown above marks the position of the switch.

Note: When using the one-shot activation option, the following point must be observed: With the activation switch contacts in the maintained closed position, and after completion of a full open/close cycle, before the next activation can occur, the activation switch contacts must be held open for 4 seconds (for resetting the delay circuit) before closing to reactivate the cycle.

Electrified Locking Devices

The 2904 is provided with an output for wiring to a fail safe type locking device (marked as FSF at terminal block TB1) and another output for a fail secure type locking device (marked as FSC). All locking devices must be rated 24VDC. **The maximum allowable current draw for either output is 1 amp.** (If a pair of doors is used in the application, and each leaf contains an electrified locking device, the maximum current draw for each device must be 0.5 amp.)

The most common type of fail safe locking device used on this kind of system is the electromagnetic lock. A complete riser diagram and point-to-point wiring diagram depicting an application utilizing this type of locking device can be found at the end of this manual, shown as figures 1a and 1b respectively. A latching type of fail safe electrified locking device can be used providing that it is designed to have its latch retracted in less than 1 second upon removal of power when the cycle has been activated, and providing the solenoid or motor used in the device does not draw more than 1 amp at 24VDC.

INSTALLATION INSTRUCTIONS (cont)

When only an electromagnetic lock is used for locking and releasing the door, there cannot be a mechanical latching device, such as a mortise or cylindrical lockset, attached to the door. This would prevent automatic opening of the door. The opening must be equipped with push-pull hardware trim only.


The most common type of fail secure locking device used is the electric door strike. A complete riser diagram and point-to-point wiring diagram depicting an application utilizing this type of locking device can be found at the end of this manual, shown as figures 2a and 2b respectively. A latching type of fail secure electrified locking device can be used providing that it is designed to have its latch retracted in less than 1 second upon application of power when the cycle has been activated, and providing the solenoid or motor used in the device does not draw more than 1 amp at 24VDC.

Both a fail safe and fail secure electrified locking device can be used on the same door, if desired. As an example, a single door may contain a fail safe electromagnetic lock on the door frame header and a rim exit device with fail secure electric latch retraction on the door. When the system is activated, power is removed from the electromagnetic lock at the same time power is applied to the rim exit device (for retracting its latch) prior to signaling the automatic door operator to open. Each of these devices can separately draw up to 1 amp of current since, at no one time are both devices drawing current simultaneously.


CAUTION: Do not use the Hager 4500 ELR, Von Duprin Series EL, or any other manufacturer of electric latch retraction exit devices with the 2904 power supply. These devices generate an initial high current pulse in excess of 8 amps. The 2904 power supply is not designed to handle that amount of current draw. Special power supplies, specifically designed for use with these type of exit devices, are available by contacting the manufacturer. Before using any exit device modified for electric latch retraction, make sure to check out its electrical specifications for ratings, and ensure that the manufacturer of the device does not require it to be used with a special power supply offered by that manufacturer.

Automatic Door Operator

The output terminals marked ADO at terminal block TB1 provide the electrical signal to the input of the automatic door operator for activating its "door open" cycle. This electrical signal is in the form of dry contacts from a relay located on the same p.c. board as TB1. The ADO output can be programmed for either a normally open or a normally closed contact signal. Most automatic door operator units accept a normally open contact signal, and the onboard dip switch bank is factory set for a "N.O." output. But in the event that a normally closed (N.C.) signal should ever be required for activating an automatic door operator directly or indirectly, reconfigure the dip switch bank #2 and #3 switches per the illustration in the next column:



FACTORY SET POSITION
FOR N.O. OUTPUT



OPTIONAL FIELD SET POSITION
FOR N.C. OUTPUT

The dot shown above marks the position of the switch.

Emergency Release Switch

The emergency release switch input, marked as ERS at terminal block TB1, accepts a normally closed switch (or normally closed relay contacts) that is associated with some form of emergency, such as a panic alarm, or fire alarm. When the switch contacts open during an emergency situation, the electric locking device, regardless if it is fail safe or fail secure function, will unlock the door for immediate access. The 2904 comes from the factory with the emergency release switch input disabled. To enable the ERS input, switch #4 from the onboard dip switch bank must be placed opposite the "ON" position, as shown below:



FACTORY SET POSITION
(ERS DISABLED)



ERS "ENABLED" POSITION

The dot shown above marks the position of the switch.

Auxiliary 24VDC Output

This output, marked as 24V at terminal block TB1, provides a constant 24 volts that can be used to power keypads, motion detectors, LED or incandescent status indicators, etc. A maximum load of 1 amp is allowed across this output.

INSTALLATION INSTRUCTIONS (cont)

Trouble Shooting Tips

Listed below are some problems that might be encountered during installation or at any other time and possible solutions for correcting them.

Caution: This unit contains areas of exposed high voltage. All troubleshooting and maintenance should be performed by a qualified electrician.

Problem

No output voltage measured across terminals 24V, FSF, or FSC.

Solution

- > Check for 120VAC across terminals of input to power supply module.
- > If 120VAC is present, disconnect field wires from all used outputs (24V, FSF, FSC) and measure for 24VDC across the "24V" terminals.
- > If 24VDC is now present, check for shorts across field wires for each output. If the load is an electrified locking device mounted in the door, check the electric hinge for pinched wires behind each leaf. Also check for shorted wires between the locking device and raceway in the door.
- > If 24VDC is not present across terminals marked "24V" (with field wires still disconnected from all outputs), disconnect the red and black wire leads connected to the +,- terminals of the output to the power supply module and check for 24VDC at this output. If voltage is now present across the power supply module's output, it can be assumed that there is a short circuit somewhere on the control board and it will need to be replaced. If voltage is still not present across the output to the power supply module, then it can be assumed the power supply module itself is damaged and must be replaced.

Problem

The electrified locking device behaves the opposite of what was expected, i.e., it locks when intended to unlock, or unlocks when intended to lock.

Solution

- > A fail safe type locking device may be incorrectly wired to the fail secure output terminals (FSC). It must be wired to the terminals marked "FSF".
- > A fail secure type locking device may be incorrectly wired to the fail safe output terminals (FSF). It must be wired to the terminals marked "FSC".
- > Make sure that the electric locking device has been correctly modified for the function intended: Fail Safe (power to lock), Fail Secure (power to unlock).

Problem

A maintained activation switch is intended to be used to initiate the automated door opening system and hold the door in an open position; but when activated, the door goes through a complete open/close cycle instead of staying open.

Solution

- > Dip switch #1 from the onboard dip switch bank is set for "One-Shot Activation". Correct this by placing dip switch #1 to the "ON" position. (See the above section entitled, "One-Shot Activation Option" under "Activation Switches" for more details.)

Problem

When the 2904 is powered up and the green "Power" indicator on the small p.c. board is lit, the electric locking device immediately releases, followed by activation of the automatic door operator, without manually activating the system.

Solution

- > Field wires from the activation switch may be shorted together.
- > The 2904 activation inputs have been mistakenly wired to the normally closed contacts of the activation switch instead of the normally open contacts.

Problem

When the 2904 is powered up and the green "Power" indicator on the small p.c. board is lit, the electric locking device does not release, but the automatic door operator is activated and attempting to open the door, without manually activating the system.

Solution

- > The dip switch settings for the ADO output are not correct, or are reversed from what they should be. Determine if the automatic door operator activation input accepts a contact closure or open contact signal for opening the door; then set the dip switches accordingly as per instructed in the section above entitled, "Automatic Door Operator".

Problem

The electric locking device all of a sudden releases, and the automatic door operator opens the door without being manually activated (characteristic of a symptom involving a fail safe locking device).

Solution

- > The power supply has shut down due to a shorted output.
- > Loss of AC power to the 2904.

Problem

The automatic door operator all of a sudden becomes activated and is attempting to open the door; but the electric locking device remains locked, preventing the door from opening (characteristic of a symptom involving a fail secure locking device).

Solution


- > The power supply has shut down due to a shorted output.
- > Loss of AC power to the 2904.

SPECIFICATIONS

Input Voltage:	120VAC/240VAC, 50/60Hz
AC Current:	900mA/120VAC, 600mA/240VAC
Output Voltage:	24VDC Filtered, Regulated
Output Current:	2.0A
Output Power:	48W
Protection:	Overload, Over Voltage, Short Circuit


WIRING DIAGRAMS

Figure 1a

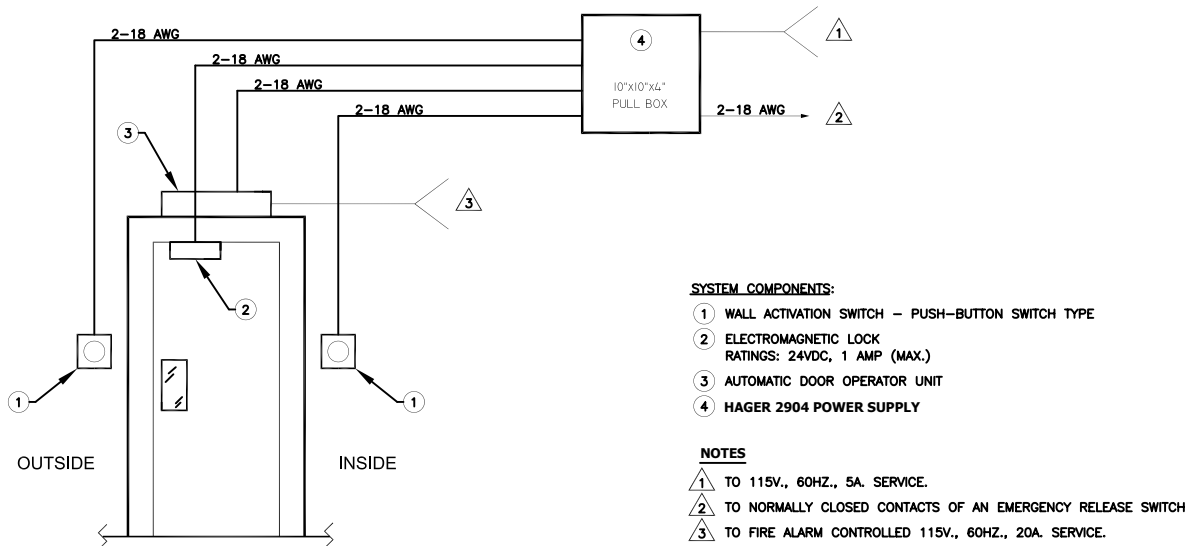

RISER DIAGRAM FOR AUTOMATED
 DOOR OPENING SYSTEM APPLICATION
 USING AN ELECTROMAGNETIC LOCK

Figure 1b

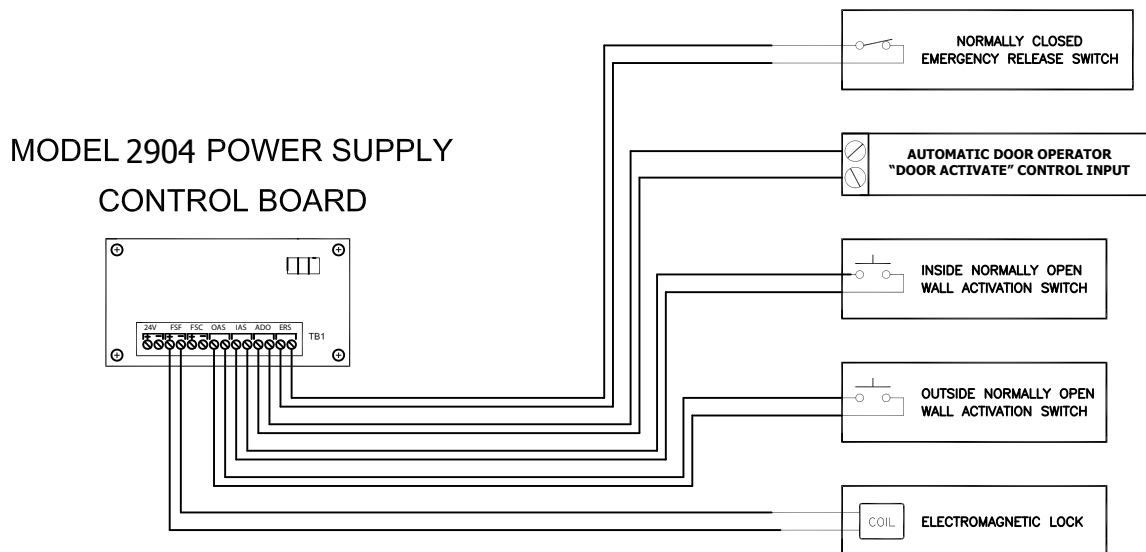

POINT-TO-POINT WIRE DIAGRAM FOR
 AUTOMATED DOOR OPENING SYSTEM APPLICATION
 USING AN ELECTROMAGNETIC LOCK

WIRING DIAGRAMS (cont)

Figure 2a

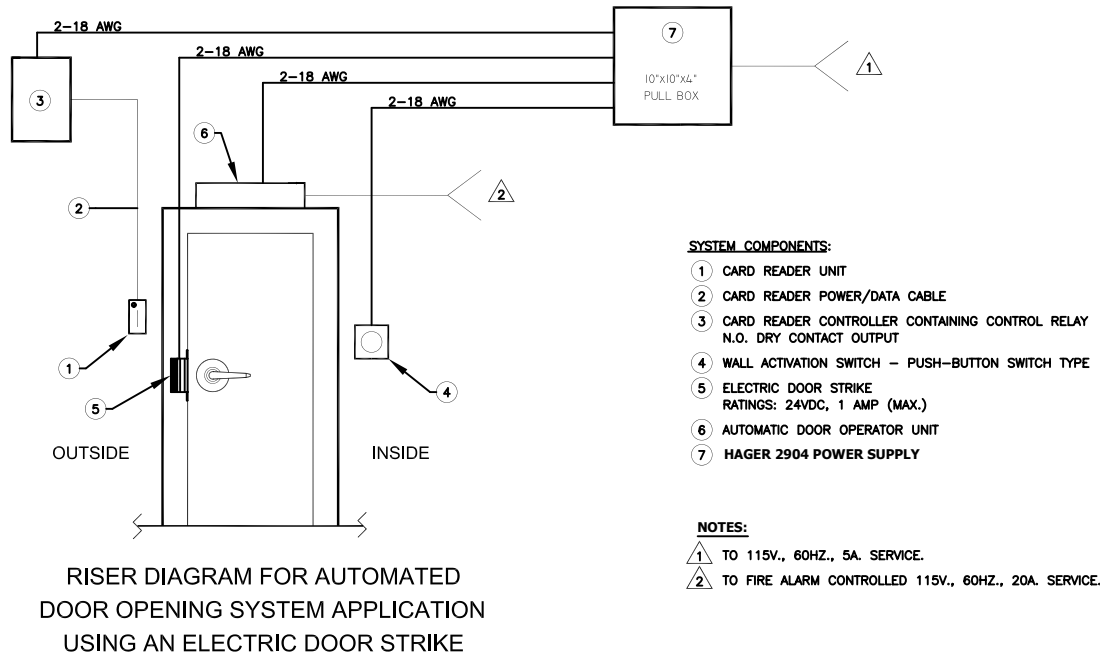


Figure 2b

