

Travel Inspira Luggage Scale

This kit contains:


Description	Qty
Luggage Scale	1
Preinstalled CR Battery	1
Instruction Cards	1



Borrowing Information

- The device may be checked out for 7 days and renewed
- Reservable and renewable
- Not transferable to another library
- Return to UDPL front desk only (\$2 fee if returned elsewhere)
- \$30 replacement fee

Features

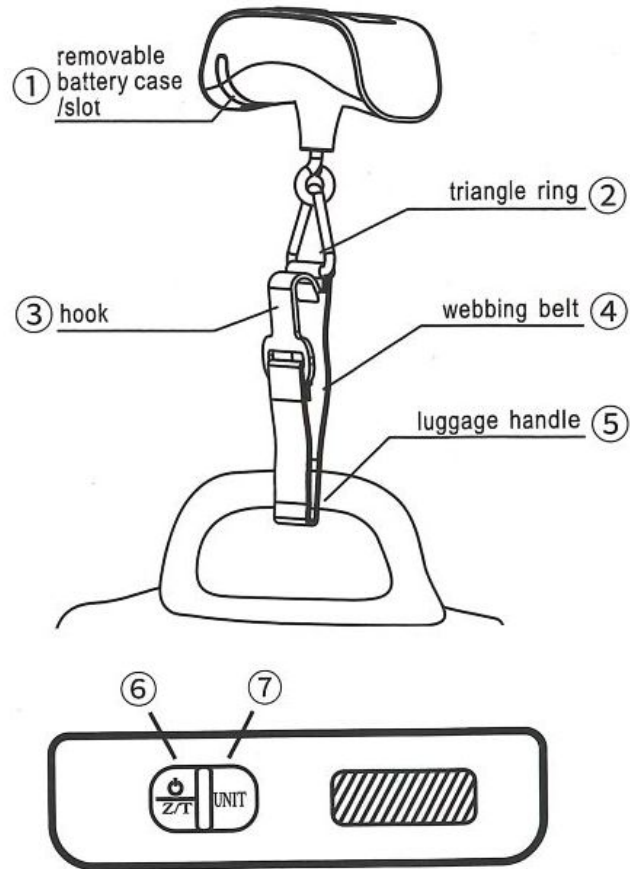


Operation

How To Use

- (1) Strap the ④ webbing belt through the ⑤ luggage handle, and secure the ③ hook of the belt onto the ② triangle ring. The scale should be directly above the ⑤ luggage handle as shown in the drawing.
- (2) Press the ⑥ before lifting
- (3) When LCD display indicates to zero, press ⑦ to select weight unit (lb / kg).
- (4) Hooking the luggage and lift the scale gently. (We strongly recommend that you use 2 hands when weighing your luggages. Please kindly note that improper way of lifting heavy objects may cause injury.) Make sure the scale is horizontal and balanced. Then the weight of object will be shown. About 5 seconds later the reading will flash 3 times and it will be locked.
- (5) The value will be shown for 2 minutes before automatically switch off.
- (6) If you want to measure another suitcase, press ⑥ to reset LCD display and repeat (1)-(5) again.
- (7) Replace battery when LCD shows "Lo".
- (8) If the scale wouldn't turn on. To see if the isolation tag on the battery has been removed. Also the battery should be inserted correctly. If after the above process, it still could not work, please contact us.

Note

The ① isolation tag must be removed from the battery case before use!

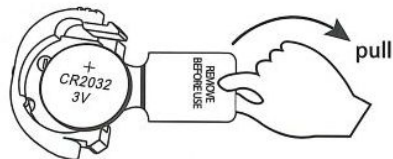

Switch On/Off

- Press the ⑥ for 2 seconds to switch on/off.
- If LO. symbolized low battery. Please replace batteries in matching polarities if LO.indicator is on. If LO. is on after battery replacement please contact us for support.

Specifications

- Capacity: 110lbs / 50kgs
- Accuracy: 0.1lbs / 50gs
- Zero and tare function
- 1.4"(35.5mm) LCD display with backlight
- Low battery/over load indication
- Equipped with comfortable rubber handle
- Power: 1X3V lithium cell (CR2032)

Included Batteries

This device requires a CR battery.

You will receive the device with the battery preinstalled.

If the battery does not work, you can either replace it with your own or ask for a replacement at UDPL.

If you replace the installed battery with one of your own, please remove it before returning the device.