



Place these instructions in the vehicle's glove box after installation is complete.

Important: Please read

Please read these instructions carefully prior to installation.

Please refer to your fitting instruction to ensure that the alloy tray is installed correctly. Check the contents of this kit before commencing fitment and report any discrepancies.

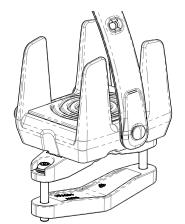

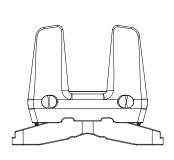

Fitment to HD crossbars requires the use of:

HD-FK7

MAXIMUM LOAD CAPACITY 7kg


| Item | Component Name | Qty | Part No. |
|------|--------------------------|-----|----------|
| 1 | Rubber Pad | 2 | M665 |
| 2 | Multi Purpose Holder | 2 | M624 |
| 3 | Universal Clamp - Upper | 2 | M529 |
| 4 | Universal Clamp - Lower | 2 | M530 |
| 5 | Rubber Strap | 2 | M666 |
| 6 | M6 x 40mm Security Screw | 4 | B085-BLK |
| 7 | M6 x OD12.5 Flat Washer | 4 | W003-BLK |
| 8 | M6 Hex Nut | 4 | N022-BLK |
| 9 | M6 x 22mm Security Screw | 2 | - |
| 10 | M6 x 25mm Security Screw | 2 | B137 |
| 11 | M6 Spring Washer | 2 | W004 |
| 12 | M6 x OD16 Flat Washer | 2 | W031 |
| 13 | M6 Plate Nut | 2 | N025 |
| 14 | Allen Key | 1 | - |
| 15 | Fitting Instructions | 1 | R315 |

Care Instruction

Clean product prior to fitting the Multi-Purpose Holder.

Tools Required

Security Allen Key (provided in kit)

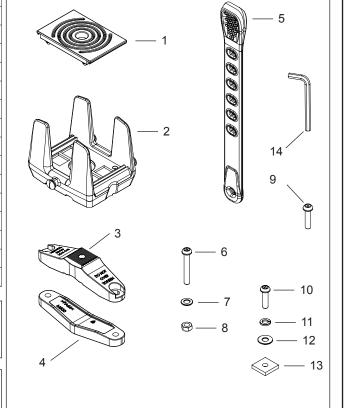

Rhino-Rack 3 Pike Street, Rydalmere, NSW 2116, Australia. (Ph) (02) 9638 4744 (Fax) (02) 9638 4822

Document No: R315 Prepared By: Nigel Greig Authorised By: Chris Murty

Issue No: 02

Issue Date: 31/12/2014


These instructions remain the property of Rhinorack Australia Pty Ltd and may not be used or changed for any other purpose than intended.



UNIVERSAL FITMENTS


1 Fit Hardware to Universal Holder

Ensure the nuts are fitted securely to the under side of the lower clamp. Fit the rubber strap to the single post and loosely fit hardware to one side of holder only.

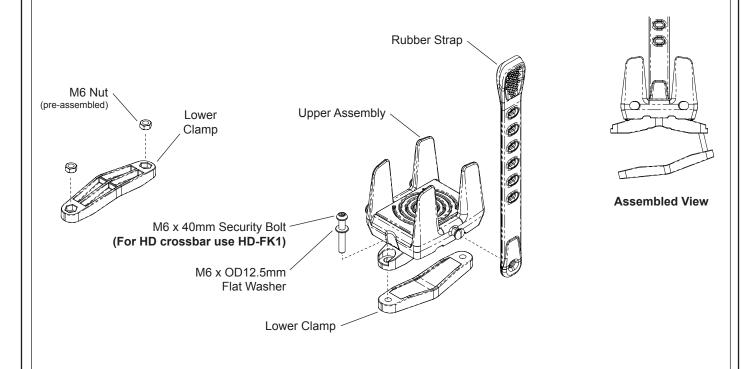

2 Fit RMPHU to Crossbar

Fit the RMPHU to the crossbar with the rubber strap on the inside of the vehicle. Swing the universal camp around the crossbar and fasten in position with hardware shown below.

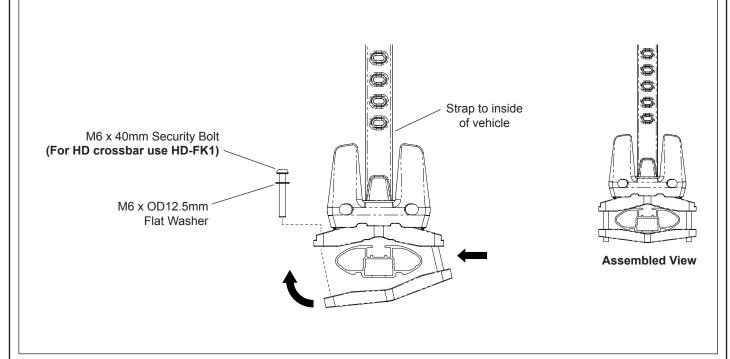





FITTING DIRECTLY TO CROSSBARS

Remove Upper Clamp from RMPHU

Remove the upper clamp from the multi purpose holder using the allen key provided in kit.



Finished Part

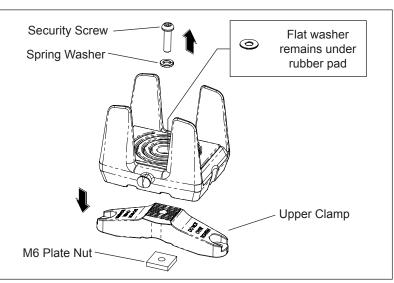


В Fit Hardware to RMPHU Referring to Guide Below

Loosely fit the hardware specified below to the RMPHU holder.




VA Crossbar (in-line fitment)

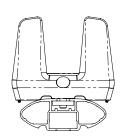



VA Crossbar (perpendicular fitment)



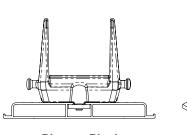


Pioneer Plank

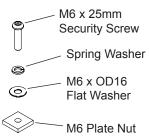


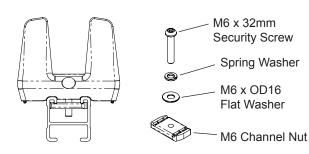


HD Crossbar (Fit Kit HD-FK5 Required)



Aero Crossbar (in-line fitment)




Aero Crossbar (perpendicular fitment)

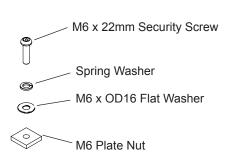



Fit Strap and Slide RMPHU Assembly Into Crossbar

Slide the RMPHU assembly into the crossbar/plank with the rubber strap on the inside of the vehicle. Make sure that the plate nut inserts into the C channel of the crossbar.

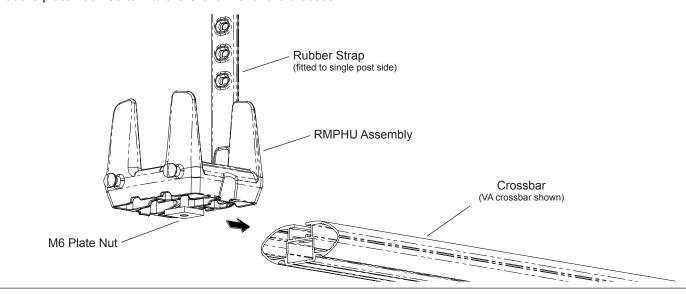

Position RMPHU on Crossbar and Tighten

Slide the RMPHU assembly into position and tighten in place with the allen key provided in kit. For heavy duty crossbar fitments make sure that the channel nut rotates within the crossbar as shown below.

