

E P I B I O M E
B E A U T Y™



EPIBIOME BEAUTY™

ACTIVATE YOUR SKIN
HEALTH FROM WITHIN

Powered by DSM Prebiotic and Postbiotic
Technology, the Epibiome range helps
balance your skin's natural eco-system.
Healthy-looking skin for longer.
FOR ALL SKIN TYPES



For internal use only.
Products are for experimental
use only and are not for sale.



EPIBIOME
BEAUTY™
BEAUTY CREAM
FOR DRY SKIN

WITH SYN-UP®(1%)

Boost your skin's natural moisture from within. Powered by DSM Prebiotic Technology, this product activates good skin bacteria to boost hydration retention.

Skin looks smoother and feels softer for longer.



EPIBIOME
BEAUTY™
OPTIMIZING TONER
FOR OILY SKIN

WITH ALP®-SEBUM(3%)

Take control of your oily skin. Powered by DSM Prebiotic Technology, this product helps down-regulating skin bacteria accountable for sebum production, to control oil excess from within.

Skin looks fresh and feels revived, with an even texture that lasts.



EPIBIOME
BEAUTY™
WHIPPED CREAM
FOR NORMAL SKIN

WITH OXY 229 PF (3%)

Nourish your skin for a smoother, healthier tone. Powered with DSM Fermented Postbiotic Technology, this product helps modulate skin bacteria accountable for skin redness, to soothe from within.

Skin looks revitalised and feels fresh.



For internal use only.
Products are for experimental
use only and are not for sale.



Beauty cream

For dry skin


PHASE	INGREDIENTS	INCI NAME	% W / W
A	Water Dem.	Aqua	72.75
	Glycerin 1.23 (86.5%) Ph. Eur.	Glycerin	3.40
	Aristoflex AVC	Ammonium Acryloyldimethyltaurate/VP Copolymer	0.80
	Plantacare 2000 UP	Decyl Glucoside, Aqua	0.15
	Dermosoft® Octiol	Caprylyl Glycol	0.20
	Pentylene Glycol	Pentylene Glycol	2.00
B	AMPHISOL® K	Potassium Cetyl Phosphate	1.00
	KF-6028	Peg-9 Polydimethylsiloxylethyl Dimethicone	1.50
	Lanette 18	Stearyl Alcohol	1.60
	Lipocire A	C10-18 Triglycerides	1.00
	STIMU-TEX® AS	Argania Spinosa Kernel Oil, Tocopherol, Butyrospermum Parkii Butter Extract, Spent Grain Wax	2.00
	DOWSIL 2503 Cosmetic Wax	Stearyl Dimethicone, Octadecene	1.00
	Tegosoft CO	Cetyl Ethylhexanoate	4.50
	Myritol 331	Cocoglycerides	3.00
C	Xiameter PMX-200 Sil Fluid 100 CS	Dimethicone	4.00
D	SYN-UP®	Benzylsulfonyl D-Seryl Homophenylalanine Amidinobenzamide Acetate, Glycerin, Aqua, Citric Acid, Sodium Hydroxide	1.00
	Frag 49424902 CHLOE	Parfum	0.10



Optimizing toner

For oily skin

PHASE	INGREDIENTS	INCI NAME	% W / W
A	WATER DEM.	AQUA	89,79
B	Propanediol	PROPANEDIOL	3,00
	Pentylene Glycol	PENTYLENE GLYCOL	3,00
	Glycerine CremerGLYC 86.5%	GLYCERIN, AQUA	1,00
	Dermosoft® Octiol	CAPRYLYL GLYCOL	0,20
C	ALPAFLOR® ALP®-SEBUM CB	GLYCERIN, AQUA, CITRIC ACID, POTASSIUM SORBATE, EPILOBIUM FLEISCHERI FLOWER / LEAF / STEM EXTRACT	3,00
D	Sodium Hydroxide 30% Solution	AQUA, SODIUM HYDROXIDE	0,01

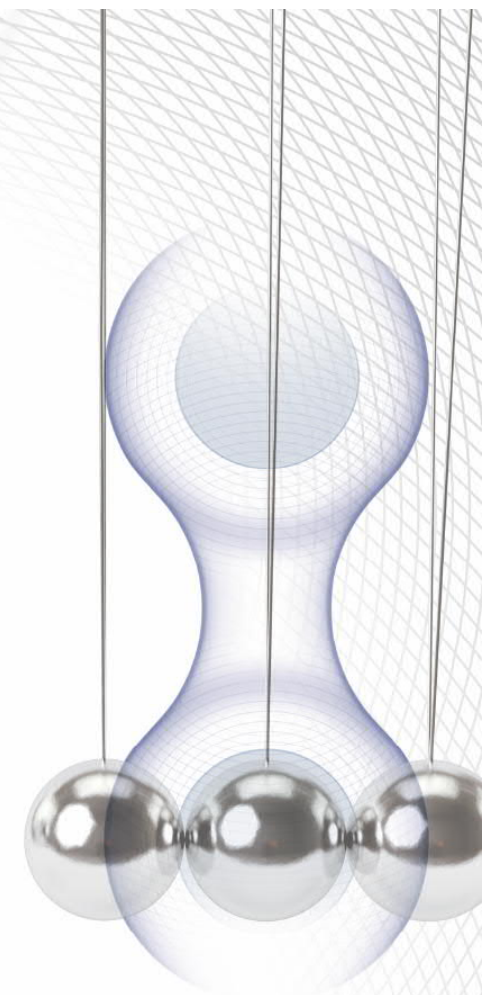

Whipped Cream

For normal skin

PHASE	INGREDIENTS	INCI NAME	% W / W
A	WATER DEM.	AQUA	75,70
	Dermosoft® Octiol	CAPRYLYL GLYCOL	0,20
B	Makimousse 25	SODIUM POLYACRYLATE STARCH	1,00
	TILAMAR® PDO with NØØVISTA™	PROPANEDIOL	7,00
	Pentylene Glycol	PENTYLENE GLYCOL	3,00
	Keltrol CG-T	XANTHAN GUM	0,20
C	Olivem 1000	CETEARYL OLIVATE, SORBITAN OLIVATE	3,00
	Myritol 318	CAPRYLIC/CAPRIC TRIGLYCERIDE	4,00
	Cetiol C5	COCO-CAPRYLATE	2,00
	Cutina FS 45	STEARIC ACID, PALMITIC ACID	0,70
D	Perfume Sail Away 49454695	PARFUM	0,20
	OXY 229 PF	SACCHAROMYCES LYSATE, VALINE, THREONINE, GLUTAMIC ACID, GLYCINE, GLYCERIN, AQUA, DISODIUM SUCCINATE, PHENOXYETHANOL, ETHYLHEXYLGLYCERIN	3,00



Disclaimer formulation guideline

"This information is for illustration purposes only and based upon our current knowledge and experience at the time of printing. We do not make any representation or warranty of any kind, express or implied, including merchantability or fitness for a particular use, with respect to such information or its application. Use of this information is at your discretion and risk. Nothing herein relieves you from carrying out your own suitability determinations and tests. You are responsible for observing all laws and regulations relevant to your products, uses or processes. We do not assume any liability in connection with your product and its use. The foregoing information and suggestions are also provided without warranty of non-infringement as to the intellectual property rights of third parties, and shall not be construed as any inducement to infringe the rights of third parties."

Disclaimer

Copyright © 2020 DSM Nutritional Products, 4002 Basel, Switzerland.

www.dsm.com/personal-care. All rights reserved.

Although DSM has used diligent care to ensure that the information provided herein is accurate and up to date, DSM makes no representation or warranty of the accuracy, reliability, or completeness of the information. This presentation only contains scientific and technical information for business to business use. Country or region-specific information should also be considered when labeling or advertising to final consumers. This publication does not constitute or provide scientific or medical advice, diagnosis, or treatment and is distributed without warranty of any kind, either expressly or implied. In no event shall DSM be liable for any damages arising from the reader's reliance upon, or use of, these materials. The reader shall be solely responsible for any interpretation or use of the material contained herein. The content of this document is subject to change without further notice. Please contact your local DSM representative for more details. All trademarks listed in this brochure are either registered trademarks or trademarks of DSM in The Netherlands and/or other countries unless explicitly otherwise stated.



BRIGHT SCIENCE. BRIGHTER LIVING.™

