






Note: The Rescue Sheet depicts a LHD vehicle (as allowed under the ISO 17840-1). All components (other than steering wheel and passenger airbag) are located in the same position in the Aust/NZ RHD model.

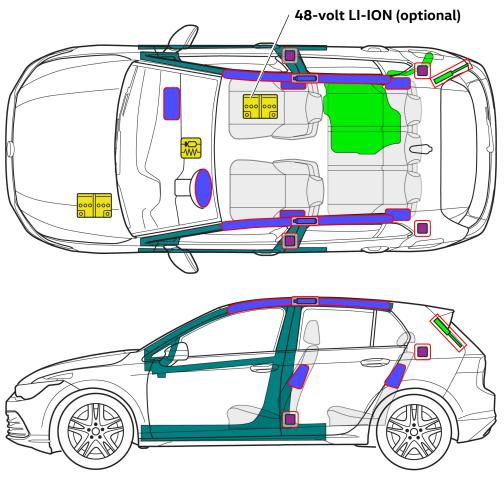

Note: The illustration shows the maximum possible range of equipment.

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / preloaded spring		High-strength zones		Special attention		
00000	Battery pack, low-voltage	H	Ultracapacitor, lowvoltage		Fuel tank		Gas tank		Safety valve
	Battery pack, high-voltage	2	High-voltage power cable	8	High-voltage disconnect	00	Fuse box, disabling high-voltage system	HAH	Ultracapacitor, highvoltage

 Additionel information
 Document number
 Version
 Page

 rds_vwv_380_001_en
 08/2020
 1 of 3



3. Disable direct hazards / safety regulations

Turn off the ignition

Press the START-STOP button in the center console



Disconnect the 12-volt battery





In the engine compartment Locate the 12 volt battery Disconnect the negative pole (-)

Disconnect the 48-volt battery






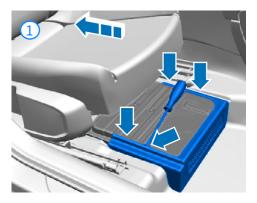

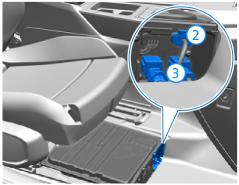

In the event of an accident in which the airbags are deployed, the 48-volt electrical system will be automatically deactivated.

4. Access to the occupants

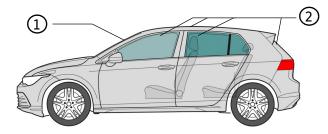

Glass types:

- (1) Laminated safety glass
- (2) Toughened safety glass

5. Stored energy / liquids / gases / solids









max. 55 l









12 V











48 V Optional

LI ION

 Additionel information
 Document number
 Version
 Page

 rds_vwv_380_001_en
 08/2020
 2 of 3



6. In case of fire















Lithium-ion batteries can become damaged or improper Use promptly or with a delay to ignite or after the Ignite fire fighting again! Wear appropriate protective equipment!



10. Explanation of pictograms used







explosive



corrosive



Hazards to the human health



Environmental hazard



Petrol vehicle



Diesel vehicle



Caution, danger



LI ION

Lithium-ion battery



Remove smart key



Use thermal Infrared camera



Additionel information Document number Version Page 3 of 3 rds_vwv_380_001_en 08/2020