



## Quick Guide instructions for the usage of Presidium Gem Tester (PGT/CSE)





1. Insert the probe pen into the socket at the side of the tester before turning on the unit.

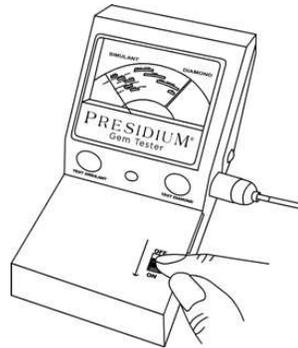


2. Switch the tester to the ON position, and wait for approximately 20 seconds for the initial warm-up period. At this point, it is quite common if the reading slightly above zero is indicated on the meter.
3. Red indicator will light up, after the warm-up period, to indicate that the unit is ready for usage.

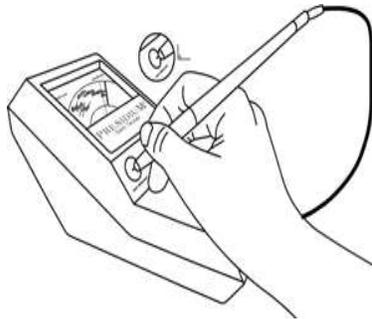

4. To check on functionality, press the probe tip onto the simulant test disc. Apply sufficient pressure to retract the protruding tip completely into the probe pen. The indicator should rise to and remain within the white strip with "CAL" printed on top, within two to three seconds.

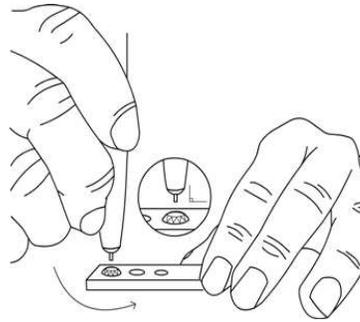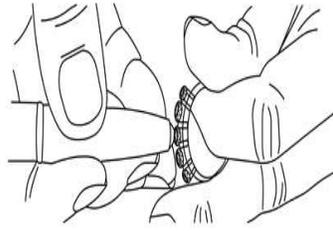

5. To perform a test, place the tip of the probe pen against the gemstone. Apply minimal pressure to fully depress the tip into the probe pen for correct reading.
6. After pressing the probe tip on the stone for about two seconds, the indicator will reach its highest position and then slowly fall back. Take the reading at the highest position.

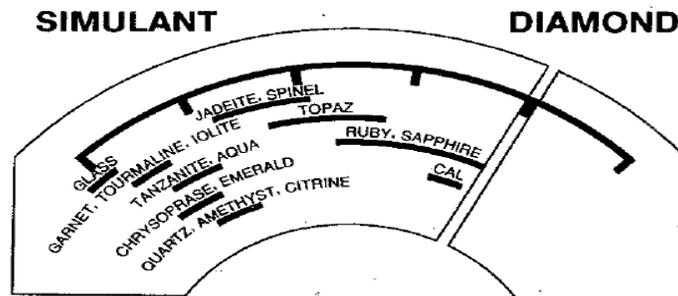

7. For the reading of the test result, the display indicator will fall onto the various white strips indicated with the names of the gemstones. Noted that the results are only the estimated identity of the gemstone.
8. All testers have been calibrated and no further adjustment is required. Self-calibration should not be attempted.

Noted that the above instructions serve as a brief guide for the usage of the Presidium Gem Tester. Users are strongly recommended to refer to the user handbook and the e-tutorials on the [www.presidium.com.sg](http://www.presidium.com.sg) for a more extensive and detailed usage.

Users should contact Presidium at [service@presidium.com.sg](mailto:service@presidium.com.sg) for any form of assistance.