

Using the PDA with the Bluetooth Serial Adapter

Pairing devices

The serial adapter must be paired with the PDA to allow them to connect. This only needs to be done once to configure the devices.



Start the "Prefs" program.

Select "Bluetooth" in the pulldown menu in the upper right corner. Press the "Trusted Devices" button.




Select a Bluetooth serial device and enter the passkey. Oregon RFID adapters are shipped with the passkey "1234".

Press the Home key when done to exit the program.

Using the Bluetooth link with PTLogger

Select the "Setup" tab and check the Bluetooth checkbox.

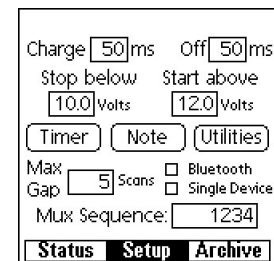

Using the Bluetooth link with TagTracker

Select "Connect Bluetooth" from the "Options" menu at the top left corner.

